

# Magellan™ 8500Xt QUICK REFERENCE CARD

## Installation Procedure and Product Handling

See the *Magellan 8500Xt Product Reference Guide (PRG)* for detailed instructions on these procedures.

1. Unpack the Magellan 8500Xt from the shipping carton.
2. Remove the top platter and supporting foam.
3. Make necessary cable connections between the scanner/scale, remote display, POS terminal and power source. (See "Cabling" on the other side of this sheet.)
4. Install the scanner/scale in-counter in the orientation and position described. Confirm scanning and weighing functions.
5. Calibrate and certify the scale per state and local Weights and Measures requirements.
6. Install the top platter, remove the protective vinyl sheet from the glass and wipe down both windows.

When moving the unit, use the lift handles seated beneath the top platter, down inside the chassis, and must be rotated up as shown.



DO NOT ATTEMPT TO LIFT THE PRODUCT BY THE BONNET.

## Operator Buttons and Indicator LEDs

\*Hold Volume/Tone Button down for 10 seconds to reset the scanner/scale and initiate self test.

\*\*EAS is optional (not present on all models).

\*Volume/Tone Button

Scale Zero Button

\*\*EAS Button

Scan LED

Scale LED

EAS LED



## Diagnostic Error Display

The diagnostic error display is located left of the motor/facet wheel, visible through the horizontal window.



CODES	ACTION
.0 or .1	Check POS connections & programming (see PRG), then call Datalogic Tech Support.
.7	See "Scale Error Reporting" in PRG, then call Datalogic Tech Support.
.8	Check Remote Display (see PRG) then call Datalogic Tech Support.
.9	Check EAS cable, then call Datalogic Tech Support.
.C	Recalibrate scale (see PRG), then call Datalogic Tech Support.
.2 thru .6, .A, .B, .E, (.)	Call Datalogic Tech Support

NOTE: Error codes displayed should be supplied with unit serial number when making RMA request to manufacturer.

## Escalation Support Options

Datalogic Scanning Tech Support  
541-683-5700 (USA only)  
6:30am - 5:00pm Pacific Time  
Monday thru Friday

Contact your nearest Datalogic Support Center. For a full listing of Datalogic Support Centers and documentation:  
[www.scanning.datalogic.com](http://www.scanning.datalogic.com)



## Scanner/Scale Connector Panel




POS I/F    Remote Scale Display    Aux. Port    Scale Host Port    EAS Interlock    Power

## Magellan™ 8500Xt



# Mounting

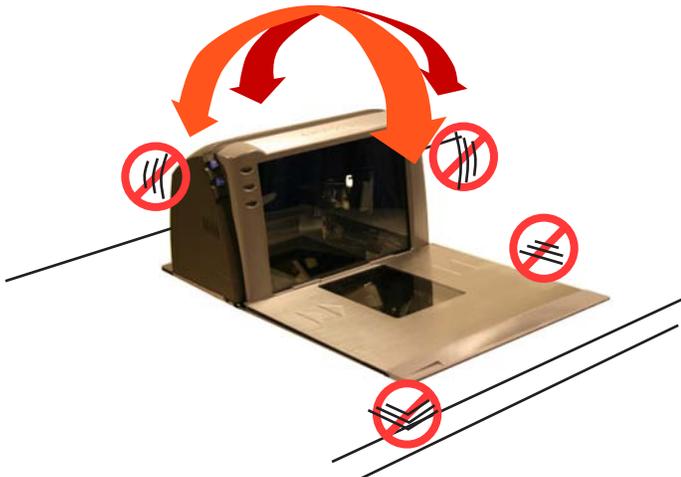

The product must be mounted in the counter in a stable position. Check to ensure that it does not rock or “teeter” from side-to-side or corner-to-corner on any axis.

NOTE:  
For full product installation instructions, dimensions and requirements, refer to the 8500Xt Product Reference Guide (PRG), available on the Datalogic Scanning website at [www.scanning.datalogic.com](http://www.scanning.datalogic.com)

# Height Adjustment

## Left-Hand Take-Away Installation (reverse for Right-Hand Take-Away)

