





# Quick Start Guide


## WTP-800

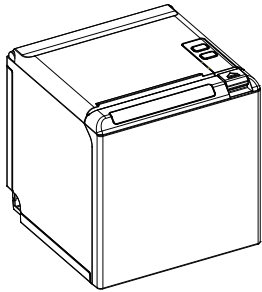


### Packing List

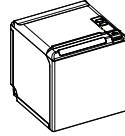

Printer

 


USB Cable

 

Power Cord



 Serial Cable



Power Adapter



Roll Paper



CD




Quick Start Guide


Note: The power adapter and power cord vary by local or region.

### Appearance and Components


#### ■ Front

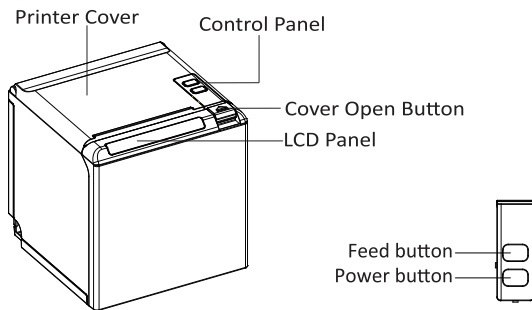

#### ■ Rear

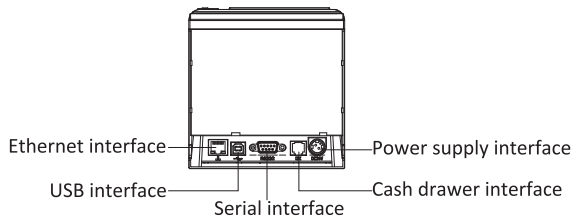


#### ■ Inside

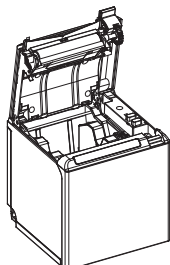


### Paper Installation (Upward Paper-out Direction)


1. Press the cover open button to open the printer cover.

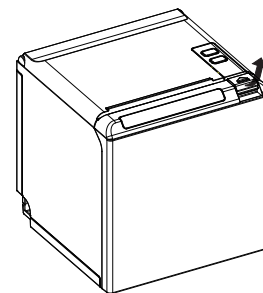


2. In the correct direction of the roll paper, install the roll paper.

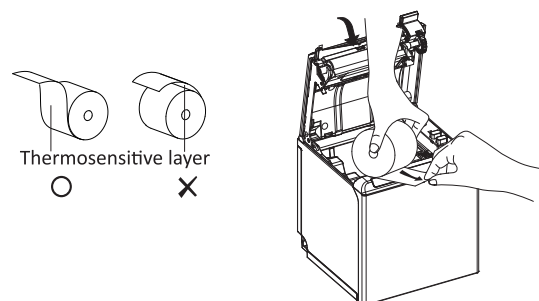


3. Pull out some roll paper, and close the printer cover.

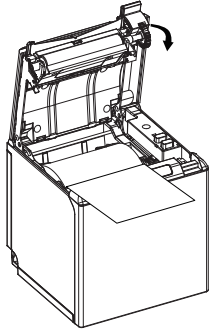


4. Tear the extra paper in the direction of printer.

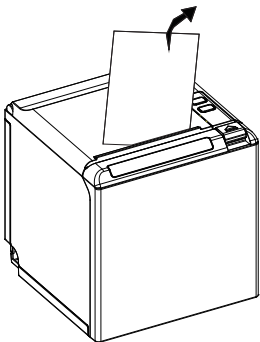

3. Pull out some roll paper, and close the printer cover.

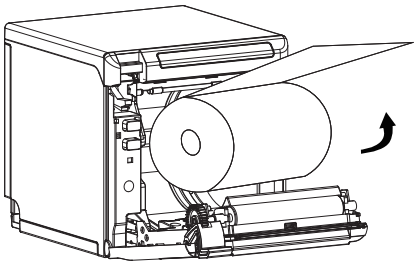


4. Tear the extra paper in the direction of printer.

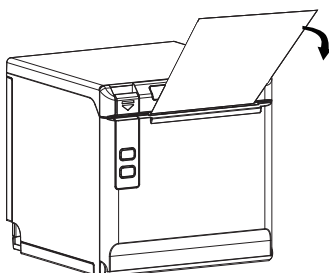


## Paper Installation (Forward Paper-out Direction)

1. Remove the bottom cover and rear cover, after removing, the location of these two covers can be swapped and re-installed, as below showed. Remove the used roll paper core, if any.

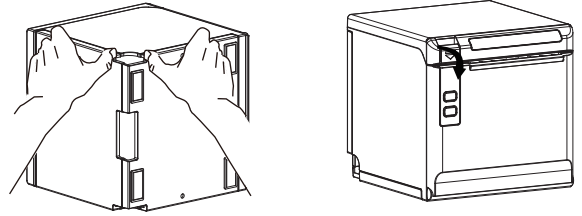

2. In the correct direction of the roll paper, install the roll paper.

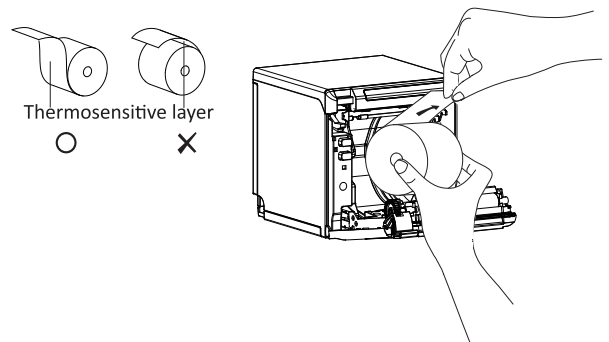

## Power Supply

1. Connect power adapter with printer.
2. Connect power adapter with power cord.
3. Plug the other side of power cord into the socket outlet.

