

MCI TouchKey

Operating Instructions and Technical Data Bedienungsanleitung und Technische Daten



Figure shows a specific keyboard layout Abbildung zeigt spezifisches Tastenlayout

1	Instruction		
	1.1 1.2	General Notes Characteristics of the MCI TouchKey	. 3 . 3
2	Installation		
	2.1 2.2	Contents of package Installation of the keyboard 2.2.1 System requirements 2.2.2 USB cable installation 2.2.3 Cable routing 2.2.4 Functional check	. 4 . 4 . 4 . 4 . 4 . 4
3	Мос	Modules	
	3.1 3.2	Magnetic stripe reader (MSR) Keylock (KL)	. 5 . 5
4 Software		tware	.5
	4.1 4.2	TouchKey Programmer TouchKey Demo Software	. 5 . 5
5	Add	litional Help	.5

DE

1	Kurz	Kurzanleitung	
	1.1	Allgemeine Anwenderhinweise	6
	1.2	Merkmale des MCI TouchKey	6
2	Inst	allation	7
	2.1 2.2	Verpackungsinhalt	7 7
		2.2.1 Systemvoraussetzungen	7
		2.2.2 Kabelinstallation USB	7
		2.2.3 Kabelfuhrung	/ 7
			1
3	Mod	lule	8
	3.1	Magnetkartenleser (MSR)	8
	3.2	Schlüsselschalter (KL)	8
4	Software		
	4.1	TouchKey Programmer	8
	4.2	TouchKey Demo Software	8
5	Zus	ätzliche Hilfe	B
6	Арр	endix / Anhang / Annexe	9
	6.1	Technical data / Technische Daten / Données techniques	9
		6.1.1 Electronics / Elektronik / Electronique	9
		6.1.2 ESD and EMC behaviour / ESD- und EMV-Verhalten / Conformité ESD- EMV	9
		6.1.3 Plug assignement / Steckerbelegung / Raccordement électrique	9
		6.1.4 Climatic parameters / Klimatische Parameter / Environnement	9
		6.1.6 Protection class / Schutzart / Indice de protection	9 Q
		6.1.7 Material and surfaces / Werkstoffe und Oberflächen / Matières et surfaces	9
7	Dec	laration of Conformity / Konformitätserklärung / Certificat de conformité1	D
FCC	War	ning Statement	D
-	-		

1 Instruction

1.1 General Notes

Congratulations on your purchase of the MCI TouchKey. This product manual is only valid for this keyboard. Should you encounter any problems or issues configuring this MCI TouchKey please contact your dealer for further advice.

You can find the **latest programming and driver software**, as well as detailed documentation on our support page: <u>http://support.prehkeytec.com</u>

All PrehKeyTec products undergo a continuous improvement process. For this reason, technical modifications may be made without notice.

We would like to point out that improper handling, storage, actions and/or modifications can lead to malfunctions and damage during use. If you modify our product as the end user, we are no way responsible for nay warranties or liability, except you are in possession of an express, written release for your case of operation.

This applies especially to unprofessional repair and maintenance work.

Any claims of damages against PrehKeyTec, regardless of the legal reason, are excluded if we are not responsible for the intent or gross negligence. The above limitation does not apply to claims for damages resulting from product liability laws.

1.2 Characteristics of the MCI TouchKey

The MCI TouchKey is characterized especially by its ergonomic and compact design. It unites two devices, a keyboard and the TouchKey with a tactile feedback for the User.

The MCI TouchKey possesses the following characteristics:

- Multiple user defined layouts with Buttons, Graphics and Text
- The Programming is done using the TouchKey Programmer.
- The programming is based on XML files, which can be modified during use.
- There is a programmable keyboard part for fast data entry.
- Layout switching using the TouchKey Buttons or the Keyboard keys.
- Single USB interface and no external power supply needed.
- Use of many TouchKey devices on a single PC.
- Remote programming.

Depending on the housing model, the TouchKey can be built to incorporate the following modules:

- Magnetic Stripe Reader (MSR)
- Key Lock (KL)

The keyboard part of the MCI TouchKey offers 42 programmable key positions. These keys and optional modules MSR/Keylock are programmed using the WinProgrammer software.

The TouchKey module on the left side is configured by a set of XML definition files – created using the TouchKey Programmer. By default also here a grid of 42 programmable positions can be assigned for each layout.

All required software is available in the support section of our Website: http://support.prehkeytec.com

Also additional documentation can be found here:

- A flash animation helps getting started with the TouchKey Programmer.
- Detailed information about the TouchKey is put together in the "Technical Documentation TouchKey".

2 Installation

2.1 Contents of package

Before using your MCI TouchKey, please check whether all the parts shown below are present and show no obvious signs of damage:

- Operating Instructions and Technical Data
 - MCI TouchKey



Fig. 1 Contents of package, figure shows a specific keyboard layout

2.2 Installation of the keyboard

2.2.1 System requirements

The MCI TouchKey was developed for computers with USB interface. The following requirements must be on the system for the TouchKey to function:

- Windows XP or Vista
- .NET Framework 2.0 or higher
- USB Interface with 500 mA current supply and voltage of +5V \pm 5%
- Support for Linux OS

2.2.2 USB cable installation

Procedure



Please connect the USB Plug of the TouchKey to a free USB port on your computer. The computer automatically recognizes the MCI TouchKey device. No special drivers are required.

2.2.3 Cable routing



Fig. 6 cable nips

On delivery, the connection cable is routed on the **right** side of the device (seen from above). Follow the described procedure below to move the cable to the **left** or **center**:

Lay the keyboard with the keypad facing down on a soft surface. To move the cable outlet to the left, move the connection cable as shown in *Figure 6*. Ensure that the keyboard cable is firmly pressed into the nips provided

2.2.4 Functional check

After starting the computer, all four LEDs on the TouchKey light up briefly. Depending on the status of Num Lock, Caps Lock or Scroll Lock, the associated LEDs will light up. Your MCI TouchKey is now ready for use.

3 Modules

3.1 Magnetic stripe reader (MSR)

All magnetic cards according to ISO 7810 and 7811 can be read. The magnetic stripe reader records the entire information content of the magnetic card. A LED signal (green Accept LED) is issued after a successful read procedure.

The magnetic card can be swiped through the reading device in both directions (*Figure 7*). This provides easy manipulation for both rightand left-handers



Fig. 7 Magnetic stripe reader

The parameters of the MSR can be set and/or modified using the corresponding PrehKeyTec programming software.

You can find further information, as well as the associated software, on the Internet under

Important notice: Please hold the magnetic card near the upper edge during a swipe.

3.2 Keylock (KL)

The optional keylock (Figure 8) module has 5 positions and is supplied with 3 different keys.

Turning direction

Fig. 8 Keylock

All keys can be inserted and removed in both positions 0 and 1

http://www.prehkeytec.com.

The following switch positions can be set with the three keys:

SUP key: 0 1 2 3 4

- REG key: 0 1
- X key: 0 1 2

By default, the code for the new switch position is transferred to the computer when the key is turned.

The parameters of the keylock can be set and/or modified using the corresponding PrehKeyTec programming software.

You can find further information, as well as the associated software, in the Internet under http://www.prehkeytec.com.

4 Software

4.1 TouchKey Programmer

TouchKey Programmer software is used for programming the TouchKey Module. The TouchKey Programmer helps you to:

- Configure the TouchKey
- Create layouts
- Test layouts on the TouchKey
- Create XML files for communicating with the TouchKey
- Administering multiple TouchKey devices

4.2 TouchKey Demo Software

There is a TouchKey Demo package on our website <u>http://support.prehkeytec.com</u> which demonstrates the functionality of the MCI TouchKey device. This example consists of a multiple of layouts with buttons, graphics and text. Furthermore it shows how to switch to other layouts using buttons or keyboard keys on the device.

In order for this Demo Software to function, the appropriate key table for the keyboard section needs to be downloaded into the device. This can be done using either the WinProgrammer or the C2K. Further information can be found on the Readme file of the Demo package.

5 Additional Help

The most recent version of the TouchKey Programmer and further information can be found on our website http://support.prehkeytec.com

You can reach our technical support department under:

Email: support@prehkeytec.de Fax: +49 9776 / 7046-299

1 Kurzanleitung

1.1 Allgemeine Anwenderhinweise

Wir gratulieren Ihnen zum Kauf des MCI TouchKey.

Die vorliegende Bedienungsanleitung gilt ausschließlich für diese Tastatur.

Falls Sie Probleme im Umgang bzw. mit der Konfiguration des MCI TouchKey haben sollten, so wenden Sie sich bitte an Ihren zuständigen Händler.

Aktuelle Programmier- und Treibersoftware, sowie weiterführende Dokumentation finden Sie auf unserer Support-Seite: http://support.prehkeytec.de

Unsere Produkte unterliegen einem kontinuierlichen Verbesserungsprozess. Aus diesem Grund behalten wir uns technische Änderungen vor.

Wir weisen darauf hin, dass unsachgemäße Behandlung, Lagerung, Einflussnahme und/oder Modifikation im Einsatz zu Störungen und Schäden führen kann.

Sofern Sie unsere Produkte anwenderseitig verändern, übernehmen wir keinerlei Gewährleistung oder Haftung, es sei denn, es liegt Ihnen von uns eine ausdrückliche, schriftliche Freigabe für Ihren Einsatzfall vor. Dies gilt insbesondere auch für unfachmännische Reparatur- und Wartungsarbeiten.

Etwaige Schadensersatzansprüche gegen die PrehKeyTec GmbH - gleich aus welchem Rechtsgrund - sind ausgeschlossen, soweit uns nicht Vorsatz oder grobe Fahrlässigkeit trifft. Obige Beschränkung gilt nicht für Schadensersatzansprüche aus dem Produkthaftungsgesetz.

1.2 Merkmale des MCI TouchKey

Das MCI TouchKey zeichnet sich besonders durch sein ergonomisches und kompaktes Design aus. Es vereint zwei Geräte, eine Tastatur und das TouchKey mit taktilem Feedback für den Benutzer.

Folgende Merkmale zeichnen das MCI TouchKey aus:

- Beliebige Anzahl benutzerdefinierter Layouts mit Buttons, Grafiken und Texten.
- Die Programmierung erfolgt mit dem TouchKey-Programmer.
- Basierend auf XML-Dateien kann also recht einfach zur Laufzeit verändert werden.
- Tastaturbereich mit frei programmierbaren Vollhub-Tasten für schnelle Dateneingabe.
- Umschalten der Layouts durch TouchKey-Buttons oder den Tastaturbereich.
- Nur ein USB Anschluss, keine externe Spannungsversorgung notwendig.
- Betrieb mehrerer TouchKeys an einem PC möglich.
- Programmierung des TouchKey kann fernwartbar erfolgen.

Je nach Gehäuseausführung kann das MCI TouchKey werksseitig mit weiteren Modulen ausgestattet werden:

- Magnetkartenleser (MSR)
- Schlüsselschalter (KL)

Im Tastaturbereich verfügt das MCI TouchKey über 42 frei programmierbare Positionen. Diese Tasten und optional integrierte Module MSR/Schlüsselschalter werden wie gewohnt mit dem WinProgrammer konfiguriert.

Das TouchKey-Modul auf der linken Seite wird über einen Satz von XML-Dateien konfiguriert und gesteuert. Mit dem TouchKey-Programmer wird diese Konfiguration erstellt, wobei standardmäßig ebenfalls 42 Rasterpositionen je Layout möglich sind.

Alle benötigten Softwarepakete Sie auf unserer Support-Seite unter http://support.prehkeytec.de.

Dort finden Sie auch weiterführende Dokumentation:

- Eine Flash-Animation erläutert die ersten Schritte mit dem TouchKey-Programmer.
- Eine umfassende Anleitung zum TouchKey finden Sie in der "Technischen Dokumentation TouchKey".

2 Installation

2.1 Verpackungsinhalt

Bitte überprüfen Sie vor der Inbetriebnahme Ihres TouchKey, ob alle nachfolgend aufgeführten Teile vorhanden und optisch unbeschädigt sind:

1 Diese Kurzanleitung

2 MCI TouchKey



Bild 1 Verpackungsinhalt, Abbildung zeigt spezifisches Tastenlayout

2.2 Installation

2.2.1 Systemvoraussetzungen

Das TouchKey wurde für den Einsatz an Rechnern mit USB Schnittstelle entwickelt.

Voraussetzungen:

- Rechner mit Betriebssystem Windows XP, Vista
- USB Schnittstelle mit 500 mA
- Unterstützung von Linux

2.2.2 Kabelinstallation USB



Verbinden sie den USB-Stecker der Tastatur mit einer freien USB-Buchse des Rechners. Das MCI TouchKey wird automatisch vom Betriebssystem erkannt. Es sind keine speziellen USB Treiber zu installieren.

Bild 2 USB-Stecker

2.2.3 Kabelführung



Bild 3 Kabelklemmstellen

2.2.4 Funktionskontrolle

Nachdem Sie Ihren Computer eingeschaltet haben, leuchten alle vier LED's kurzzeitig auf. Anschließend leuchten je nach Status von Num-Caps- und ScrollLock die dazugehörigen LED's. Auf dem TouchKey-Modul erscheint je nach Konfiguration der entsprechende Startbildschirm. Ihr MCI TouchKey ist nun betriebsbereit.

3 Module

3.1 Magnetkartenleser (MSR)

Es können alle Magnetkarten nach ISO 7810 und 7811 gelesen werden. Der Magnetkartenleser erfasst den gesamten Informationsgehalt der Magnetkarte. Nach einem gültigen Lesevorgang erfolgt ein LED-Signal (Accept-LED grün).



Die Magnetkarte kann in beiden Richtungen durch das Lesegerät gezogen werden (*Bild 4*). Hierdurch ist eine einfache Handhabung sowohl für Rechts- als auch für Linkshänder gewährleistet.

Die Konfiguration der Datenausgabe erfolgt im WinProgrammer. Werksseitig ist der Magnetkartenleser für die Benutzung über OPOS/JavaPOS vorkonfiguriert.

Alle Schlüssel können sowohl in Position "0" als auch in Position "1" gezogen und gesteckt werden.

Mit den drei verschiedenen Schlüsseln lassen sich jeweils die folgenden Schalterstellungen einstellen:

Bild 4 Magnetkartenleser

Wichtiger Hinweis: Beim Durchzug ist die Karte nur im oberen Randbereich zu greifen.

Schlüssel "SUP": 0 1 2 3 4
Schlüssel "REG": 0 1
Schlüssel "X": 0 1 2

3.2 Schlüsselschalter (KL)

Das Optionsmodul Schlüsselschalter (Bild 5) besitzt 5 Stellungen und wird mit 3 verschiedenen Schlüsseln ausgeliefert.



Bild 5 Schlüsselschalter

Die Konfiguration der Datenausgabe erfolgt im WinProgrammer. Standardmäßig wird jeweils beim Drehen des Schlüssels der Code für die neue Schalterstellung an den Computer übertragen. Werksseitig ist der Schlüsselschalter für die Benutzung über OPOS/JavaPOS vorkonfiguriert.

4 Software

4.1 TouchKey Programmer

Ähnlich dem WinProgrammer für die frei programmierbaren PrehKeyTec Tastaturen, gibt es für das TouchKey-Modul den TouchKey Programmer. Mit dieser Programmiersoftware können Sie:

- Das TouchKey konfigurieren
- Layouts erstellen
- Layouts auf dem TouchKey testen
- XML Dateien für die Kommunikation mit dem TouchKey erzeugen
- Mehrere TouchKeys verwalten

4.2 TouchKey Demo Software

Um den Anwender die Möglichkeiten des TouchKey zu zeigen, steht eine Demo Software zur Verfügung. Das Beispiel beinhaltet verschiedene Layouts mit Buttons, Grafiken und Texten. Ebenso wird die Möglichkeit gezeigt, durch Betätigung von Buttons auf dem TouchKey oder von Tastaturtasten, andere Layouts aufzurufen.

Das Beispiel und weitere Informationen finden Sie im Internet unter http://www.prehkeytec.de.

Damit die Demo Software einwandfrei arbeitet, muss eine passende Tastaturbelegung eingespielt sein. Dies geschieht mit dem WinProgrammer oder C2K. Weitere Informationen in der Readme-Datei des Demo-Pakets.

5 Zusätzliche Hilfe

Aktuelle Versionen unserer Programmiersoftware, sowie weitere Informationen finden Sie im Support-Bereich von http://www.prehkeytec.de.

Unseren Kunden-Support erreichen Sie unter:

Email: support@prehkeytec.de Fax: +49 9776 / 7046 - 299

6 Appendix / Anhang / Annexe

6.1 Technical data / Technische Daten / Données techniques

6.1.1 Electronics / Elektronik / Electronique

Power supply:	5V _{DC} ±5%
Power consumption:	< 500 mA
Keyboard LEDs:	ACCEPT, NUM LOCK, CAPS LOCK, SCROLL LOCK
Interface:	USB
LCD TouchKey:	FSTN black/white
Backlight TouchKey:	LED
Touch panel:	4wire resistive

6.1.2 ESD and EMC behaviour / ESD- und EMV-Verhalten / Conformité ESD- EMV

CE symbol	
Unwanted emission	EN55022, class B
	FCC subpart 15 class A
Immunity to interference	immunity against high-frequency electromagnetic fields; penetration test value = 10 V/m immunity against electrostatic discharge according to EN 50082-1; penetration test value = $\pm 8 \text{ kV}$ contact, $\pm 13 \text{ kV}$ air

6.1.3 Plug assignement / Steckerbelegung / Raccordement électrique

	USB Plug A	
[3]	1	VCC
4321	2	-DATA
Fig. 12.2 USB plug	3	+DATA
	4	GND

6.1.4 Climatic parameters / Klimatische Parameter / Environnement

Temperature ranges

Kawa

Storage/transport	-30°C to +50°C
Operation	± 0°C to +50°C
Relative humidity	5% to 93%
Air pressure	700hPa to 1060 hPa
Climatic test category	0/050/21 according to DIN-IEC 68, part 1, appendix A

6.1.5 Mechanical system / Mechanik / Mécanique

neys	
Actuating force	0.6 N
Stroke strength	10N, 1 min.
Lifetime	>3 x 10 ⁷ operations per contact element (typical value)
Keystroke	3.5 mm
Grid spacing	19 mm

6.1.6 Protection class / Schutzart / Indice de protection

IP 54 according to DIN 40050/IEC 529

Only valid for the keypad in the direction of actuation and LCD from top.

6.1.7 Material and surfaces / Werkstoffe und Oberflächen / Matières et surfaces

ABS
polystyrene
polyester film
Trevira
PBT/POM
silicone rubber

7 Declaration of Conformity / Konformitätserklärung / Certificat de conformité

This is to certify that all varieties of statements of compliance exist for the MCI family.

Of course, you can request us to send you these if you provide the precise type designation (see the type label on the bottom of the device).

PrehKeyTec GmbH Scheinbergweg 10

D-97638 Mellrichstadt, Germany Fax: +49-9776-7046-299

FCC Warning Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Copyright

© Copyright PrehKeyTec GmbH 2011

Published by PrehKeyTec GmbH. PrehKeyTec GmbH reserves the right to update/modify the products described in this manual, as well as the manual itself, at any time without prior notice.

These operating instructions may not be copied, edited, transformed into electronic form or translated into other languages without prior written consent by PrehKeyTec GmbH.

Trademarks

The brand and product names mentioned in these operating instructions are trademarks / registered trademarks of the corresponding owner.

Examples: Microsoft, Windows, Windows 98, Windows 2000, Windows XP, Vista are registered trademarks of Microsoft Corporation