



# TC72/TC77

Touch Computer

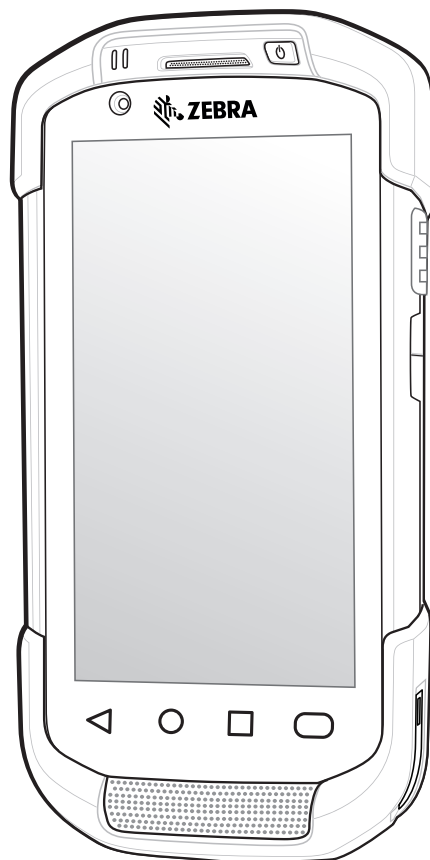

**User Guide**  
for Android™ 10

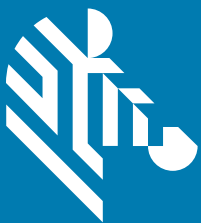

**ZEBRA**

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corporation, registered in many jurisdictions worldwide. Google, Android, Google Play and other marks are trademarks of Google LLC. All other trademarks are the property of their respective owners.  
© 2020 Zebra Technologies Corporation and/or its affiliates. All rights reserved.

For further information regarding legal and proprietary statements, go to:

COPYRIGHTS: [www.zebra.com/copyright](http://www.zebra.com/copyright)

WARRANTY: [www.zebra.com/warranty](http://www.zebra.com/warranty)

END USER LICENSE AGREEMENT: [www.zebra.com/eula](http://www.zebra.com/eula)

## Terms of Use

### Proprietary Statement

This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries (“Zebra Technologies”). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

### Product Improvements

Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

### Liability Disclaimer

Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

### Limitation of Liability

In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

## Revision History

Changes to the original guide are listed below:

| Change    | Date    | Description   |
|-----------|---------|---|
| -01 Rev A | 9/2020  | Initial release.  |
| -02 Rev A | 11/2020 | Add WWAN information and best practices for hot environments. |

# Table of Contents

|  |    |
|--|----|
| Configurations .....                       | 12 |
| Notational Conventions .....               | 12 |
| Icon Conventions .....                     | 13 |
| Service Information .....                  | 13 |
| Determining Software Versions.....         | 13 |
| Determining the Serial Number.....         | 14 |
| Introduction .....                         | 15 |
| Unpacking .....                            | 15 |
| Features .....                             | 16 |
| Setting Up the Device .....                | 18 |
| Removing the SIM Lock Access Cover .....   | 19 |
| Installing the SIM Card .....              | 19 |
| Installing the SAM Card .....              | 21 |
| Installing a microSD Card.....             | 22 |
| Installing the Hand Strap and Battery..... | 25 |
| Installing the Battery .....               | 26 |
| Charging the Battery.....                  | 27 |
| Charging Indicators .....                  | 27 |
| Zebra Visibility Services .....            | 28 |
| Replacing the Battery .....                | 28 |
| Replacing the SIM or SAM Card .....        | 30 |
| Replacing the microSD Card.....            | 32 |
| Introduction .....                         | 35 |
| Integrated Imager.....                     | 35 |
| Operational Modes .....                    | 35 |
| Digital Camera.....                        | 36 |
| RS507/RS507X Hands-Free Imager.....        | 36 |
| RS6000 Bluetooth Ring Scanner .....        | 36 |
| DS3678 Digital Scanner.....                | 37 |
| Scanning Considerations .....              | 37 |
| Scanning with Internal Imager.....         | 37 |

|  |    |
|--|----|
| Scanning with Integrated Camera .....                                  | 39 |
| Scanning with RS507/RS507X Hands-Free Imager .....                     | 39 |
| Scanning with RS6000 Bluetooth Ring Scanner .....                      | 41 |
| Scanning with the DS3608 USB Scanner or DS3678 Bluetooth Scanner ..... | 42 |
| Pairing the RS507/RS507X/RS6000 Hands-Free Imager .....                | 43 |
| Pairing Using Near Field Communication .....                           | 43 |
| Pairing in HID Mode Using Near Field Communication .....               | 44 |
| Pairing Using Simple Serial Interface (SSI) .....                      | 44 |
| Pairing Using Bluetooth Human Interface Device .....                   | 45 |
| Pairing a Bluetooth Scanner .....                                      | 46 |
| Pairing Using Bluetooth Human Interface Device .....                   | 46 |
| DataWedge .....  | 47 |
| Enabling DataWedge .....   | 47 |
| Disabling DataWedge .....  | 47 |
| Supported Decoders .....   | 47 |
| Home Screen .....  | 50 |
| Setting Home Screen Rotation .....                                     | 51 |
| Status Bar .....   | 51 |
| Notification Icons .....   | 51 |
| Status Icons .....   | 53 |
| Managing Notifications .....   | 54 |
| Opening the Quick Access Panel .....                                   | 55 |
| Quick Access Panel Icons .....   | 55 |
| Editing Icons on the Quick Settings Bar .....                          | 56 |
| Battery Management .....   | 56 |
| Checking Battery Status .....  | 56 |
| Monitoring Battery Usage .....   | 57 |
| Low Battery Notification .....   | 57 |
| Interactive Sensor Technology .....                                    | 57 |
| Waking the Device .....  | 57 |
| USB Communication .....  | 58 |
| Transferring Files .....   | 58 |
| Transferring Photos .....  | 58 |
| Disconnect from the Host Computer .....                                | 59 |
| Accessing Settings .....   | 60 |
| Display Settings .....   | 60 |
| Setting the Screen Brightness Manually .....                           | 60 |
| Setting the Screen Brightness Automatically .....                      | 60 |
| Setting Night Light .....  | 60 |
| Setting Screen Rotation .....  | 61 |
| Setting Screen Timeout .....   | 61 |
| Lock Screen Display .....  | 61 |

|  |    |
|--|----|
| Setting Touch Key Light .....                          | 62 |
| Setting Font Size .....                                | 62 |
| Notification LED Brightness Level .....                | 62 |
| Touch Panel Mode .....                                 | 63 |
| Setting the Date and Time .....                        | 63 |
| General Sound Setting.....                             | 64 |
| Sound Options.....                                     | 64 |
| Setting Wake-Up Sources.....                           | 65 |
| Remapping a Button .....                               | 65 |
| Keyboards .....  | 65 |
| Keyboard Configuration.....                            | 66 |
| Enabling Keyboards.....                                | 66 |
| Switching Between Keyboards.....                       | 66 |
| Using the Android and Gboard Keyboards.....            | 66 |
| Edit Text.....   | 66 |
| Entering Numbers, Symbols, and Special Characters..... | 66 |
| Using the Enterprise Keyboard.....                     | 66 |
| Numeric Tab.....                                       | 67 |
| Alpha Tab.....   | 67 |
| Additional Character Tab .....                         | 67 |
| Scan Tab.....  | 67 |
| Language Usage.....                                    | 67 |
| Changing the Language Setting.....                     | 67 |
| Adding Words to the Dictionary .....                   | 67 |
| Notifications.....                                     | 68 |
| Setting App Notifications .....                        | 68 |
| Viewing Notification Settings for All Apps .....       | 68 |
| Controlling Lock Screen Notifications .....            | 68 |
| Blink Light.....                                       | 69 |
| Accessing Apps.....                                    | 73 |
| Switching Between Recent Apps.....                     | 73 |
| Battery Manager.....                                   | 73 |
| Opening Battery Manager .....                          | 73 |
| Battery Manager Information Tab.....                   | 74 |
| Battery Manager Swap Tab.....                          | 75 |
| Camera .....   | 76 |
| Taking Photos.....                                     | 76 |
| Taking a Panoramic Photo .....                         | 77 |
| Recording Videos .....                                 | 77 |
| Photo Settings .....                                   | 78 |
| Rear Camera Photo Settings.....                        | 78 |
| Front Camera Photo Settings.....                       | 79 |
| Video Settings .....                                   | 80 |

|   |    |
|---|----|
| Rear Camera Video Settings .....                        | 80 |
| Front Camera Video Settings.....                        | 81 |
| DataWedge Demonstration.....                            | 81 |
| Scanner Selection .....                                 | 82 |
| PTT Express Voice Client.....                           | 83 |
| PTT Express User Interface .....                        | 83 |
| PTT Audible Indicators .....                            | 84 |
| PTT Notification Icons .....                            | 84 |
| Enabling PTT Communication.....                         | 84 |
| Selecting a Talk Group.....                             | 85 |
| PTT Communication.....                                  | 85 |
| Creating a Group Call .....                             | 85 |
| Responding with a Private Response .....                | 85 |
| Disabling PTT Communication .....                       | 86 |
| RxLogger.....   | 87 |
| RxLogger Configuration.....                             | 87 |
| Configuration File .....                                | 87 |
| Enabling Logging.....                                   | 87 |
| Disabling Logging .....                                 | 87 |
| Extracting Log Files .....                              | 87 |
| Backing Up .....  | 87 |
| RxLogger Utility .....                                  | 88 |
| Initiating the Main Chat Head.....                      | 88 |
| Removing the Main Chat Head .....                       | 88 |
| Viewing Logs.....                                       | 88 |
| Removing a Sub Chat Head Icon.....                      | 88 |
| Backing Up In Overlay View.....                         | 88 |
| Sound Recorder .....                                    | 88 |
| Wireless Local Area Networks .....                      | 1  |
| Connecting to a Wi-Fi Network.....                      | 2  |
| Removing a Wi-Fi Network.....                           | 2  |
| WLAN Configuration .....                                | 2  |
| Configuring a Secure Wi-Fi Network .....                | 2  |
| Manually Adding a Wi-Fi Network .....                   | 3  |
| Configuring for a Proxy Server .....                    | 5  |
| Configuring the Device to Use a Static IP Address ..... | 5  |
| Wi-Fi Preferences.....                                  | 6  |
| Additional Wi-Fi Settings .....                         | 6  |
| Wi-Fi Direct.....                                       | 7  |
| Wireless Wide Area Networks.....                        | 7  |
| Sharing the Mobile Data Connection.....                 | 7  |
| Enabling USB Tethering.....                             | 7  |
| Enabling Bluetooth Tethering.....                       | 8  |

|  |    |
|--|----|
| Enabling Wi-Fi Hotspot .....                     | 8  |
| Configuring the Wi-Fi Hotspot .....              | 8  |
| Data Usage .....                                 | 9  |
| Setting Data Usage Warning .....                 | 9  |
| Setting Data Limit .....                         | 9  |
| Cellular Network Settings .....                  | 10 |
| Data When Roaming .....                          | 10 |
| Setting Preferred Network Type .....             | 10 |
| Using Search for MicroCell .....                 | 10 |
| Configuring the Access Point Name .....          | 10 |
| Locking the SIM Card .....                       | 11 |
| Default SIM Slot Configuration .....             | 11 |
| Dual SIM Dual Standby .....                      | 11 |
| Bluetooth .....                                  | 12 |
| Adaptive Frequency Hopping .....                 | 12 |
| Security .....                                   | 12 |
| Bluetooth Profiles .....                         | 13 |
| Bluetooth Power States .....                     | 14 |
| Bluetooth Radio Power .....                      | 14 |
| Enabling Bluetooth .....                         | 14 |
| Disabling Bluetooth .....                        | 14 |
| Discovering Bluetooth Device(s) .....            | 14 |
| Changing the Bluetooth Name .....                | 15 |
| Connecting to a Bluetooth Device .....           | 15 |
| Selecting Profiles on the Bluetooth Device ..... | 15 |
| Unpairing a Bluetooth Device .....               | 15 |
| Cast .....                                       | 16 |
| Near Field Communications .....                  | 16 |
| Reading NFC Cards .....                          | 16 |
| Sharing Information Using NFC .....              | 17 |
| Enterprise NFC Settings .....                    | 18 |
| Emergency Calling .....                          | 19 |
| Audio Modes .....                                | 19 |
| Bluetooth Headset .....                          | 19 |
| Wired Headset .....                              | 19 |
| Adjusting Audio Volume .....                     | 20 |
| Making a Call Using the Dialer .....             | 20 |
| Accessing Dialing Options .....                  | 21 |
| Making a Call Using Contacts .....               | 21 |
| Using the Dialer .....                           | 21 |
| Using the Contacts App .....                     | 21 |
| Making a Call Using Call History .....           | 21 |
| Using the Call History List .....                | 21 |

|   |    |
|---|----|
| Making a Conference Call on GSM.....  | 22 |
| Making a Call Using a Bluetooth Headset.....                                      | 22 |
| Answering Calls .....   | 23 |
| Call Settings .....   | 23 |
| Battery Charging .....  | 28 |
| Main Battery Charging .....   | 28 |
| Spare Battery Charging .....  | 28 |
| Charging Temperature .....  | 29 |
| 2-Slot Charge Only Cradle .....   | 29 |
| 2-Slot Charge Only Cradle Setup .....   | 30 |
| Charging the Device with the 2-Slot Charge Only Cradle .....                      | 30 |
| Charging the Spare Battery with the 2-Slot Charge Only Cradle .....               | 31 |
| 2-Slot USB-Ethernet Cradle .....  | 32 |
| 2-Slot USB-Ethernet Cradle Setup .....  | 33 |
| Charging the Device with the 2-Slot USB-Ethernet Cradle .....                     | 33 |
| Charging the Spare Battery with the 2-Slot USB-Ethernet Cradle .....              | 34 |
| USB and Ethernet Communication.....   | 35 |
| Ethernet LED Indicators .....   | 35 |
| Establishing Ethernet Connection .....  | 35 |
| Ethernet Settings.....  | 36 |
| Configuring Ethernet Proxy Settings .....   | 36 |
| Configuring Ethernet Static IP Address.....                                       | 36 |
| 5-Slot Charge Only Cradle .....   | 38 |
| 5-Slot Charge Only Cradle Setup .....   | 38 |
| Charging the Device with the 5-Slot Charge Only Cradle .....                      | 39 |
| Installing the Four Slot Battery Charger .....                                    | 40 |
| Removing the Four Slot Battery Charger .....                                      | 43 |
| 4-Slot Charge Only Cradle with Battery Charger .....                              | 45 |
| 4-Slot Charge Only Cradle with Battery Charger Setup .....                        | 46 |
| Charging the Device with a 4-Slot Charge Only Cradle with Battery Charger.....    | 46 |
| Charging the Batteries with a 4-Slot Charge Only Cradle with Battery Charger .... | 47 |
| 5-Slot Ethernet Cradle.....   | 49 |
| 5-Slot Ethernet Cradle Setup.....   | 50 |
| Daisy-chaining Ethernet Cradles .....   | 50 |
| Charging the Device with a 5-Slot Ethernet Cradle .....                           | 51 |
| Installing the Four Slot Battery Charger .....                                    | 53 |
| Removing the Four Slot Battery Charger .....                                      | 56 |
| Ethernet Communication .....  | 57 |
| Ethernet LED Indicators .....   | 57 |
| Establishing Ethernet Connection .....  | 57 |
| Ethernet Settings.....  | 57 |
| Configuring Ethernet Proxy Settings .....   | 58 |
| Configuring Ethernet Static IP Address.....                                       | 58 |



|   |    |
|---|----|
| 4-Slot Battery Charger .....  | 59 |
| 4-Slot Battery Charger Setup .....  | 59 |
| Charging Spare Batteries in the 4-Slot Battery Charger.....                   | 59 |
| 3.5 mm Audio Adapter .....  | 60 |
| Connecting a Headset to the 3.5 mm Audio Adapter .....                        | 61 |
| Attaching the 3.5 mm Audio Adapter.....                                       | 62 |
| Device with 3.5 mm Audio Adapter in Holster .....                             | 62 |
| Removing the 3.5 mm Audio Adapter.....  | 62 |
| Snap-On USB Cable.....  | 63 |
| Connecting the Snap-On USB Cable .....  | 63 |
| USB Communication with the Snap-On USB Cable.....                             | 64 |
| Charging the Device with the Snap-On USB Cable .....                          | 64 |
| Disconnecting the Snap-On USB Cable from the Device.....                      | 65 |
| Charging Cable Cup.....   | 65 |
| Charging the Device with the Charging Cable Cup.....                          | 66 |
| Snap-On DEX Cable.....  | 67 |
| Connecting the Snap-On DEX Cable .....  | 67 |
| DEX Communication .....   | 68 |
| Disconnecting the Snap-On DEX Cable from the Device.....                      | 68 |
| Trigger Handle .....  | 69 |
| Installing the Attachment Plate to Trigger Handle .....                       | 69 |
| Installing the Trigger Handle Plate .....                                     | 70 |
| Inserting the Device into the Trigger Handle .....                            | 71 |
| Removing the Device from the Trigger Handle .....                             | 72 |
| Vehicle Charging Cable Cup.....   | 74 |
| Charging the Device with the Vehicle Charging Cable.....                      | 75 |
| Vehicle Cradle.....   | 76 |
| Inserting the Device into the Vehicle Cradle.....                             | 77 |
| Removing the Device from the Vehicle Cradle.....                              | 78 |
| Charging the Device in the Vehicle Cradle.....                                | 79 |
| TC7X Vehicle Communication Charging Cradle.....                               | 79 |
| Inserting the Device into the TC7X Vehicle Communication Charging Cradle..... | 79 |
| Inserting the Device into the TC7X Vehicle Communication Charging Cradle..... | 80 |
| Charging the Device in the TC7X Vehicle Communication Charging Cradle .....   | 80 |
| USB IO Hub .....  | 81 |
| Connecting Cables to the USB IO Hub .....                                     | 81 |
| Connecting External Cable to the USB IO Hub .....                             | 82 |
| Powering the Vehicle Cradle .....   | 83 |
| Audio Headset Connection.....   | 83 |
| Replacing the Hand Strap.....   | 84 |
| Security .....  | 88 |

|  |     |
|--|-----|
| Secure Certificates .....                                    | 88  |
| Installing a Secure Certificate .....                        | 88  |
| Configuring Credential Storage Settings .....                | 89  |
| Development Tools .....                                      | 89  |
| Android Application Development .....                        | 89  |
| Development Workstation .....                                | 89  |
| Enabling Developer Options .....                             | 89  |
| EMDK for Android .....                                       | 90  |
| StageNow .....   | 90  |
| GMS Restricted .....   | 90  |
| ADB USB Setup .....  | 90  |
| Enabling USB Debugging .....                                 | 90  |
| Application Installation .....                               | 91  |
| Installing Applications Using the USB Connection .....       | 91  |
| Installing Applications Using the Android Debug Bridge ..... | 92  |
| Installing Applications Using a microSD Card .....           | 92  |
| Uninstalling an Application .....                            | 93  |
| Performing a System Update .....                             | 94  |
| Downloading the System Update Package .....                  | 94  |
| Performing a System Update Using microSD Card .....          | 94  |
| Performing a System Update Using ADB .....                   | 94  |
| Verifying System Update Installation .....                   | 95  |
| Enterprise Reset .....                                       | 95  |
| Performing an Enterprise Reset From Device Settings .....    | 95  |
| Downloading the Enterprise Reset Package .....               | 96  |
| Performing an Enterprise Reset Using microSD Card .....      | 96  |
| Performing an Enterprise Reset Using ADB .....               | 96  |
| Performing a Factory Reset .....                             | 97  |
| Downloading the Factory Reset Package .....                  | 97  |
| Performing a Factory Reset Using microSD Card .....          | 97  |
| Performing a Factory Reset Using ADB .....                   | 98  |
| Storage .....  | 99  |
| Random Access Memory .....                                   | 99  |
| Viewing Memory .....   | 99  |
| Internal Storage .....                                       | 99  |
| Viewing Internal Storage .....                               | 99  |
| External Storage .....                                       | 99  |
| Viewing External Storage .....                               | 100 |
| Formatting a microSD Card .....                              | 100 |
| Formatting a microSD Card as Internal Memory .....           | 100 |
| Enterprise Folder .....                                      | 100 |
| Managing Apps .....  | 100 |

|   |     |
|---|-----|
| App Details .....   | 101 |
| Managing Downloads.....   | 101 |
| Maintaining the Device.....   | 102 |
| Battery Safety Guidelines.....  | 102 |
| Best Practices for Enterprise Mobile Computing Devices Operating in Hot Environments<br>and Direct Sunlight | 103 |
| Cleaning Instructions.....  | 103 |
| Approved Cleanser Active Ingredients .....  | 103 |
| Harmful Ingredients .....   | 104 |
| Device Cleaning Instructions .....  | 104 |
| Special Cleaning Notes .....  | 104 |
| Cleaning Materials Required .....   | 104 |
| Cleaning Frequency .....  | 105 |
| Cleaning the Device .....   | 105 |
| Housing .....   | 105 |
| Display .....   | 105 |
| Camera and Exit Window.....   | 105 |
| Cleaning Battery Connectors.....  | 105 |
| Cleaning Cradle Connectors .....  | 105 |
| Troubleshooting .....   | 106 |
| Performing a Soft Reset .....   | 106 |
| Performing a Hard Reset.....  | 106 |
| TC72/TC77 .....   | 106 |
| 2-Slot Charge Only Cradle .....   | 109 |
| 2-Slot USB/Ethernet Cradle.....   | 110 |
| 5-Slot Charge Only Cradle .....   | 111 |
| 5-Slot Ethernet Cradle .....  | 112 |
| 4-Slot Battery Charger.....   | 112 |
| Data Capture Supported Symbologies.....   | 114 |
| SE4750-SR Decode Distances .....  | 114 |
| I/O Connector Pin-Outs.....   | 115 |
| 2-Slot Charge Only Cradle Technical Specifications .....  | 115 |
| 2-Slot USB/Ethernet Cradle Technical Specifications.....  | 116 |
| 5-Slot Charge Only Cradle Technical Specifications .....  | 116 |
| 5-Slot Ethernet Cradle Technical Specifications.....  | 117 |
| 4-Slot Battery Charger Technical Specifications.....  | 117 |
| Charge Only Vehicle Cradle Technical Specifications.....  | 118 |
| Trigger Handle Technical Specifications.....  | 118 |
| Charging Cable Cup Technical Specifications .....   | 119 |
| Snap-On USB Cable Technical Specifications .....  | 119 |
| DEX Cable Technical Specifications.....   | 119 |

# About This Guide

## Configurations

This guide covers the following configurations:

| Configuration | Radios   | Display                                     | Memory                     | Data Capture Options                          | Operating System |
|---------------|--|---|----------------------------|---|------------------|
| TC720L        | WLAN: 802.11<br><i>a/b/g/n/ac/d/h/i/r/k/v<sup>3</sup>/w</i><br>WPAN: Bluetooth<br>v5.0 Low Energy                            | 4.7" High Definition<br>(1280 x 720)<br>LCD | 4 GB<br>RAM/32 GB<br>Flash | 2D imager,<br>camera and<br>integrated<br>NFC | Android 10       |
| TC77HL        | WWAN:<br>HSPA+/LTE/CDMA<br>WLAN: 802.11<br><i>a/b/g/n/ac/d/h/i/r/k/v<sup>3</sup>/w</i><br>WPAN: Bluetooth<br>v5.0 Low Energy | 4.7" High Definition<br>(1280 x 720)<br>LCD | 4 GB<br>RAM/32 GB<br>Flash | 2D imager,<br>camera and<br>integrated<br>NFC | Android 10       |

## Notational Conventions

Notational conventions are used to highlight important information.

- **Bold** text is used to highlight the following:
  - Dialog box, window and screen names
  - Drop-down list and list box names
  - Check box and radio button names
  - Icons on a screen
  - Key names on a keypad
  - Button names on a screen.
- Bullets (•) indicate:
  - Action items

- Lists of alternatives
- Lists of required steps that are not necessarily sequential.
- Sequential lists (for example, those that describe step-by-step procedures) appear as numbered lists.

## Icon Conventions

The following icons are used throughout the document. The icons and their associated meanings are described below.



**NOTE:** The text here indicates information that is supplemental for the user to know and that is not required to complete a task.



**IMPORTANT:** The text here indicates information that is important for the user to know.



**CAUTION:** If the precaution is not heeded, the user could receive minor or moderate injury.



**WARNING:** If danger is not avoided, the user CAN be seriously injured or killed.



**DANGER:** If danger is not avoided, the user WILL be seriously injured or killed.

## Service Information

If you have a problem with your equipment, contact Customer Support for your region. Contact information is available at: [zebra.com/support](https://zebra.com/support).

When contacting support, please have the following information available:

- Serial number of the unit (found on manufacturing label)
- Model number or product name (found on manufacturing label)
- Software type and version number
- IMEI number


Customer Support responds to calls by email or telephone within the time limits set forth in support agreements.

If the problem cannot be solved by Customer Support, the user may need to return the equipment for servicing and will be given specific directions. We are not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty. Remove the SIM card and/or microSD card from the device before shipping for service.

If the device was purchased from a business partner, contact that business partner for support.

## Determining Software Versions

Before contacting Customer Support, determine the current software version on your device.

1. Swipe down from the Status bar with two fingers to open the Quick Access panel, and then touch .
2. Touch **About phone**.

3. Scroll to view the following information:

- **Battery information**
- **SW components**
- **Legal information**
- **Model & hardware**
- **Android version**
  - **Android security patch level**
  - Baseband version
  - **Kernel version**
  - **Build number**

To determine the device IMEI information (WWAN only), touch **About phone > IMEI**.

- **IMEI** - Displays the IMEI number for the device.
- **IMEI SV** - Displays the IMEI SV number for the device.

## Determining the Serial Number

Before contacting Customer Support, determine the serial number of your device.

Touch **About phone > Model & hardware > Serial number**.

# Getting Started

## Introduction


This chapter provides information to get the device up and running for the first time.

## Unpacking

1. Carefully remove all protective material from the device and save the shipping container for later storage and shipping.
2. Verify that the following are included:
  - Touch computer
  - 4,620 mAh PowerPercision+ Lithium-ion battery
  - Hand strap
  - Regulatory Guide.
3. Inspect the equipment for damage. If any equipment is missing or damaged, contact the Global Customer Support center immediately.
4. Prior to using the device for the first time, remove the protective shipping film that covers the scan window, display, and camera window.

## Features

**Figure 1** Front View

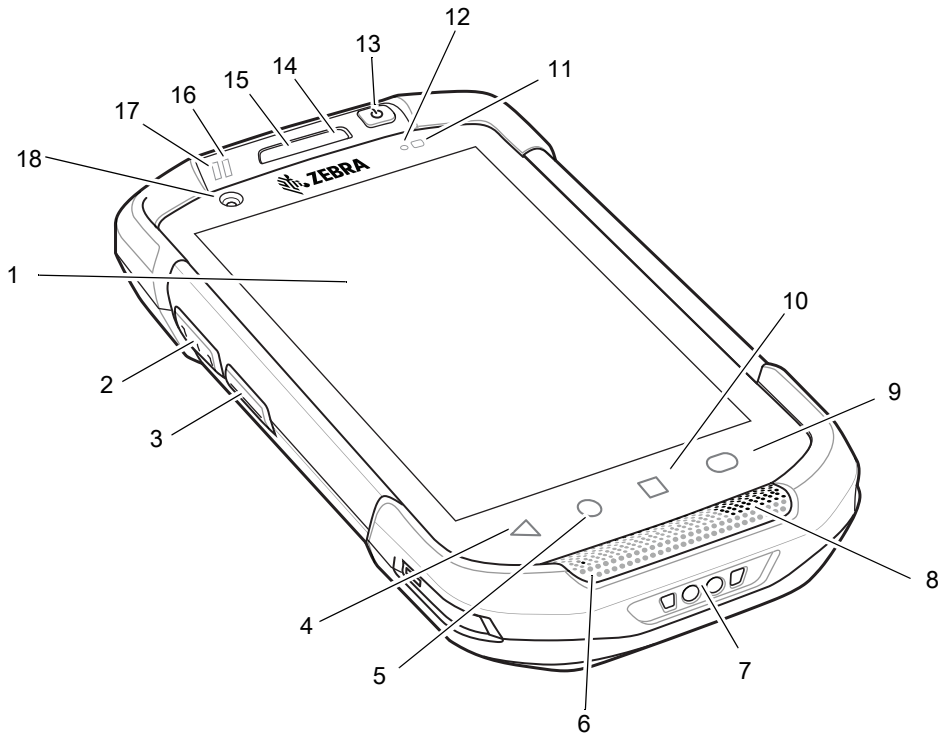

**Table 1** Front View Features


| Number | Item              | Function   |
|--------|-------------------|--|
| 1      | Touch Screen      | Displays all information needed to operate the device.   |
| 2      | Scan Button       | Initiates data capture (programmable).   |
| 3      | PTT Button        | Initiates push-to-talk communications (programmable).  |
| 4      | Back Button       | Displays the previous screen.  |
| 5      | Home Button       | Displays the Home screen with a single press.<br>On device with GMS, opens the Google Now screen when held for a short period of time. |
| 6      | Microphone        | Use for communications in Handset mode.  |
| 7      | Charging Contacts | Provides power to the device from cables and cradles.  |
| 8      | Speaker           | Provides audio output for video and music playback. Provides audio in speakerphone mode.   |
| 9      | Search Button     | Opens the Recent App screen.   |
| 10     | Menu Button       | Opens a menu with items that affect the current screen or app.   |
| 11     | Light Sensor      | Determines ambient light for controlling display backlight intensity.  |
| 12     | Proximity Sensor  | Determines proximity for turning off display when in handset mode.   |



**Table 1** Front View Features (Continued)

| Number | Item                      | Function   |
|--------|---------------------------|--|
| 13     | Power Button              | Turns the display on and off. Press and hold to reset the device, power off or swap battery. |
| 14     | Microphone                | Use for communications in Speakerphone mode.   |
| 15     | Receiver                  | Use for audio playback in Handset mode.  |
| 16     | Charging/Notification LED | Indicates battery charging status while charging and app generated notifications.            |
| 17     | Data Capture LED          | Indicates data capture status.   |
| 18     | Front Facing Camera       | Use to take photos and videos (optional).  |

**Figure 2** Rear View

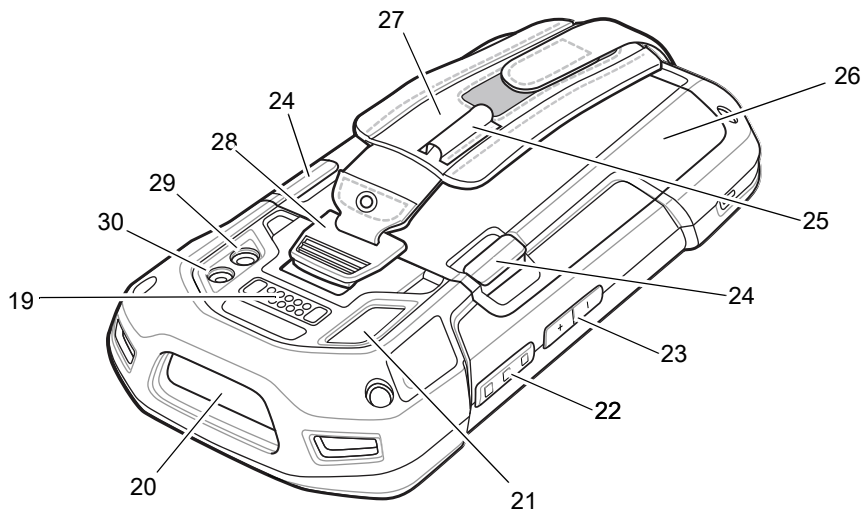

**Table 2** Back View Features

| Number | Item                    | Function   |
|--------|-------------------------|--|
| 19     | Interface Connector     | Provides USB host and client communications, audio and device charging via cables and accessories. |
| 20     | Exit Window             | Provides data capture using the imager.  |
| 21     | Microphone              | Use during video recording and for noise cancellation.   |
| 22     | Scan Button             | Initiates data capture (programmable).   |
| 23     | Volume Up/Down Button   | Increase and decrease audio volume (programmable).   |
| 24     | Battery Release Latches | Press to remove the battery.   |
| 25     | Elastic Sleeve          | Use to hold optional stylus.   |
| 26     | Battery                 | Provides power to the device.  |

**Table 2** Back View Features (Continued)

| Number | Item                      | Function                                      |
|--------|---------------------------|---|
| 27     | Hand strap                | Use to securely hold the device in your hand. |
| 28     | Hand strap Mounting Point | Provides latching point for the hand strap.   |
| 29     | Camera                    | Takes photos and videos.                      |
| 30     | Camera Flash              | Provides illumination for the camera.         |

## Setting Up the Device

To start using the device for the first time:

1. Removing the SIM Lock Access Cover (TC77 with SIM Lock only).
2. Install a SIM card (TC77 only).
3. Install a SAM card.
4. Install a micro secure digital (SD) card (optional).
5. Install hand strap (optional).
6. Install the battery.
7. Charge the device.
8. Power on the device.


## Removing the SIM Lock Access Cover



TC77 with SIM Lock only.

TC77 models with the SIM Lock feature include an access door that is secured using a Microstix 3ULR-0 screw. To remove the access cover, use a Microstix TD-54(3ULR-0) screwdriver to remove the screw from the access panel.

**Figure 3** Remove Secure Access Cover Screw

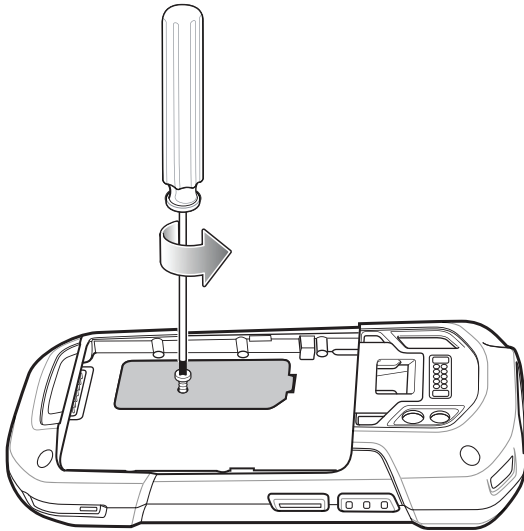

After re-installing the access cover, make sure to use a Microstix TD-54(3ULR-0) screwdriver to re-install the screw.

## Installing the SIM Card




TC77 only.

Only use a nano SIM card.




Follow proper electrostatic discharge (ESD) precautions to avoid damaging the SIM card. Proper ESD precautions include, but not limited to, working on an ESD mat and ensuring that the user is properly grounded.


1. Lift the access door.

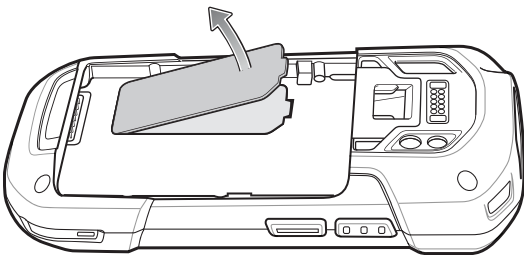


**Figure 4** TC77 SIM Slot Locations

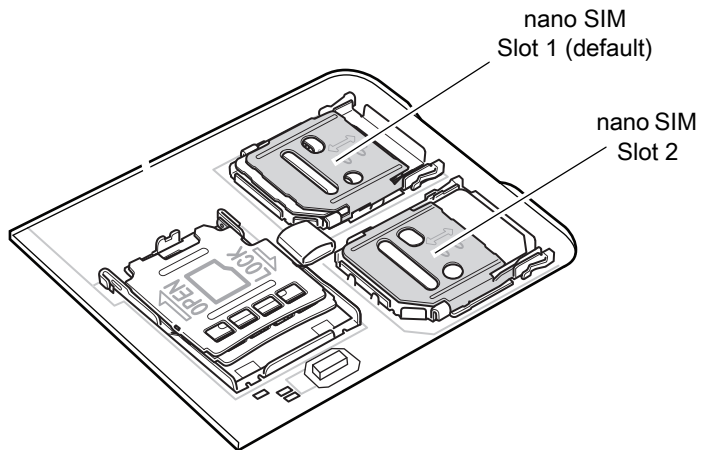


2. Slide the SIM card holder to the unlock position.

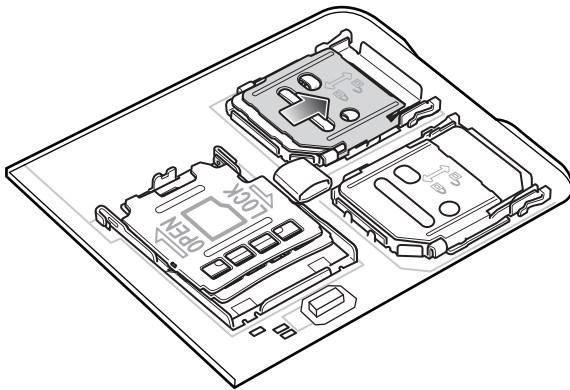


3. Lift the SIM card holder door.

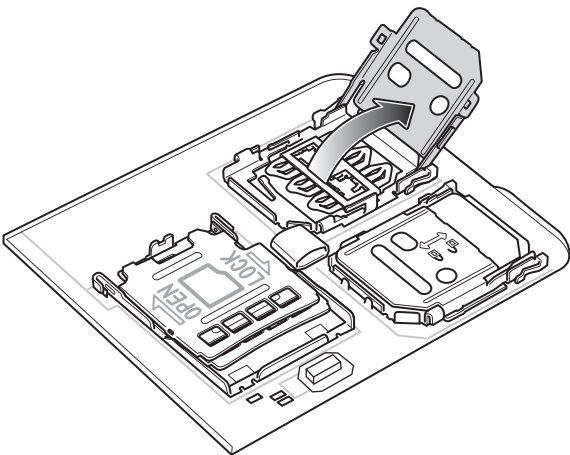


4. Place the nano SIM card into the card holder with contacts facing down.

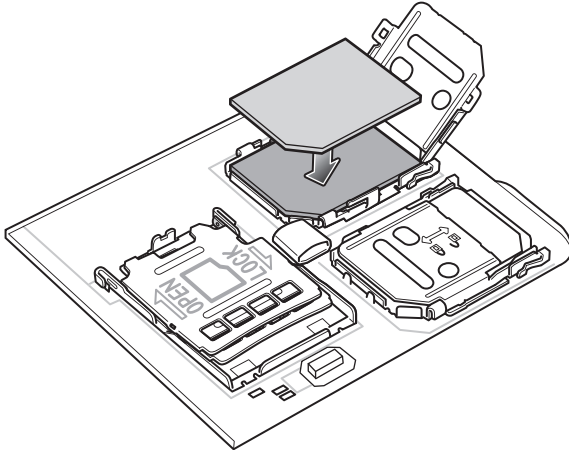

5. Close the SIM card holder door and slide to the lock position.

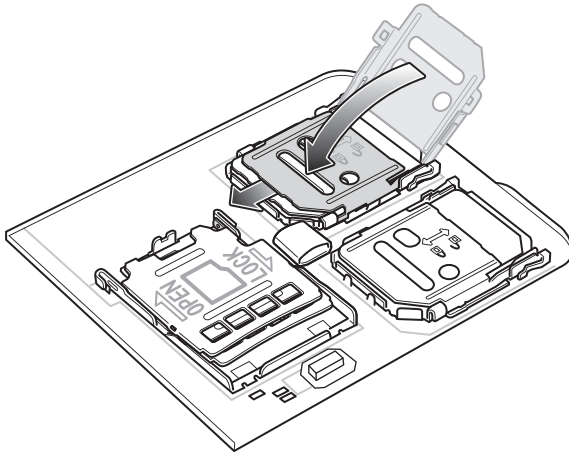

6. Replace the access door.

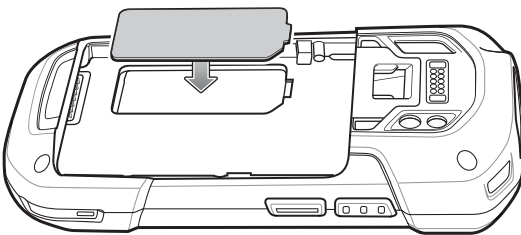

7. Press the access door down and ensure that it is properly seated.



**CAUTION:** Access door must be replaced and securely seated to ensure proper device sealing.

### Installing the SAM Card




**CAUTION:** Follow proper electrostatic discharge (ESD) precautions to avoid damaging the Secure Access Module (SAM) card. Proper ESD precautions include, but not limited to, working on an ESD mat and ensuring that the user is properly grounded.




**NOTE:** If using a micro SAM card, a third-party adapter is required.


1. Lift the access door.

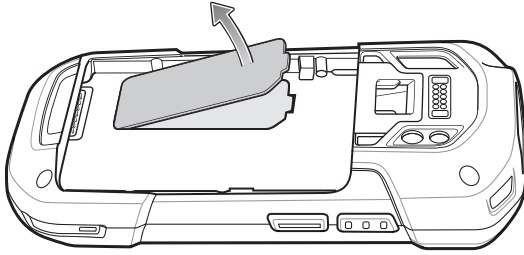

2. Insert a SAM card into the SAM slot with the cut edge toward the middle of the device and the contacts facing down.

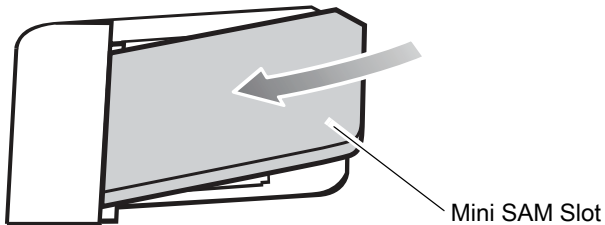

3. Ensure that the SAM card is seated properly.
4. Replace the access door.

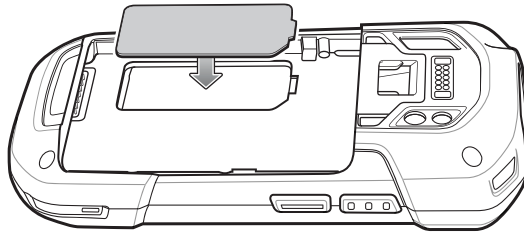

5. Press the access door down and ensure that it is properly seated.



**CAUTION:** Access door must be replaced and securely seated to ensure proper device sealing.

## Installing a microSD Card


The microSD card slot provides secondary non-volatile storage. The slot is located under the battery pack. Refer to the documentation provided with the card for more information, and follow the manufacturer's recommendations for use.




**CAUTION:** Follow proper electrostatic discharge (ESD) precautions to avoid damaging the microSD card. Proper ESD precautions include, but are not limited to, working on an ESD mat and ensuring that the operator is properly grounded.

1. Remove the hand strap, if installed.
2. If the device has a secure access door, use a Microstix 0 screwdriver to remove the 3ULR-0 screw.


**Figure 5** Remove Secure Access Door Screw

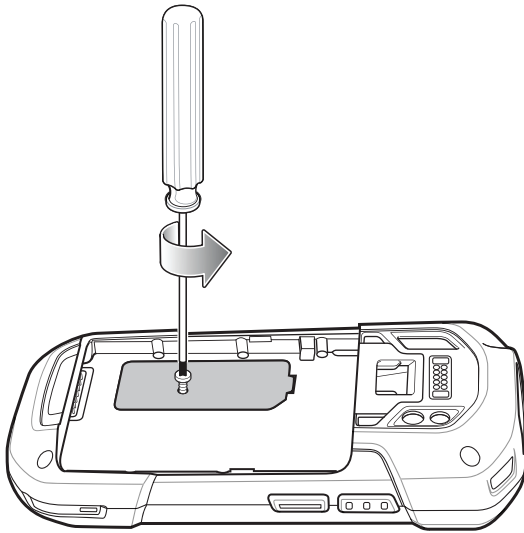


3. Lift the access door.

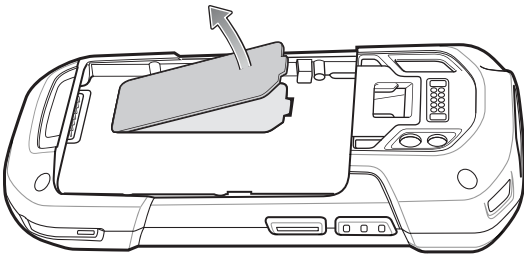


4. Slide the microSD card holder to the Open position.

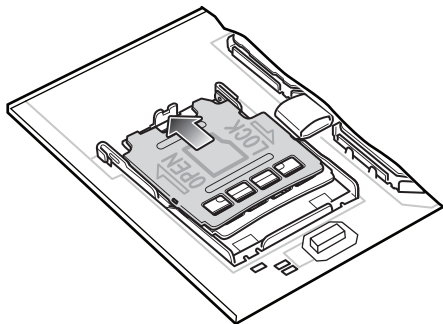


5. Lift the microSD card holder.

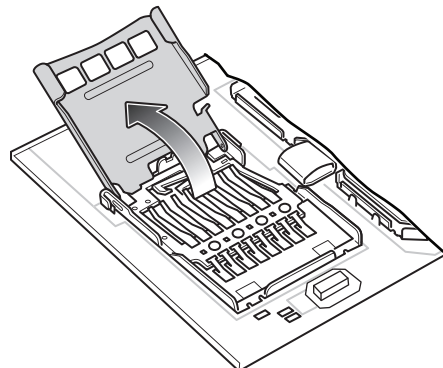


6. Insert the microSD card into the card holder door ensuring that the card slides into the holding tabs on each side of the door.

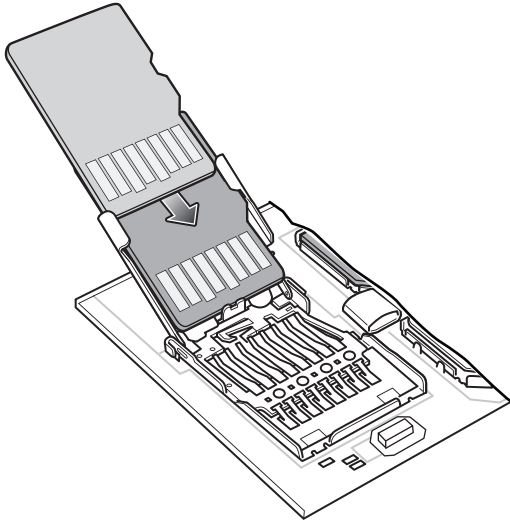

7. Close the microSD card holder door and slide the door to the Lock position.

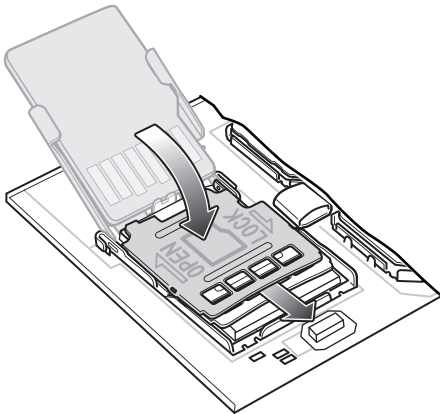

8. Replace the access door.

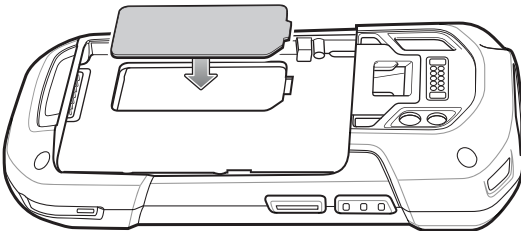


9. Press the access door down and ensure that it is properly seated.



**CAUTION:** Access door must be replaced and securely seated to ensure proper device sealing.



10. If the device has a secure access door, use a Microstix 0 screwdriver to install the 3ULR-0 screw.

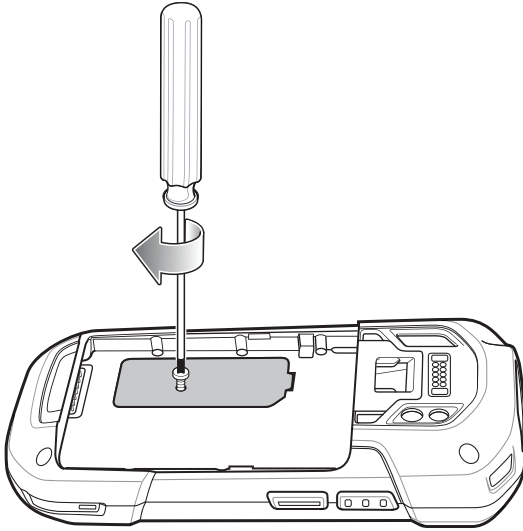

### Installing the Hand Strap and Battery




**NOTE:** User modification of the device, particularly in the battery well, such as labels, asset tags, engravings, stickers, etc., may compromise the intended performance of the device or accessories. Performance levels such as sealing (Ingress Protection (IP)), impact performance (drop and tumble), functionality, temperature resistance, etc. could be effected. DO NOT put any labels, asset tags, engravings, stickers, etc. in the battery well.




**NOTE:** Installation of the hand strap is optional. Skip this section if not installing the hand strap.


1. Remove the hand strap filler from the hand strap slot. Store the hand strap filler in a safe place for future replacement.

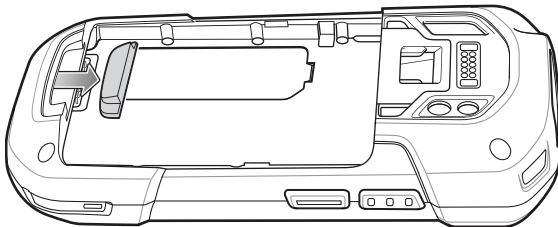


2. Insert the hand strap plate into the hand strap slot.

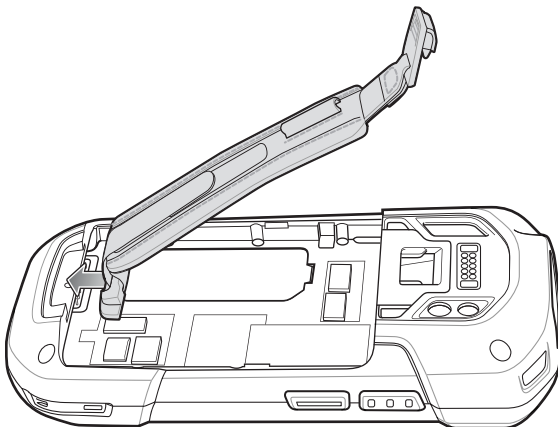


3. Insert the battery, bottom first, into the battery compartment in the back of the device.

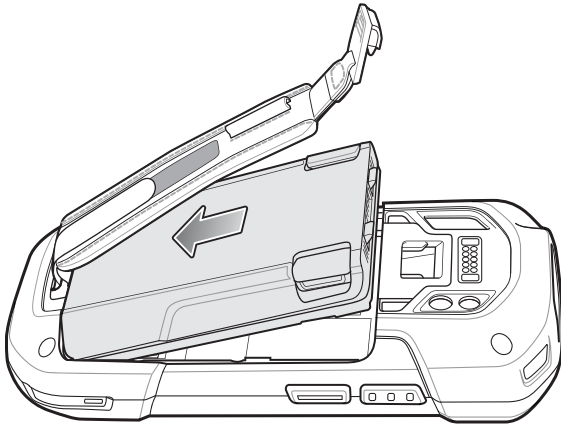

4. Press the battery down into the battery compartment until the battery release latches snap into place.

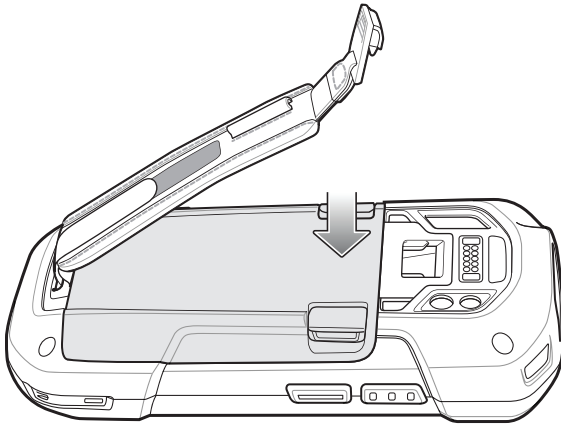

5. Place hand strap clip into hand strap mounting slot and pull down until it snaps into place.

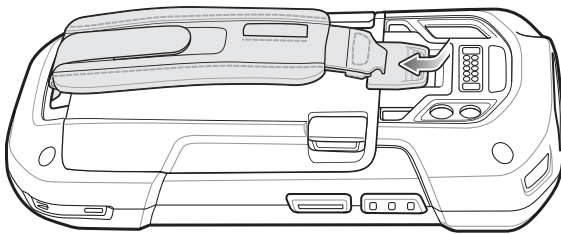


## Installing the Battery




**NOTE:** User modification of the device, particularly in the battery well, such as labels, asset tags, engravings, stickers, etc., may compromise the intended performance of the device or accessories. Performance levels such as sealing (Ingress Protection (IP)), impact performance (drop and tumble), functionality, temperature resistance, etc. could be effected. **DO NOT** put any labels, asset tags, engravings, stickers, etc. in the battery well.

1. Insert the battery, bottom first, into the battery compartment in the back of the device.

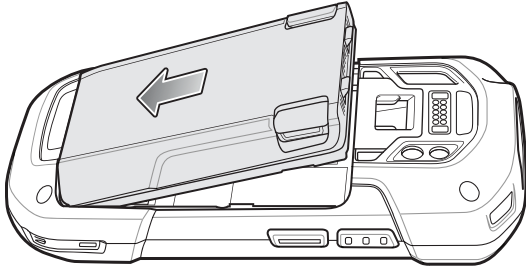

2. Press the battery down into the battery compartment until the battery release latches snap into place.

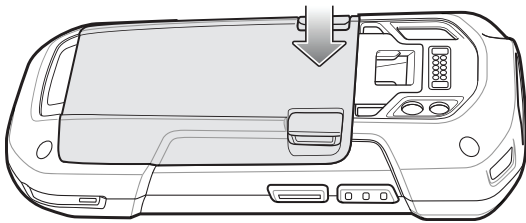

## Charging the Battery

Before using the device for the first time, charge the main battery until the green Charging/Notification light emitting diode (LED) remains lit. To charge the device, use a cable or a cradle with the appropriate power supply. For information about the accessories available for the device, see [Accessories](#) for more information.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

Charge batteries in temperatures from 0°C to 40°C (32°F to 104°F). The device or accessory always performs battery charging in a safe and intelligent manner. At higher temperatures (approximately +37°C (+98°F)) the device or accessory may, for small periods of time, alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device or accessory indicates when charging is disabled due to abnormal temperatures via its LED.

To charge the main battery:

1. Connect the charging accessory to the appropriate power source.
2. Insert the device into a cradle or attach to a cable. The device turns on and begins charging. The Charging/Notification LED blinks amber while charging, then turns solid green when fully charged.

## Charging Indicators

**Table 3** Charging/Notification LED Charging Indicators

| State   | Indication  |
|---|---|
| Off   | The device is not charging. The device is not inserted correctly in the cradle or connected to a power source. Charger/cradle is not powered. |
| Slow Blinking Amber (1 blink every 4 seconds) | The device is charging.   |
| Solid Green                                   | Charging complete.  |

**Table 3** Charging/Notification LED Charging Indicators (Continued)

| State                                       | Indication  |
|---|---|
| Fast Blinking Amber (2 blinks/second)       | Charging error: <ul style="list-style-type: none"> <li>• Temperature is too low or too high.</li> <li>• Charging has gone on too long without completion (typically eight hours).</li> </ul>  |
| Slow Blinking Red (1 blink every 4 seconds) | The device is charging but the battery is at end of useful life.  |
| Solid Red                                   | Charging complete but the battery is at end of useful life.   |
| Fast Blinking Red (2 blinks/second)         | Charging error but the battery is at end of useful life. <ul style="list-style-type: none"> <li>• Temperature is too low or too high.</li> <li>• Charging has gone on too long without completion (typically eight hours).</li> </ul> |

## Zebra Visibility Services

The device captures and provides device analytics to a system administrator. The first time the device boots (or after a Factory reset), the **Zebra Services** agreement screen displays.

1. Leave **Device Data** enabled if you want the device to send analytics data.
2. Touch the **Device Data** switch to disable the device from sending analytics data.
3. Touch **OK** to confirm selection.

## Replacing the Battery




**NOTE:** User modification of the device, particularly in the battery well, such as labels, asset tags, engravings, stickers, etc., may compromise the intended performance of the device or accessories. Performance levels such as sealing (Ingress Protection (IP)), impact performance (drop and tumble), functionality, temperature resistance, etc. could be effected. **DO NOT** put any labels, asset tags, engravings, stickers, etc. in the battery well.




**CAUTION:** Do not add or remove SIM, SAM or microSD card during battery replacement.


1. Remove any accessory attached to the device.
2. Press the Power button until the menu appears.
3. Touch **Battery Swap**.
4. Follow the on-screen instructions.
5. Wait for the LED to turn off.
6. If hand strap is attached, slide the hand strap clip up toward the top of the device and then lift.

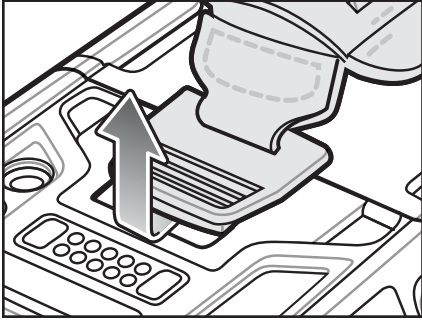

7. Press the two battery latches in.

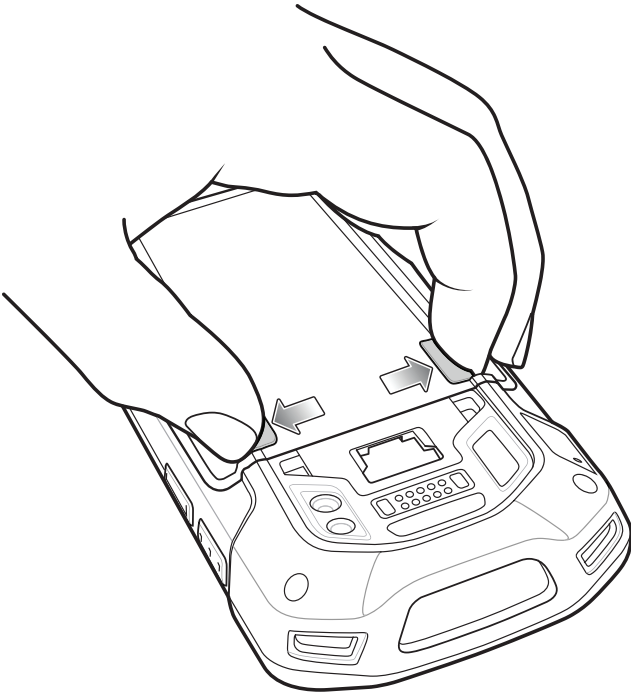

8. Lift the battery from the device.

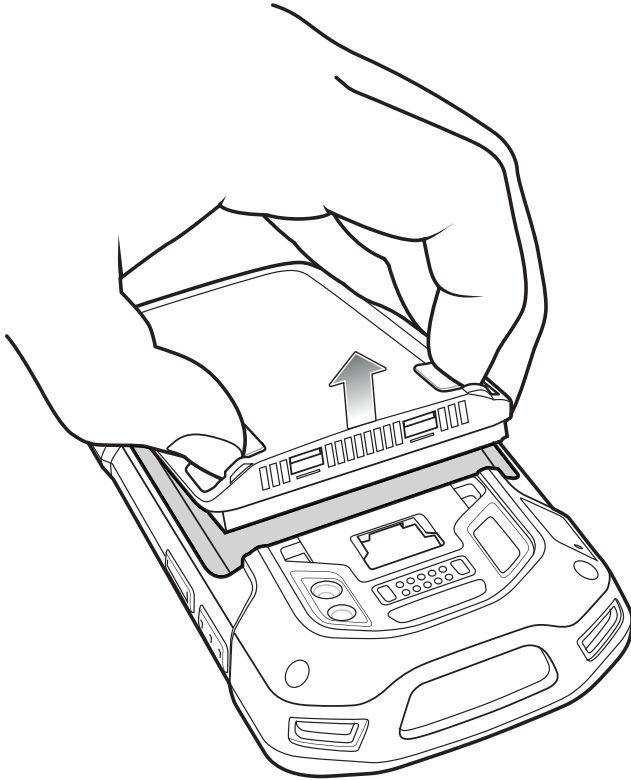

**CAUTION:** Replace the battery within two minutes. After two minutes the device reboots and data may be lost.

9. Insert the replacement battery, bottom first, into the battery compartment in the back of the device.
10. Press the battery down until the battery release latch snaps into place.
11. Replace the hand strap, if required.
12. Press and hold the Power button to turn on the device.



**NOTE:** After replacing the battery, wait 15 minutes before using **Battery Swap** again.

## Replacing the SIM or SAM Card




**NOTE:** SIM replacement applies to TC77 only.


To replace the SIM or SAM card:

1. Press and hold the Power button until the menu appears.
2. Touch **Power off**.
3. Touch **OK**.

4. If hand strap is attached, slide the hand strap clip up toward the top of the device and then lift.

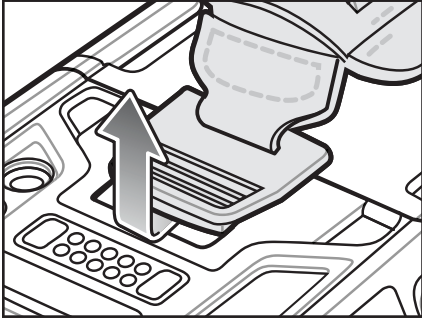


5. Press the two battery latches in.
6. Lift the battery from the device.
7. Lift the access door.

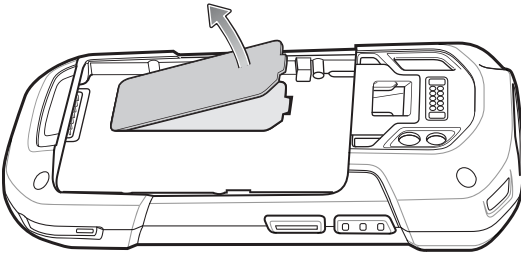


8. Remove card from holder.

**Figure 6** Remove SAM Card

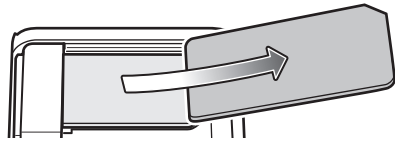


**Figure 7** Remove Nano SIM Card

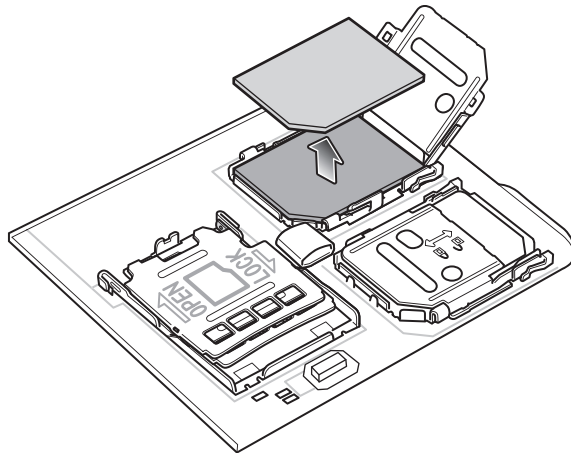


9. Insert the replacement card.


**Figure 8** Insert SAM Card

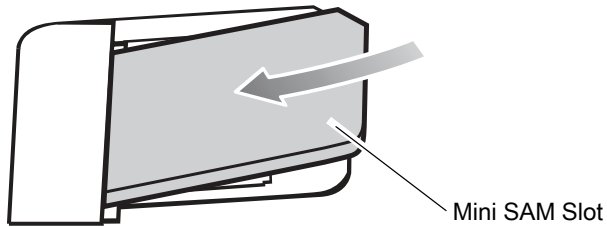

**Figure 9** Insert Nano SIM Card

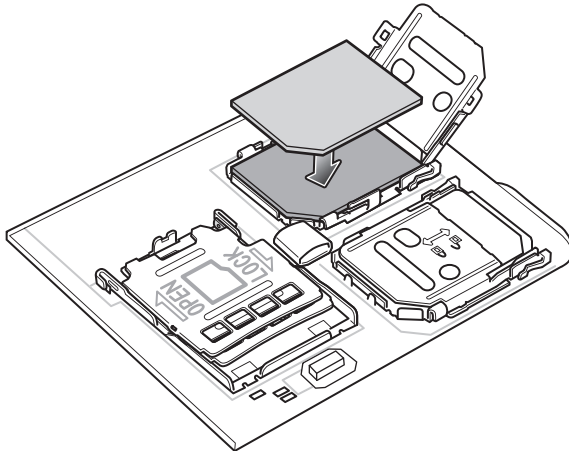

10. Replace the access door.

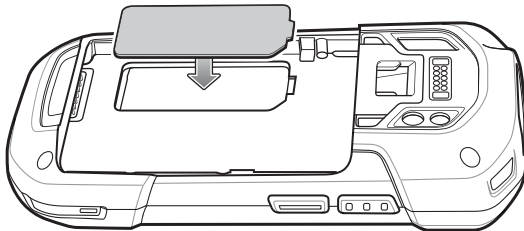

11. Press the access door down and ensure that it is properly seated.



**CAUTION:** Access door must be replaced and securely seated to ensure proper device sealing.

12. Insert the battery, bottom first, into the battery compartment in the back of the device.

13. Press the battery down until the battery release latch snaps into place.

14. Replace the hand strap, if required.

15. Press and hold the Power button to turn on the device.


## Replacing the microSD Card

To replace the microSD card:


1. Press the Power button until the menu appears.
2. Touch **Power off**.
3. Touch **OK**.




4. If hand strap is attached, slide the hand strap clip up toward the top of the device and then lift.

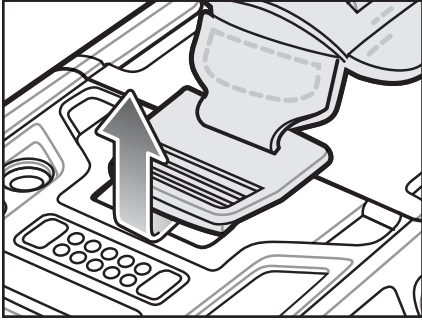

5. Press the two battery latches in.
6. Lift the battery from the device.
7. If the device has a secure access door, use a Microstix 0 screwdriver to remove the 3ULR-0 screw.

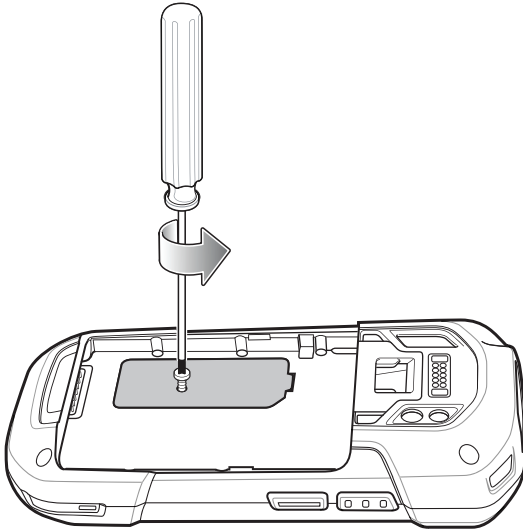


8. Lift the access door.

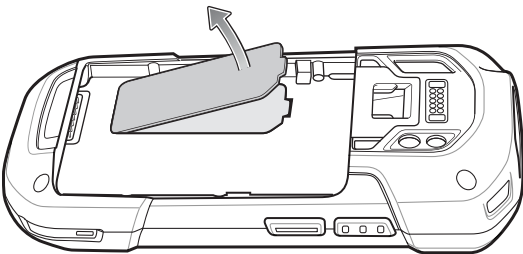


9. Slide the microSD card holder to the Open position.
10. Lift the microSD card holder.
11. Remove microSD card from holder.
12. Insert the replacement microSD card into the card holder door ensuring that the card slides into the holding tabs on each side of the door.

13. Close the microSD card holder door and slide the door to the Lock position.

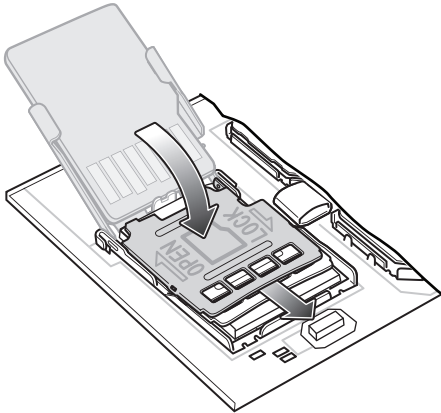

14. Replace the access door.

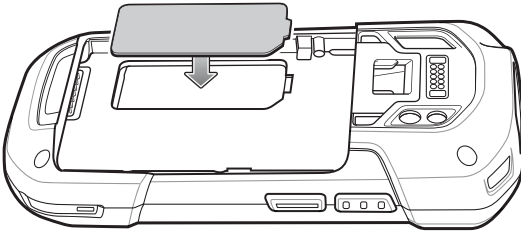


15. Press the access door down and ensure that it is properly seated.



**CAUTION:** Access door must be replaced and securely seated to ensure proper device sealing.

16. If the device has a secure access door, use a Microstix 0 screwdriver to install the 3ULR-0 screw.

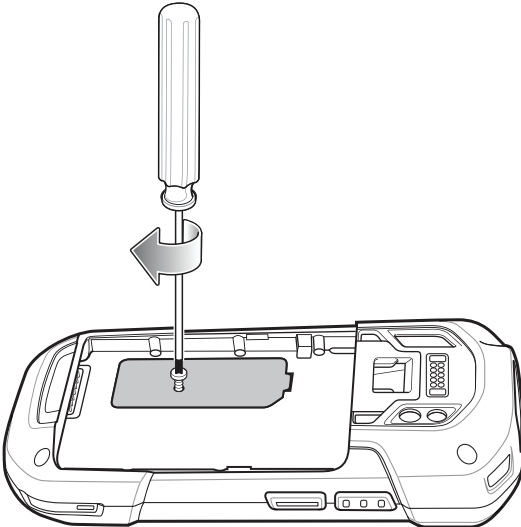

17. Insert the battery, bottom first, into the battery compartment in the back of the device.

18. Press the battery down until the battery release latch snaps into place.

19. Replace the hand strap, if required.

20. Press and hold the Power button to turn on the device.

# Data Capture

## Introduction

The device supports data capture using:

- Integrated Imager
- Integrated Camera
- RS507/RS507X Hands-free Imager
- RS6000 Bluetooth Ring Scanner
- DS3578 Digital Scanner
- DS3608 Digital Scanner
- DS3678 Digital Scanner.

## Integrated Imager

The device with an integrated 2D imager has the following features:

- Omnidirectional reading of a variety of barcode symbologies, including the most popular linear, postal, PDF417, Digimarc, and 2D matrix code types.
- The ability to capture and download images to a host for a variety of imaging applications.
- Advanced intuitive laser aiming cross-hair and dot aiming for easy point-and-shoot operation.

The imager uses imaging technology to take a picture of a barcode, stores the resulting image in memory, and executes state-of-the-art software decoding algorithms to extract the barcode data from the image.

## Operational Modes

The device with an integrated imager supports two modes of operation, listed below. Activate each mode by pressing the Scan button.

- Decode mode - The device attempts to locate and decode enabled barcodes within its field of view. The imager remains in this mode as long as you hold the scan button, or until it decodes a barcode.



**NOTE:** To enable Pick List Mode, configure in DataWedge or set in an application using a API command.

- Pick List mode - Selectively decode a barcode when more than one barcode is in the device's field of view by moving the aiming crosshair or dot over the required barcode. Use this feature for pick lists containing multiple barcodes and manufacturing or transport labels containing more than one barcode type (either 1D or 2D).

### Digital Camera

The device with an integrated camera based barcode scanning solution has the following features:


- Omnidirectional reading of a variety of barcode symbologies, including the most popular linear, postal, QR, PDF417, and 2D matrix code types.
- Cross-hair reticle for easy point-and-shoot operation.
- Picklist mode to decode a particular barcode from many in the field of view.

The solution uses the advanced camera technology to take a digital picture of a barcode, and executes state-of-the-art software decoding algorithms to extract the data from the image.

### RS507/RS507X Hands-Free Imager

The RS507/RS507X Hands-free Imager is a wearable barcode scan solution for both 1D and 2D barcode symbologies.

**Figure 10** RS507/RS507X Hands-Free Imager

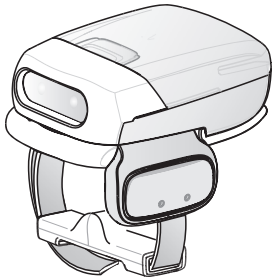


Refer to the RS507/RS507X Hands-free Imager Product Reference Guide for more information.

### RS6000 Bluetooth Ring Scanner

The RS6000 Bluetooth Ring Scanner is a wearable barcode scan solution for both 1D and 2D barcode symbologies.

**Figure 11** RS6000 Bluetooth Ring Scanner

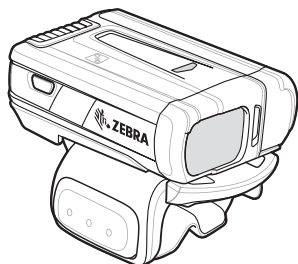


Refer to the RS6000 Bluetooth Ring Scanner Product Reference Guide for more information.

## DS3678 Digital Scanner

The cordless DS3678 combines superior 1D and 2D omnidirectional barcode scanning performance and advanced ergonomics in a lightweight design. See the DS36X8 Product Reference Guide for more information.

**Figure 12** DS3678 Digital Scanner

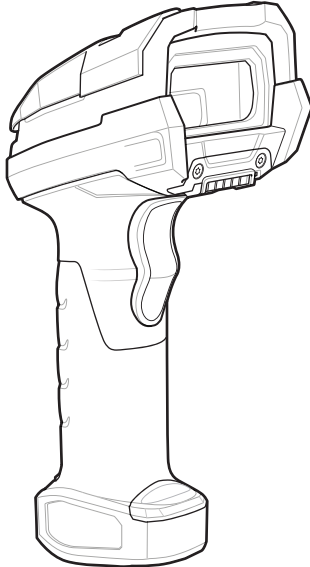

## Scanning Considerations

Typically, scanning is a simple matter of aim, scan, and decode, with a few quick trial efforts to master it. However, consider the following to optimize scanning performance:

- **Range:** Scanners decode best over a particular working range — minimum and maximum distances from the barcode. This range varies according to barcode density and scanning device optics. Scan within range for quick and constant decodes; scanning too close or too far away prevents decodes. Move the scanner closer and further away to find the right working range for the barcodes being scanned.
- **Angle:** Scanning angle is important for quick decodes. When the illumination/flash reflects directly back into the imager, the specular reflection can blind/saturate the imager. To avoid this, scan the barcode so that the beam does not bounce directly back. Do not scan at too sharp an angle; the scanner needs to collect scattered reflections from the scan to make a successful decode. Practice quickly shows what tolerances to work within.
- Hold the device farther away for larger symbols.
- Move the device closer for symbols with bars that are close together.




**NOTE:** Scanning procedures depend on the app and device configuration. An app may use different scanning procedures from the one listed above.

## Scanning with Internal Imager

To read a barcode, a scan-enabled app is required. The device contains the DataWedge app that allows the user to enable the imager, decode the barcode data, and display the barcode content.

To scan with the internal imager:

1. Ensure that an app is open on the device and a text field is in focus (text cursor in text field).
2. Point the exit window on the top of the device at a barcode.

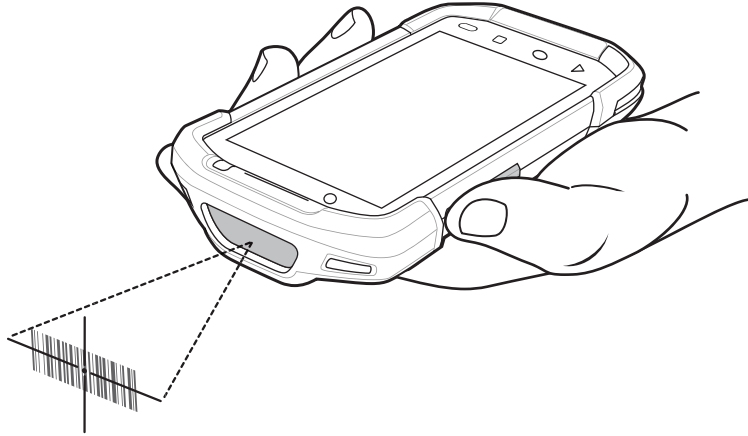


3. Press and hold the scan button.  
The red laser aiming pattern turns on to assist in aiming.



**NOTE:** When the device is in Picklist mode, the imager does not decode the barcode until the crosshair or aiming dot touches the barcode.

4. Ensure the barcode is within the area formed by the crosshairs in the aiming pattern. The aiming dot increases visibility in bright lighting conditions.

**Figure 13** Aiming Pattern

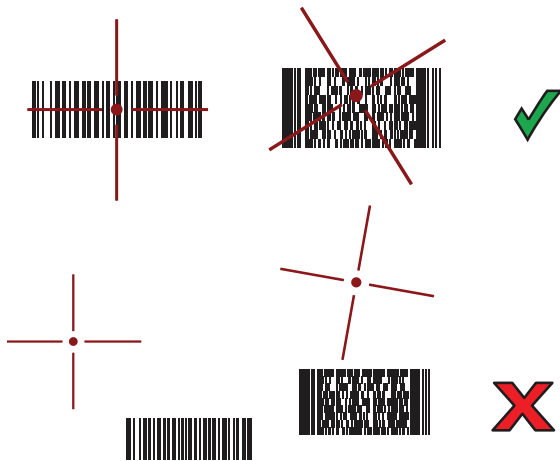

**Figure 14** Pick List Mode with Multiple Barcodes



5. The Data Capture LED lights green and a beep sounds, by default, to indicate the barcode was decoded successfully.

6. Release the scan button.

The barcode content data displays in the text field.



**NOTE:** Imager decoding usually occurs instantaneously. The device repeats the steps required to take a digital picture (image) of a poor or difficult barcode as long as the scan button remains pressed.


## Scanning with Integrated Camera

To capture bar code data:



**NOTE:** When capturing bar code data in poor lighting, turn on Illumination mode in the DataWedge app. See the device Integrator Guide for detailed information on configuring DataWedge.

1. Ensure that an app is open on the device and a text field is in focus (text cursor in text field).  
For example, open the web browser and touch the text field.
2. Aim the camera at a bar code.
3. Press and hold the Scan button. By default, a preview window appears on the screen. The Decode light emitting diode (LED) lights red to indicate that data capture is in process.

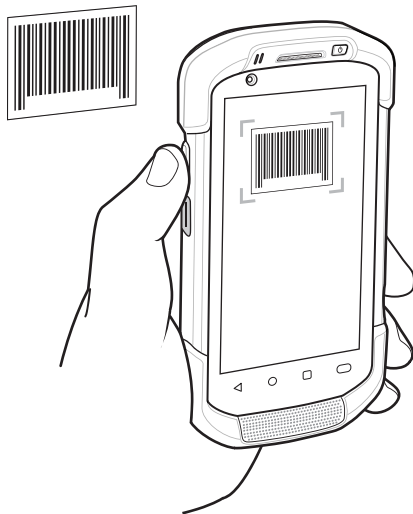

**NOTE:** When Picklist mode is enabled, move the device until the bar code is centered under the red target on the screen.

4. Move the device until the bar code is visible on the screen.
5. The Decode LED lights green, a beep sounds and the device vibrates, by default, to indicate the bar code was decoded successfully.
6. The captured data appears in the text field.


## Scanning with RS507/RS507X Hands-Free Imager

To read a barcode, a scan-enabled app is required. The device contains the DataWedge app that allows you to enable the scanner to decode barcode data and display the barcode content.

To scan with the RS507/RS507X:

1. Pair the RS507/RS507X with the device. See [Pairing Using Simple Serial Interface](#) [Pairing Bluetooth Scanners](#) or [Pairing Using Bluetooth Human Interface Device](#) for more information.

2. Ensure that an app is open on the device and a text field is in focus (text cursor in text field).
3. Point the RS507/RS507X at a barcode.

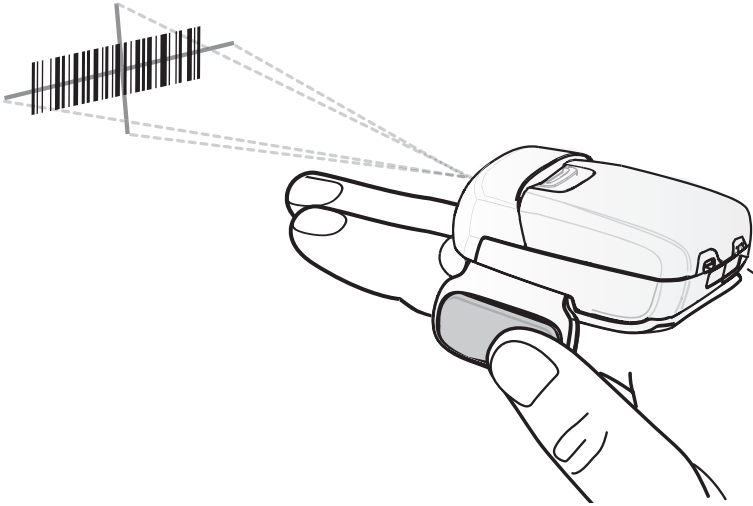

4. Press and hold the trigger.

The red laser aiming pattern turns on to assist in aiming. Ensure the barcode is within the area formed by the cross-hairs in the aiming pattern. The aiming dot increases visibility in bright lighting conditions.

The RS507/RS507X LEDs light green and a beep sounds to indicate the barcode was decoded successfully. When the RS507/RS507X is in Pick List mode, the RS507/RS507X does not decode the barcode until the center of the crosshair touches the barcode.

**Figure 15** RS507/RS507X Aiming Pattern



**Figure 16** RS507/RS507X Pick List Mode with Multiple Barcodes in Aiming Pattern



5. The captured data appears in the text field.




## Scanning with RS6000 Bluetooth Ring Scanner

To read a barcode, a scan-enabled app is required. Devices that contain the Zebra DataWedge app allows you to enable the scanner to decode barcode data and display the barcode content.

To scan with the RS6000:

1. Pair the RS6000 with the device. See Pairing Using Bluetooth Human Interface Device for more information.
2. Ensure that an app is open on the device and a text field is in focus (text cursor in text field).
3. Point the RS6000 at a barcode.

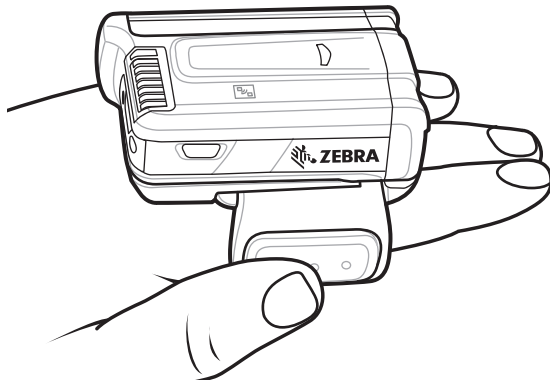


4. Press and hold the trigger.

The red laser aiming pattern turns on to assist in aiming. Ensure the barcode is within the area formed by the cross-hairs in the aiming pattern. The aiming dot increases visibility in bright lighting conditions.

The RS6000 LEDs light green and a beep sounds to indicate the barcode was decoded successfully. When the RS6000 is in Pick List mode, the RS6000 does not decode the barcode until the center of the crosshair touches the barcode.

**Figure 17** RS6000 Aiming Pattern

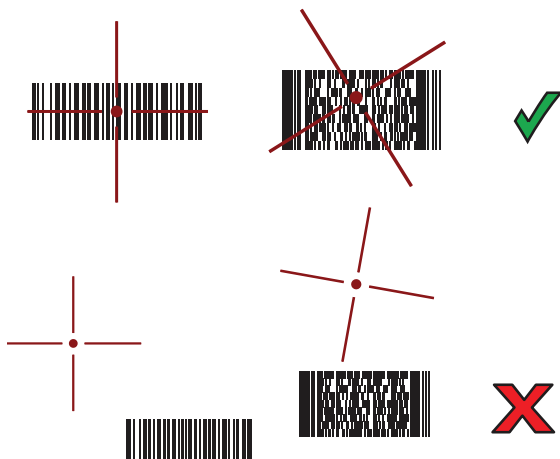

**Figure 18** RS6000 Pick List Mode with Multiple Barcodes in Aiming Pattern




5. The captured data appears in the text field.

## Scanning with the DS3608 USB Scanner or DS3678 Bluetooth Scanner

To scan with the DS3608 or DS3678:


1. Pair the scanner with the device. For more information, see [Connecting a USB Scanner for the DS3608](#) or [Pairing Bluetooth Scanners for the DS3678](#).
2. Ensure that an app is open on the device and a text field is in focus (text cursor in text field).
3. Point the scanner at a barcode.

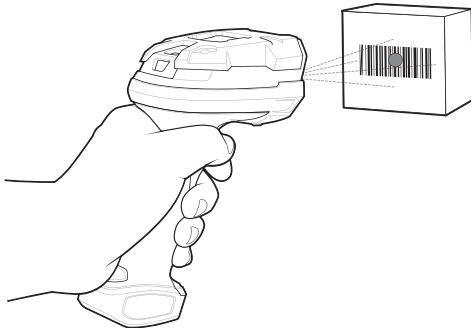


4. Press and hold the trigger.

Ensure the barcode is within the area formed by the aiming pattern. The aiming dot increases visibility in bright lighting conditions.

**Figure 19** DS3608/DS3678 Aiming Pattern

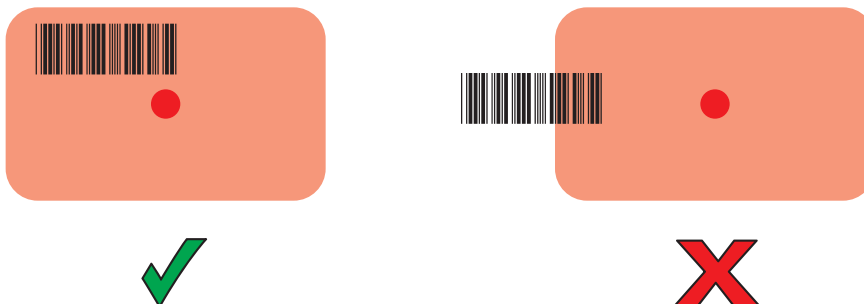

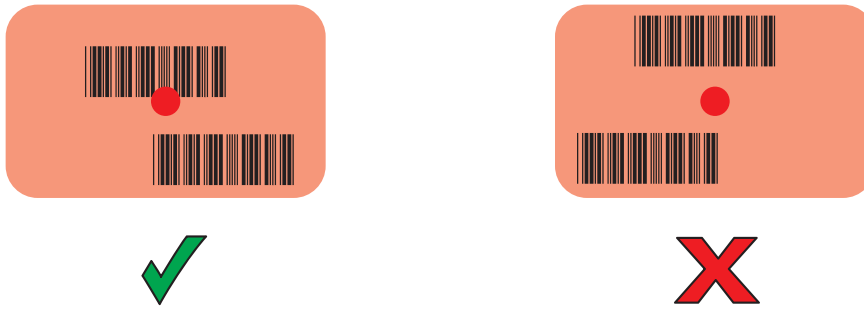**Figure 20** DS3608/DS3678 Pick List Mode with Multiple Barcodes in Aiming Pattern

5. The captured data appears in the text field.

## Pairing the RS507/RS507X/RS6000 Hands-Free Imager

To connect the RS507/RS507X or RS6000 imager to the device, use one of the following methods:

- Near Field Communication (NFC) (RS6000 only)
- Simple Serial Interface (SSI)
- Bluetooth Human Interface Device (HID) Mode.

### Pairing Using Near Field Communication

The device provides the ability to pair the RS6000 using NFC.




**NOTE:** RS6000 Only.

To pair using NFC:

1. Ensure that the RS6000 is in SSI mode. Refer to the RS6000 User Guide for more information.
2. Ensure that NFC is enabled on the device.
3. Align the NFC icon on the RS6000 with the NFC antenna on the device.

The RS6000 Status LED blinks blue indicating that the RS6000 is attempting to establish connection with the device. When connection is established, the Status LED turns off and the RS6000 emits a single string of low/high beeps.

A notification appears on the Notification panel and the  icon appears in the Status bar.

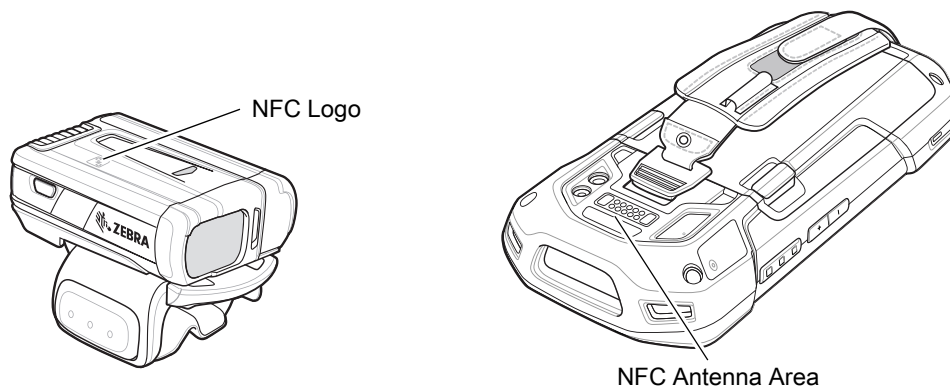

## Pairing in HID Mode Using Near Field Communication


The device provides the ability to pair the RS6000 in HID mode using NFC.



**NOTE:** RS6000 Only.

To pair in HID mode using NFC:


1. Ensure that NFC is enabled on the device.
2. Ensure that Bluetooth is enabled on the device.
3. Place the RS6000 in Human Interface Device (HID) mode. If the RS6000 is already in HID mode, skip to step 4.
  - a. Remove the battery from the RS6000.
  - b. Press and hold the Restore key.
  - c. Install the battery onto the RS6000.
  - d. Keep holding the Restore key for about five seconds until a chirp is heard and the Scan LEDs flash green.
  - e. Scan the barcode below to place the RS6000 in HID mode.

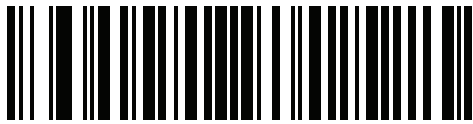

4. Remove the battery from the RS6000.
5. Re-install the battery into the RS6000.
6. Align the NFC icon on the RS6000 with the NFC antenna on the device.


The RS6000 Status LED blinks blue indicating that the RS6000 is attempting to establish connection with the device. When connection is established, the Status LED turns off and the RS6000 emits a single string of low/high beeps.


A notification appears on Notification panel and the **A** icon appears in the Status bar.

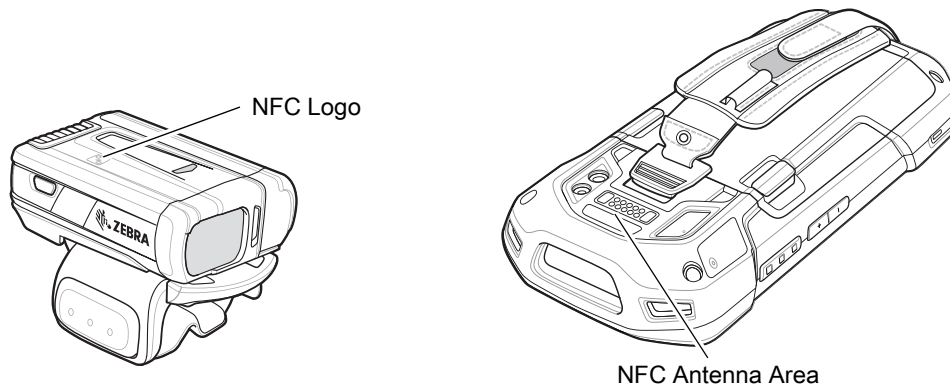

## Pairing Using Simple Serial Interface (SSI)

To pair the RS507/RS507X or RS6000 with the device using SSI.

1. Swipe up from the bottom of the Home screen and touch .

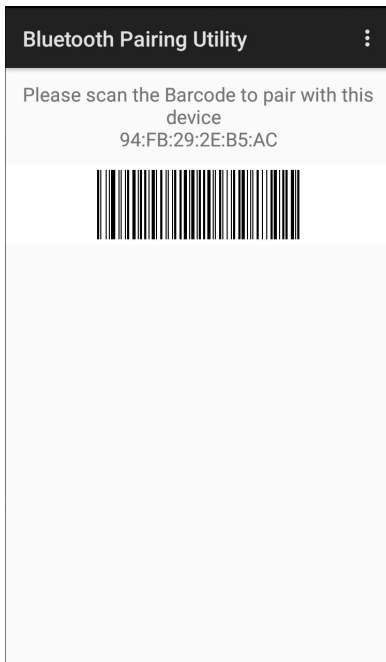

2. Using the RS507/RS507X or RS6000, scan the barcode on the screen.


The RS507/RS507X or RS6000 emits a string of high/low/high/low beeps. The Scan LED flashes green indicating that the RS507/RS507X or RS6000 is attempting to establish connection with the device. When connection is established, the Scan LED turns off and the RS507/RS507X or RS6000 emits one string of low/high beeps.

A notification appears on the Notification panel and the  icon appears in the Status bar.

## Pairing Using Bluetooth Human Interface Device

To pair the RS507/RS507X or RS6000 with the device using Human Interface Device (HID):

1. Ensure that Bluetooth is enabled on both devices.
2. Ensure that the Bluetooth device to discover is in discoverable mode.
3. Ensure that the two devices are within 10 meters (32.8 feet) of one another.
4. Place the RS507/RS507X or RS6000 in HID mode. If the RS507/RS507X or RS6000 is already in HID mode, skip to step 5.
  - a. Remove the battery from the RS507/RS507X or RS6000.
  - b. Press and hold the Restore key.
  - c. Install the battery onto the RS507/RS507X or RS6000.
  - d. Keep holding the Restore key for about five seconds until a chirp is heard and the Scan LEDs flash green.
  - e. Scan the barcode below to place the RS507/RS507X or RS6000 in HID mode.

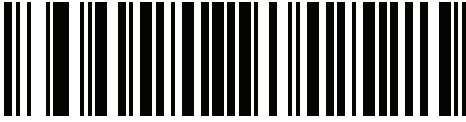**Figure 21** RS507 Bluetooth HID Barcode**Figure 22** RS6000 Bluetooth HID Barcode

5. Remove the battery from the RS507/RS507X or RS6000.
6. Re-install the battery into the RS507/RS507X or RS6000.
7. Go to **Settings**.
8. Touch **Bluetooth**.
9. Touch **Pair new device**. The device begins searching for discoverable Bluetooth devices in the area and displays them under **Available devices**.
10. Scroll through the list and select RS507/RS507X or RS6000.

The device connects to the RS507/RS507X or RS6000 and **Connected** appears below the device name. The Bluetooth device is added to the **Paired devices** list and a trusted (“paired”) connection is established.

A notification appears on Notification panel and the **A** icon appears in the Status bar.

## Pairing a Bluetooth Scanner

Connect the scanner to the device using one of the following methods:

- Simple Serial Interface (SSI) mode
- Bluetooth Human Interface Device (HID) mode.

### Pairing Using Bluetooth Human Interface Device

To pair the scanner with the device using HID:

1. Remove the battery from the scanner.
2. Replace the battery.
3. After the scanner reboots, scan the barcode below to place the scanner in HID mode.



4. On the device, swipe down from the Status bar to open the Quick Access panel and then touch **⚙**.
5. Touch **Bluetooth**.
6. Touch **Pair new device**. The device begins searching for discoverable Bluetooth devices in the area and displays them under **Available devices**.

7. Scroll through the list and select XXXXX xxxxxx, where XXXXX is the scanner and xxxxxx is the serial number.

The device connects to the scanner, the scanner beeps once and **Connected** appears below the device name. The Bluetooth device is added to the **Paired devices** list and a trusted (“paired”) connection is established.

## DataWedge

DataWedge is a utility that adds advanced barcode scanning capability to any application without writing code. It runs in the background and handles the interface to built-in barcode scanners. The captured barcode data is converted to keystrokes and sent to the target application as if it was typed on the keypad.



DataWedge allows any app on the device to get data from input sources such as a barcode scanner, MSR, RFID, voice, or serial port and manipulate the data based on options or rules.

Configure DataWedge to:


- Provide data capture services from any app.
- Use a particular scanner, reader or other peripheral device.
- Properly format and transmit data to a specific app.

To configure DataWedge refer to [techdocs.zebra.com/datawedge/](http://techdocs.zebra.com/datawedge/).

## Enabling DataWedge

1. Swipe up from the bottom of the Home screen and touch .
2. Touch  > **Settings**.
3. Touch the **DataWedge enabled** checkbox. A blue checkmark appears in the checkbox indicating that DataWedge is enabled.
4. Touch the Home button.

## Disabling DataWedge

1. Touch .
2. Touch **Settings**.
3. Touch **DataWedge enabled**.

The blue check disappears from the checkbox indicating that DataWedge is disabled.

## Supported Decoders



**NOTE:** DataWedge supports the decoders listed below but not all are validated on this device.

**Table 4** Supported Decoders

| Decoders             | Internal Imager<br>SE4750-SR & SE4750-MR | Internal Imager<br>SE4770 | RS5100 | RS6000 | RS507/RS507X | DS2278 | DS3578 | DS3678 | LI3678 | DS8178 |
|----------------------|--|---------------------------|--------|--------|--------------|--------|--------|--------|--------|--------|
| Australian Postal    | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| Aztec                | X  | X                         | X      | X      | X            | X      | X      | X      | --     | X      |
| Canadian Postal      | O  | O                         | O      | O      | --           | --     | --     | --     | --     | --     |
| Chinese 2 of 5       | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| Codabar              | X  | X                         | X      | X      | X            | X      | X      | X      | X      | X      |
| Code 11              | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| Code 128             | X  | X                         | X      | X      | X            | X      | X      | X      | X      | X      |
| Code 39              | X  | X                         | X      | X      | X            | X      | X      | X      | X      | X      |
| Code 93              | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| Composite AB         | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| Composite C          | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| Discrete 2 of 5      | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| Datamatrix           | X  | X                         | X      | X      | X            | X      | X      | X      | --     | X      |
| Dutch Postal         | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| DotCode              | X  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| EAN13                | X  | X                         | X      | X      | X            | X      | X      | X      | X      | X      |
| EAN8                 | X  | X                         | X      | X      | X            | X      | X      | X      | X      | X      |
| Grid Matrix          | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| GS1 DataBar          | X  | X                         | X      | X      | X            | X      | X      | X      | X      | X      |
| GS1 DataBar Expanded | X  | X                         | X      | X      | X            | X      | X      | X      | X      | X      |
| GS1 DataBar Limited  | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| GS1 Datamatrix       | O  | O                         | O      | O      | --           | O      | O      | O      | --     | O      |
| GS1 QRCode           | O  | O                         | O      | O      | --           | O      | O      | O      | --     | O      |
| HAN XIN              | O  | O                         | O      | O      | --           | --     | --     | O      | O      | --     |
| Interleaved 2 of 5   | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |



**Table 4** Supported Decoders (Continued)

| Decoders          | Internal Imager<br>SE4750-SR & SE4750-MR | Internal Imager<br>SE4770 | RS5100 | RS6000 | RS507/RS507X | DS2278 | DS3578 | DS3678 | LI3678 | DS8178 |
|-------------------|--|---------------------------|--------|--------|--------------|--------|--------|--------|--------|--------|
| Japanese Postal   | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| Korean 3 of 5     | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| MAIL MARK         | X  | X                         | X      | X      | --           | X      | X      | X      | --     | X      |
| Matrix 2 of 5     | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| Maxicode          | X  | X                         | X      | X      | X            | X      | X      | X      | --     | X      |
| MicroPDF          | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| MicroQR           | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| MSI               | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| PDF417            | X  | X                         | X      | X      | X            | X      | X      | X      | --     | X      |
| QR Code           | X  | X                         | X      | X      | X            | X      | X      | X      | --     | X      |
| Decoder Signature | O  | O                         | O      | O      | O            | O      | --     | --     | --     | --     |
| TLC 39            | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| Trioptic 39       | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| UK Postal         | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| UPCA              | X  | X                         | X      | X      | X            | X      | X      | X      | X      | X      |
| UPCE0             | X  | X                         | X      | X      | X            | X      | X      | X      | X      | X      |
| UPCE1             | O  | O                         | O      | O      | O            | O      | O      | O      | O      | O      |
| US4state          | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| US4state FICS     | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| US Planet         | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |
| US Postnet        | O  | O                         | O      | O      | O            | O      | O      | O      | --     | O      |

Key

X = Enabled

O = Disabled

-- = Not Supported

Touch the Back button to return to the previous screen.

# Using the Device

## Home Screen

Turn on the device to display the Home screen. Depending on how your system administrator configured your device, your Home screen may appear differently than the graphics in this section.

After a suspend or screen time-out, the Home screen displays with the lock slider. Touch the screen and slide up to unlock.


The Home screen provides four additional screens to place widgets and shortcuts. Swipe the screen left or right to view the additional screens.



**NOTE:** By default, AOSP devices do not have the same icons on the Home screen as GMS devices. Icons are shown below for example only.

Home screen icons can be configured by the user and may look different than shown.

**Figure 23** Home Screen

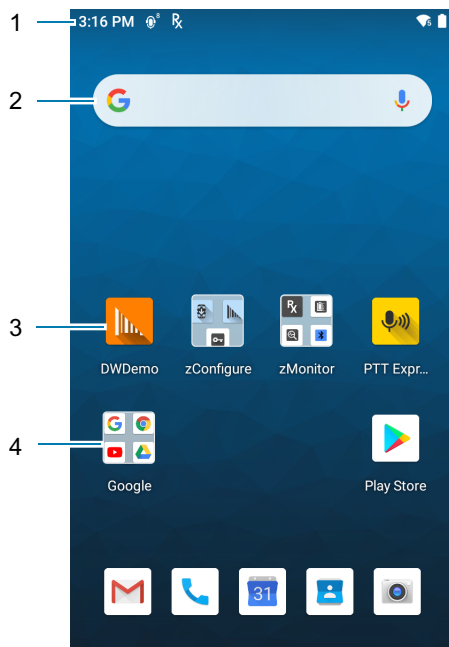

|   |                |  |
|---|----------------|--|
| 1 | Status Bar     | Displays the time, status icons (right side), and notification icons (left side). For more information see <a href="#">Notification Icons on page 51</a> and <a href="#">Managing Notifications on page 54</a> . |
| 2 | Widgets        | Launches stand-alone apps that run on the Home screen.   |
| 3 | Shortcut Icons | Opens apps installed on the device.  |
| 4 | Folder         | Contains apps.   |

## Setting Home Screen Rotation

By default, the Home screen rotation is disabled.


1. Touch and hold anywhere on the Home screen until the options appear.
2. Touch **Home settings**.
3. Touch the **Allow Home screen rotation** switch.
4. Touch the Home button.
5. Rotate the device.

## Status Bar

The Status bar displays the time, notification icons (left side), and status icons (right side).

If there are more notifications than can fit in the Status bar, a dot displays indicating that more notifications exist. Swipe down from the Status bar to open the Notification panel and view all notifications and status.

**Figure 24** Notification and Status Icons

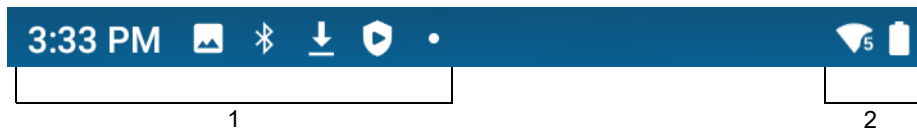

|   |   |
|---|---|
| 1 | Notification Icons. See <a href="#">Notification Icons on page 51</a> . |
| 2 | Status Icons. See <a href="#">Status Icons on page 53</a> .             |

## Notification Icons

Notification icons indicate app events and messages.

**Table 5** Notification Icons

| Icon | Description                                     |
|------|---|
|      | Main battery is low.                            |
|      | More notifications are available for viewing.   |
|      | Data is syncing.                                |
|      | Indicates an upcoming event. AOSP devices only. |























**Table 5** Notification Icons (Continued)

| Icon | Description  |
|------|--|
|      | Indicates an upcoming event. GMS devices only.   |
|      | Open Wi-Fi network is available.   |
|      | Audio is playing.  |
|      | Problem with sign-in or sync has occurred.   |
|      | Device is uploading data.  |
|      | Animated: the device is downloading data. Static: the download is complete.                      |
|      | Device is connected to or disconnected from a virtual private network (VPN).                     |
|      | Preparing internal storage by checking it for errors.  |
|      | USB debugging is enabled on the device.  |
|      | Call is in progress (WWAN only).   |
|      | The mailbox contains one or more voice message (WWAN only).                                      |
|      | Call is on hold (WWAN only).   |
|      | Call was missed (WWAN only).   |
|      | Wired headset with a boom module is connected to the device.                                     |
|      | Wired headset without a boom module is connected to the device.                                  |
|      | PTT Express Voice client status. See the PTT Express PTT Notification Icons for a complete list. |
|      | Indicates the RxLogger app is running.   |
|      | Indicates the Bluetooth scanner is connected to the device.                                      |
|      | Indicates the ring scanner is connected to the device in HID mode.                               |

## Status Icons


Status icons display system information for the device.

**Table 6** Status Icons

| Icon  | Description   |
|---|---|
|    | Alarm is active.  |
|    | Main battery is fully charged.  |
|    | Main battery is partially drained.  |
|    | Main battery charge is low.   |
|    | Main battery charge is very low.  |
|    | Main battery is charging.   |
|    | All sounds, except media and alarms, are muted. Vibrate mode is active.                             |
|    | Indicates that all sounds except media and alarms are muted.  |
|    | Do Not Disturb mode active.   |
|   | Airplane Mode is active. All radios are turned off.   |
|  | Bluetooth is on.  |
|  | The device is connected to a Bluetooth device.  |
|  | Connected to a Wi-Fi network. Indicates the Wi-Fi version number.                                   |
|  | Not connected to a Wi-Fi network or no Wi-Fi signal.  |
|  | Connected to an Ethernet network.   |
|  | Speakerphone enabled.   |
|  | Portable Wi-Fi hotspot is active (WWAN only).   |
|  | Connected to a 4G LTE/LTE-CA network (WWAN only) <sup>1</sup> .                                     |
|  | Connected to a DC-HSPA, HSDPA, HSPA+, HSUPA, LTE/LTE-CA or WCDMA network (WWAN only) <sup>1</sup> . |
|  | Connected to a 1x-RTT (Sprint), EGDGE, EVDO, EVDV or WCDMA network (WWAN only) <sup>1</sup> .       |
|  | Connected to a GPRS network (WWAN only) <sup>1</sup> .  |
|  | Connected to a DC - HSPA, HSDPA, HSPA+ or HSUPA network (WWAN only) <sup>1</sup> .                  |

<sup>1</sup>Cellular network icon that appears is dependent upon the carrier/network.


**Table 6** Status Icons (Continued)

| Icon   | Description  |
|--|--|
| <b>E</b>   | Connected to an EDGE network (WWAN only) <sup>1</sup> .            |
| <b>G</b>   | Connected to a GPRS network (WWAN only) <sup>1</sup> .             |
| <b>1X</b>  | Connected to a 1x-RTT (Verizon) network (WWAN only) <sup>1</sup> . |
| <b>R</b><br>↓↑   | Roaming from a network (WWAN only).                                |
|       | No SIM card installed (WWAN only).                                 |
| <sup>1</sup> Cellular network icon that appears is dependent upon the carrier/network. |  |

## Managing Notifications

Notification icons report the arrival of new messages, calendar events, alarms, and ongoing events. When a notification occurs, an icon appears in the Status bar with a brief description. See [Notification Icons on page 51](#) for a list of possible notification icons and their description.

- To view a list of all notifications, open the Notification panel by dragging the Status bar down from the top of the screen.

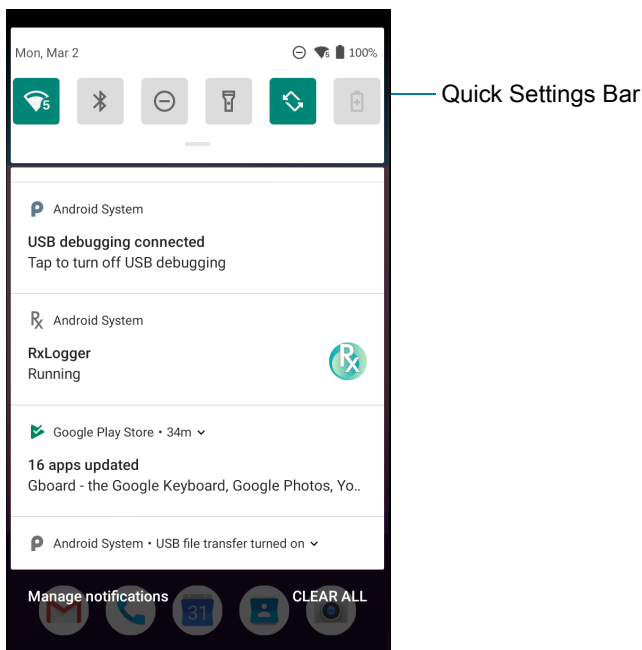


- To respond to a notification, open the Notification panel and then touch a notification. The Notification panel closes and the corresponding app opens.
- To manage recent or frequently used notifications, open the Notification panel and then touch **Manage notifications**. Touch the toggle switch next to an app to turn off all notifications, or touch an app for more notification options.
- To clear all notifications, open the Notification panel and then touch **CLEAR ALL**. All event-based notifications are removed. Ongoing notifications remain in the list.
- To close the Notification panel, swipe the Notification panel up.

## Opening the Quick Access Panel

Use the Quick Access panel to access frequently used settings (for example, Airplane mode). To get to the Quick Access Panel:

- If the device is locked, swipe down once.
- If the device is unlocked, swipe down once with two fingers, or twice with one finger.
- If the Notification panel is open, swipe down from the Quick Settings bar.

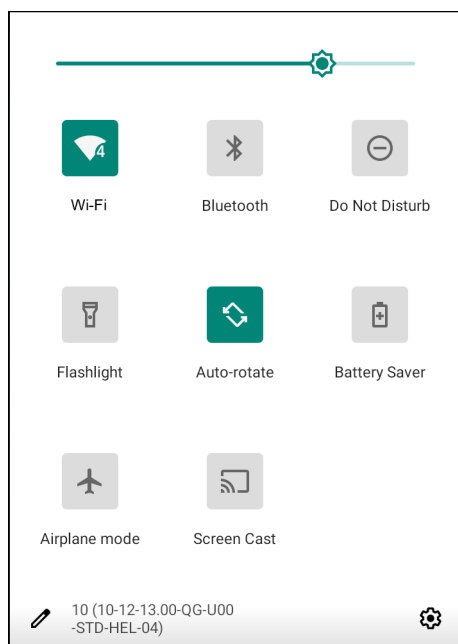

**NOTE:** Not all icons are pictured. Icons may vary.

### Quick Access Panel Icons

- Display brightness - Use the slider to decrease or increase the brightness of the screen.
- Wi-Fi network - Turn Wi-Fi on or off. To open Wi-Fi settings, touch the Wi-Fi network name.
- Bluetooth settings - Turn Bluetooth on or off. To open Bluetooth settings, touch **Bluetooth**.
- Battery saver - Turn Battery saver mode on or off. When Battery saver mode is on the performance of the device is reduced to preserve battery power.
- Invert colors - Invert the display colors.
- Do not disturb - Control how and when to receive notifications.
- Mobile data - Turns cellular radio on or off. To open Mobile data settings, touch and hold (WWAN only).
- Airplane mode - Turn Airplane mode on or off. When Airplane mode is on the device does not connect to Wi-Fi or Bluetooth.
- Auto-rotate - Lock the device's orientation in portrait or landscape mode or set to automatically rotate.
- Flashlight - Turn flashlight on or off. Turn camera flash on or off.

The thermal protection safety feature for the camera provides the following behavior if the temperature range is 40°C or above:

- If the flashlight is kept on for a certain period of time, it is automatically turned off and cannot be turned back on for a period of time until it has cooled off.
- During the cooling off period, the camera cannot be turned on. If you attempt to use the camera, a message displays indicating to try again after a period of time.
- Location - Enable or disable locationing feature.
- Hotspot - Turn on to share the device's mobile data connection with other devices.
- Data Saver - Turn on to prevent some apps from sending or receiving data in the background.
- Night Light - Tint the screen amber to make it easier to look at the screen in dim light. Set Night Light to turn on automatically from sunset to sunrise, or at other times.
- Screen Cast - Share phone content on Chromecast or a television with Google Cast built-in. Touch cast screen to display a list of devices, then touch a device to begin casting.
- Dark Theme - Toggles dark theme on and off. Dark themes reduce the luminance emitted by the screen, while meeting minimum color contrast ratios. It helps improve visual ergonomics by reducing eye strain, adjusting brightness to current lighting conditions, and facilitating screen use in dark environments, while conserving battery power.
- Focus mode - Turn on to pause distracting apps. To open Focus mode settings, touch and hold.
- Bedtime mode - Turn grayscale on and off. Grayscale turns the screen black and white, reducing phone distractions and improving battery life.

## Editing Icons on the Quick Settings Bar

The first several setting tiles from the Quick Access panel become the Quick Settings bar.

Open the Quick Access panel and touch  to edit, add, or remove settings tiles.

## Battery Management

Observe the recommended battery optimization tips for your device.


- Set the screen to turn off after a short period of non-use.
- Reduce screen brightness.
- Turn off all wireless radios when not in use.
- Turn off automatic syncing for Email, Calendar, Contacts, and other apps.
- Minimize use of apps that keep the device from suspending, for example, music and video apps.



**NOTE:** Before checking the battery charge level, remove the device from any AC power source (cradle or cable).

## Checking Battery Status

- Open **Settings** and touch **About phone** > **Battery Information**.

Or, swipe up from the bottom of the screen and touch  to open the **Battery Manager** app. See [Battery Manager on page 73](#).

- **Battery present status** indicates if the battery is present.
- **Battery level** lists the battery charge (as a percentage of fully charged).
- Swipe down with two fingers from the status bar to open the quick access panel.



- Battery percentage is displayed next to the battery icon.

### Monitoring Battery Usage

The **Battery** screen provides battery charge details and power management options to extend battery life.

1. Go to **Settings**.

2. Touch **Battery**.

Display battery information and power management options for a specific app.

1. Go to **Settings**.

2. Touch **Apps & notifications**.

3. Touch an app.

4. Touch **Advanced > Battery**.

Different apps display different information. Some apps include buttons that open screens with settings to adjust power use. Use the **DISABLE** or **FORCE STOP** buttons to turn off apps that consume too much power.

### Low Battery Notification

When the battery charge level drops below 18%, the device displays a notice to connect the device to power. The user should charge the battery using one of the charging accessories.

When the battery charge drops below 10%, the device displays a notice to connect the device to power. The user must charge the battery using one of the charging accessories.

When the battery charge drops below 4%, the device turns off. The user must charge the battery using one of the charging accessories.

### Interactive Sensor Technology

The device contains sensors that monitor movement, orientation and ambient light.

- Gyroscope - Measures angular rotational velocity to detect rotation of the device.
- Accelerometer - Measures the linear acceleration of movement to detect the orientation of the device.
- Digital Compass - The digital compass or magnetometer provides simple orientation in relation to the Earth's magnetic field. As a result, the device always knows which way is North so it can auto rotate digital maps depending on the physical orientation of the device.
- Light Sensor - Detects ambient light and adjusts the screen brightness.
- Proximity Sensor - Detects the presence of nearby objects without physical contact. The sensor detects when the device close to your face during a call and turns off the screen, preventing unintentional screen touches.

In order to take advantage of these sensors, applications use API commands. Refer to the Google Android Sensor APIs for more information. For information on the Zebra Android EMDK, go to: [techdocs.zebra.com](http://techdocs.zebra.com).

### Waking the Device

The device goes into Suspend mode when you press the Power button or after a period of inactivity (set in the Display settings window).

1. To wake the device from Suspend mode, press the Power button.  
The Lock screen displays.
2. Swipe the screen up to unlock.
  - If the Pattern screen unlock feature is enabled, the Pattern screen appears instead of the Lock screen.
  - If the PIN or Password screen unlock feature is enabled, enter the PIN or password after unlocking the screen.



**NOTE:** If you enter the PIN, password, or pattern incorrectly five times, you must wait 30 seconds before trying again.

If you forget the PIN, password, or pattern contact your system administrator.

## USB Communication

Connect the device to a host computer to transfer files between the device and the host computer.

When connecting the device to a host computer, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files. For information on USB communication accessories available for this device, see [Accessories](#).

## Transferring Files

Use Transfer files to copy files between the device and the host computer.

1. Connect the device to a host computer using a USB accessory.
2. On the device, pull down the Notification panel and touch **Charging this device via USB**.  
By default, **No data transfer** is selected.
3. Touch **File Transfer**.



**NOTE:** After changing the setting to **File Transfer**, and then disconnect the USB cable, the setting reverts back to **No data transfer**. If the USB cable is reconnected, select **File Transfer** again.

4. On the host computer, open a file explorer application.
5. Locate the **device** as a portable device.
6. Open the SD card or the Internal storage folder.
7. Copy files to and from the device or delete files as required.

## Transferring Photos

Use **PTP** to copy photos from the device to the host computer.

1. Connect the device to a host computer using a USB accessory.
2. On the device, pull down the Notification panel and touch **Charging this device via USB**.
3. Touch **PTP**.
4. On the host computer, open a file explorer application.
5. Open the SD card or the Internal storage folder.
6. Copy or delete photos as required.

## Disconnect from the Host Computer



**CAUTION:** Carefully follow the host computer's instructions to unmount the microSD card and disconnect USB devices correctly to avoid losing information.




To disconnect the device from the host computer:

1. On the host computer, unmount the device.
2. Remove the device from the USB accessory.

# Settings

## Accessing Settings

There are multiple ways to access settings on a device.

- Swipe down with two fingers from the top of the Home screen to open the Quick Access panel and touch .
- Double-swipe down from the top of the Home screen to open the Quick Access panel and touch .
- Swipe up from the bottom of the Home screen to open APPS and touch  **Settings**.

## Display Settings

Use Display settings to change the screen brightness, enable night light, change the background image, enable screen rotation, set sleep time, and change font size.

### Setting the Screen Brightness Manually

Manually set the screen brightness using the touchscreen.

1. Swipe down with two fingers from the Status bar to open the Quick Access panel.
2. Slide the icon to adjust the screen brightness level.

### Setting the Screen Brightness Automatically

Automatically adjust the screen brightness using the built-in light sensor.

1. Go to **Settings**.
2. Touch **Display**.
3. If disabled, touch **Adaptive brightness** to automatically adjust the brightness.  
By default, **Adaptive brightness** is enabled. Toggle the switch to disable.
4. Touch the Home button.

### Setting Night Light

The Night Light setting tints the screen amber, making the screen easier to look at in low light.

1. Go to **Settings**.
2. Touch **Display**.

3. Touch **Night Light**.
4. Touch **Schedule**.
5. Select one of the schedule values:
  - None (default)
  - Turns on at custom time
  - Turns on from sunset to sunrise.
6. By default, **Night Light** is disabled. Touch **TURN ON NOW** to enable.
7. Adjust the tint using the **Intensity** slider.
8. Touch the Home button.

## Setting Screen Rotation

By default, screen rotation is enabled.

1. Go to **Settings**.
2. Touch **Display > Advanced**.
3. Touch **Auto-rotate screen**.



**NOTE:** To change the Home screen rotation, see [Setting Home Screen Rotation on page 51](#).

4. Touch the Home button.

## Setting Screen Timeout

Set the screen sleep time.

1. Go to **Settings**.
2. Touch **Display > Advanced > Screen timeout**.
3. Select one of the sleep values.
  - **15 seconds**
  - **30 seconds**
  - **1 minute** (default)
  - **2 minutes**
  - **5 minutes**
  - **10 minutes**
  - **30 minutes**
4. Touch the Home button.

## Lock Screen Display

The lock screen display setting wakes the screen when notifications are received.

1. Go to **Settings**.
2. Touch **Display > Advanced**.

3. Touch **Lock screen display**.
4. In the **When to show** section, enable or disable an option using the switch.
5. Touch the Home button.

### Setting Touch Key Light

The four touch keys under the screen are backlit. Configure the touch key light to save battery power.

1. Go to **Settings**.
2. Touch **Display > Advanced**.
3. Touch **Touch key light**.
4. Select an option to choose how long the touch key light stays on:
  - **Always off**
  - **6 seconds (default)**
  - **10 seconds**
  - **15 seconds**
  - **30 seconds**
  - **1 minute**
  - **Always on.**
5. Touch the Home button.

### Setting Font Size

Set the size of the font in system apps.

1. Go to **Settings**.
2. Touch **Display > Advanced**.
3. Touch **Font size**.
4. Select one of the font size values.
  - Small
  - Default
  - Large
  - Largest.
5. Touch the Home button.

### Notification LED Brightness Level

Set the brightness of the Notification LED.

1. Go to **Settings**.
2. Touch **Display > Advanced**.
3. Touch **Notification LED Brightness Level**.
4. Use the slider to set the brightness value (default: 15).

5. Touch the Home button.

## Touch Panel Mode

The device display is able to detect touches using a finger, a conductive-tip stylus, or gloved finger.



**NOTE:** A glove can be made of medical latex, leather, cotton, or wool. For optimal performance use a Zebra certified stylus.

1. Go to **Settings**.
2. Touch **Display > Advanced**.
3. Touch **Touch panel mode**.
4. Select:
  - **Glove and Finger (Screen Protector off)** to use a finger or a gloved finger on the screen without a screen protector.
  - **Stylus and Finger (Screen Protector off)** to use a finger or a stylus on the screen without a screen protector.
  - **Finger Only (Screen Protector off)** to use a finger on the screen without a screen protector.
  - **Glove and Finger (Screen Protector on)** to use a finger or a gloved finger on the screen with a screen protector.
  - **Stylus and Finger (Screen Protector on)** to use a finger or a stylus on the screen with a screen protector.
  - **Finger and Stylus** to use a finger or a stylus on the screen.
  - **Finger and Glove** to use a finger or a gloved finger on the screen.
5. Touch the Home button.

## Setting the Date and Time

The date and time is automatically synchronized using an NITZ server when the device is connected to a cellular network. You are only required to set the time zone or set the date and time if the wireless LAN does not support Network Time Protocol (NTP) or when not connected to a cellular network.

1. Go to **Settings**.
2. Touch **System > Date & time**.
3. Touch **Use network-provided time** to disable automatic date and time synchronization.
4. Touch **Use network-provided time zone** to disable automatic time zone synchronization.
5. Touch **Update Interval**.
6. Select the interval time to synchronize your device time from the network.
7. Touch **Date**.
8. In the calendar, set today's date.
9. Touch **OK**.
10. Touch **Time**.
11. Touch the green circle, drag to the current hour and then release.
12. Touch the green circle, drag to the current minute and then release.




13. Touch **AM** or **PM**.
14. Touch **OK**.
15. Touch **Time zone**.
16. Select the current time zone from the list.
17. Touch **Use 24-hour format**.
18. Touch the Home button.

## General Sound Setting

Use the **Sound** settings to configure media and alarm volumes.

1. Go to **Settings**.
2. Touch **Sound**.
3. Touch an option to set sounds.

## Sound Options

- **Zebra volume controls**
  - **Ring volume** - Controls the ringtone volume.
  - **Media volume** - Controls the music, games, and media volume.
  - **Alarm volume** - Controls the alarm clock volume.
  - **Notifications volume** - Controls the notification volume.
  - **In call volume** - Controls the volume during a call.
  - **Scanner volume** - Controls the scanner volume.
  - **Volume presets**
    -  - Mutes the ring, notifications, and scanner so that the device does not make sounds or vibrate.
    -  - All sounds except media and alarms are silenced and vibrate mode is active.
    -  - Enables all sounds at the user defined levels.
- **Vibrate for calls** - Switch on or off.
- **Do Not Disturb** - Mutes some or all sounds and vibrations.
- **Shortcut to prevent ringing** - Select how the shortcut method prevents ringing.
- **Phone ringtone** - Select a sound to play when the phone rings.
- **Default notification sound** - Select a sound to play for all system notifications.
- **Default alarm sound** - Select a sound to play for alarms.
- **Other sounds and vibrations**
  - **Dial pad tones** - Play a sound when pressing keys on dial pad (default - disabled).
  - **Screen locking sounds** - Play a sound when locking and unlocking the screen (default – enabled).
  - **Charging sounds and vibration** - Plays a sound and vibrates when power is applied to the device (default - enabled).
  - **Touch sounds** - Play a sound when making screen selections (default – disabled).



- **Touch vibration** - Vibrate the device when making screen selections (default – disabled).
- **Wireless Emergency alerts** - Touch to configure emergency broadcast settings and notifications.

## Setting Wake-Up Sources

By default the device wakes from suspend mode when the user presses the **Power** button. The device can be configured to wake when the user presses the **PTT** or **Scan** buttons on the left side of the device.

1. Go to **Settings**.
2. Touch **Wake-Up Sources**.
  - **LEFT\_TRIGGER\_2** - PTT button.
  - **RIGHT\_TRIGGER\_1** - Right scan button.
  - **SCAN** - Left scan button.
3. Touch a checkbox. A check appears in the checkbox.
4. Touch the Home button.

## Remapping a Button

Buttons on the device can be programmed to perform different functions or as shortcuts to installed apps. For a list of key names and descriptions, refer to: [techdocs.zebra.com](http://techdocs.zebra.com).



**NOTE:** It is not recommended to remap the scan button.

1. Go to **Settings**.
2. Touch **Key Programmer**. A list of programmable buttons displays.
3. Select the button to remap.
4. Touch the **BUTTON REMAPPING** tab or the **SHORTCUT** tab that lists the available functions and applications.
5. Touch a function or application shortcut to map to the button.



**NOTE:** If you select an application shortcut, the application icon appears next to the button on the Key Programmer screen.

6. Touch the Home button.
7. If remapping the Back, Home, Search, or Menu button, perform a Soft Reset.

## Keyboards

The device provides multiple keyboard options.

- Android Keyboard - AOSP devices only
- Gboard - GMS devices only
- Enterprise Keyboard






**NOTE:** By default the Enterprise and Virtual Keyboards are disabled.

## Keyboard Configuration

### Enabling Keyboards

1. Go to **Settings**.
2. Touch **System > Languages & input > Virtual keyboard > Manage keyboards**.
3. Touch a keyboard to enable.

### Switching Between Keyboards

- To switch between keyboards, touch in a text box to display the current keyboard.
  - On the Gboard keyboard, touch and hold  (GMS devices only).
  - On the Android keyboard, touch and hold  (AOSP devices only).
  - On the Enterprise keyboard, touch . Only available with Mobility DNA Enterprise License. Not pre-installed on the device. Contact Zebra Support for more information.

## Using the Android and Gboard Keyboards

Use the Android or Gboard keyboards to enter text in a text field.

To configure the keyboard settings, touch and hold **,** (comma) and then select **Android keyboard settings**.

### Edit Text

Edit entered text and use menu commands to cut, copy, and paste text within or across apps. Some apps do not support editing some or all of the text they display; others may offer their own way to select text.

### Entering Numbers, Symbols, and Special Characters

1. Enter numbers and symbols.
  - Touch and hold one of the top-row keys until a menu appears then select a number or special character.
  - Touch the Shift key once for a single capital letter. Touch the Shift key twice to lock in uppercase. Touch the Shift key a third time to unlock Capslock.
  - Touch **?123** to switch to the numbers and symbols keyboard.
  - Touch the **=\<** key on the numbers and symbols keyboard to view additional symbols.
2. Enter special characters.
  - Touch and hold a number or symbol key to open a menu of additional symbols. A larger version of the key displays briefly over the keyboard.

## Using the Enterprise Keyboard

The Enterprise Keyboard contains multiple keyboard types.

- Numeric
- Alpha
- Special characters
- Data capture.

## Numeric Tab

The numeric keyboard is labeled **123**. The keys displayed vary on the app being used. For example, an arrow displays in **Contacts**, however **Done** displays in **Email** account setup.

## Alpha Tab

The alpha keyboard is labeled using the language code. For English, the alpha keyboard is labeled **EN**.

## Additional Character Tab

The additional characters keyboard is labeled **#\*/**.

Touch 😊 to enter emoji icons in a text message.

Touch **ABC** to return to the Symbols keyboard.

## Scan Tab

The Scan tab provides an easy data capture feature for scanning barcodes.

# Language Usage

Use the **Language & input** settings to change the device's language, including words added to the dictionary.

## Changing the Language Setting

1. Go to **Settings**.
2. Touch **System > Languages & input**.
3. Touch **Languages**. A list of available languages displays.
4. If the desired language is not listed, touch **Add a language** and select a language from the list.
5. Touch and hold ☰ to the right of the desired language, then drag it to the top of the list.
6. The operating system text changes to the selected language.

## Adding Words to the Dictionary

1. Go to **Settings**.
2. Touch **System > Languages & input > Advanced > Personal dictionary**.
3. If prompted, select the language where this word or phrase is stored.
4. Touch + to add a new word or phrase to the dictionary.
5. Enter the word or phrase.
6. In the **Shortcut** text box, enter a shortcut for the word or phrase.
7. Touch the Home button.

## Notifications

### Setting App Notifications

To set notification settings for a specific app:

1. Go to **Settings**.
2. Touch **Apps & notifications > SEE ALL XX APPS**. The **App info** screen displays.
3. Select an app.
4. Touch **Notifications**.

Options vary depending on the app selected.

5. Select an available option:

**Show notifications** - Select to turn all notifications from this app on (default) or off.

Touch a notification category to display additional options.

- **Alerting** - Allow notifications from this app to make sound or vibrate the device.
  - **Pop on screen** - Allow notifications from this app to pop notifications on the screen.
- **Silent** - Do not allow notifications from this app to make sound or vibrate.
  - **Minimize** - In the Notification panel, collapse notifications to one line.
- **Advanced** - Touch for additional options.
  - **Sound** - Select a sound to play for notifications from this app.
  - **Vibrate** - Allow notifications from this app to vibrate the device.
  - **Blink light** - Allow notifications from this app the light the Notification LED blue.
  - **Show notification dot** - Allow notifications from this app to add a notification dot to the app icon.
  - **Override Do Not Disturb** - Allow these notifications to interrupt when Do Not Disturb is enabled.

#### Advanced

- **Allow notification dot** - Do not allow this app to add a notification dot to the app icon.
- **Additional settings in the app** - Open the app settings.

### Viewing Notification Settings for All Apps

To view the notification settings for all apps:

1. Go to **Settings**.
2. Touch **Apps & Notifications**.
3. Scroll down to **Notifications** to view how many apps have notifications turned off.
4. To set or view notifications settings for a specific app, see [Setting App Notifications on page 68](#).

### Controlling Lock Screen Notifications

To control whether notifications can be seen when the device is locked:

1. Go to **Settings**.
2. Touch **Apps & notifications > Notifications**.

3. Touch **Notifications on lockscreen** and select one of the following:
  - **Show alerting and silent notifications** (default)
  - **Show alerting notifications only**
  - **Don't show notifications.**

### **Blink Light**

The Notification LED lights blue when an app, such as email and VoIP, generates a programmable notification or to indicate when the device is connected to a Bluetooth device. By default, LED notifications are enabled.

To change the notification setting:










1. Go to **Settings**.
2. Touch **Apps & notifications > Notifications > Advanced**.
3. Touch **Blink light** to toggle the notification on or off.

# Applications

The **APPS** screen displays icons for all installed apps. See [Application Deployment](#) for information on installing and uninstalling apps. For information on standard Android apps, go to the Google Play [Apps store](#).

The following table describes the apps installed on the device.

**Table 7** Apps

| Icon  | Description   |
|---|---|
|    | <b>Battery Manager</b> - Displays battery information, including charge level, status, health and wear level.   |
|  | <b>Bluetooth Pairing Utility</b> – Use to pair a Zebra Bluetooth scanner with the device by scanning a barcode. |
|  | <b>Calculator</b> - Provides the basic and scientific arithmetic functions.                                     |
|  | <b>Calendar</b> - Use to manage events and appointments. GMS/GMS-Restricted only.                               |
|  | <b>Calendar</b> - Use to manage events and appointments. AOSP only.   |
|  | <b>Camera</b> - Take photos or record videos. For more information, see <a href="#">Camera on page 76</a> .     |
|  | <b>Chrome</b> - Use to access the Internet or intranet. GMS/GMS-Restricted only.                                |
|  | <b>Chromium</b> - Use to access the Internet or intranet. AOSP only.  |
|  | <b>Clock</b> - Use to schedule alarms for appointments or as a wake-up.   |

## Applications

**Table 7** Apps (Continued)

| Icon  | Description  |
|---|--|
|    | <b>Contacts</b> - Use to manage contact information.   |
|    | <b>DataWedge</b> - Enables data capture using the imager. For more information, see <a href="#">DataWedge Demonstration on page 81</a> .   |
|    | <b>DisplayLink Presenter</b> - Use to present the device screen onto a connected monitor.  |
|    | <b>Drive</b> - Upload photos, videos, documents, and other files to personal storage site. GMS/GMS-Restricted only.  |
|    | <b>Duo</b> - A one-to-one video calling app. GMS/GMS-Restricted only.  |
|    | <b>DWDemo</b> - Provides a way to demonstrate the data capture features using the imager. For more information, see <a href="#">DataWedge Demonstration on page 81</a> .   |
|   | <b>Email</b> - Use to send and receive email. AOSP only.   |
|  | <b>Files</b> - Organize and manage files on the device.  |
|  | <b>Gallery</b> - Use to view photos stored on the microSD card. AOSP only.   |
|  | <b>Gmail</b> - Use to send and receive email using a Google email account. GMS/GMS-Restricted only.  |
|  | <b>Google</b> - Launches Google™ search app. GMS/GMS-Restricted only.  |
|  | <b>Keep Notes</b> - Use to create, edit, and share notes. GMS/GMS-Restricted only.   |
|  | <b>License Manager</b> - Use to manage software licenses on the device.  |
|  | <b>Maps</b> - Use to see your location on a map (with public transit, traffic, or satellite overlays). Search for any business or place of interest. Provides turn-by-turn navigation with voice guidance, traffic-avoidance, and alternate routes, for drivers, cyclists, walkers, and users of public transportation. GMS/GMS-Restricted only. |

**Table 7** Apps (Continued)













| Icon  | Description   |
|---|---|
|    | <b>Messages</b> - Send SMS and MMS messages. WAN devices only. GMS/GMS-Restricted only.   |
|    | <b>Messaging</b> - Send SMS and MMS messages. WAN devices only.   |
|    | <b>MSRN</b> - Use to verify authenticity of the paired Snap-on MSR and to provision the Snap-on MSR.                                      |
|    | <b>Music</b> - Play music stored on the microSD card. AOSP only.  |
|    | <b>Phone</b> - Use to dial a phone number when used with some Voice over IP (VoIP) clients (VoIP telephony ready only). WAN devices only. |
|    | <b>Photos</b> - Use to sync photos with Google account. GMS/GMS-Restricted only.  |
|   | <b>Play Movies &amp; TV</b> - View movies and video on your device. GMS/GMS-Restricted only.  |
|  | <b>Play Store</b> - Download music, movies, books, and Android apps and games from the Google Play Store. GMS/GMS-Restricted only.        |
|  | <b>PTT Express</b> - Use to launch PTT Express client for VoIP communication.   |
|  | <b>RxLogger</b> - Use to diagnose device and app issues. For more information, see <a href="#">RxLogger on page 87</a> .                  |
|  | <b>Search</b> - Use to search the Web. Requires an Internet connection. AOSP only.  |
|  | <b>Settings</b> - Use to configure the device.  |
|  | <b>Sound Recorder</b> - Use to record audio. For more information, see <a href="#">Sound Recorder on page 88</a> .                        |
|  | <b>StageNow</b> - Allows the device to stage a device for initial use by initiating the deployment of settings, firmware, and software.   |



Table 7 Apps (Continued)

| Icon  | Description   |
|---|---|
|  | <b>Worry Free Wifi Analyzer</b> - A diagnostic intelligent app. Use to diagnose surrounding area and display network stats, such as coverage hole detection, or AP in vicinity. Refer to the Worry Free Wi-Fi Analyzer Administrator Guide for Android. |
|  | <b>YouTube</b> - Use to view videos on the YouTube™ web site. GMS/GMS-Restricted only.  |
|  | <b>YT Music</b> - Use to listen to music. GMS/GMS-Restricted only.  |
|  | <b>Zebra Bluetooth Settings</b> - Use to configure Bluetooth logging.   |
|  | <b>Zebra Data Services</b> - Use to enable or disable Zebra Data Services. Some options are set by the system administrator.  |


## Accessing Apps

All apps installed on the device are accessed using the **APPS** window.

1. On the Home screen, swipe up from the bottom of the screen.
2. Slide the **APPS** window up or down to view more app icons.
3. Touch an icon to open the app.

## Switching Between Recent Apps

Use the Recent button to switch between recently used apps.


1. Touch .
 

A window appears on the screen with icons of recently used apps.
2. Slide the apps displayed up and down to view all recently used apps.
3. Swipe left or right to remove app from the list and force close the app.
4. Touch an icon to open an app or touch Back button to return to the current screen.

## Battery Manager

The **Battery Manager** provides detailed information about the battery and battery swap procedures on supported devices.




### Opening Battery Manager


To open the Battery Manager app, swipe up from the bottom of the Home screen, and then touch .

## Battery Manager Information Tab

The Battery Manager displays detailed information about battery charging, health, and status.

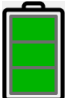**Table 8** Battery Icon Description

| Battery Icon  | Description                                   |
|---|---|
|  | Battery charge level is between 85% and 100%. |
|  | Battery charge level is between 19% and 84%.  |
|  | Battery charge level is between 0% and 18%.   |

- **Level** - The current battery charge level as a percentage. Displays -% when level is unknown.
- **Wear** - The health of the battery in graphical form. When the wear level exceeds 80%, the bar color changes to red.
- **Health** - The health of the battery. If a critical error occurs,  appears. Touch to view the error description.
  - **Decommission** - The battery is past its useful life and should be replaced. See system administrator.
  - **Good** - The battery is good.
  - **Charge error** - An error occurred while charging. See system administrator.
  - **Over Current** - An over-current condition occurred. See system administrator.
  - **Dead** - The battery has no charge. Replace the battery.
  - **Over Voltage** - An over-voltage condition occurred. See system administrator.
  - **Below Temperature** - The battery temperature is below the operating temperature. See system administrator.
  - **Failure Detected** - A failure has been detected in the battery. See system administrator.
  - **Unknown** - See system administrator.
- **Charge Status**
  - **Not charging** - The device is not connected to AC power.
  - **Charging-AC** - The device is connected to AC power and charging, or is fast charging via USB.
  - **Charging-USB** - The device is connected to a host computer with a USB cable and charging.
  - **Discharging** - The battery is discharging.
  - **Full** - That the battery is fully charged.
  - **Unknown** - The battery status is unknown.
- **Time until Full** - The amount of time until the battery is fully charged.
- **Time since charging** - The amount of time since the device began charging.

- **Time until empty** - The amount of time until the battery is empty.
- **Advanced info** - Touch to view additional battery information.
  - **Battery present status - Indicates that the battery is present.**
  - **Battery level** - The battery charge level as a percentage of scale.
  - **Battery scale** - The battery scale level used to determine battery level (100).
  - **Battery voltage** - The current battery voltage in millivolts.
  - **Battery temperature** - The current battery temperature in degrees Centigrade.
  - **Battery technology** - The type of battery.
  - **Battery current** - The average current into or out of the battery over the last second in mAh.
  - **Battery manufacture date** - The date of manufacture.
  - **Battery serial number** - The battery serial number. The number matches the serial number printed on the battery label.
  - **Battery part number** - The battery part number.
  - **Battery decommission status** - Indicates if the battery is past its life span.
    - **Battery Good** - The battery is in good health.
    - **Decommissioned Battery** - The battery is past its useful life and should be replaced.
  - **Base cumulative charge** - Cumulative charge using Zebra charging equipment only.
  - **Battery present capacity** - Maximum amount of charge that could be pulled from the battery under the present discharge conditions if the battery were fully charged.
  - **Battery health percentage** - With a range from **0** to **100**, this is the ratio of “present\_capacity” to “design\_capacity” at a discharge rate of “design\_capacity”.
  - **% decommission threshold** - The default % decommission threshold for a gifted battery as 80%.
  - **Battery present charge** - Amount of usable charge remaining in the battery at present under the current discharge conditions.
  - **Battery total cumulative charge** - The total accumulated charge in all chargers.
  - **Battery time since first use** - The time passed since the battery was placed in a Zebra terminal for the first time.
  - **Battery error status** - The error status of the battery.
  - **Battery usage number** - The health of the battery as a result of charging and discharging. A high number indicates low battery health.
  - **Usage decommission threshold** - When the Battery usage number is greater than or equal to the Usage decommission threshold, the battery is past its useful life and should be replaced.
  - **App version** - The application version number.

### Battery Manager Swap Tab



**NOTE:** The **Swap** tab also appears when the user presses the Power button and selects **Battery Swap**.

Use to place the device in Battery Swap mode when replacing the battery. Follow the instructions on the screen. Touch **Proceed with battery swap** button.

## Camera



**NOTE:** The device saves photos and videos on the microSD card, if installed and the storage path is changed manually. By default, or if a microSD card is not installed, the device saves photos and videos on the internal storage.


This section provides information for taking photos and recording videos using the integrated digital cameras.



## Taking Photos




**NOTE:** See [Photo Settings on page 78](#) for camera setting descriptions.

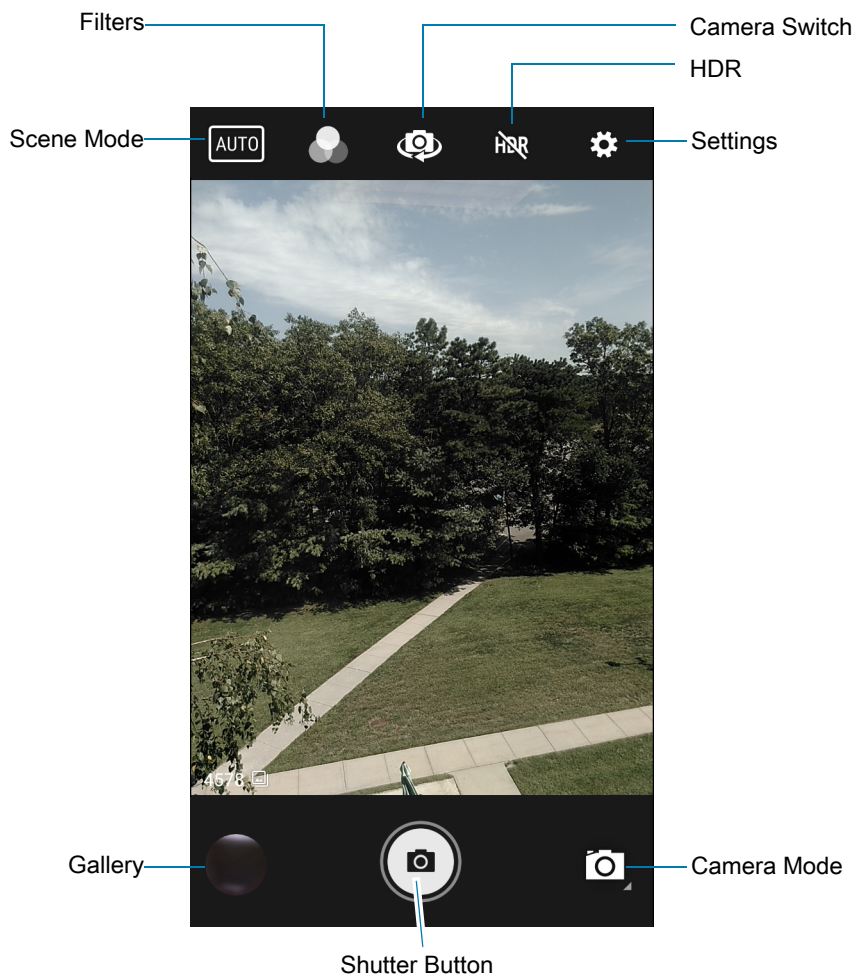1. Swipe up from the bottom of the Home screen and touch **Camera**.



2. If necessary, touch the Camera Mode icon and touch .
3. To switch between the rear camera and front camera (if available), touch .
4. Frame the subject on the screen.
5. To zoom in or out, press two fingers on the display and pinch or expand fingers. The zoom controls appear on the screen.




6. Touch an area on the screen to focus. The focus circle appears. The two bars turn green when in focus.
7. Touch .
  - The camera takes a photo and a shutter sound plays.
  - The photo momentarily displays as a thumbnail in the lower left corner.

### Taking a Panoramic Photo


Panorama mode creates a single wide image by panning slowly across a scene.


1. Swipe up from the bottom of the Home screen and touch **Camera**.






2. Touch the Camera Mode icon and touch .
3. Frame one side of the scene to capture.
4. Touch  and slowly pan across the area to capture. A small white square appears inside the button indicating the capture is in progress.
  - If you are panning too quickly, the message **Too fast** appears.
5. Touch  to end the shot. The panorama appears immediately and a progress indicator displays while it saves the image.


### Recording Videos

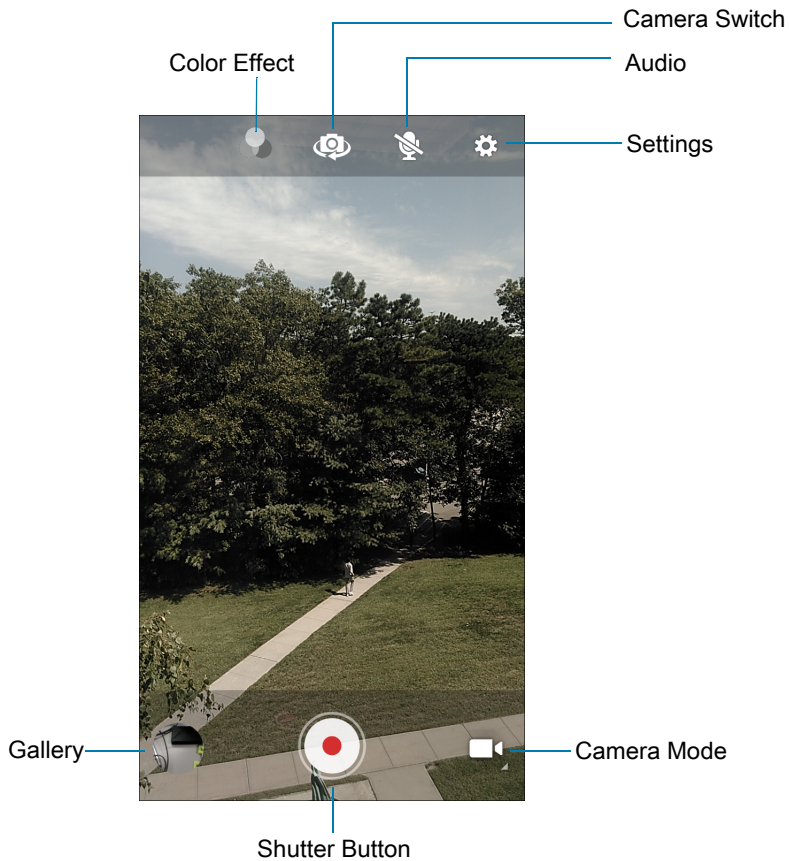1. Swipe up from the bottom of the Home screen and touch **Camera**.
2. Touch the camera mode menu and touch .











3. To switch between the rear camera and front camera (if available), touch .
4. Point the camera and frame the scene.
5. To zoom in or out, press two fingers on the display and pinch or expand fingers. The zoom controls appear on the screen.
6. Touch  to start recording.  
The video time remaining appears in the top left of the screen.
7. Touch  to end the recording.  
The video momentarily displays as a thumbnail in the lower left corner.

## Photo Settings

In Photo mode, photo settings appear on screen. Touch  to display the photo settings options.






### Rear Camera Photo Settings

- **Flash** - Select whether the camera relies on its light meter to decide whether a flash is necessary, or to turn it on or off for all shots.
  -  **Off** - Disable flash.
  -  **Auto** - Adjust flash automatically depending upon light meter (default).
  -  **On** - Enable flash upon taking a photo.


- **GPS location** - Add GPS location information to the photo meta-data. Turn **On** or **Off** (default).
- **Picture size** - The size (in pixels) of the photo to: **13M pixels** (default), **8M pixels**, **5M pixels**, **3M pixels**, **HD 1080**, **2M pixels**, **HD720**, **1M pixels**, **WVGA**, **VGA**, or **QVGA**.
- **Picture quality** - Set the picture quality setting to: **Low**, **Standard** (default) or **High**.
- **Countdown timer** - Select **Off** (default), **2 seconds**, **5 seconds** or **10 seconds**.
- **Storage** – Set the location to store the photo to: **Phone** or **SD Card**.
- **Continuous Shot** - Select to take a series of photos quickly while holding the capture button. **Off** (default) or **On**.
- **Face Detection** - Set the camera to automatically adjust the focus for faces.
- **ISO** - Set camera sensitivity to light to: **Auto** (default), **ISO Auto (HJR)**, **ISO100**, **ISO200**, **ISO400**, **ISO800** or **ISO1600**.
- **Exposure** - Set the exposure settings to: **+2**, **+1**, **0**(default), **-1** or **-2**.
- **White balance** - Select how the camera adjusts colors in different kinds of light, to achieve the most natural-looking colors:
  -  **Incandescent** - Adjust the white balance for incandescent lighting.
  -  **Fluorescent** - Adjust the white balance for florescent lighting.
  -  **Auto** - Adjust the white balance automatically (default).
  -  **Daylight** - Adjust the white balance for daylight.
  -  **Cloudy** - Adjust the white balance for a cloudy environment.
- **Redeye reduction** - Helps eliminate redeye effect. Options: **Disabled** (default), or **Enable**.
- **ZSL** - Set the camera to immediately take a picture when the button is pressed (default – enabled).
- **Shutter Sound** - Select to play a shutter sound when taking a photo. Options: **Disable** (default) or **Enable**.
- **Anti Banding** - Allows the camera to avoid problems caused by artificial light sources that are not constant. These sources cycle (flicker) fast enough to go unnoticed to the human eye, appearing continuous. The camera's eye (its sensor) can still see this flicker. Options: **Auto** (default), **60 Hz**, **50 Hz**, or **Off**.

### Front Camera Photo Settings





- **Selfie Flash** - Turns screen white to help produce a little extra light in dimmer settings. Options: **Off** (default), or **On**.
- **GPS location** - Add GPS location information to the photo meta-data. Options: **On** or **Off** (default).
- **Picture size** - Set the size (in pixels) of the photo to: **5M pixels** (default), **3M pixels**, **HD1080**, **2M pixels**, **HD720**, **1M pixels**, **WVGA**, **VGA**, or **QVGA**.
- **Picture quality** - Set the picture quality setting to: **Low**, **Standard** (default) or **High**.
- **Countdown timer** - Set to: **Off** (default), **2 seconds**, **5 seconds** or **10 seconds**.
- **Storage** – Set location to store the photo to: **Phone** or **SD Card**.
- **Continuous Shot** - Select to take a series of photos quickly while holding the capture button. **Off** (default) or **On**.

- **Face Detection** - Select to turn face detection **Off** (default) or **On**.
- **ISO** - Set how sensitive the camera is to light. Options: **Auto** (default), **ISO Auto (HJR)**, **ISO100**, **ISO200**, **ISO400**, **ISO800** or **ISO1600**.
- **Exposure** - Touch to adjust the exposure settings. Options: **+2**, **+1**, **0** (default), **-1** or **-2**.
- **White balance** - Select how the camera adjusts colors in different kinds of light, to achieve the most natural-looking colors:
  -  **Incandescent** - Adjust the white balance for incandescent lighting.
  -  **Fluorescent** - Adjust the white balance for florescent lighting.
  -  **Auto** - Adjust the white balance automatically (default).
  -  **Daylight** - Adjust the white balance for daylight.
  -  **Cloudy** - Adjust the white balance for a cloudy environment.
- **Redeye reduction** - Helps eliminate redeye effect. Options: **Disabled** (default), or **Enable**.
- **ZSL** - Set the camera to immediately take a picture when the button is pressed (default – enabled)
- **Selfie Mirror** - Select to save a mirror image of the photo. Options: **Disable** (default), or **Enable**.
- **Shutter Sound** - Select to play a shutter sound when taking a photo. Options: **Disable** (default) or **Enable**.
- **Anti Banding** - Allows the camera to avoid problems caused by artificial light sources that are not constant. These sources cycle (flicker) fast enough to go unnoticed to the human eye, appearing continuous. The camera's eye (its sensor) can still see this flicker. Options: **Auto** (default), **60 Hz**, **50 Hz**, or **Off**.




## Video Settings

In Video mode, video settings appear on screen. Touch  to display the video settings options.

### Rear Camera Video Settings

- **Flash** - Select whether Rear-facing Camera relies on its light meter to decide whether a flash is necessary, or to turn it on or off for all shots.
  -  **Off** - Disable flash (default).
  -  **On** - Enable flash.
- **Video quality** - Set video quality to: **4k DCI**, **4k UHD**, **HD 1080p** (default), **HD 720p**, **SD 480p**, **VGA**, **CIF**, or **QVGA**.
- **Video duration** - Set to: **30 seconds (MMS)**, or **30 minutes (default)**.
- **GPS location** - Add GPS location information to the photo meta-data. **Turn On** or **Off (default)**.
- **Storage** – Set the location to store the photo to: **Phone** (default) or **SD Card**.
- **White balance** - Select how the camera adjusts colors in different kinds of light, to achieve the most natural-looking colors.
  -  **Incandescent** - Adjust the white balance for incandescent lighting.
  -  **Fluorescent** - Adjust the white balance for florescent lighting.



-  **Auto** - Adjust the white balance automatically (default).
-  **Daylight** - Adjust the white balance for daylight.
-  **Cloudy** - Adjust the white balance for a cloudy environment.
- **Image Stabilization** - Set to reduce blurry videos due to device movement. Options: **On** or **Off** (default).










## Front Camera Video Settings

- **Video quality** - Set video quality to: **HD1080** (default), **HD 720p** (default), **HD720**, or **SD 480p**, **VGA**, **CIF**, or **QVGA**.
- **Video duration** - Set to: **30 seconds (MMS)**, or **30 minutes** (default).
- **GPS location** - **Add GPS location information to the photo meta-data**. Turn **On** or **Off** (default).
- **Storage** – Set the location to store the photo to: **Phone** (default) or **SD Card**.
- **Image Stabilization** - Set to reduce blurry videos due to device movement. Options: **On** or **Off** (default).


## DataWedge Demonstration

Use **DataWedge Demonstration** to demonstrate data capture functionality. To configure DataWedge, refer to [techdocs.zebra.com/datawedge/](http://techdocs.zebra.com/datawedge/).

**Table 9** DataWedge Demonstration Icons

|              | Icon  | Description   |
|--------------|---|---|
| Illumination |  | Imager illumination is on. Touch to turn illumination off.                                    |
|              |  | Imager illumination is off. Touch to turn illumination on.                                    |
| Data Capture |  | The data capture function is through the internal imager.                                     |
|              |  | An RS507 or RS6000 Bluetooth imager is connected.   |
|              |  | An RS507 or RS6000 Bluetooth imager is not connected.   |
|              |  | The data capture function is through the rear camera.   |
| Scan Mode    |  | Imager is in picklist mode. Touch to change to normal scan mode.                              |
|              |  | Imager is in normal scan mode. Touch to change to picklist mode.                              |
| Menu         |  | Opens a menu to view the application information or to set the application DataWedge profile. |

## Scanner Selection

To select a scanner, touch  > **Settings** > **Scanner selection**.

See the Data Capture section for more information.

Press the programmable button or touch the yellow scan button to capture data. The data appears in the text field below the yellow button.

## PTT Express Voice Client




**NOTE:** Requires a PTT Express License.

PTT Express Voice Client enables Push-To-Talk (PTT) communication between disparate enterprise devices. Leveraging existing Wireless Local Area Network (WLAN) infrastructure, PTT Express delivers simple PTT communication without requiring a voice communication server.

- **Group Call:** Press and hold the PTT (Talk) button to start communicating with other voice client users.
- **Private Response:** Double-press the PTT button to respond to the originator of the last broadcast or to make a Private Response.

## PTT Express User Interface

**Figure 25** PTT Express Default User Interface

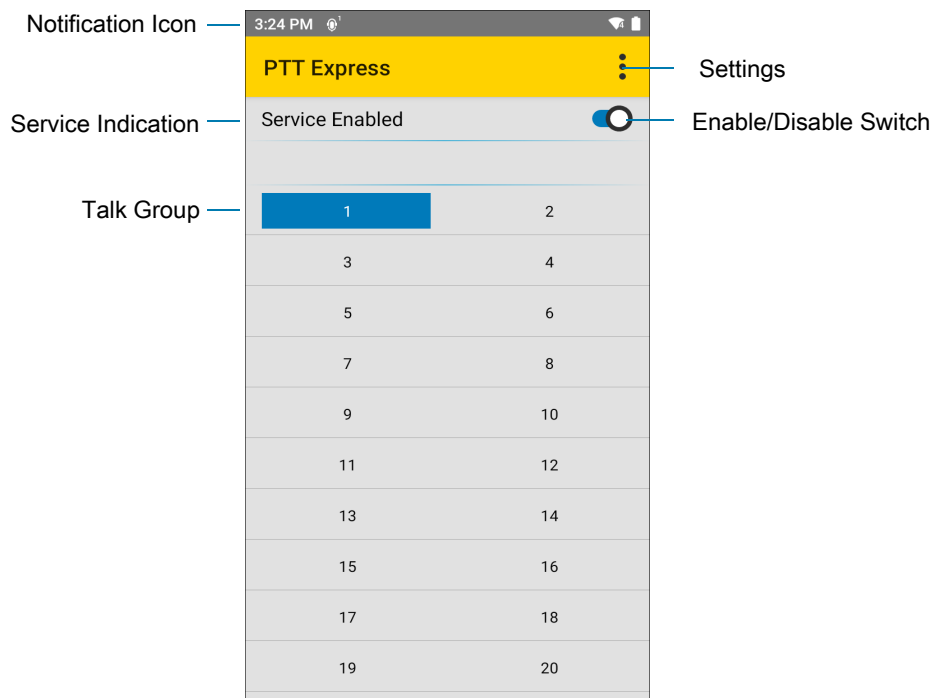

**Table 10** PTT Express Default User Interface Descriptions

| Item                  | Description   |
|-----------------------|---|
| Notification Icon     | Indicates the current state of the PTT Express client.  |
| Service Indication    | Indicates the status of the PTT Express client. Options: <b>Service Enabled</b> , <b>Service Disabled</b> or <b>Service Unavailable</b> . |
| Talk Groups           | Lists all 32 Talk Groups available for PTT communication.   |
| Settings              | Opens the PTT Express Settings screen.  |
| Enable/Disable Switch | Turns the PTT service on and off.   |

## PTT Audible Indicators








The following tones provide helpful cues when using the voice client.

- **Talk Tone:** Double chirp. Plays when the Talk button is depressed. This is a prompt for you to start talking.
- **Access Tone:** Single beep. Plays when another user just finished a broadcast or response. You can now initiate a Group Broadcast or Private Response.
- **Busy Tone:** Continuous tone. Plays when the Talk button is depressed and another user is already communicating on the same talkgroup. Plays after the maximum allowed talk time is reached (60 seconds).
- **Network Tone:**
  - Three increasing pitch beeps. Plays when PTT Express acquires the WLAN connection and the service is enabled.
  - Three decreasing pitch beeps. Plays when PTT Express loses the WLAN connection or the service is disabled.


## PTT Notification Icons

Notification icons indicate the current state of the PTT Express Voice client.

**Table 11** PTT Express Icon Descriptions

| Status Icon   | Description   |
|---|---|
|  | The PTT Express Voice client is disabled.   |
|  | The PTT Express Voice client is enabled but not connected to a WLAN.  |
|  | The PTT Express Voice client is enabled, connected to a WLAN, and listening on the Talk Group indicated by the number next to the icon.     |
|  | The PTT Express Voice client is enabled, connected to a WLAN, and communicating on the Talk Group indicated by the number next to the icon. |
|  | The PTT Express Voice client is enabled, connected to a WLAN, and in a private response.  |
|  | The PTT Express Voice client is enabled and muted.  |
|  | The PTT Express Voice client is enabled but it is not able to communicate due to a VoIP telephony call in progress.                         |

## Enabling PTT Communication

1. Swipe up from the bottom of the Home screen and touch .
2. Slide the **Enable/Disable Switch** to the **ON** position. The button changes to **ON**.

## Selecting a Talk Group

One of 32 Talk Groups can be selected by PTT Express users. However, only one talk group may be enabled at a time on the device. Touch one of the 32 Talk Groups. The selected Talk Group is highlighted.


## PTT Communication



**NOTE:** This section describes the default PTT Express client configuration. Refer to the PTT Express V1.2 User Guide for detailed information on using the client.

PTT communication may be established as a Group Call. When PTT Express is enabled, the PTT button on the left side of the device is assigned for PTT communication. When the Wired Headset is used, Group Calls can also be initiated using the headset Talk button.

**Figure 26** PTT Button

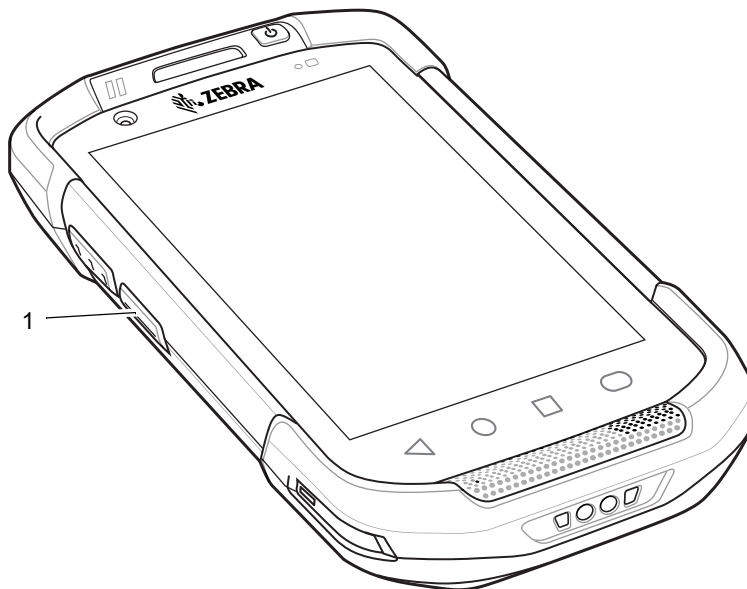

|   |            |
|---|------------|
| 1 | PTT button |
|---|------------|

## Creating a Group Call

1. Press and hold the PTT button (or the Talk button on the headset) and listen for the talk tone.  
If you hear a busy tone, release the button and wait a moment before making another attempt. Ensure that PTT Express and the WLAN are enabled.
2. Start talking after hearing the talk tone.



**NOTE:** Holding the button for more than 60 seconds (default) drops the call, allowing others to make Group calls. Release the button when finished talking to allow others to make calls.


## Responding with a Private Response

The Private Response can only be initiated once a Group Call has been established. The initial Private Response is made to the originator of the Group Call.

1. Wait for an access tone.

2. Within 10 seconds, double-press the PTT button, and listen for the talk tone.
3. If you hear a busy tone, release the button and wait a moment before making another attempt. Ensure that PTT Express and the WLAN are enabled.
4. Start talking after the talk tone plays.
5. Release the button when finished talking.

### Disabling PTT Communication

1. Swipe up from the bottom of the Home screen and touch .
2. Slide the **Enable/Disable Switch** to the **OFF** position. The button changes to **OFF**.
3. Touch the Home button.

## RxLogger

RxLogger is a comprehensive diagnostic tool that provides application and system metrics, and diagnoses device and application issues. RxLogger logs the following information: CPU load, memory load, memory snapshots, battery consumption, power states, wireless logging, cellular logging, TCP dumps, Bluetooth logging, GPS logging, logcat, FTP push/pull, ANR dumps, etc. All generated logs and files are saved onto flash storage on the device (internal or external).

### RxLogger Configuration

RxLogger is built with an extensible plug-in architecture and comes packaged with a number of plug-ins already built-in. For information on configuring RxLogger, refer to [techdocs.zebra.com/rxlogger/](http://techdocs.zebra.com/rxlogger/).


To open the configuration screen, from the RxLogger home screen touch **Settings**.

### Configuration File

RxLogger configuration can be set using an XML file. The `config.xml` configuration file is located on the microSD card in the `RxLogger\config` folder. Copy the file from the device to a host computer using a USB connection. Edit the configuration file and then replace the XML file on the device. There is no need to stop and restart the RxLogger service since the file change is automatically detected.


### Enabling Logging

To enable logging:

1. Swipe the screen up and select .
2. Touch **Start**.
3. Touch the Home button.

### Disabling Logging

To disable logging:


1. Swipe the screen up and select .
2. Touch **Stop**.
3. Touch the Home button.

### Extracting Log Files

1. Connect the device to a host computer using an USB connection.
2. Using a file explorer, navigate to the `RxLogger` folder.
3. Copy the file from the device to the host computer.
4. Disconnect the device from the host computer.

### Backing Up

RxLogger Utility allows the user to make a zip file of the `RxLogger` folder in the device, which by default contains all the RxLogger logs stored in the device.


To save the backup data, touch  > **BackupNow**.

## RxLogger Utility

RxLogger Utility is a data monitoring application for viewing logs in the device while RxLogger is running. Logs and RxLogger Utility features are accessed using Main Chat Head.

### Initiating the Main Chat Head

To initiate the Main Chat Head:

1. Open **RxLogger**.
2. Touch  > **Toggle Chat Head**. The Main Chat Head icon appears on the screen.
3. Touch and drag the Main Chat head icon to move it around the screen.

### Removing the Main Chat Head

To remove the Main Chat Head icon:

1. Touch and drag the icon. A circle with an X appears.
2. Move the icon over the circle and then release.

### Viewing Logs

To view logs:

1. Touch the Main Chat Head icon. The RxLogger Utility screen appears.
2. Touch a log to open it. The user can open many logs with each displaying a new sub Chat Head.
3. If necessary, scroll left or right to view additional Sub Chat Head icons.
4. Touch a Sub Chat Head to display the log contents.


### Removing a Sub Chat Head Icon

To remove a sub chat Head icon, press and hold the icon until it disappears.

### Backing Up In Overlay View

RxLogger Utility allows the user to make a zip file of the **RxLogger** folder in the device, which by default contains all the RxLogger logs stored in the device.


The Backup icon is always available in Overlay View.

1. Touch . The Backup dialog box appears.
2. Touch **Yes** to create the back up.

## Sound Recorder

Use **Sound Recorder** to record audio messages.

Recordings are saved on the microSD card (if installed) or the internal storage, and are available in the Music application (AOSP devices) or the Play Music application (GMS devices).

Touch  to open options menu.



- **File type** - Select the file type for the recording file.
  - **AMR**
  - **3GPP**
  - **AAC**
  - **WAV**
  - **AMR-WB**
  - **AMR-WB-3GPP**.
- **Storage location** - Select the location for the recording file.
  - **Phone storage**
  - **SD card**

# Wireless

This section provides information on the following wireless features:

- Wireless Wide Area Network (WWAN)
- Wireless Local Area Network (WLAN)
- Bluetooth
- Cast
- Near Field Communications (NFC)

## Wireless Local Area Networks

Wireless local area networks (WLANs) allow the device to communicate wirelessly inside a building. Before using the device on a WLAN, the facility must be set up with the required hardware to run the WLAN (sometimes known as infrastructure). The infrastructure and the device must both be properly configured to enable this communication.

Refer to the documentation provided with the infrastructure (access points (APs), access ports, switches, Radius servers, etc.) for instructions on how to set up the infrastructure.

Once the infrastructure is set up to enforce the chosen WLAN security scheme, use the **Wireless & networks** settings configure the device to match the security scheme.

The device supports the following WLAN security options:

- None
- Enhanced Open
- Wireless Equivalent Privacy (WEP)
- Wi-Fi Protected Access (WPA)/WPA2 Personal (PSK)
- WPA/WPA2/WPA3 Enterprise (EAP)
  - Protected Extensible Authentication Protocol (PEAP) - with MSCHAPV2 and GTC authentication.
  - Transport Layer Security (TLS)
  - Tunneled Transport Layer Security (TTLS) - with Password Authentication Protocol (PAP), MSCHAP and MSCHAPv2 authentication
  - Password (PWD)
  - Lightweight Extensible Authentication Protocol (LEAP).
- WPA3-Enterprise 192-bit

The **Status** bar displays icons that indicate Wi-Fi network availability and Wi-Fi status.



**NOTE:** To extend the life of the battery, turn off Wi-Fi when not in use.

## Connecting to a Wi-Fi Network

To connect to a Wi-Fi network:

1. Go to **Settings**.
2. Touch **Wi-Fi** to open the **Wi-Fi** screen. The device searches for WLANs in the area and lists them.
3. Scroll through the list and select the desired WLAN network.
4. For open networks, touch profile once or press and hold and then select **Connect** or for secure networks enter the required password or other credentials then touch **Connect**. See the system administrator for more information.

The device obtains a network address and other required information from the network using the dynamic host configuration protocol (DHCP) protocol. To configure the device with a fixed internet protocol (IP) address, see [Configuring the Device to Use a Static IP Address on page 5](#).

5. In the Wi-Fi setting field, **Connected** appears indicating that the device is connected to the WLAN.

## Removing a Wi-Fi Network

To remove a remembered or connected network:


1. Go to **Settings**.
2. Touch **Network & Internet > W-Fi**.
3. Scroll down to the bottom of the list and touch **Saved networks**.
4. Touch the name of the network.
5. Touch **FORGET**.
6. Touch the Home button.

## WLAN Configuration

This section provides information on configuring Wi-Fi settings.

### Configuring a Secure Wi-Fi Network


1. Go to **Settings**.
2. Touch **Network & Internet > Wi-Fi**.
3. Slide the switch to the **ON** position.
4. The device searches for WLANs in the area and lists them on the screen.
5. Scroll through the list and select the desired WLAN network.
6. Touch the desired network. If the network security is **Open**, the device automatically connects to the network. For all other network security a dialog box appears.
7. If the network security is WPA/WPA2-Personal, WPA3-Personal, or WEP, enter the required password and then touch **Connect**.

8. If the network security is WPA/WPA2/WPA3 Enterprise:
    - Touch the **EAP method** drop-down list and select one of the following:
      - **PEAP**
      - **TLS**
      - **TTLS**
      - **PWD**
      - **LEAP**.
    - Touch the **Phase 2 authentication** drop-down list and select an authentication method.
    - If required, touch **CA certificate** and select a Certification Authority (CA) certificate. Note: Certificates are installed using the **Security** settings.
    - If required, touch **User certificate** and select a user certificate. Note: User certificates are installed using the Security settings.
    - If required, in the **Identity** text box, enter the username credentials.
    - If desired, in the **Anonymous identity** text box, enter an anonymous identity username.
    - If required, in the **Password** text box, enter the password for then given identity.
  9. If the network security is **WPA3-Enterprise 192-bit**:
    - Touch **CA certificate** and select a Certification Authority (CA) certificate. Note: Certificates are installed using the **Security** settings.
    - Touch **User certificate** and select a user certificate. Note: User certificates are installed using the **Security** settings.
    - In the **Identity** text box, enter the username credentials.
-  **NOTE:** By default, the network Proxy is set to **None** and the IP settings is set to **DHCP**. See Configuring for a Proxy Server for setting connection to a proxy server and see Configuring the Device to Use a Static IP Address for setting the device to use a static IP address.
10. Touch **Connect**.
  11. Touch the Home button.

## Manually Adding a Wi-Fi Network

Manually add a Wi-Fi network if the network does not broadcast its name (SSID) or to add a Wi-Fi network when out of range.

1. Go to **Settings**.
2. Touch **Network & Internet > Wi-Fi**.
3. Slide the Wi-Fi switch to the **On** position.
4. Scroll to the bottom of the list and select **Add network**.
5. In the **Network name** text box, enter the name of the Wi-Fi network.
6. In the **Security** drop-down list, set the type of security to:
  - **None**
  - **Enhanced Open**
  - **WEP**

- **WPA/WPA2-Personal**
  - **WPA3-Personal**
  - **WPA/WPA2/WPA3-Enterprise**
  - **WPA3-Enterprise 192-bit**
7. If the network security is **None** , touch **Save**.
  8. If the network security is **WEP**, **WPA3-Personal**, or **WPA/WPA2-Personal**, enter the required password and then touch **Save**.
  9. If the network security is **WPA/WPA2/WPA3-Enterprise**:
    - Touch the **EAP method** drop-down list and select one of the following:
      - **PEAP**
      - **TLS**
      - **TTLS**
      - **PWD**
      - **LEAP**.
    - Touch the **Phase 2 authentication** drop-down list and select an authentication method.
    - If required, touch **CA certificate** and select a Certification Authority (CA) certificate. Note: Certificates are installed using the **Security** settings.
    - If required, touch **User certificate** and select a user certificate. Note: User certificates are installed using the **Security** settings.
    - If required, in the **Identity** text box, enter the username credentials.
    - If desired, in the **Anonymous identity** text box, enter an anonymous identity username.
    - If required, in the **Password** text box, enter the password for the given identity.
  10. If the network security is **WPA3-Enterprise 192-bit**:
    - Touch **CA certificate** and select a Certification Authority (CA) certificate. Note: Certificates are installed using the **Security** settings.
    - Touch **User certificate** and select a user certificate. Note: User certificates are installed using the **Security** settings.
    - In the **Identity** text box, enter the username credentials.
-  **NOTE:** By default, the network Proxy is set to **None** and the IP settings is set to **DHCP**. See [Configuring for a Proxy Server on page 5](#) for setting connection to a proxy server and see [Configuring the Device to Use a Static IP Address on page 5](#) for setting the device to use a static IP address.
11. Touch **Save**. To connect to the saved network, touch and hold on the saved network and select **Connect to network**.
  12. Touch the Home button.

## Configuring for a Proxy Server

A proxy server is a server that acts as an intermediary for requests from clients seeking resources from other servers. A client connects to the proxy server and requests some service, such as a file, connection, web page, or other resource, available from a different server. The proxy server evaluates the request according to its filtering rules. For example, it may filter traffic by IP address or protocol. If the request is validated by the filter, the proxy provides the resource by connecting to the relevant server and requesting the service on behalf of the client.

It is important for enterprise customers to be able to set up secure computing environments within their companies, making proxy configuration essential. Proxy configuration acts as a security barrier ensuring that the proxy server monitors all traffic between the Internet and the intranet. This is normally an integral part of security enforcement in corporate firewalls within intranets.

1. Go to **Settings**.
2. Touch **Network & Internet > Wi-Fi**.
3. Slide the Wi-Fi switch to the **On** position.
4. In the network dialog box, select and touch a network.
5. Touch **Advanced options**.
6. Touch **Proxy** and select **Manual**.
7. In the **Proxy hostname** text box, enter the address of the proxy server.
8. In the **Proxy port** text box, enter the port number for the proxy server.
9. In the **Bypass proxy for** text box, enter addresses for web sites that are not required to go through the proxy server. Use a comma “,” between addresses. Do not use spaces or carriage returns between addresses.
10. Touch **Connect**.
11. Touch the Home button.

## Configuring the Device to Use a Static IP Address

By default, the device is configured to use Dynamic Host Configuration Protocol (DHCP) to assign an Internet protocol (IP) address when connecting to a wireless network.

1. Go to **Settings**.
2. Touch **Network & Internet > Wi-Fi**.
3. Slide the Wi-Fi switch to the **On** position.
4. In the network dialog box, select and touch a network.
5. Touch **Advanced options**.
6. Touch **IP settings** and select **Static**.
7. In the **IP address** text box, enter an IP address for the device.
8. If required, in the **Gateway** text box, enter a gateway address for the device.
9. If required, in the **Network prefix length** text box, enter the prefix length.
10. If required, in the **DNS 1** text box, enter a Domain Name System (DNS) address.
11. If required, in the **DNS 2** text box, enter a DNS address.
12. Touch **Connect**.

13. Touch the Home button.

## Wi-Fi Preferences

Use the **Wi-Fi preferences** to configure advanced Wi-Fi settings. From the Wi-Fi screen scroll down to the bottom of the screen and touch **Wi-Fi preferences**.

- **Turn on Wi-Fi automatically** - When enabled, Wi-Fi automatically turns back on when near high quality saved networks.
- **Open network notification** - When enabled, notifies the user when an open network is available.
- **Advanced** - Touch to expand options.
  - **Additional settings** - See Additional Settings.
  - **Install Certificates** – Touch to install certificates.
  - **Network rating provider** - Disabled (AOSP devices). To help determine what constitutes a good Wi-Fi network, Android supports external Network rating providers that provide information about the quality of open Wi-Fi networks. Select one of the providers listed or **None**. If none are available or selected, the Connect to open networks feature is disabled.
  - **Wi-Fi Direct** - Displays a list of devices available for a direct Wi-Fi connection.
  - **MAC address** - Displays the Media Access Control (MAC) address of the device when connecting to Wi-Fi networks.
  - **IP address** - Displays the IP address of the device when connecting to Wi-Fi networks.

## Additional Wi-Fi Settings



**NOTE:** Additional Wi-Fi settings are for the device, not for a specific wireless network.

Use the **Additional Settings** to configure additional Wi-Fi settings. To view the additional Wi-Fi settings, scroll to the bottom of the **Wi-Fi** screen and touch **Wi-Fi Preferences > Advanced > Additional settings**.

- **Regulatory**
  - **Country Selection** - Displays the acquired country code if 802.11d is enabled, else it displays the currently selected country code.
  - **Region code** - Displays the current region code.
- **Band and Channel Selection**
  - **Wi-Fi frequency band** - Set the frequency band to: **Auto** (default), **5 GHz only** or **2.4 GHz only**.
  - **Available channels (2.4 GHz)** - Touch to display the **Available channels** menu. Select specific channels and touch **OK**.
  - **Available channels (5 GHz)** - Touch to display the **Available channels** menu. Select specific channels and touch **OK**.
- **Logging**
  - **Advanced Logging** – Touch to enable advanced logging or change the log directory.
  - **Wireless logs** - Use to capture Wi-Fi log files.
    - **Fusion Logger** - Touch to open the **Fusion Logger** application. This application maintains a history of high level WLAN events which helps to understand the status of connectivity.

- **Fusion Status** - Touch to display live status of WLAN state. Also provides information about the device and connected profile.
- **About**
  - **Version** - Displays the current Fusion information.

### Wi-Fi Direct

Wi-Fi Direct devices can connect to each other without having to go through an access point. Wi-Fi Direct devices establish their own ad-hoc network when required, letting you see which devices are available and choose which one you want to connect to.

1. Go to **Settings**.
2. Touch **Wi-Fi > Wi-Fi preferences > Advanced > Wi-Fi Direct**. The device begins searching for another Wi-Fi Direct device.
3. Under **Peer devices**, touch the other device name.
4. On the other device, select **Accept**.

**Connected** appears on the device. On both devices, in their respective Wi-Fi Direct screens, the other device name appears in the list.

## Wireless Wide Area Networks



**NOTE:** TC77 only.

Use Wireless wide area networks (WWANs) to access data over a cellular network. This section provides information on:

- Sharing a data connection
- Monitoring data usage
- Changing Cellular Network settings

### Sharing the Mobile Data Connection

The **Tethering & Portable Hotspot** settings allows sharing the mobile data connection with a single computer via USB tethering or Bluetooth tethering. Share the data connection with up to eight devices at once, by turning it into a portable Wi-Fi hotspot. While the device is sharing its data connection, an icon displays at the top of the screen and a corresponding message appears in the notification list.

### Enabling USB Tethering



**NOTE:** USB tethering is not supported on computers running Mac OS. If the computer is running Windows or a recent version of Linux (such as Ubuntu), follow these instructions without any special preparation. If running a version of Windows that precedes Windows 7, or some other operating system, you may need to prepare the computer to establish a network connection via USB.

1. Connect the device to a host computer with the USB cable.
2. The notification **Charging this device via USB** appears in the Notifications panel.
3. Go to **Settings**.



4. Touch **Network & Internet**.
5. Touch **Hotspot & tethering**.
6. Touch the **USB tethering** switch to enable.

The host computer is now sharing the device's data connection.

To stop sharing the data connection, touch the **USB tethering** switch again or disconnect the USB cable.

### Enabling Bluetooth Tethering

Use Bluetooth tethering to share the data connection with a host computer.

Configure the host computer to obtain its network connection using Bluetooth. For more information, see the host computer's documentation.

1. Pair the device with the host computer.
2. Go to **Settings**.
3. Touch **Networking & Internet**.
4. Touch **Hotspot & tethering**.
5. Touch the **Bluetooth tethering** switch to enable.

The host computer is now sharing the device's data connection.

To stop sharing the data connection, touch the **Bluetooth tethering** switch again.

### Enabling Wi-Fi Hotspot

To enable the Wi-Fi Hotspot:

1. Go to **Settings**.
2. Touch **Network & Internet**.
3. Touch **Hotspot & tethering**.
4. Touch **Wi-Fi hotspot**.
5. Toggle the switch to enable.

After a moment, the device starts broadcasting its Wi-Fi network name (SSID). Connect to it with up to eight computers or other devices. The Hotspot (📶) icon appears in the Status bar.

To stop sharing the data connection, touch the toggle switch again.

### Configuring the Wi-Fi Hotspot

1. Go to **Settings**.
2. Touch **Network & Internet**.
3. Touch **Hotspot & tethering**.
4. Touch **Wi-Fi hotspot**.
5. In the **Hotspot name** text field, edit the name for the hotspot.
6. Touch **Security** and select a security method from the drop-down list.
  - **WPA2-Personal**
    - a. Touch **Hotspot password**.
    - b. Enter a password.

- c. Touch **OK**.
- **None** - If **None** is selected in the Security option, a password is not required.
- 7. Touch **Advanced**.
- 8. If desired, touch **Turn off hotspot automatically** to turn off Wi-Fi Hotspot when no devices are connected.
- 9. In the **AP Band** drop-down list, select **2.4 GHz Band** or **5.0 GHz Band**.

## Data Usage

Data usage refers to the amount of data uploaded or downloaded by the device during a given period. Depending on the wireless plan, you may be charged additional fees when your data usage exceeds your plan's limit.

To monitor your data usage:

1. Go to **Settings**.
2. Touch **Network & internet > Mobile network > Data usage**.



**CAUTION:** The usage displayed on the data usage settings screen is measured by your device. Your carrier's data usage accounting may differ. Usage in excess of your carrier plan's data limits can result in steep overage charges. The feature described here can help you track your usage, but is not guaranteed to prevent additional charges.


Data usage settings allow:

- Enable Data Saver.
- Set the data usage warning level.
- Set a data usage limit.
- View or restrict data usage by app.
- Identify mobile hotspots and restrict background downloads that may result in extra charges.

By default, the data usage settings screen displays the mobile data settings. That is, the data network or networks provided by your carrier.

### Setting Data Usage Warning

To set a warning alert when the device has used a certain amount of mobile data:

1. Go to **Settings**.
2. Touch **Network & internet > Mobile network > Data usage > **.
3. If necessary, touch **Set data warning** to enable it.
4. Touch **Data warning**.
5. Enter a number. To switch between megabytes (MB) and gigabytes (GB), touch the down arrow.
6. Touch **SET**.

When the usage reaches the set level, a notification appears.

### Setting Data Limit

1. Go to **Settings**.
2. Touch **Network & internet > Mobile network > Data usage > **.

3. Touch **Set data limit**.
4. Touch **OK**.
5. Touch **Data limit**.
6. Enter a number. To switch between megabytes (MB) and gigabytes (GB), touch the down arrow.
7. Touch **Set**.

When the limit is reached, data automatically turns off and a notification appears.

## Cellular Network Settings

Cellular network settings applies to WWAN devices only.

### Data When Roaming

Roaming is disabled by default to prevent the device from transmitting data over other carriers' mobile networks when leaving an area that is covered by the carrier's networks. This is useful for controlling expenses if the service plan does not include data roaming.

#### Enabling Data on GSM Devices

1. Go to **Settings**.
2. Touch **Network & Internet > Mobile network**.
3. Touch **Roaming**.

The switch moves to the on position.

### Setting Preferred Network Type

Change the network operating mode.

1. Go to **Settings**.
2. Touch **Network & Internet > Mobile network > Advanced > Preferred network type**.
3. In the **Preferred network type** dialog box, select a mode to set as default:
  - **LTE only**
  - **Automatic**
  - **CDMA only**

### Using Search for MicroCell

A MicroCell acts like a mini cell tower in a building or residence and connects to an existing broadband Internet service. It improves cell signal performance for voice calls, texts, and cellular data applications like picture messaging and Web surfing.

1. Go to **Settings**.
2. Touch **Network & Internet > Mobile network**.
3. Touch **Search for MicroCell**.

### Configuring the Access Point Name



**NOTE:** Many service provider Access Point Name (APN) data are pre-configured in the device. The APN information for all other service providers must be obtained from the wireless service provider.

To use the data on a network, configure the APN information.

1. Go to **Settings**.
2. Touch **Network & Internet > Mobile network > Advanced**.
3. Touch **Access Point Names**.
4. Touch an APN name in the list to edit an existing APN or touch **+** to create a new APN.
5. Touch each APN setting and enter the appropriate data obtained from the wireless service provider.
6. When finished, touch **:** > **Save**.
7. Touch the radio button next to the APN name to start using it.
8. Touch the Home button.

### Locking the SIM Card

Locking the SIM card requires the user to enter a PIN every time the device is turned on. If the correct PIN is not entered, only emergency calls can be made.

1. Go to **Settings**.
2. Touch **Security > SIM card lock**.
3. Touch **Lock SIM card**.
4. Enter the PIN associated with the card. Touch **OK**.
5. Reset the device.

### Default SIM Slot Configuration

The device contains SIM slots that can be used for installing up to two SIM cards. A system administrator can set the default SIM slot for the device.

By default, SIM slot configuration is disabled. To allow SIM slot configuration on the device, use Zebra's staging solution, StageNow, to enable the SIM Socket Selection parameter. See [techdocs.zebra.com/stagenow](http://techdocs.zebra.com/stagenow).

#### Setting the Default SIM Slot

1. Go to **Settings**.
2. Touch **About phone > SW components**.
3. Touch **WWAN** five times. The message **Turn ON SIM Slot UI** appears.
4. Touch Back two times.
5. Touch **Network & Internet > Mobile network > Advanced > SIM socket selection**.
6. Select the SIM slot to set as default.

### Dual SIM Dual Standby

Dual SIM Dual Standby mode allows a device with two SIM cards to make or receive calls using either SIM card. Both SIM cards remain active while not in use. When a call is initiated using one SIM card, the other SIM card becomes inactive until the call ends.

Dual SIM Dual Standby mode is disabled by default. To activate Dual SIM Dual Standby mode, use Zebra's staging solution, StageNow. For more information, refer to: [www.zebra.com/stagenow](http://www.zebra.com/stagenow).

## Bluetooth

Bluetooth devices can communicate without wires, using frequency-hopping spread spectrum (FHSS) radio frequency (RF) to transmit and receive data in the 2.4 GHz Industry Scientific and Medical (ISM) band (802.15.1). Bluetooth wireless technology is specifically designed for short-range (10 m (32.8 ft)) communication and low power consumption.

Devices with Bluetooth capabilities can exchange information (for example, files, appointments, and tasks) with other Bluetooth enabled devices such as printers, access points, and other mobile devices.

The device supports Bluetooth Low Energy. Bluetooth Low Energy is targeted at applications in the healthcare, fitness, security, and home entertainment industries. It provides reduced power consumption and cost while maintaining standard Bluetooth range.

## Adaptive Frequency Hopping

Adaptive Frequency Hopping (AFH) is a method of avoiding fixed frequency interferers, and can be used with Bluetooth voice. All devices in the piconet (Bluetooth network) must be AFH-capable in order for AFH to work. There is no AFH when connecting and discovering devices. Avoid making Bluetooth connections and discoveries during critical 802.11b communications. AFH for Bluetooth consists of four main sections:

- Channel Classification - A method of detecting an interference on a channel-by-channel basis, or pre-defined channel mask.
- Link Management - Coordinates and distributes the AFH information to the rest of the Bluetooth network.
- Hop Sequence Modification - Avoids interference by selectively reducing the number of hopping channels.
- Channel Maintenance - A method for periodically re-evaluating the channels.

When AFH is enabled, the Bluetooth radio “hops around” (instead of through) the 802.11b high-rate channels. AFH coexistence allows enterprise devices to operate in any infrastructure.

The Bluetooth radio in this device operates as a Class 2 device power class. The maximum output power is 2.5 mW and the expected range is 10 m (32.8 ft). A definition of ranges based on power class is difficult to obtain due to power and device differences, and whether in open space or closed office space.



**NOTE:** It is not recommended to perform Bluetooth wireless technology inquiry when high rate 802.11b operation is required.

## Security

The current Bluetooth specification defines security at the link level. Application-level security is not specified. This allows application developers to define security mechanisms tailored to their specific need. Link-level security occurs between devices, not users, while application-level security can be implemented on a per-user basis. The Bluetooth specification defines security algorithms and procedures required to authenticate devices, and if needed, encrypt the data flowing on the link between the devices. Device authentication is a mandatory feature of Bluetooth while link encryption is optional.

Pairing of Bluetooth devices is accomplished by creating an initialization key used to authenticate the devices and create a link key for them. Entering a common personal identification number (PIN) in the devices being paired generates the initialization key. The PIN is never sent over the air. By default, the Bluetooth stack responds with no key when a key is requested (it is up to user to respond to the key request event). Authentication of Bluetooth devices is based-upon a challenge-response transaction. Bluetooth allows for a PIN or passkey used to create other 128-bit keys used for security and encryption. The encryption key is derived from the link key used to authenticate the pairing devices. Also worthy of note is the limited range and fast frequency hopping of the Bluetooth radios that makes long-distance eavesdropping difficult.

Recommendations are:

- Perform pairing in a secure environment
- Keep PIN codes private and do not store the PIN codes in the device
- Implement application-level security.

## Bluetooth Profiles

The device supports the Bluetooth services listed.

**Table 12** Bluetooth Profiles

| Profile                                    | Description   |
|--|---|
| Service Discovery Protocol (SDP)           | Handles the search for known and specific services as well as general services.   |
| Serial Port Profile (SPP)                  | Allows use of RFCOMM protocol to emulate serial cable connection between two Bluetooth peer devices. For example, connecting the device to a printer. |
| Object Push Profile (OPP)                  | Allows the device to push and pull objects to and from a push server.   |
| Advanced Audio Distribution Profile (A2DP) | Allows the device to stream stereo-quality audio to a wireless headset or wireless stereo speakers.   |
| Audio/Video Remote Control Profile (AVRCP) | Allows the device to control A/V equipment to which a user has access. It may be used in concert with A2DP.   |
| Personal Area Network (PAN)                | Allows the use of Bluetooth Network Encapsulation Protocol to provide L3 networking capabilities over a Bluetooth link. Only PANU role is supported.  |
| Human Interface Device Profile (HID)       | Allows Bluetooth keyboards, pointing devices, gaming devices and remote monitoring devices to connect to the device.                                  |
| Headset Profile (HSP)                      | Allows a hands-free device, such as a Bluetooth headset, to place and receive calls on the device.  |
| Hands-Free Profile (HFP)                   | Allows car hands-free kits to communicate with the device in the car.   |

**Table 12** Bluetooth Profiles (Continued)

| Profile                          | Description   |
|----------------------------------|---|
| Phone Book Access Profile (PBAP) | Allows exchange of Phone Book Objects between a car kit and a mobile device to allow the car kit to display the name of the incoming caller; allow the car kit to download the phone book so you can initiate a call from the car display.  |
| Out of Band (OOB)                | Allows exchange of information used in the pairing process. Pairing is completed using the Bluetooth radio, but requires information from the OOB mechanism. Using OOB with NFC enables pairing when devices simply get close, rather than requiring a lengthy discovery process. |
| Symbol Serial Interface (SSI)    | Allows for communication with Bluetooth Imager.   |

## Bluetooth Power States

The Bluetooth radio is off by default.

- Suspend - When the device goes into suspend mode, the Bluetooth radio stays on.
- Airplane Mode - When the device is placed in Airplane Mode, the Bluetooth radio turns off. When Airplane mode is disabled, the Bluetooth radio returns to the prior state. When in Airplane Mode, the Bluetooth radio can be turned back on if desired.


## Bluetooth Radio Power

Turn off the Bluetooth radio to save power or if entering an area with radio restrictions (for example, an airplane). When the radio is off, other Bluetooth devices cannot see or connect to the device. Turn on the Bluetooth radio to exchange information with other Bluetooth devices (within range). Communicate only with Bluetooth radios in close proximity.




**NOTE:** To achieve the best battery life, turn off radios when not in use.

### Enabling Bluetooth

1. Swipe down from the Status bar to open the Notification panel.
2. Touch  to turn Bluetooth on.
3. Touch the Home button.

### Disabling Bluetooth

1. Swipe down from the Status bar to open the Notification panel.
2. Touch  to turn Bluetooth off.
3. Touch the Home button.

## Discovering Bluetooth Device(s)

The device can receive information from discovered devices without pairing. However, once paired, the device and a paired device exchange information automatically when the Bluetooth radio is on.

1. Ensure that Bluetooth is enabled on both devices.

2. Ensure that the Bluetooth device to discover is in discoverable mode.
3. Ensure that the two devices are within 10 meters (32.8 feet) of one another.
4. Swipe down from the Status bar to open the Quick Access panel.
5. Touch and hold **Bluetooth**.
6. Touch **Pair new device**. The device begins searching for discoverable Bluetooth devices in the area and displays them under **Available devices**.
7. Scroll through the list and select a device. The Bluetooth pairing request dialog box appears.
8. Touch **Pair** on both devices.
9. The Bluetooth device is added to the **Paired devices** list and a trusted (“paired”) connection is established.

### Changing the Bluetooth Name

By default, the device has a generic Bluetooth name that is visible to other devices when connected.

1. Go to **Settings**.
2. Touch **Connected devices > Connection preferences > Bluetooth**.
3. If Bluetooth is not on, move the switch to turn Bluetooth on.
4. Touch **Device name**.
5. Enter a name and touch **RENAME**.
6. Touch the Home button.


### Connecting to a Bluetooth Device

Once paired, connect to a Bluetooth device.

1. Go to **Settings**.
2. Touch **Connected devices > Connection preferences > Bluetooth**.
3. In the list, touch the unconnected Bluetooth device.  
When connected, **Connected** appears below the device name.

### Selecting Profiles on the Bluetooth Device

Some Bluetooth devices have multiple profiles.


1. Go to **Settings**.
2. Touch **Connected devices > Connection preferences > Bluetooth**.
3. In the **Paired Devices** list, touch  next to the device name.
4. Turn on or off a profile to allow the device to use that profile.
5. Touch the Home button.

### Unpairing a Bluetooth Device

Unpairing a Bluetooth device erases all pairing information.


1. Go to **Settings**.



2. Touch **Connected devices** > **Connection preferences** > **Bluetooth**.
3. In the **Paired Devices** list, touch  next to the device name.
4. Touch **FORGET**.
5. Touch the Home button.

## Cast

Use **Cast** to mirror the device screen on a Miracast enabled wireless display.

1. Go to **Settings**.
2. Touch **Connected devices** > **Connection preferences** > **Cast**.
3. Touch  > **Enable wireless display**.  
The device searches for nearby Miracast devices and lists them.
4. Touch a device to begin casting.
5. Touch the Home button.

## Near Field Communications

NFC/HF RFID is a short-range wireless connectivity technology standard that enables secure transaction between a reader and a contactless smartcard. The technology is based on ISO/IEC 14443 type A and B (proximity) and ISO/IEC 15693 (vicinity) standards, using the HF 13.56 MHz unlicensed band.

The device supports the following operating modes:

- Reader mode
- Peer-to-Peer communication
- Card Emulation mode.

Using NFC, the device can:


- Read contactless cards such as contactless tickets, ID cards and ePassport.
- Read and write information to contactless cards such as SmartPosters and tickets, as well as devices with NFC interface such as vending machines.
- Read information from supported medical sensors.
- Pair with supported Bluetooth devices such as printers , ring scanners (ex. RS6000), and headsets (ex. HS3100).
- Exchange data with another NFC device.
- Emulate contactless card such as payment,ticket, or SmartPoster.

The device NFC antenna is positioned to read NFC cards from the top of the device while the device is being held.

The device NFC antenna is located on the back of the device, near the Interface Connector.

## Reading NFC Cards

Read contactless cards using NFC.

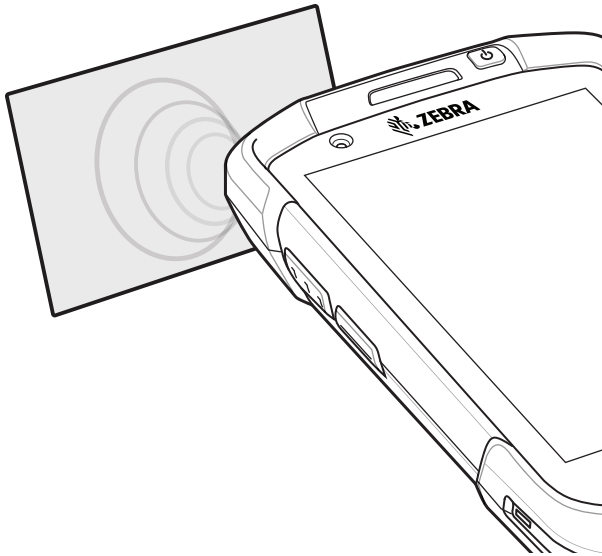**Figure 27** Reading Cards

1. Launch an NFC enabled application.
2. Hold device as shown.
3. Move the device close to the NFC card until it detects the card.
4. Hold the card steadily until the transaction is complete (usually indicated by the application).

## Sharing Information Using NFC


You can beam content like a web page, contact cards, pictures, YouTube links or location information from your screen to another device by bringing the devices together back to back.

Make sure both devices are unlocked, support NFC, and have both NFC and Android Beam turned on.

1. Open a screen that contains a web page, video, photo or contact.
2. Move the back of the device toward the back of the other device.
3. Align the NFC logo on the device with the NFC antenna on the other device.
4. Move the front of the device toward the front of the other device.

When the devices connect, a sound emits, the image on the screen reduces in size, the message **Touch to beam** displays.

Figure 28 NFC Antenna

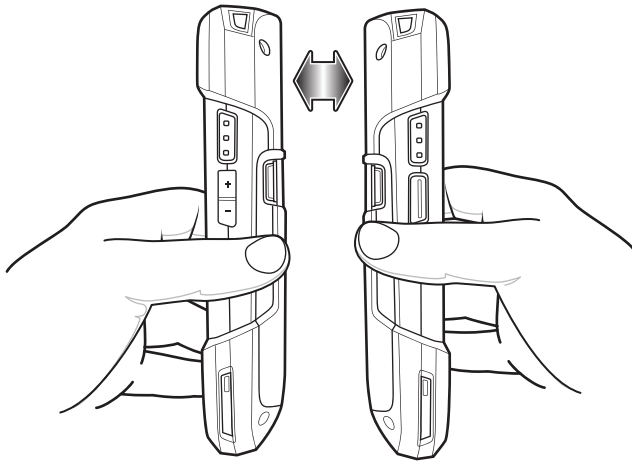

5. Touch anywhere on the screen.  
The transfer begins.

## Enterprise NFC Settings

Improve NFC performance or increase battery life by selecting which NFC features to use on the device.

- **Card Detection Mode** - Select a card detection mode.
  - **Low** - Increases battery life by lowering the NFC detection speed.
  - **Hybrid** - Provides a balance between NFC detection speed and battery life (default).
  - **Standard** - Provides the best NFC detection speed, but reduces battery life.
- **Supported Card Technology** - Select an option to detect only one NFC tag type, increasing battery life, but reducing detection speed.
  - **All (Default)** - Detects all NFC tag types. This provides the best detection speed, but reduces battery life.
  - **ISO 14443 Type A/B**
  - **FeliCa**
  - **ISO15693**
- **Other NFC settings available with Zebra administrator tools (CSP)** - Allows configuration of additional Enterprise NFC Settings through staging tools and Mobile Device Management (MDM) solutions with an MX version that supports the Enterprise NFC Settings Configuration Service Provider (CSP). For more information on using the Enterprise NFC Settings CSP, refer to: [techdocs.zebra.com](http://techdocs.zebra.com).

# Calls



**NOTE:** This section applies to WWAN devices only.

Make a phone call from the **Phone** app, the **Contacts** app, or other apps or widgets that display contact information.

## Emergency Calling

The service provider programs one or more emergency phone numbers, such as 911 or 999, that the user can call under any circumstances, even when the phone is locked, a SIM card is not inserted or the phone is not activated. The service provider can program additional emergency numbers into the SIM card. However, the SIM card must be inserted in the device in order to use the numbers stored on it. See the service provider for additional information.



**NOTE:** Emergency numbers vary by country. The phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

## Audio Modes

The device offers three audio modes for use during phone calls.

- Handset Mode - Switch audio to the receiver at the top front of the device to use the device as a handset. This is the default mode.
- Speaker Mode - Use the device as a speakerphone.
- Headset Mode - Connect a Bluetooth or wired headset to automatically switch audio to the headset.

## Bluetooth Headset


Use a Bluetooth headset for audio communication when using an audio-enabled app. See [Bluetooth on page 100](#) for information on connecting a Bluetooth headset to the device. Set the volume appropriately before putting on the headset. When a Bluetooth headset is connected, the speakerphone is muted.

## Wired Headset

Use a wired headset and audio adapter for audio communication when using an audio-enabled app. Set the volume appropriately before putting on the headset. When a wired headset is connected, the speakerphone is muted.

To end a call using the wired headset, press and hold the headset button until the call ends.

**Figure 29** 3.5 mm Headset

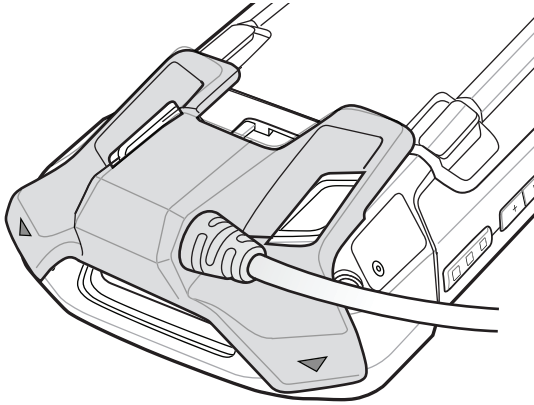











## Adjusting Audio Volume




- Use the volume buttons to adjust the phone volume.
  - Ring and notification volumes when not in a call.
  - Conversation volume during a call.

## Making a Call Using the Dialer

Use the dialer tab to dial phone numbers.


1. On the Home screen touch .
2. Touch .
3. Touch the keys to enter the phone number.
4. Touch  below the dialer to initiate the call.
  -  - Send audio to the speakerphone.
  -  - Mute the call.
  -  - Display the dial pad.
  -  - Place the call on hold (not available on all services).
  -  - Create a conference call.
  -  - Increase audio level.
5. Touch  to end the call.

If using a Bluetooth headset, additional audio options are available. Touch the audio icon to open the audio menu.

-  - Audio is routed to the Bluetooth headset.
-  - Audio is routed to the speakerphone.
-  - Audio is routed to the earpiece.

## Accessing Dialing Options

The dialer provides options to save the dialed number to contacts, send an SMS, or insert pauses and wait into the dial string.





- Enter at least one digit in the dialer, then touch .
  - **Add 2–sec pause** - Pause the dialing of the next number for two seconds. Multiple pauses are added sequentially.
  - **Add wait** - Wait for confirmation to send the rest of the digits.

## Making a Call Using Contacts



There are two ways to make a call using contacts:

- Using the Dialer
- Using the Contacts app.

### Using the Dialer

1. On the Home screen touch .
2. Touch the  tab.
3. Touch the contact.
4. Touch  to initiate the call.
5. Touch  to end the call.




### Using the Contacts App

1. Touch .
2. Touch a contact name.
3. Touch  to initiate the call.




## Making a Call Using Call History


Call History is a list of all the calls placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to Contacts.

Arrow icons beside a call indicate the type of call. Multiple arrows indicate multiple calls.

-  - Missed incoming call
-  - Received incoming call
-  - Outgoing call.

### Using the Call History List

1. On the Home screen touch .
2. Touch the  tab.
3. Touch  next to the contact to initiate the call.





4. Touch the contact to perform other functions.
5. Touch  to end the call.



## Making a Conference Call on GSM



Create a conference phone session with multiple people.









**NOTE:** Conference Calling and the number of conference calls allowed may not be available on all services. Please check with the service provider for Conference Calling availability.

1. On the Home screen touch .
2. Touch .
3. Touch the keys to enter the phone number.
4. Touch  below the dialer to initiate the call.
5. When the call connects, touch .
 

The first call is placed on hold.
6. Touch .
7. Touch the keys to enter the second phone number.
8. Touch  below the dialer to initiate the call.
 

When the call connects, the first call is placed on hold and the second call is active.
9. Touch  to create a conference call with three people.
10. Touch  to add another call.
 

The conference is placed on hold.
11. Touch .
12. Touch the keys to enter another phone number.
13. Touch  below the dialer to initiate the call.
14. Touch  icon to add the third call to the conference.
15. Touch **Manage conference call** to view all callers.
  -  - Remove a caller from the conference
  -  - Speak privately with one party during a conference call
  -  - Include all parties again.

## Making a Call Using a Bluetooth Headset

To make a call using a Bluetooth headset:




1. Pair the Bluetooth headset with the device.
2. Press the Call button on the Bluetooth headset.
3. Press the Call button on the Bluetooth headset to end the call.

## Answering Calls

When receiving a phone call, the **Incoming Call** screen displays the caller ID and any additional information about the caller that is in the **Contacts** app.

- Touch **ANSWER** to answer the call or **DECLINE** to send the caller to voice mail.

If the screen lock is enabled, the user can answer the call without unlocking the device.

- When a call arrives:
  - Touch  and slide up to answer the call.
  - Touch  and slide down to send the call to voice mail.
  - Touch  to open a list of quick text responses. Touch one to send it to the caller immediately.

When the calls ends, the device remains locked.

If using a Bluetooth headset when a call arrives, touch the Call button on the Bluetooth headset to answer the call. To end the call press the headset Call button.

All incoming calls are recorded in the Phone app Call log tab. If you miss a call, you receive a notification. To silence the ringer before answering the call, press the volume down button on the side of device.

## Call Settings



**NOTE:** Not all options are available for all configurations

To modify phone call settings, on the Home screen touch  >  > **Settings**.

- **Display options**
  - **Sort by** - Set to **First name** or **Last name**.
  - **Name format** - Set to **First name first** or **Last name first**.
- **Sounds and vibrations** - Touch to edit the general sound settings for the device.
- **Quick responses** - Touch to edit quick responses to use instead of answering a call.
- **Speed dial settings** - Set speed dial contact shortcuts.
- **Calls**
  - **Calling accounts**
    - **SIP accounts** - Choose to receive Internet calls for accounts added to the device, view or change SIP accounts, or add an Internet calling account.
    - **Use SIP calling** - Set to **For all calls** or **Only for SIP calls** (default).
    - **Receive incoming calls** - Enable to allow incoming calls (default - disabled).
  - **Fixed Dialing Numbers** - Set to only allow the phone to dial the phone number(s) or area code(s) specified in a Fixed Dialing list.
  - **Call forwarding** - Set to forward incoming calls to a different phone number.



**NOTE:** Call Forwarding may not be available on all networks. Check with the service provider for availability.

- **Call barring** - Set to block certain types of incoming or outgoing calls.



- **Additional settings**
  - **Caller ID** - Set caller ID to reveal the identity of the person making an outgoing call. Options: **Network default** (default), **Hide number**, **Show number**.
  - **Call waiting** - Set to be notified of an incoming call while on a call.
- **Blocked numbers** - Set to block calls and texts from certain phone numbers. Touch ADD A NUMBER to block a phone number.
- **Voicemail** - Configure voicemail settings.
  - **Notifications** - Configure voicemail notification settings.
    - **Alerting** - Touch to receive sound and vibration notifications when a voicemail is received. Use toggle switches to enable or disable **Pop on screen**, **Blink light**, **Show notification dot**, and **Override Do Not Disturb**.
    - **Silent** - Touch to silence sound and vibration notifications when a voicemail is received. Use toggle switches to enable or disable **Minimize**, **Show notification dot**, and **Override Do Not Disturb**.
    - **Sound** - Select a sound to play for notifications from this app.
    - **Vibrate** - Allow notifications from this app to vibrate the device.
    - **Blink light** - Allow notifications from this app the light the Notification LED blue.
    - **Show notification dot** - Allow notifications from this app to add a notification dot to the app icon.
    - **Override Do Not Disturb** - Allow these notifications to interrupt when Do Not Disturb is enable
  - **Advanced Settings**
    - **Service** - Set the service provider or other provider for voicemail service.
    - **Setup** - Select to update the phone number used to access voicemail.
- **Accessibility**
  - **Hearing aids** - Select to enable hearing air compatibility.
  - **RTT settings** - Configure Real-time text (RTT) settings.
    - **Real-time text (RTT) call** - Select to allow messaging during a call.
    - **Set RTT visibility** - Set to **Visible during calls** (default) or **Always visible**.

# Accessories

This section provides information for using the accessories for the device.

This following table lists the accessories available for the device.

**Table 13** Accessories

| Accessory                         | Part Number        | Description  |
|-----------------------------------|--------------------|--|
| <b>Cradles</b>                    |                    |  |
| 2-Slot Charge Only Cradle         | CRD-TC7X-SE2CPP-01 | Provides device and spare battery charging. Use with power supply, p/n PWR-BGA12V50W0WW.   |
| 2-Slot USB/Ethernet Cradle        | CRD-TC7X-SE2EPP-01 | Provides device and spare battery charging and USB communication with a host computer and Ethernet communication with a network. Use with power supply, p/n PWR-BGA12V50W0WW.  |
| 5-Slot Charge Only Cradle         | CRD-TC7X-SE5C1-01  | Charges up to five devices. Use with power supply, p/n PWR-BGA12V108W0WW and DC line cord, p/n CBL-DC-381A1-01. Can accommodate one 4-Slot Battery Charger using the Battery Adapter Cup.  |
| 5-Slot Ethernet Cradle            | CRD-TC7X-SE5EU1-01 | Provides device charging and provides Ethernet communication for up to five devices. Use with power supply, p/n PWR-BGA12V108W0WW and DC line cord, p/n CBL-DC-381A1-01. Can accommodate one 4-Slot Battery Charger using the Battery Adapter Cup. |
| Cradle Mount                      | BRKT-SCRD-SMRK-01  | Mounts the 5-Slot Charge Only Cradle, 5-Slot Ethernet Cradle, and 4-Slot Battery Charger to a wall or rack.  |
| <b>Batteries and Chargers</b>     |                    |  |
| 4,620 mAh PowerPrecision+ battery | BTRY-TC7X-46MPP-01 | Replacement battery (single pack).   |
|                                   | BTRY-TC7X-46MPP-10 | Replacement battery (10-pack).   |
| 4-Slot Spare Battery Charger      | SAC-TC7X-4BTYPP-01 | Charges up to four battery packs. Use with power supply, p/n PWR-BGA12V50W0WW.   |

## Accessories

**Table 13** Accessories (Continued)

| Accessory   | Part Number        | Description  |
|---|--------------------|--|
| Battery Charger Adapter Cup                                 | CUP-SE-BTYADP1-01  | Allows for one 4-Slot Battery Charger to be charged and docked on the left most slot of the 5-Slot cradles (maximum one per cradle).                       |
| <b>Vehicle Solutions</b>                                    |                    |  |
| Charging Cable Cup  | CHG-TC7X-CLA1-01   | Provides power to the device from a cigarette lighter socket.  |
| Charge Only Vehicle Cradle                                  | CRD-TC7X-CVCD1-01  | Charges and securely holds the device. Requires power cable CHG-AUTO-CLA1-01 or CHG-AUTO-HWIRE1-01, sold separately.                                       |
| TC7X Data Communication Enabled Vehicle Cradle with Hub Kit | CRD-TC7X-VCD1-01   | Contains the TC7X Vehicle Communication Charging Cradle and the USB I/O Hub.   |
| Cigarette Light Adapter Auto Charge Cable                   | CHG-AUTO-CLA1-01   | Provides power to the Vehicle Cradle from a cigarette lighter socket.  |
| Hard-wire Auto Charge Cable                                 | CHG-AUTO-HWIRE1-01 | Provides power to the Vehicle Cradle from the vehicle's power panel.   |
| RAM Mount   | RAM-B-166U         | Provides window mounting option for the Vehicle Cradle. RAM Twist Lock Suction Cup with Double Socket Arm and Diamond Base Adapter. Overall Length: 6.75". |
| RAM Mount Base  | RAM-B-238U         | RAM 2.43" x 1.31" Diamond Ball base with 1" ball.  |
| <b>Charge and Communication Cables</b>                      |                    |  |
| Charging Cable Cup  | CHG-TC7X-CBL1-01   | Provides power to the device. Use with power supply, p/n PWR-BUA5V16W0WW, sold separately.   |
| Snap-On USB Cable   | CBL-TC7X-USB1-01   | Provides power to the device and USB communication with a host computer. Use with power supply, p/n PWR-BUA5V16W0WW, sold separately.                      |
| MSR Adapter   | MSR-TC7X-SNP1-01   | Provides power and USB communication with a host computer. Use with USB-C cable, sold separately.  |
| Snap-On DEX Cable   | CBL-TC7X-DEX1-01   | Provides electronic data exchange with devices such as vending machines.   |
| <b>Audio Accessories</b>                                    |                    |  |
| Rugged Headset  | HS2100-OTH         | Rugged wired headset. Includes HS2100 Boom Module and HSX100 OTH Headband Module.  |
| Bluetooth Headset   | HS3100-OTH         | Rugged Bluetooth Headset. Includes HS3100 Boom Module and HSX100 OTH Headband Module.  |

**Table 13** Accessories (Continued)

| Accessory                               | Part Number        | Description   |
|---|--------------------|---|
| 3.5 mm Audio Adapter                    | ADP-TC7X-AUD35-01  | Snaps onto the device and provides audio to a wired headset with 3.5 mm plug.   |
| 3.5 mm Headset                          | HDST-35MM-PTVP-01  | Use for PTT and VoIP calls.   |
| 3.5 mm Quick Disconnect Adapter Cable   | ADP-35M-QDCBL1-01  | Provides connection to the 3.5 mm Headset.  |
| <b>Scanning</b>                         |                    |   |
| Trigger Handle                          | TRG-TC7X-SNP1-02   | Adds gun-style handle with a scanner trigger for comfortable and productive scanning.   |
| Trigger Handle Attach Plate with Tether | ADP-TC7X-CLHTH-10  | Trigger Handle Attach Plate with tether. Allows for installation of the Trigger Handle (10-pack). Use with charge only cradles.   |
| Trigger Handle Attach Plate             | ADP-TC7X-CLPTH1-20 | Trigger Handle Attach Plate. Allows for installation of the Trigger Handle (20-pack). Use with Ethernet and charge only cradles.  |
| <b>Carrying Solutions</b>               |                    |   |
| Soft Holster                            | SG-TC7X-HLSTR1-02  | TC7X soft holster.  |
| Rigid Holster                           | SG-TC7X-RHLSTR1-01 | TC7X rigid holster.   |
| Hand Strap                              | SG-TC7X-HSTRP2-03  | Replacement hand strap with hand strap mounting clip (3-pack).  |
| Stylus and Coiled Tether                | SG-TC7X-STYLUS-03  | TC7X stylus with coiled tether (3-pack).  |
| Screen Protector                        | SG-TC7X-SCRNTMP-01 | Provides additional protection for the screen (1-pack).   |
| <b>Power Supplies</b>                   |                    |   |
| Power Supply                            | PWR-BUA5V16W0WW    | Provides power to the device using the Snap-On USB Cable, Snap-on Serial Cable or Charging Cable Cup. Requires DC Line Cord, p/n DC-383A1-01 and country specific three wire grounded AC line cord sold separately. |
| Power Supply                            | PWR-BGA12V50W0WW   | Provides power to the 2-Slot cradles and 4-Slot Spare Battery Charger. Requires DC Line Cord, p/n CBL-DC-388A1-01 and country specific three wire grounded AC line cord sold separately.                            |

**Table 13** Accessories (Continued)

| Accessory    | Part Number       | Description   |
|--------------|-------------------|---|
| Power Supply | PWR-BGA12V108W0WW | Provides power to the 5-Slot Charge Only cradle and the 5-Slot Ethernet Cradle. Requires DC Line Cord, p/n CBL-DC-381A1-01 and country specific three wire grounded AC line cord sold separately. |
| DC Line Cord | CBL-DC-388A1-01   | Provides power from the power supply to the 2-Slot cradles and 4-Slot Spare Battery Charger.  |
| DC Line Cord | CBL-DC-381A1-01   | Provides power from the power supply to the 5-Slot Charge Only Cradle and 5-Slot Ethernet Cradle.   |

## Battery Charging

Charge the device with a battery installed or charge spare batteries.

### Main Battery Charging

The device's Charging/Notification LED indicates the status of the battery charging in the device.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

### Spare Battery Charging

The spare battery Charging LED on the cup indicates the status of the spare battery charging.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

**Table 14** Spare Battery Charging LED Indicators

| LED                 | Indication  |
|---------------------|---|
| Slow Blinking Amber | Spare battery is charging.  |
| Solid Green         | Charging complete.  |
| Fast Blinking Amber | Error in charging; check placement of spare battery.  |
| Slow Blinking Red   | Spare battery is charging and battery is at the end of useful life.                           |
| Solid Red           | Charging complete and battery is at the end of useful life.                                   |
| Fast Blinking Red   | Error in charging; check placement of spare battery and battery is at the end of useful life. |
| Off                 | No spare battery in slot; spare battery not placed correctly; cradle is not powered.          |

## Charging Temperature

Charge batteries in temperatures from 0°C to 40°C (32°F to 104°F). The device or cradle always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37°C (+98°F)) the device or cradle may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device and cradle indicates when charging is disabled due to abnormal temperatures via its LED.

## 2-Slot Charge Only Cradle




**CAUTION:** Ensure that you follow the guidelines for battery safety described in [Battery Safety Guidelines on page 102](#).

The 2-Slot Charge Only Cradle:


- Provides 5 VDC power for operating the device.
- Charges the device's battery.
- Charges a spare battery.

**Figure 30** 2-Slot Charge Only Cradle

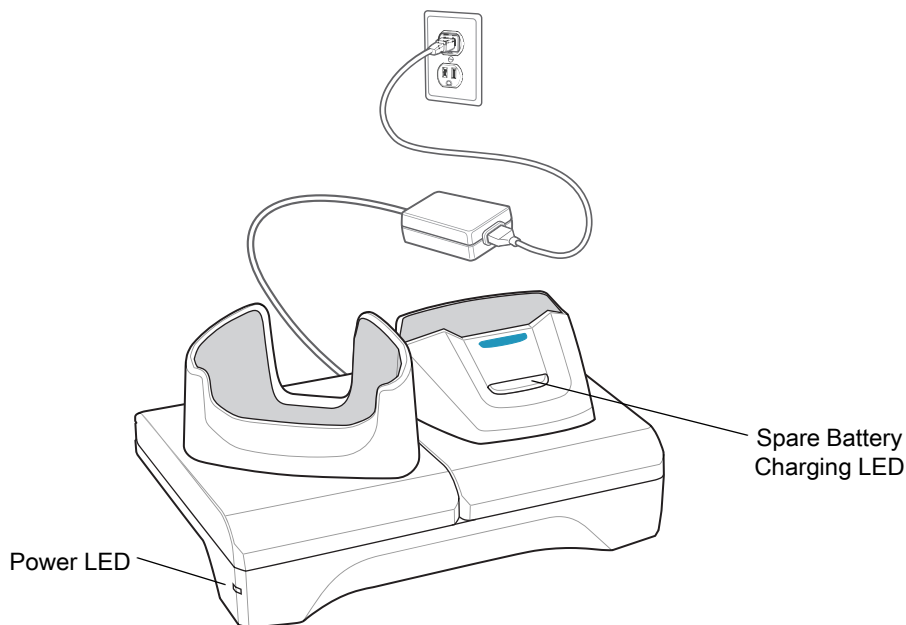

## 2-Slot Charge Only Cradle Setup


The 2-Slot Charge Only Cradle provides charging for one device and one spare battery.

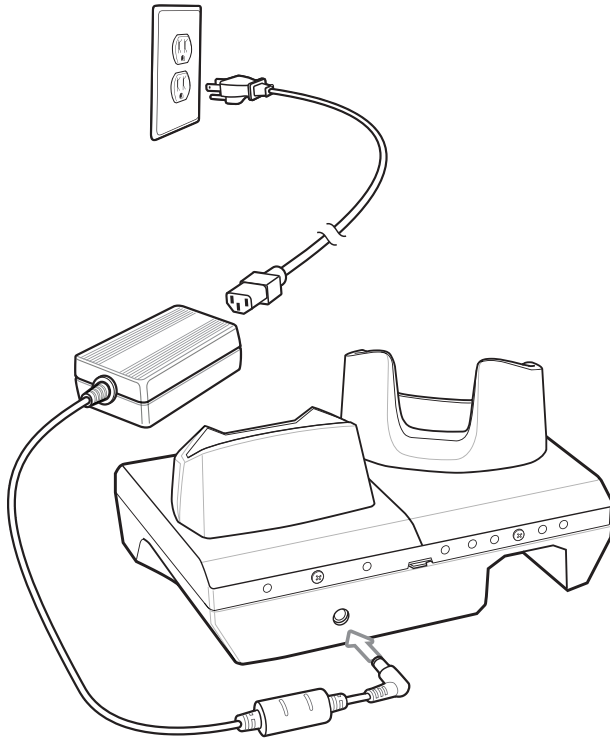

## Charging the Device with the 2-Slot Charge Only Cradle

To charge a device:

1. Insert the device into the slot to begin charging.

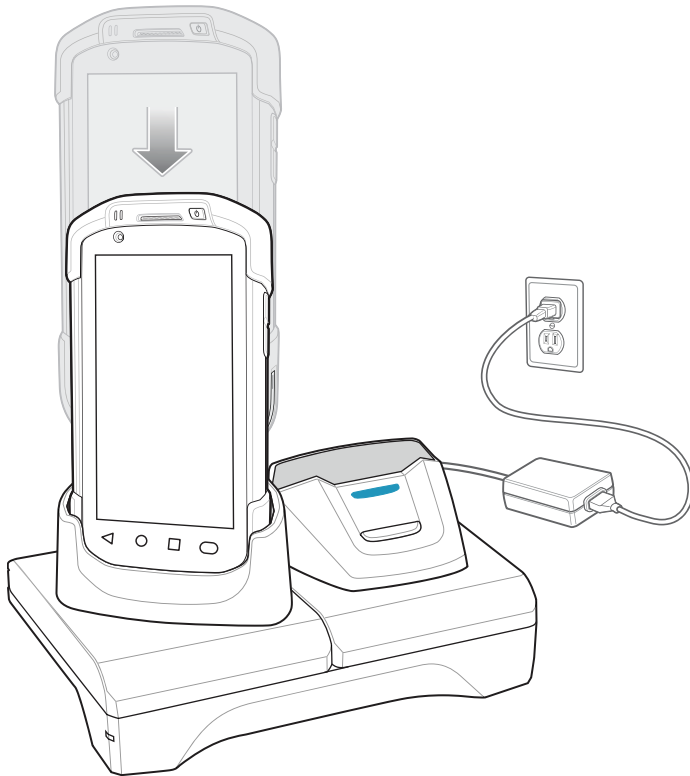


2. Ensure the device is seated properly.

## Charging the Spare Battery with the 2-Slot Charge Only Cradle

To charge a spare battery:

1. Insert the battery into the right slot to begin charging.

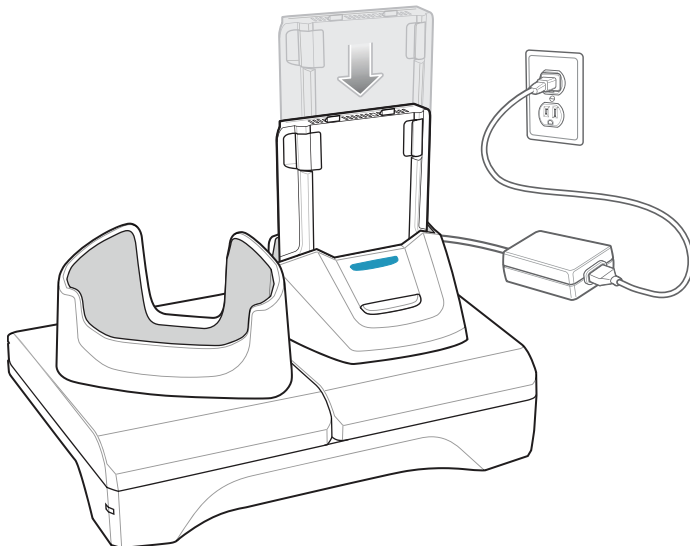

2. Ensure the battery is seated properly.



## 2-Slot USB-Ethernet Cradle



**CAUTION:** Ensure that you follow the guidelines for battery safety described in [Battery Safety Guidelines](#) on page 102.


The 2-Slot USB/Ethernet Cradle:

- Provides 5.0 VDC power for operating the device.
- Charges the device's battery.
- Charges a spare battery.
- Connects the device to an Ethernet network.
- Provides communication to a host computer using a USB cable.




**NOTE:** Remove all attachments on the device, except the hand strap, before place onto the cradle.

**Figure 31** 2-Slot USB/Ethernet Cradle

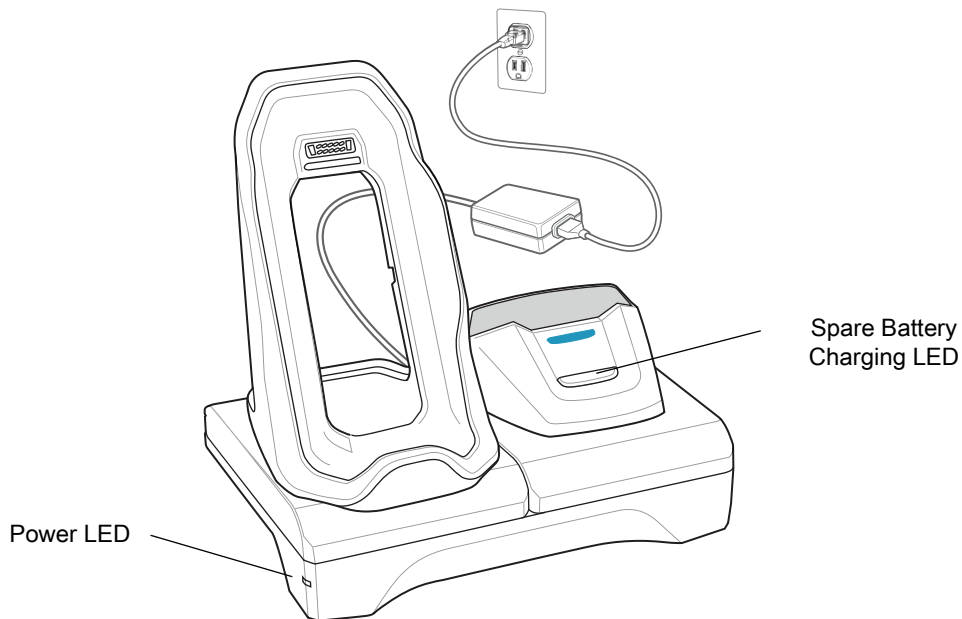

## 2-Slot USB-Ethernet Cradle Setup


The 2-Slot USB/Ethernet Cradle provides USB and Ethernet communication for a device. Charging is also provided for the device and one spare battery.

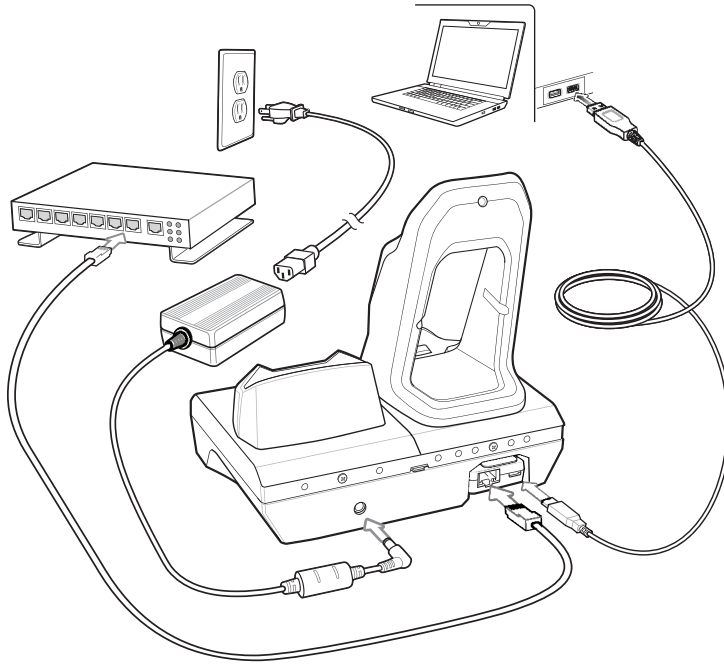

## Charging the Device with the 2-Slot USB-Ethernet Cradle

To charge the device:


1. Place the bottom of the device into the base.

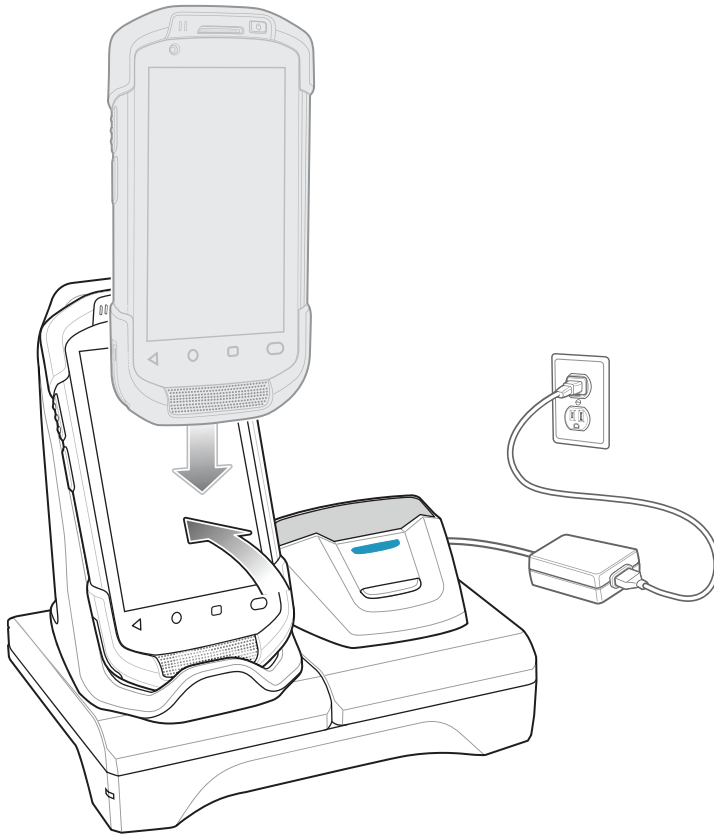

2. Rotate the top of the device until the connector on the back of the device mates with the connector on the cradle.
3. Ensure the device is connected properly. The charging Charging/Notification LED on the device begins blinking amber indicating that the device is charging.

### Charging the Spare Battery with the 2-Slot USB-Ethernet Cradle

1. Insert the battery into the right slot to begin charging.

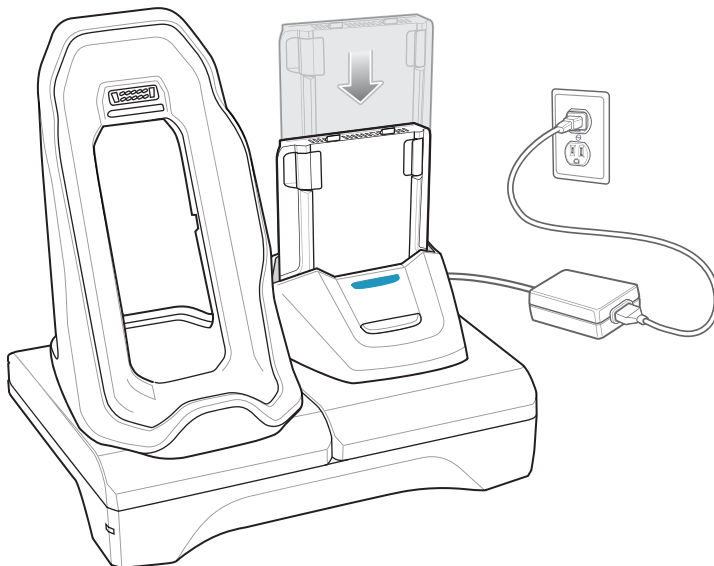


2. Ensure the battery is seated properly.

## USB and Ethernet Communication


The 2-Slot USB/Ethernet Cradle provides both Ethernet communication with a network and USB communication with a host computer. Prior to using the cradle for Ethernet or USB communication. Ensure that the switch on the USB/Ethernet module is set properly.

Turn the cradle over to view the module.

**Figure 32** 2-Slot USB/Ethernet Cradle Module Switch

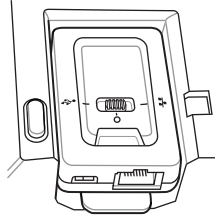

For Ethernet communication, slide the switch to the  position.


For USB communication, slide the switch to the  position.

Place the switch in the center position  to disable communications.

## Ethernet LED Indicators

There are two LEDs on the USB/Ethernet Module RJ-45 connector. The green LED lights to indicate that the transfer rate is 100 Mbps. When the LED is not lit the transfer rate is 10 Mbps. The yellow LED blinks to indicate activity, or stays lit to indicate that a link is established. When it is not lit it indicates that there is no link.

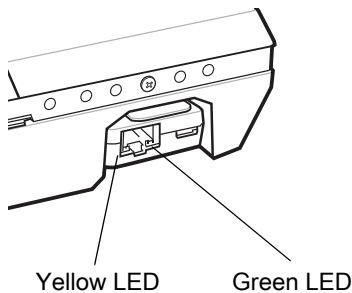

**Figure 33** LED Indicators




**Table 15** USB/Ethernet Module LED Data Rate Indicators

| Data Rate | Yellow LED | Green LED |
|-----------|------------|-----------|
| 100 Mbps  | On/Blink   | On        |
| 10 Mbps   | On/Blink   | Off       |

## Establishing Ethernet Connection

1. Swipe down from the Status bar to open the Quick Access panel and then touch .
2. Touch  **Ethernet**.
3. Slide the Ethernet switch to the **ON** position.

4. Insert the device into a slot.  
The  icon appears in the Status bar.
5. Touch **Eth0** to view Ethernet connection details.


## Ethernet Settings

The following settings can be configured when using Ethernet communication:

- Proxy Settings
- Static IP.


## Configuring Ethernet Proxy Settings

The device includes Ethernet cradle drivers. After inserting the device, configure the Ethernet connection:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch **Network & Internet**.
3. Touch **Ethernet**.
4. Place the device into the Ethernet cradle slot.
5. Slide the switch to the **ON** position.
6. Touch and hold **Eth0** until the menu appears.
7. Touch **Modify Proxy**.
8. Touch the **Proxy** drop-down list and select **Manual**.
9. In the **Proxy hostname** field, enter the proxy server address.
10. In the **Proxy port** field, enter the proxy server port number.




**NOTE:** When entering proxy addresses in the Bypass proxy for field, do not use spaces or carriage returns between addresses.

11. In the **Bypass proxy for** text box, enter addresses for web sites that do not require to go through the proxy server. Use the separator “[ ]” between addresses.
12. Touch **MODIFY**.
13. Touch .

## Configuring Ethernet Static IP Address

The device includes Ethernet cradle drivers. After inserting the device, configure the Ethernet connection:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch **Network & Internet**.
3. Touch **Ethernet**.
4. Place the device into the Ethernet cradle slot.
5. Slide the switch to the **ON** position.
6. Touch **Eth0**.
7. Touch **Disconnect**.
8. Touch **Eth0**.

9. Touch and hold the IP settings drop-down list and select **Static**.
10. In the **IP** address field, enter the proxy server address.
11. If required, in the **Gateway** field, enter a gateway address for the device.
12. If required, in the **Netmask** field, enter the network mask address
13. If required, in the **DNS address** fields, enter a Domain Name System (DNS) addresses.
14. Touch **CONNECT**.
15. Touch .

## 5-Slot Charge Only Cradle




**CAUTION:** Ensure that you follow the guidelines for battery safety described in [Battery Safety Guidelines](#) on page 102.

The 5-Slot Charge Only Cradle:


- Provides 5 VDC power for operating the device.
- Simultaneously charges up to five devices and up to four devices and one 4-Slot Battery Charger using the Battery Charger Adapter. See the device Integrator Guide for Android 8.1 Oreo for information on installing the 4-Slot Battery Charger onto the cradle.
- Consists of a cradle base and cups that can be configured for various charging requirements.

**Figure 34** 5-Slot Charge Only Cradle

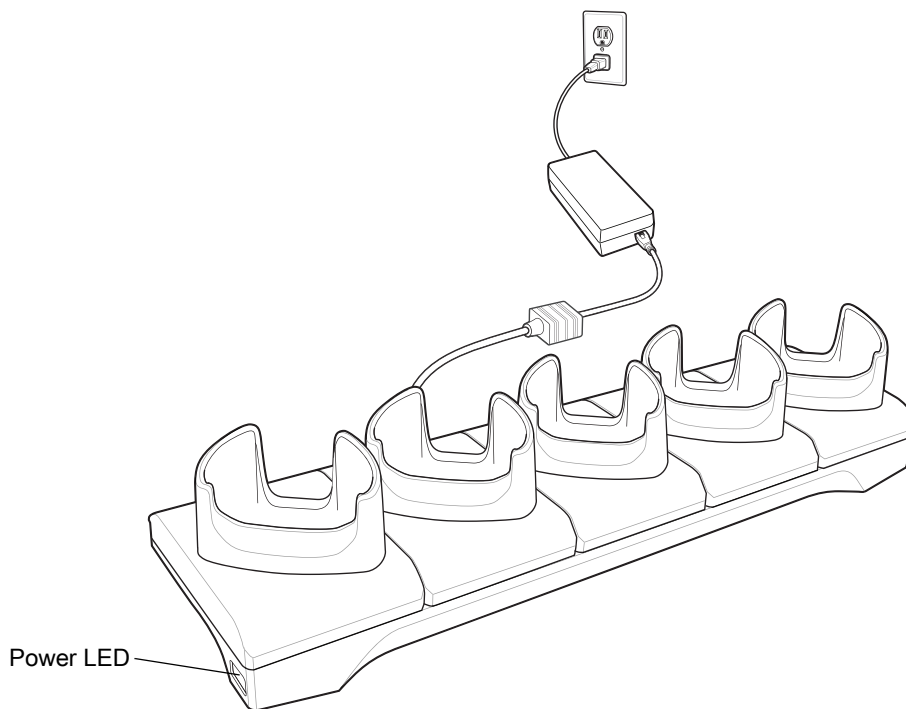

## 5-Slot Charge Only Cradle Setup



The 5-Slot Charge Only Cradle provides charging for up to five devices.

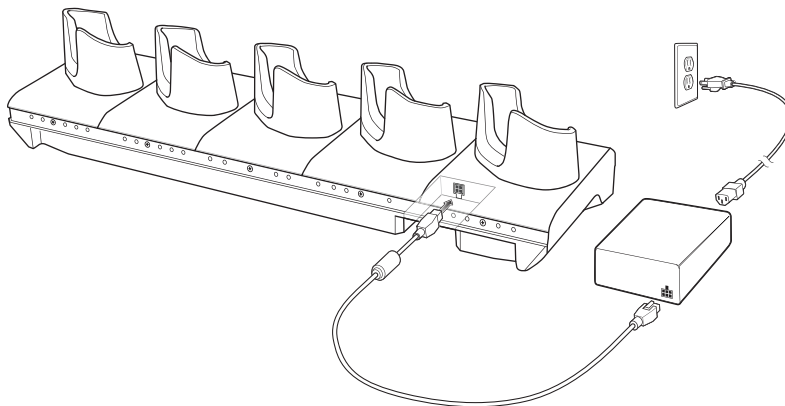

## Charging the Device with the 5-Slot Charge Only Cradle

To charge a device:

1. Insert the device into a slot to begin charging.

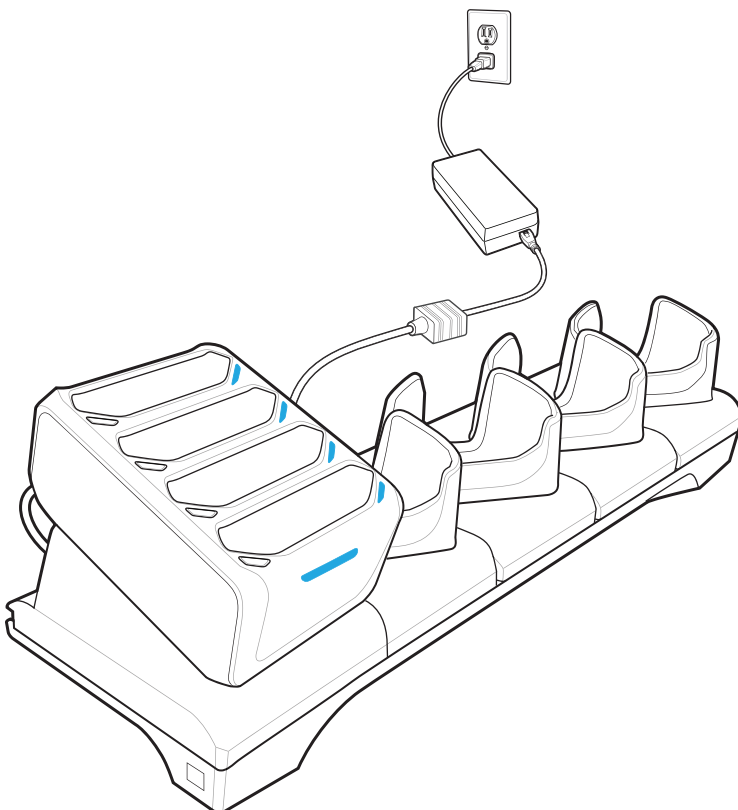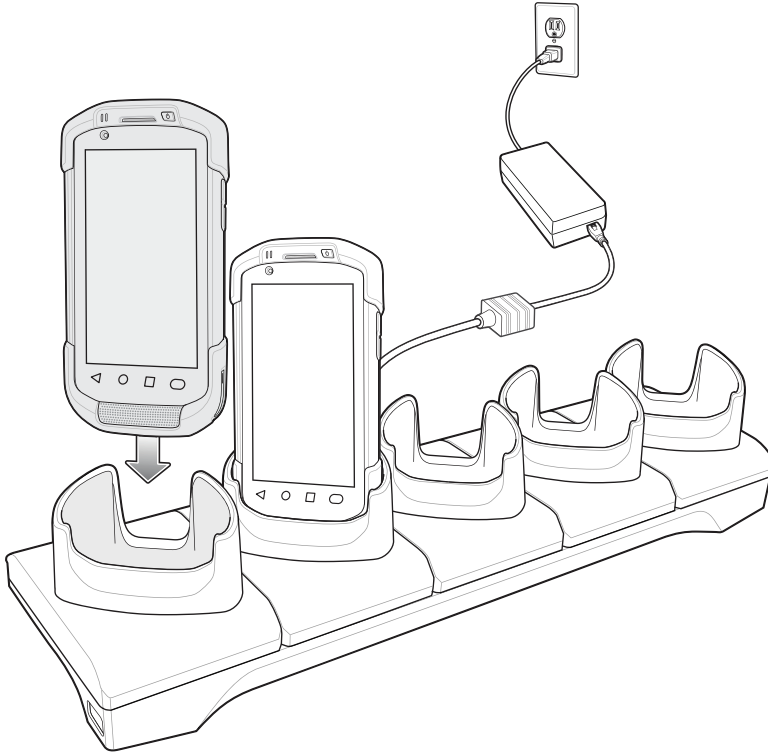

2. Ensure the device is seated properly.




## Installing the Four Slot Battery Charger

Install the Four Slot Battery charger onto a 5-Slot Charge Only Cradle base. This provides a total for four device charging slots and four battery charging slots.




**NOTE:** The Battery Charger must be installed in the first slot only.

1. Remove power from the cradle.

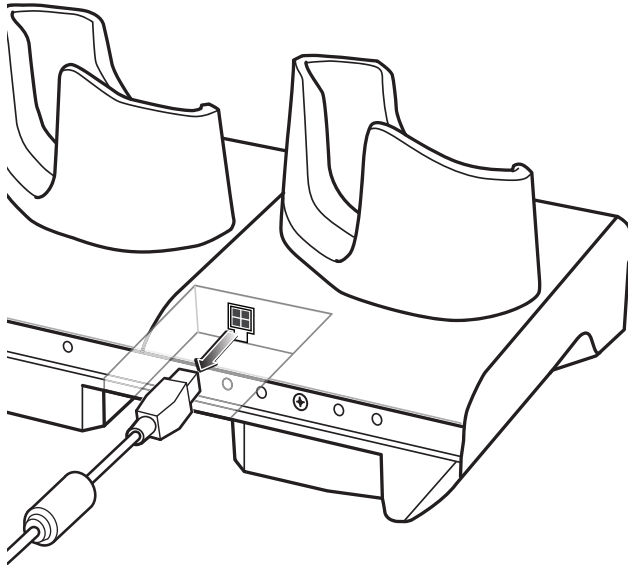


2. Using a Phillips screwdriver, remove the screw securing the cup to the cradle base.

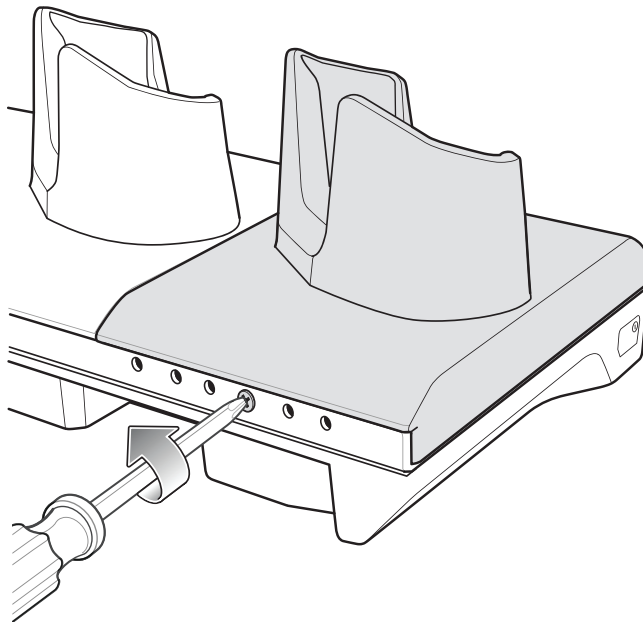


3. Slide the cup to the front of the cradle.

**Figure 35** Remove Cup

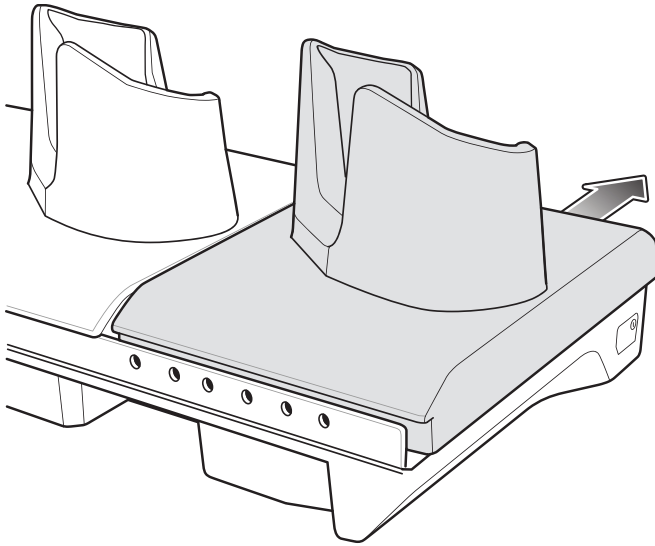


4. Carefully lift the cup up to expose the cup power cable.
5. Disconnect the cup power cable.

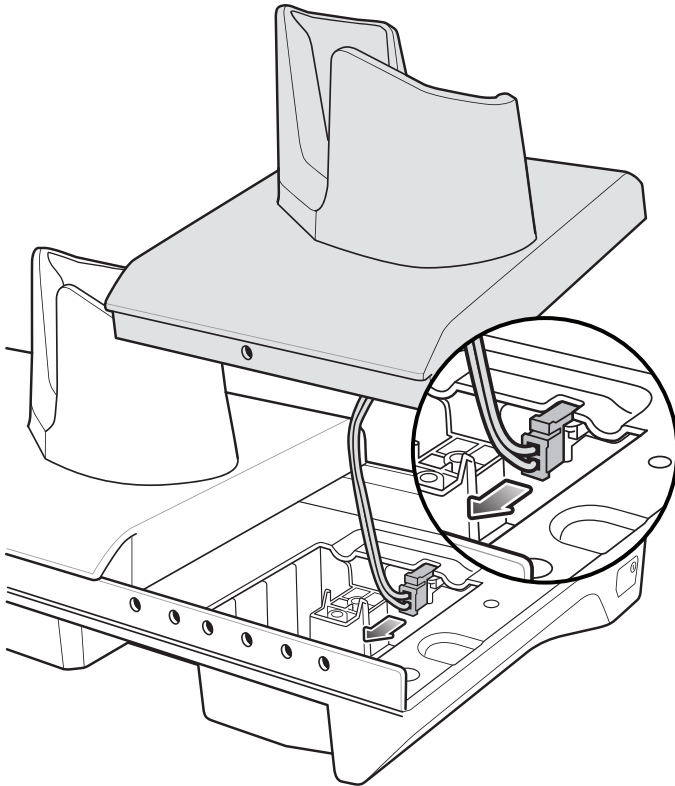


**NOTE:** Place power cable into adapter to avoid pinching cable.


6. Connect the Battery Adapter power cable to the connector on the cradle.

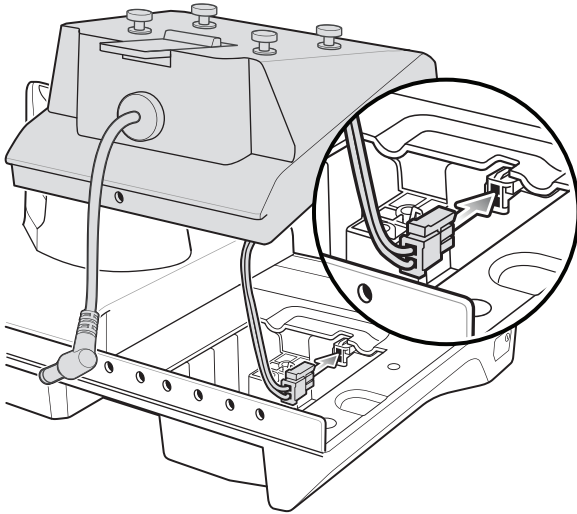


7. Place adapter onto cradle base and slide toward rear of cradle.

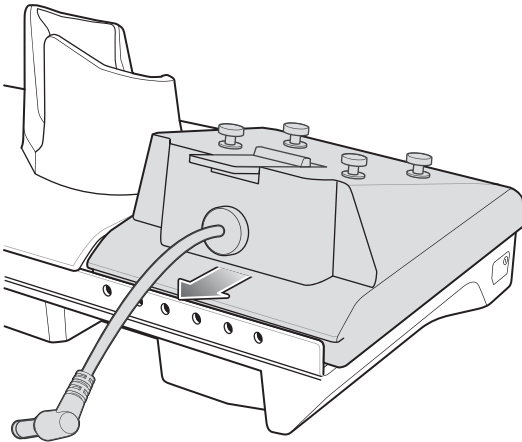

8. Using a Phillips screwdriver, secure adapter to cradle base with screw.

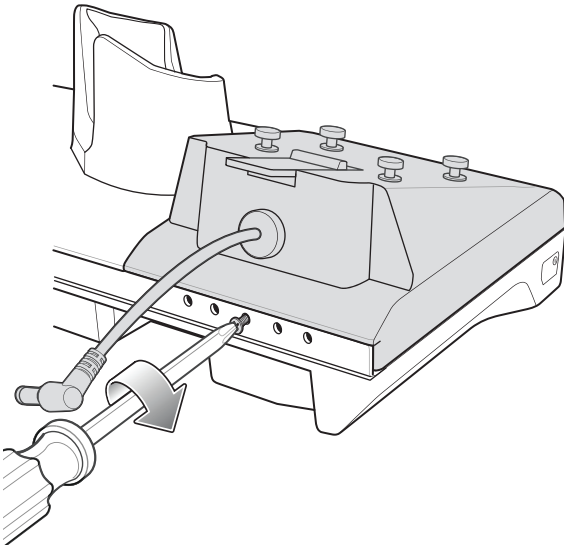


9. Align mounting holes on the bottom of the Four Slot Battery Charger with the stubs on the Battery Adapter.

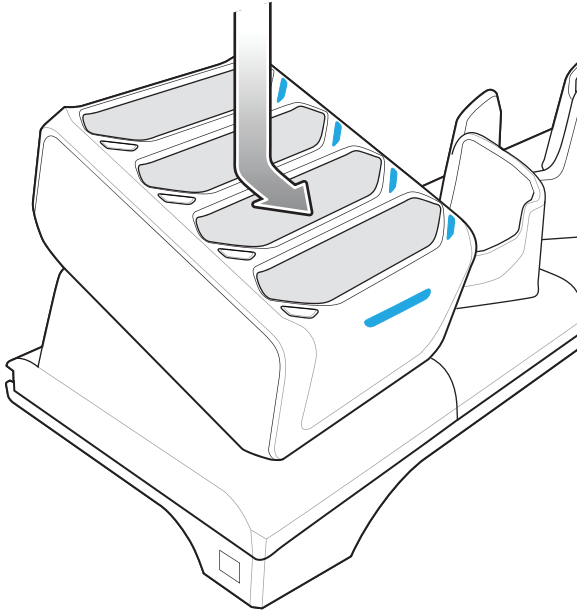

10. Slide the Four Slot battery Charger down toward the front of the cradle.

11. Connect the output power plug into the power port on the Four Slot Battery Charger.

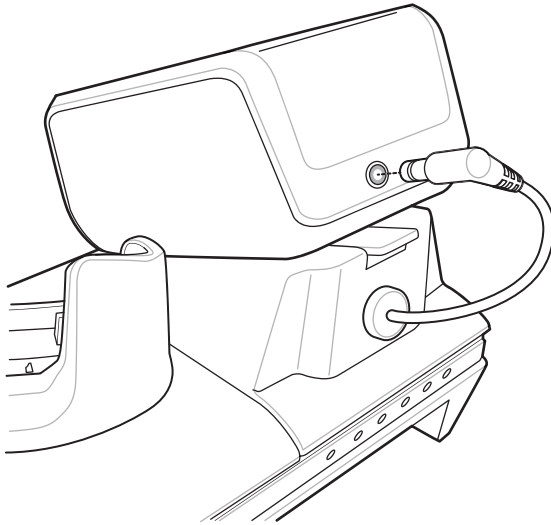


## Removing the Four Slot Battery Charger

If necessary, you can remove the Four Slot Battery Charger from the 5-Slot Charge Only Cradle base.

1. Disconnect the output power plug from the 4-Slot Battery Charger.

2. At the back of the cup, press down on the release latch.

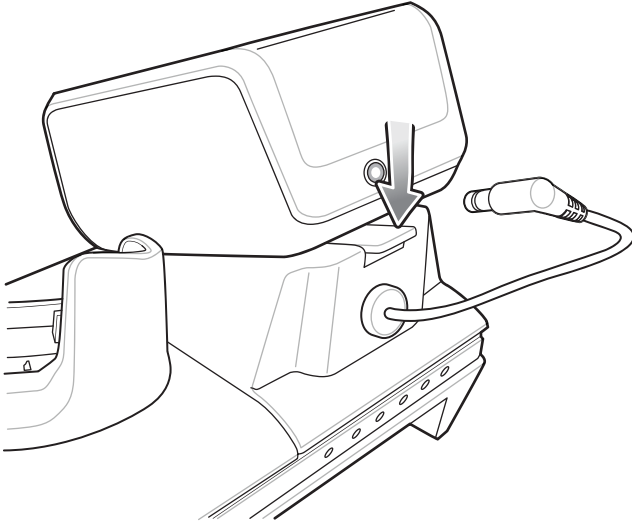

3. Slide the 4-Slot Battery Charger toward the front of the cradle.
4. Lift the 4-Slot off the cradle cup.

## 4-Slot Charge Only Cradle with Battery Charger




**CAUTION:** Ensure that you follow the guidelines for battery safety described in [Battery Safety Guidelines](#) on page 102.

The 4-Slot Charge Only Cradle with Battery Charger:


- Provides 5 VDC power for operating the device.
- Simultaneously charges up to four devices and up to four spare batteries.

**Figure 36** 4-Slot Charge Only Cradle with Battery Charger

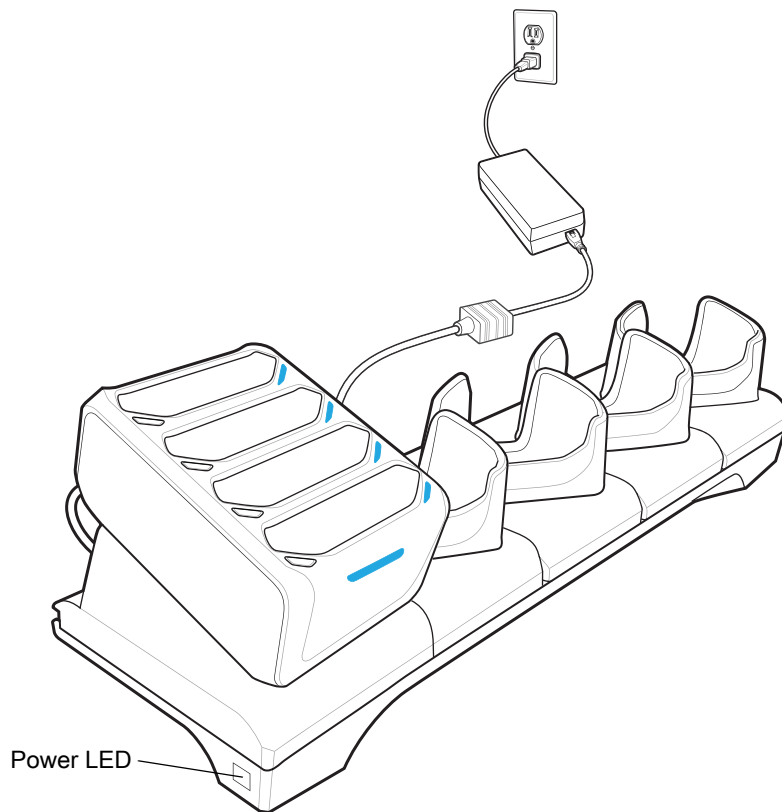


## 4-Slot Charge Only Cradle with Battery Charger Setup

**Figure 37** Connect Battery Charger Output Power Plug

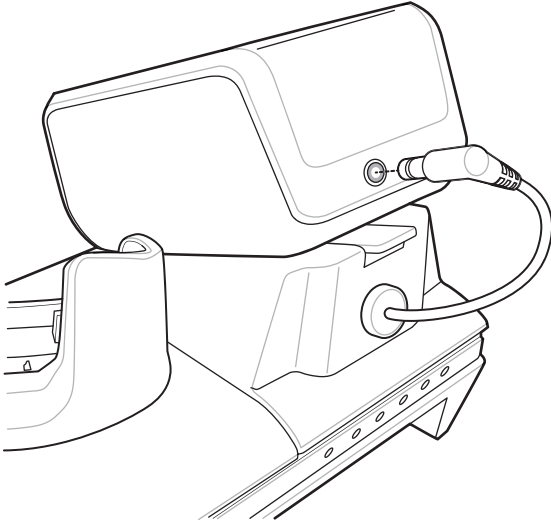


**Figure 38** Connect Charge Only Cradle Power

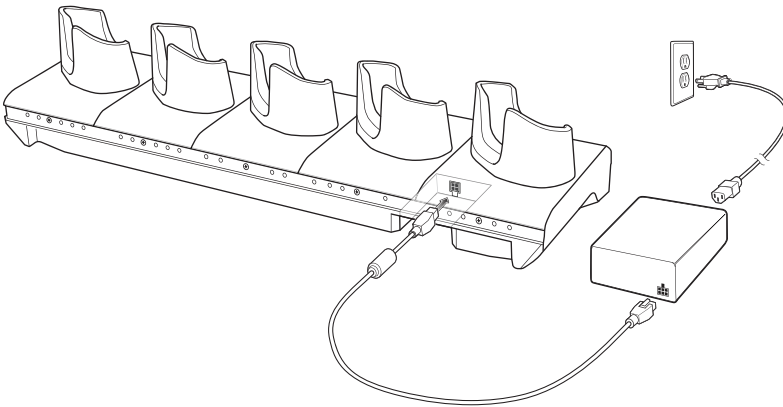

## Charging the Device with a 4-Slot Charge Only Cradle with Battery Charger

Use the 4-Slot Charge Only Cradle with Battery Charger to charge up to four devices and four spare batteries at the same time.

1. Insert the device into a slot to begin charging.

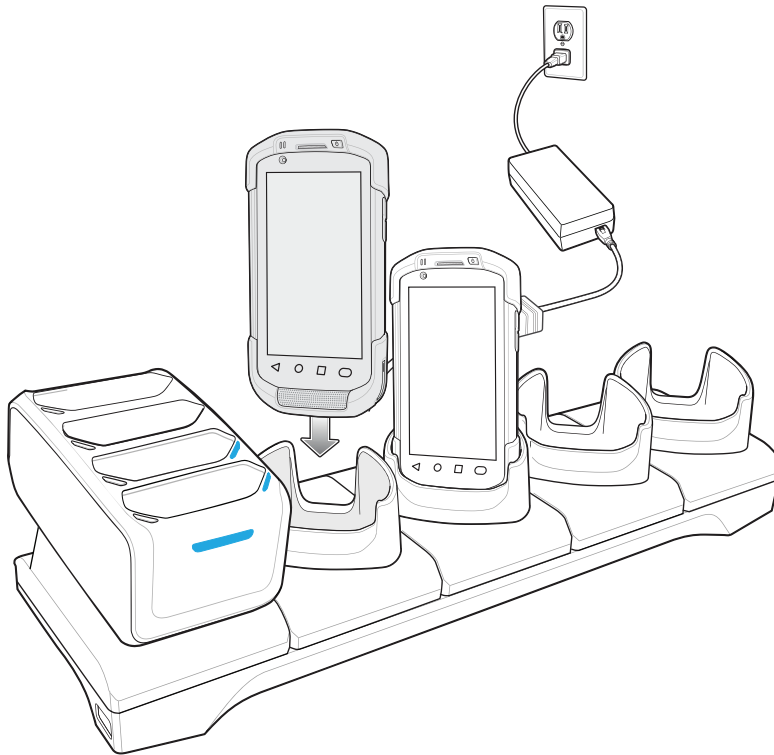

2. Ensure the device is seated properly.



**NOTE:** See [Installing the Four Slot Battery Charger on page 40](#) for information on installing the 4-Slot Battery Charger onto the cradle.


### Charging the Batteries with a 4-Slot Charge Only Cradle with Battery Charger

Use the 4-Slot Charge Only Cradle with Battery Charger to charge up to four devices and four spare batteries at the same time.

1. Connect the charger to a power source.



2. Insert the battery into a battery charging well and gently press down on the battery to ensure proper contact.

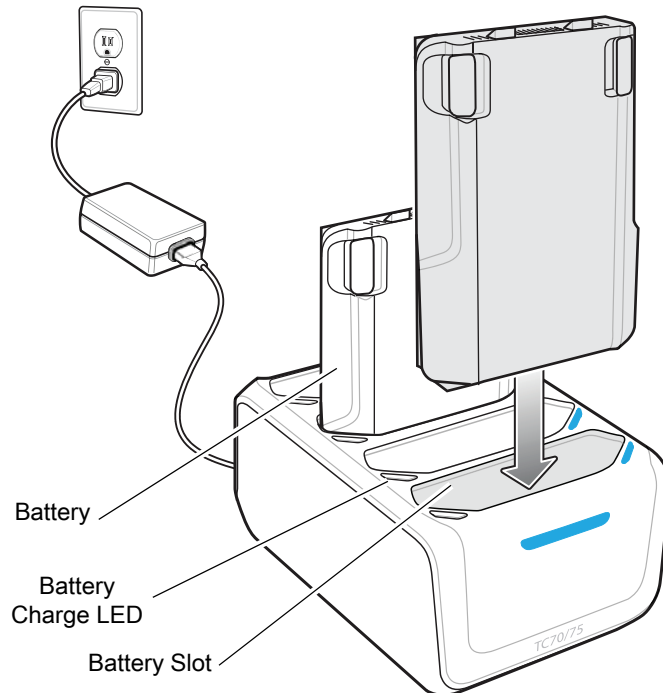

## 5-Slot Ethernet Cradle




**CAUTION:** Ensure that you follow the guidelines for battery safety described in [Battery Safety Guidelines](#) on page 102.

The 5-Slot Ethernet Cradle:


- Provides 5.0 VDC power for operating the device.
- Connects up to five devices to an Ethernet network.
- Simultaneously charges up to five devices and up to four devices and on 4-Slot Battery Charger using the Battery Charger Adapter.

**Figure 39** 5-Slot Ethernet Cradle

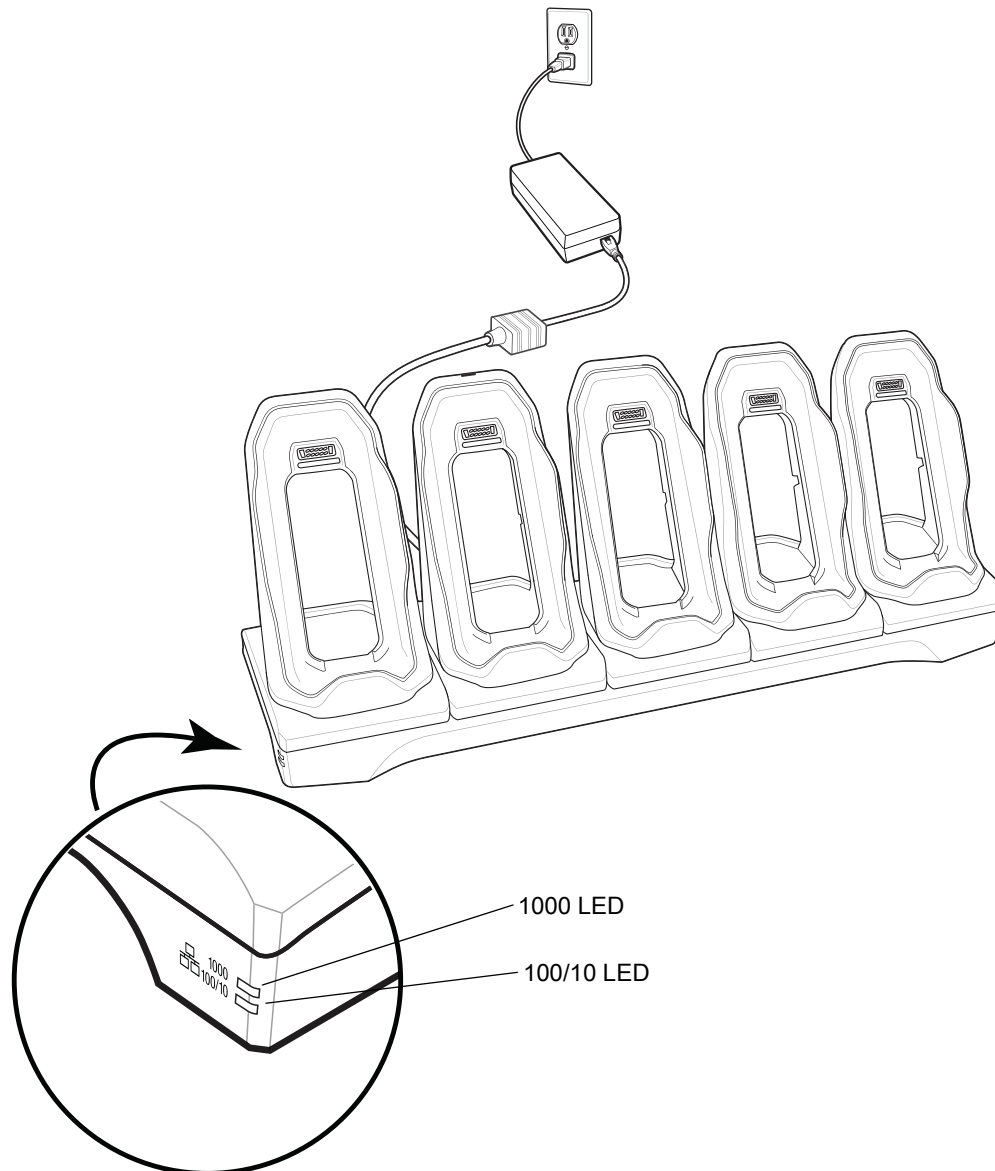

## 5-Slot Ethernet Cradle Setup

Connect the 5-Slot Ethernet cradle to a power source.

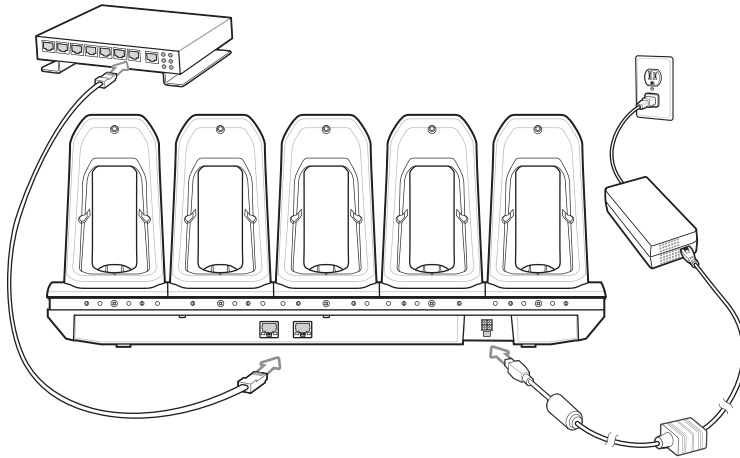


## Daisy-chaining Ethernet Cradles

Daisy-chain up to ten 5-Slot Ethernet cradles to connect several cradles to an Ethernet network. Use either a straight or crossover cable. Daisy-chaining should not be attempted when the main Ethernet connection to the first cradle is 10 Mbps as throughput issues will almost certainly result.

To daisy-chain 5-Slot Ethernet cradles:

1. Connect power to each 5-Slot Ethernet cradle.
2. Connect an Ethernet cable to the one of the ports on the back of the first cradle and to the Ethernet switch.

3. Connect the other end of the Ethernet cable to one of the ports of the back of the second 5-Slot Ethernet cradle.

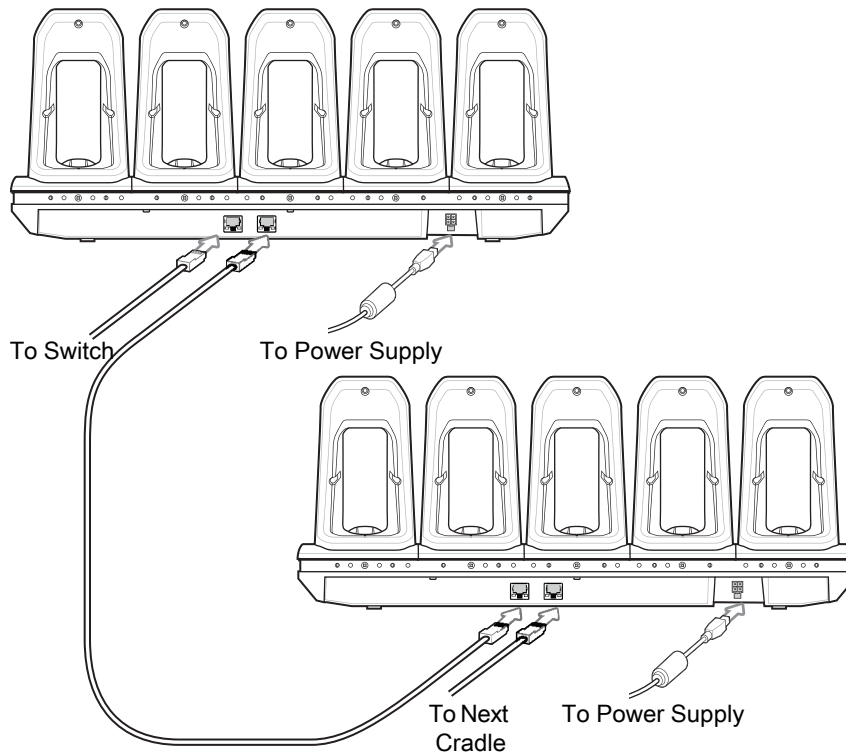


4. Connect additional cradles as described in step 2 and 3.


## Charging the Device with a 5-Slot Ethernet Cradle

Charge up to five Ethernet devices.

1. Insert the device into a slot to begin charging.

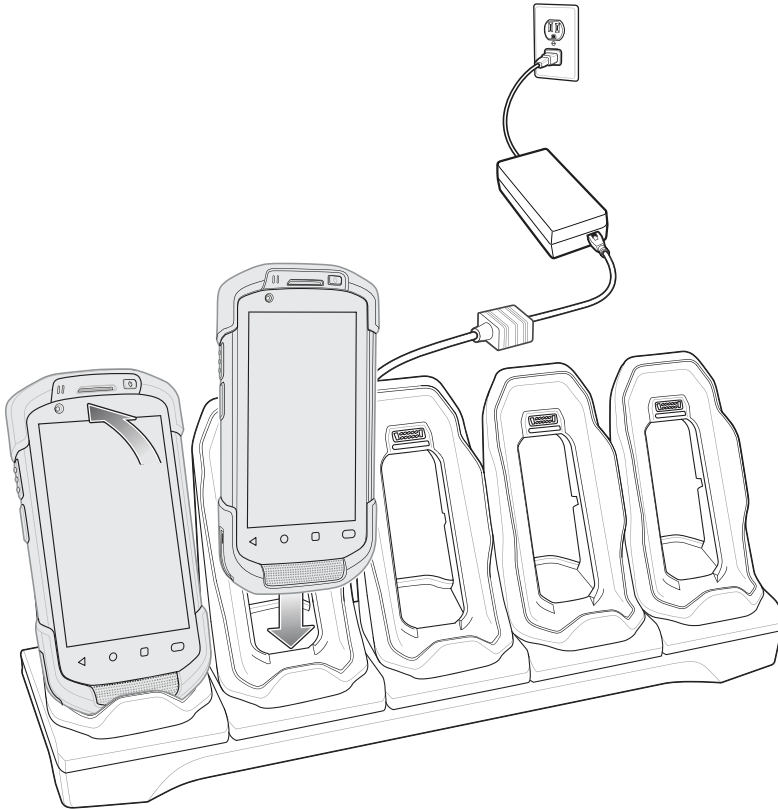

2. Ensure the device is seated properly.

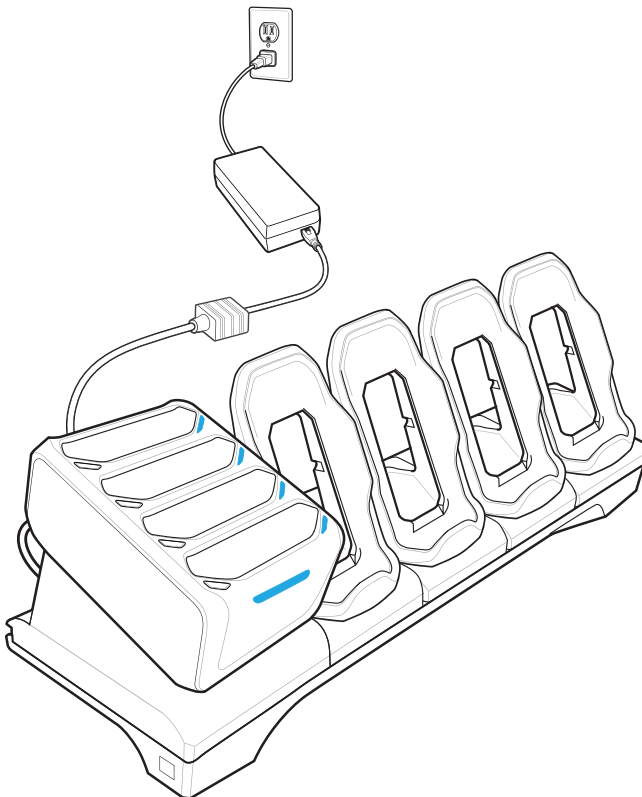


## Installing the Four Slot Battery Charger




**NOTE:** The Battery Charger must be installed in the first slot only.


1. Remove power from the cradle.

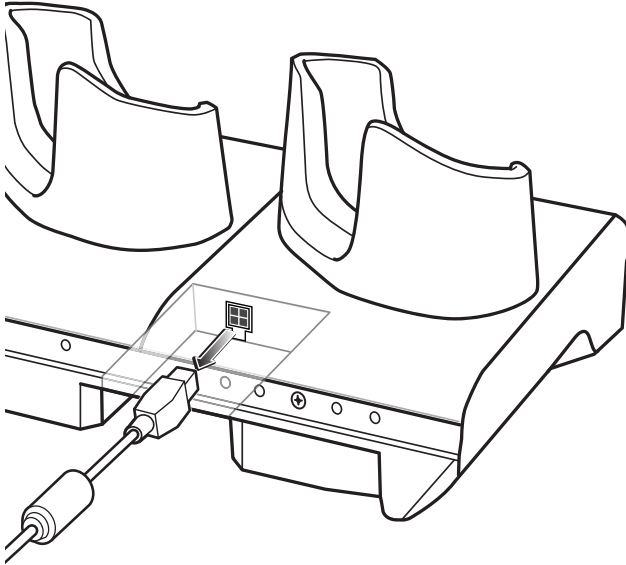


2. Using a Phillips screwdriver, remove the screw securing the cup to the cradle base.

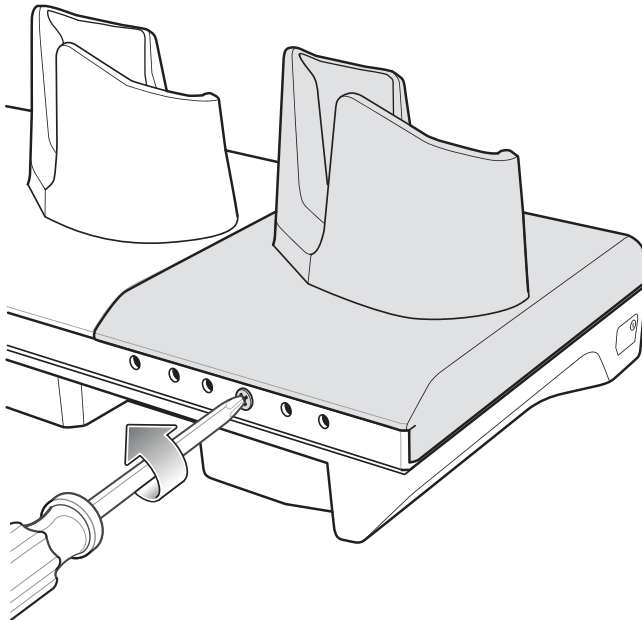

3. Slide the cup to the front of the cradle.

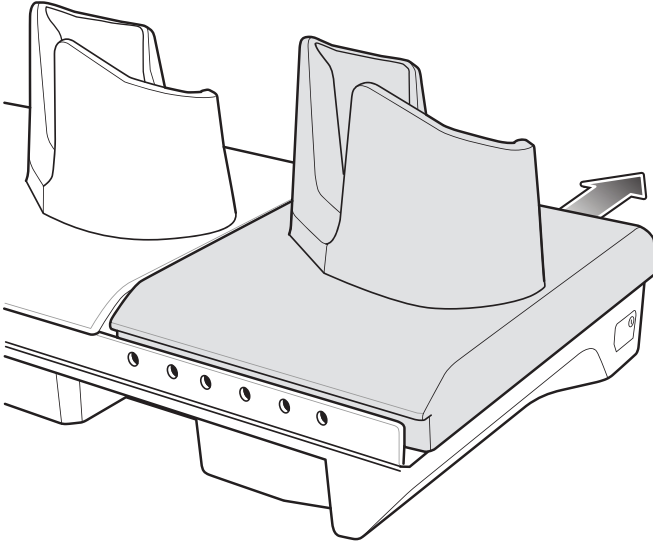


4. Carefully lift the cup up to expose the cup power cable.
5. Disconnect the cup power cable.

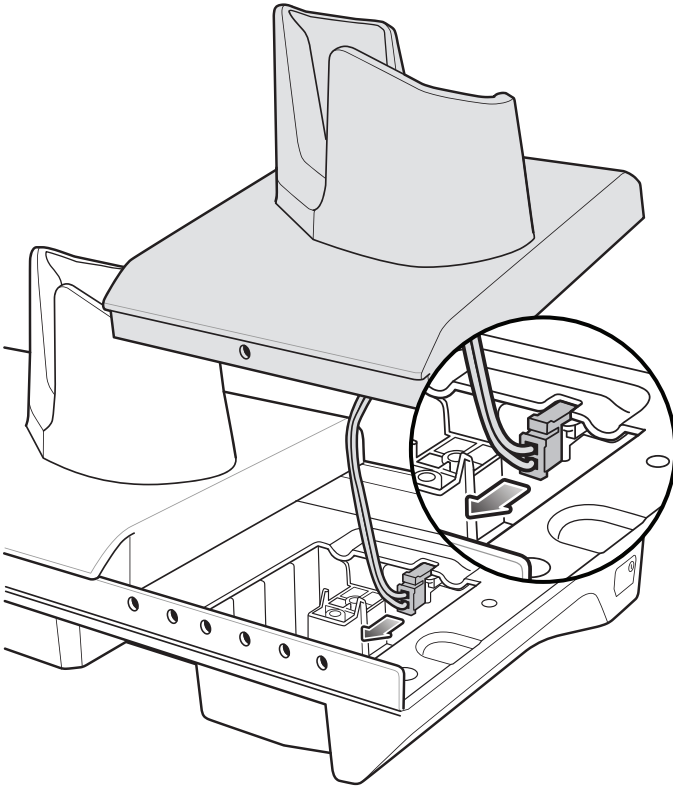


**NOTE:** Place power cable into adapter to avoid pinching cable.


6. Connect the Battery Adapter power cable to the connector on the cradle.

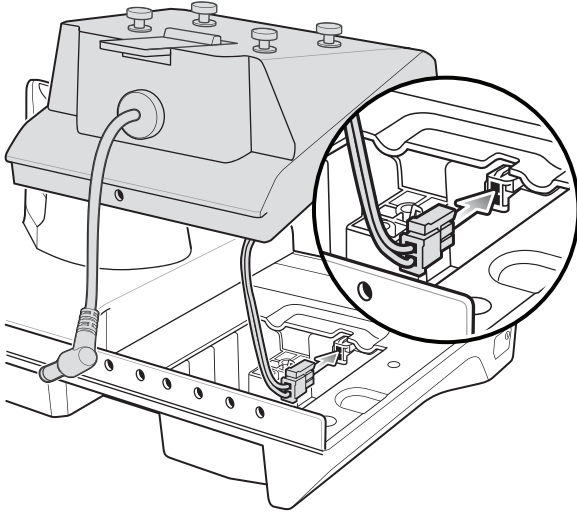

7. Place adapter onto cradle base and slide toward rear of cradle.

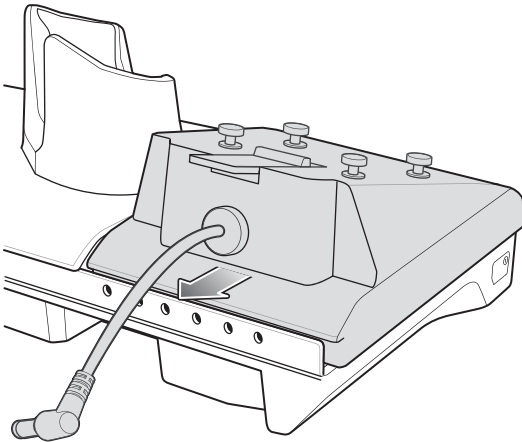


8. Using a Phillips screwdriver, secure adapter to cradle base with screw.

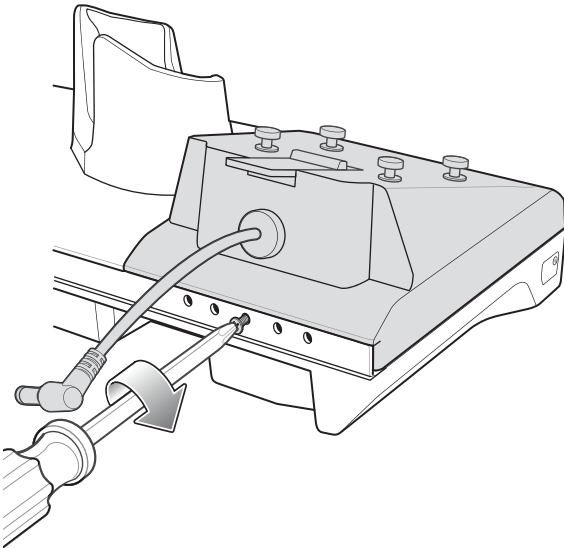




9. Align mounting holes on the bottom of the Four Slot Battery Charger with the stubs on the Battery Adapter.

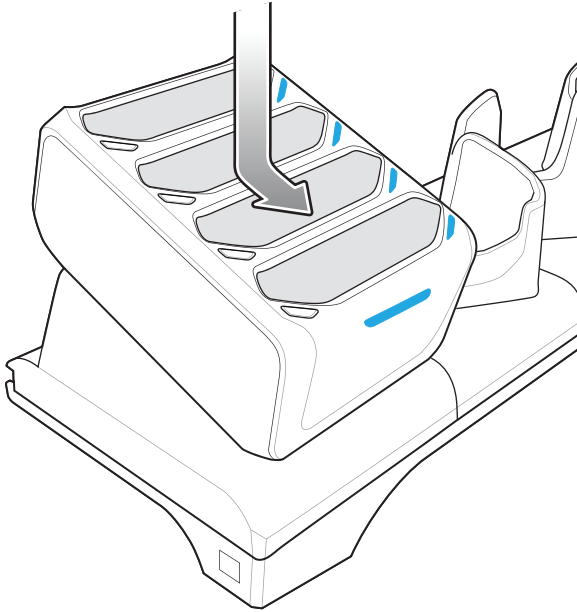


10. Slide the Four Slot battery Charger down toward the front of the cradle.
11. Connect the output power plug into the power port on the Four Slot Battery Charger.

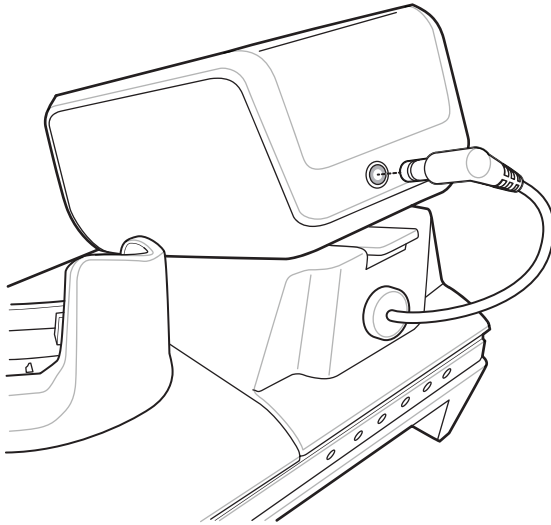

### Removing the Four Slot Battery Charger

1. Disconnect the output power plug from the 4-Slot Battery Charger.

2. At the back of the cup, press down on the release latch.

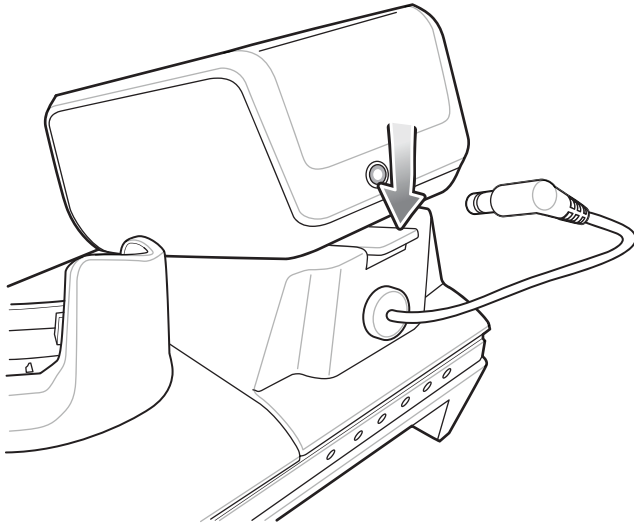

3. Slide the 4-Slot Battery Charger toward the front of the cradle.
4. Lift the 4-Slot off the cradle cup.

## Ethernet Communication


### Ethernet LED Indicators

There are two green LEDs on the side of the cradle. These green LEDs light and blink to indicate the data transfer rate.

**Table 16** LED Data Rate Indicators

| Data Rate | 1000 LED | 100/10 LED |
|-----------|----------|------------|
| 1 Gbps    | On/Blink | Off        |
| 100 Mbps  | Off      | On/Blink   |
| 10 Mbps   | Off      | On/Blink   |

### Establishing Ethernet Connection

1. Go to **Settings**.
2. Touch **Network & internet > Ethernet**.
3. Slide the Ethernet switch to the **ON** position.
4. Insert the device into a slot.  
The  icon appears in the Status bar.
5. Touch **Eth0** to view Ethernet connection details.


### Ethernet Settings

The following settings can be configured when using Ethernet communication:

- Proxy Settings
- Static IP.

## Configuring Ethernet Proxy Settings

The device includes Ethernet cradle drivers. After inserting the device, configure the Ethernet connection:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch **Network & internet > Ethernet**.
3. Place the device into the Ethernet cradle slot.
4. Slide the switch to the **ON** position.
5. Touch and hold **Eth0** until the menu appears.
6. Touch **Modify Proxy**.
7. Touch the **Proxy** drop-down list and select **Manual**.
8. In the **Proxy hostname** field, enter the proxy server address.
9. In the **Proxy port** field, enter the proxy server port number.




**NOTE:** When entering proxy addresses in the Bypass proxy for field, do not use spaces or carriage returns between addresses.

10. In the **Bypass proxy for** text box, enter addresses for web sites that do not require to go through the proxy server. Use the separator “|” between addresses.
11. Touch **MODIFY**.
12. Touch .

## Configuring Ethernet Static IP Address

The device includes Ethernet cradle drivers. After inserting the device, configure the Ethernet connection:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch **Network & internet > Ethernet**.
3. Place the device into the Ethernet cradle slot.
4. Slide the switch to the **ON** position.
5. Touch **Eth0**.
6. Touch **Disconnect**.
7. Touch **Eth0**.
8. Touch and hold the IP settings drop-down list and select **Static**.
9. In the **IP** address field, enter the proxy server address.
10. If required, in the **Gateway** field, enter a gateway address for the device.
11. If required, in the **Netmask** field, enter the network mask address
12. If required, in the **DNS address** fields, enter a Domain Name System (DNS) addresses.
13. Touch **CONNECT**.
14. Touch .

## 4-Slot Battery Charger




**CAUTION:** Ensure that you follow the guidelines for battery safety described in [Battery Safety Guidelines](#) on page 102.

This section describes how to use the 4-Slot Battery Charger to charge up to four device batteries.

### 4-Slot Battery Charger Setup

**Figure 40** Four Slot Battery Charger Power Setup

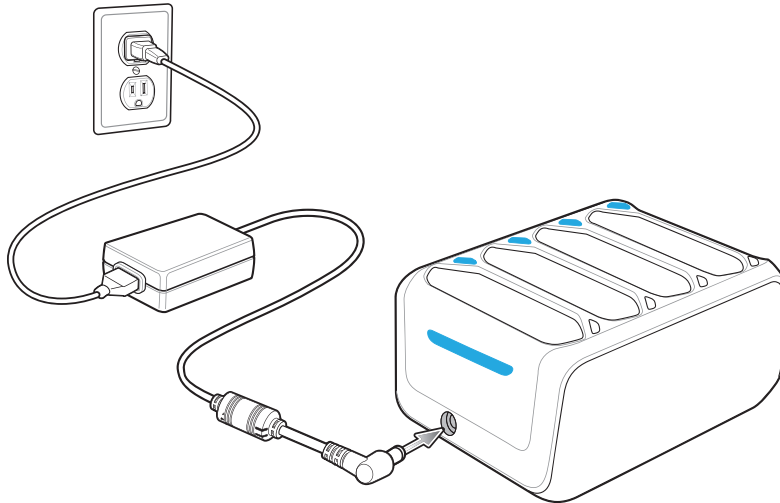


### Charging Spare Batteries in the 4-Slot Battery Charger

Charge up to four spare batteries.

1. Connect the charger to a power source.

2. Insert the battery into a battery charging well and gently press down on the battery to ensure proper contact.

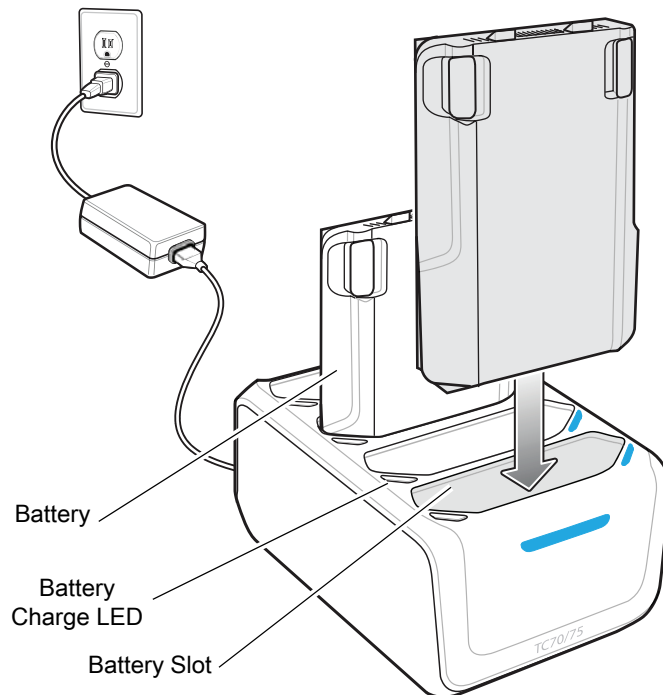


### 3.5 mm Audio Adapter

The 3.5 mm Audio Adapter snaps onto the back of the device and removes easily when not in use. When attached to the device the 3.5 mm Audio Adapter allows a user to connect a wired headset to the device.


## Connecting a Headset to the 3.5 mm Audio Adapter

1. Connect the Quick Disconnect connect of the headset to the Quick Disconnect connector of the 3.5 mm Quick Disconnect Adapter Cable.

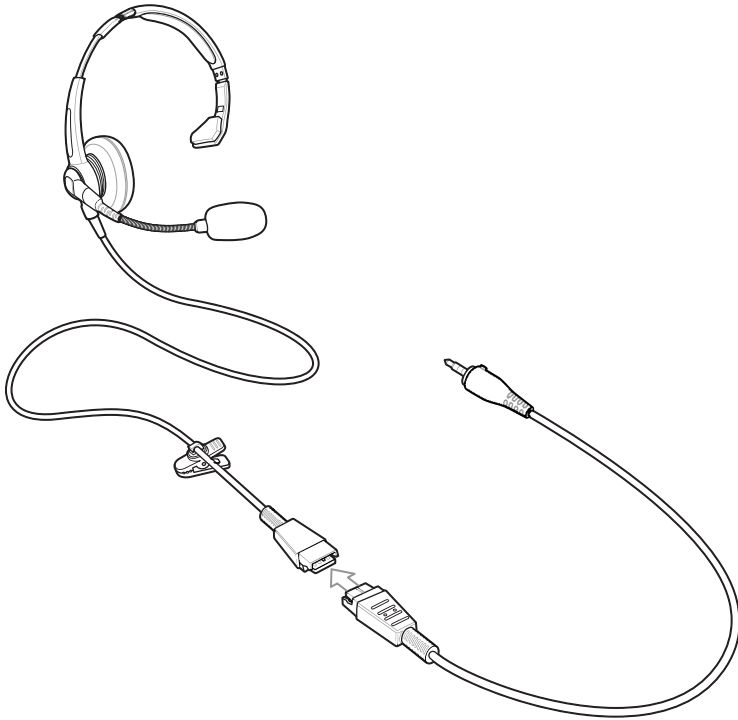


2. Connect the audio jack of the 3.5 mm Quick Disconnect Adapter Cable to the 3.5 mm Audio Adapter.

**Figure 41** Connect Adapter Cable to Audio Adapter

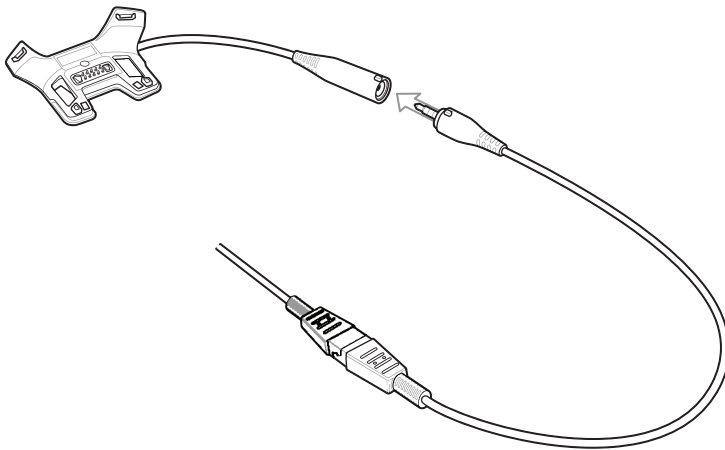

## Attaching the 3.5 mm Audio Adapter

1. Align the top mounting points on the 3.5 mm Audio Adapter with the mounting slots on the device.

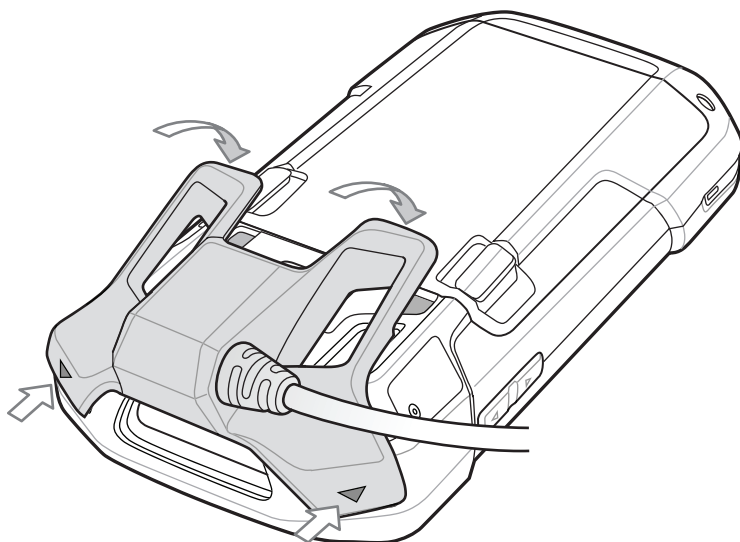


2. Rotate the Audio Adapter down and press down until it snaps into position.

## Device with 3.5 mm Audio Adapter in Holster

When using the device and the audio adapter in a holster, ensure that the display faces in and the headset cable is securely attached to the audio adapter.


**Figure 42** Device with 3.5 mm Audio Adapter in Holster

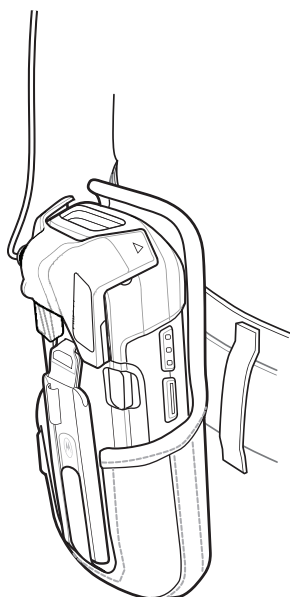

## Removing the 3.5 mm Audio Adapter

1. Disconnect headset plug from 3.5 mm Audio Adapter.

2. Lift the bottom of the Audio Adapter away from the device.

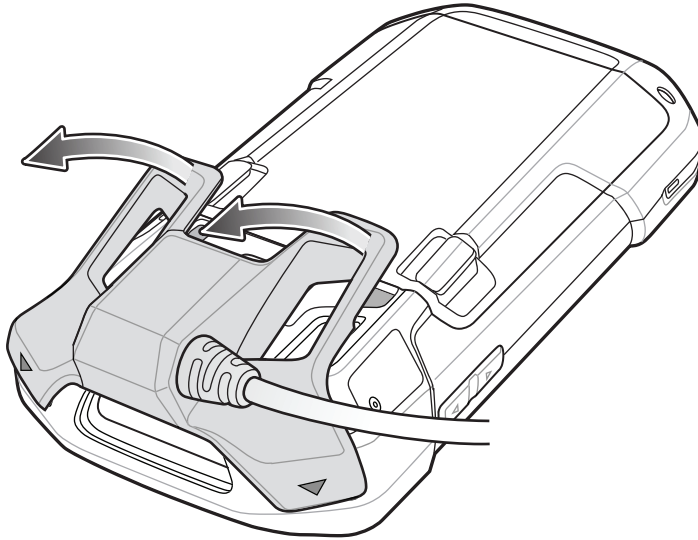


3. Remove Audio Adapter from the device.

## Snap-On USB Cable


The Snap-On USB Cable snaps on to the back of the device and removes easily when not in use. When attached to the device the Snap-On USB Cable allows the device to transfer data to a host computer and provide power for charging the device.

### Connecting the Snap-On USB Cable

1. Align the top mounting points on the cable with the mounting slots on the device.

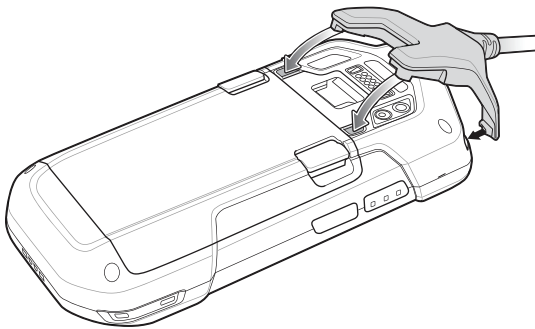


2. Rotate the cable down and press until it snaps into place. Magnetics hold the cable to the device.

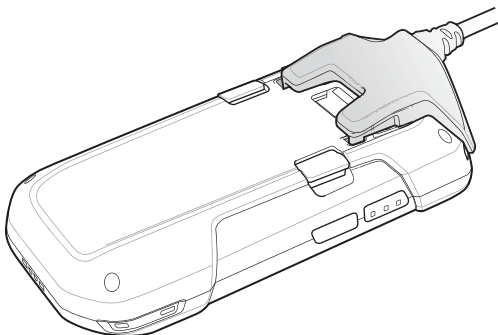



## USB Communication with the Snap-On USB Cable


1. Connect the Snap-On USB Cable to the device.

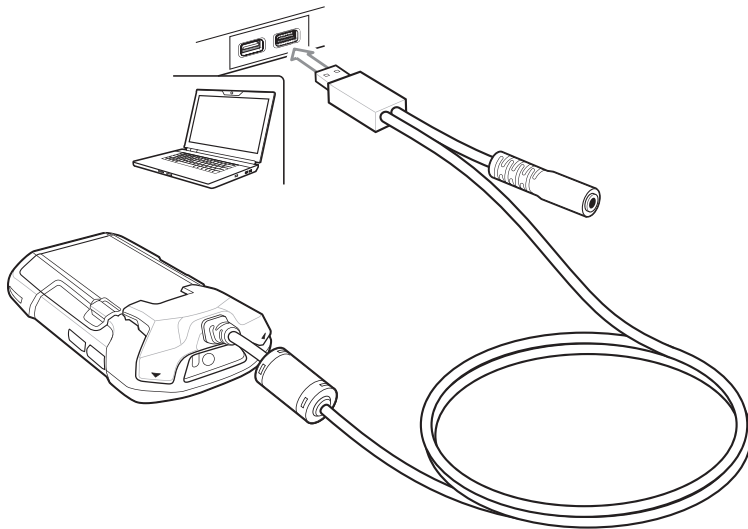

2. Connect the USB connector of the cable to a host computer.

## Charging the Device with the Snap-On USB Cable


1. Connect the Snap-On USB Cable to the device.
2. Connect the power supply to the Snap-On USB Cable

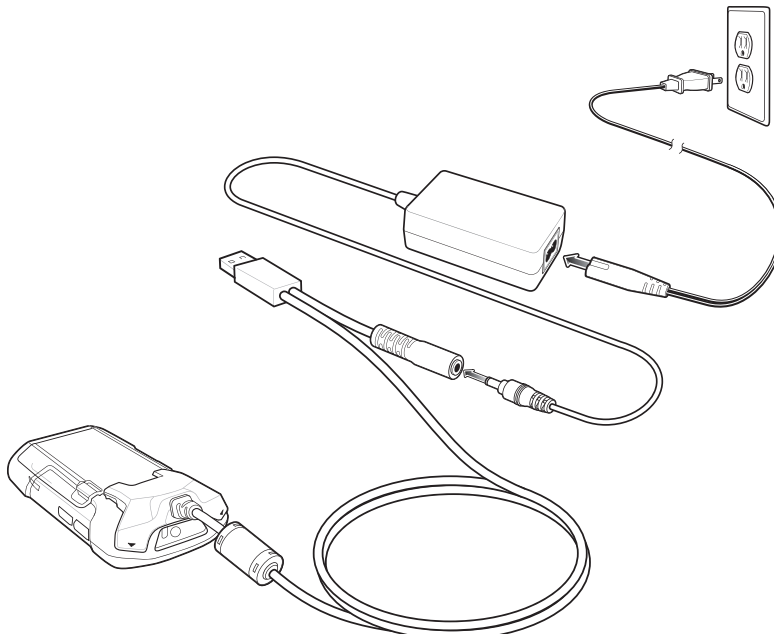


3. Connect to the power supply to an AC outlet.

## Disconnecting the Snap-On USB Cable from the Device

1. Press down on the cable.

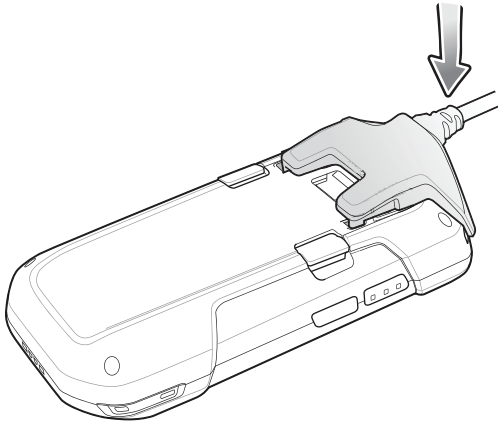

2. Rotate away from the device. The magnetics release the cable from the device.

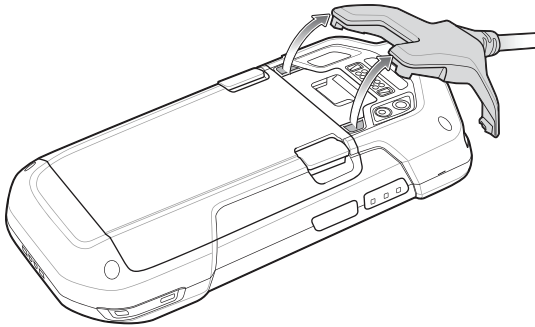


## Charging Cable Cup


Use the Charging Cable Cup to charge the device.

## Charging the Device with the Charging Cable Cup


1. Insert the device into the cup of the Charging Cable Cup.

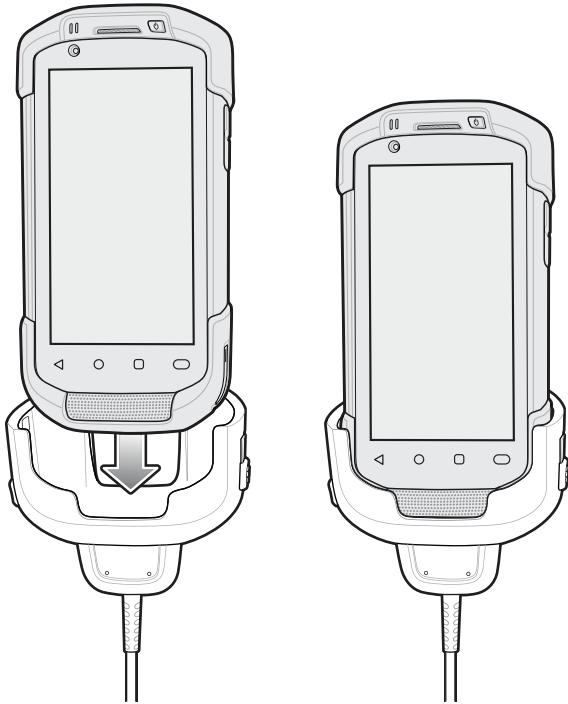

2. Ensure the device is seated properly.
3. Slide the two yellow locking tabs up to lock the cable to the device.

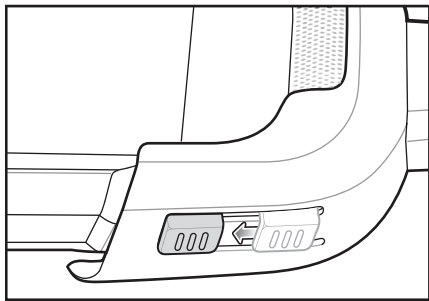

4. Connect the power supply to the Charging Cable Cup and to a power source.

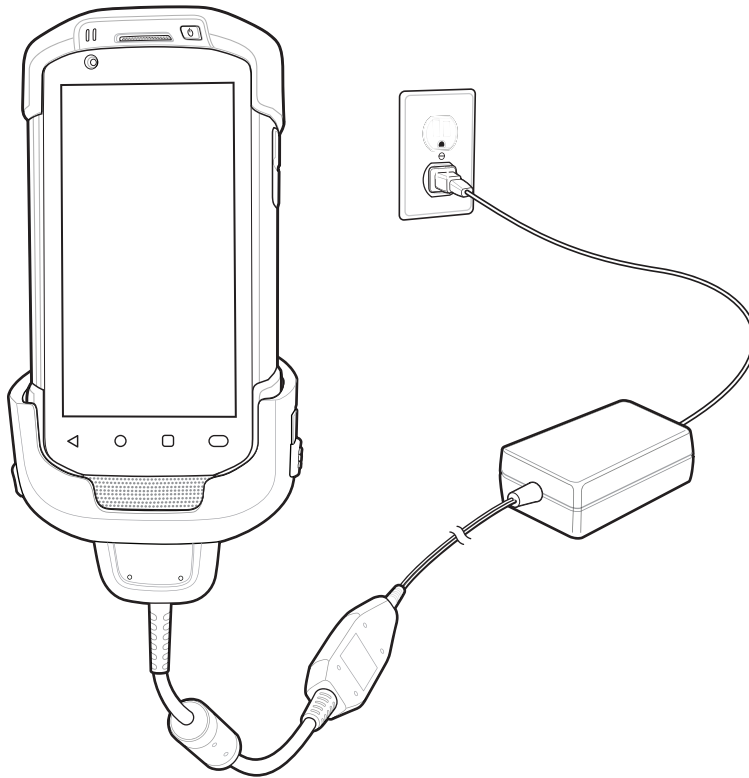


## Snap-On DEX Cable


The Snap-On DEX Cable snaps on to the back of the device and removes easily when not in use. When attached to the device the Snap-On DEX Cable provides electronic data exchange with devices such as vending machines.

### Connecting the Snap-On DEX Cable

1. Align the top mounting points on the cable with the mounting slots on the device.

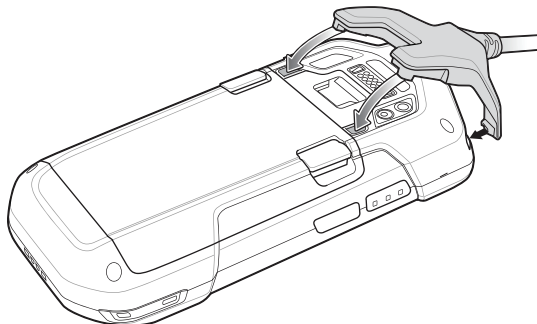


2. Rotate the cable down and press until it snaps into place. Magnetics hold the cable to the device.

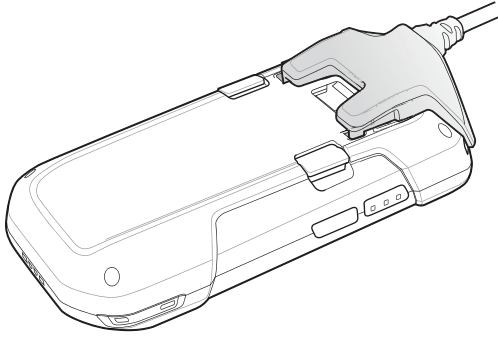


## DEX Communication

1. Connect the Snap-On DEX Cable to the device.
2. Connect the DEX connector of the cable to a device such as a vending machine.

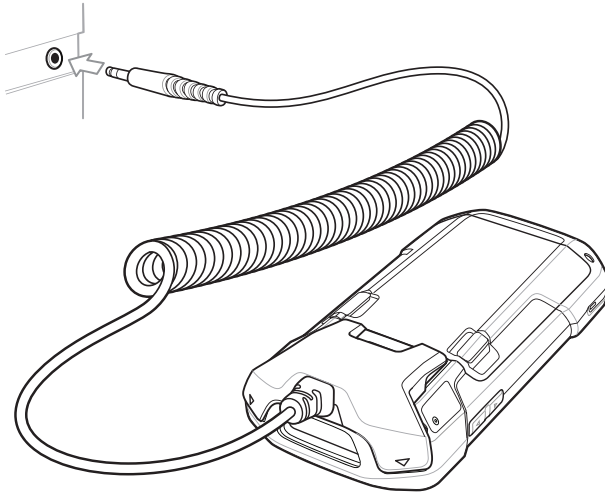


## Disconnecting the Snap-On DEX Cable from the Device

1. Press down on the cable.

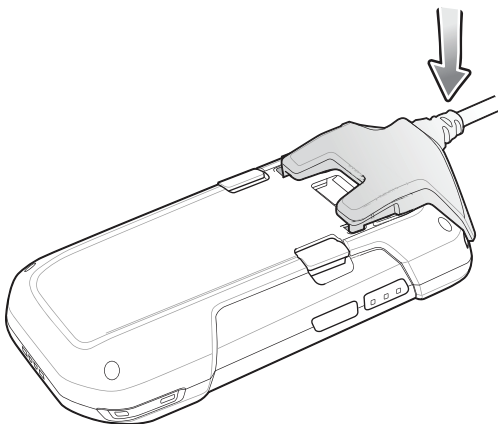

2. Rotate away from the device. The magnetics release the cable from the device.

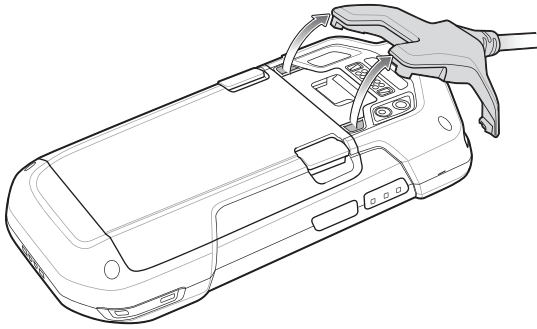


## Trigger Handle

The Trigger Handle adds a gun-style handle with a scanning trigger to the device. It increases comfort when using the device in scan-intensive applications for extended periods of time.



**NOTE:** The Attachment Plate with Tether can only be used with Charge Only cradles.

**Figure 43** Trigger Handle

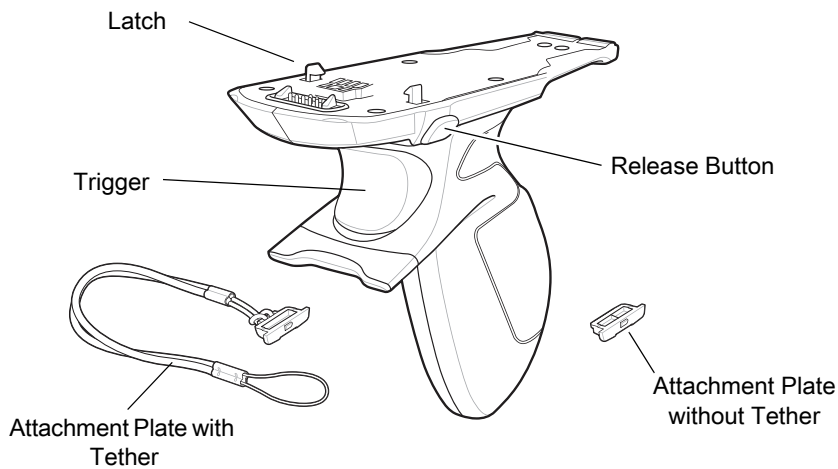

## Installing the Attachment Plate to Trigger Handle




**NOTE:** Attachment Plate with Tether only.

To install the attachment plate to the Trigger Handle:

1. Insert the loop end of the tether into the slot on the bottom of the handle.


2. Feed the attachment plate through the loop.

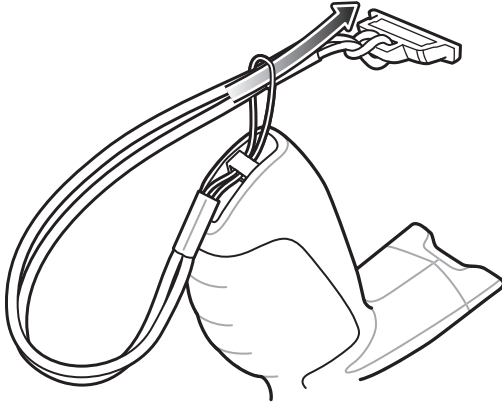


3. Pull the attachment plate until the loop tightens on the tether.

## Installing the Trigger Handle Plate

1. Press and hold the **Power** button until the menu appears.
2. Touch **Power off**.
3. Touch **OK**.
4. Press in the two battery latches.
5. Lift the battery from the device.
6. Remove the hand strap filler plate from the hand strap slot. Store the hand strap filler plate in a safe place for future replacement.

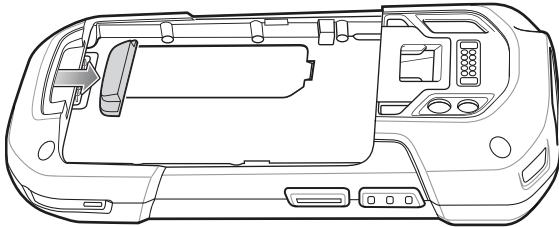

7. Insert the attachment plate into the hand strap slot.

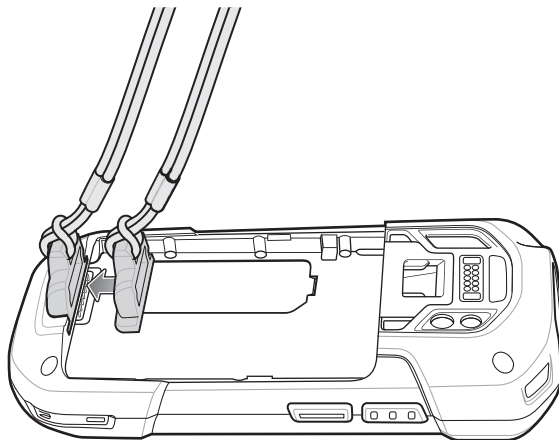


8. Insert the battery, bottom first, into the battery compartment in the back of the device.

9. Rotate the top of the battery into the battery compartment.
10. Press the battery down into the battery compartment until the battery release latches snap into place.

## Inserting the Device into the Trigger Handle


1. Align the back of the Trigger handle with the Trigger Mounting Plate.

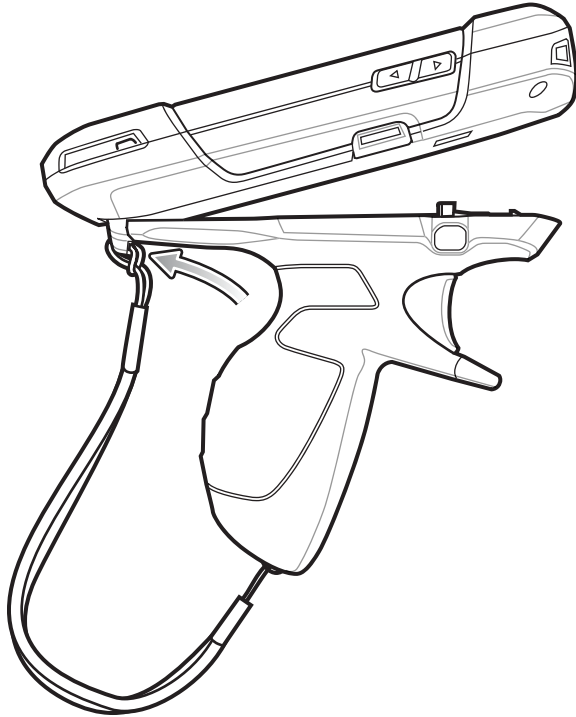

2. Press the two release latches.




3. Rotate the device down and press down until it snaps into place.

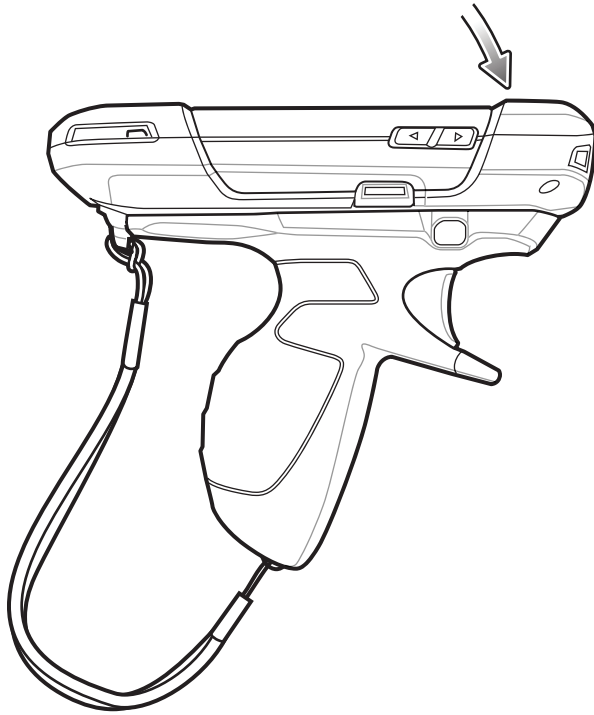


## Removing the Device from the Trigger Handle

1. Press both Trigger Handle release latches.

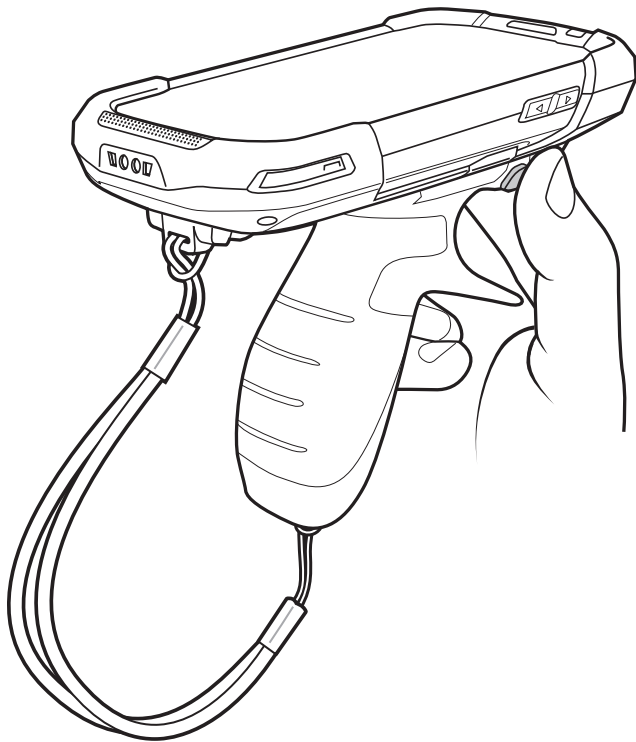


2. Rotate the device up and remove from the Trigger handle.

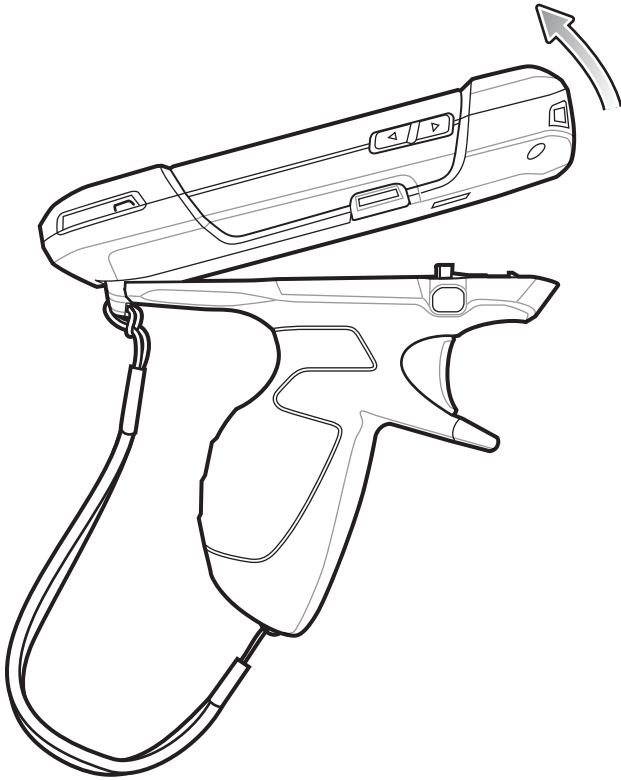


## Vehicle Charging Cable Cup

This section describes how to use the Vehicle Charging Cable Cup to charge the device.

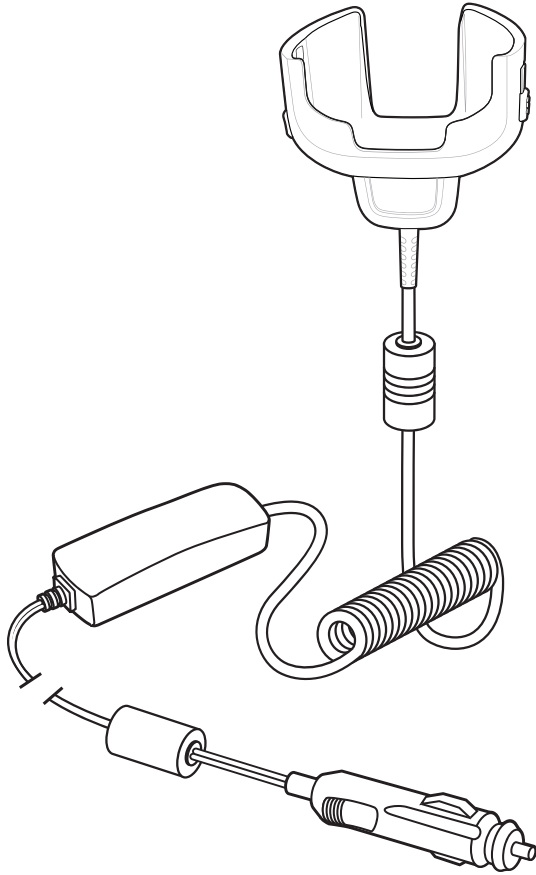


## Charging the Device with the Vehicle Charging Cable


1. Insert the device into the cup of the Vehicle Charging Cable.

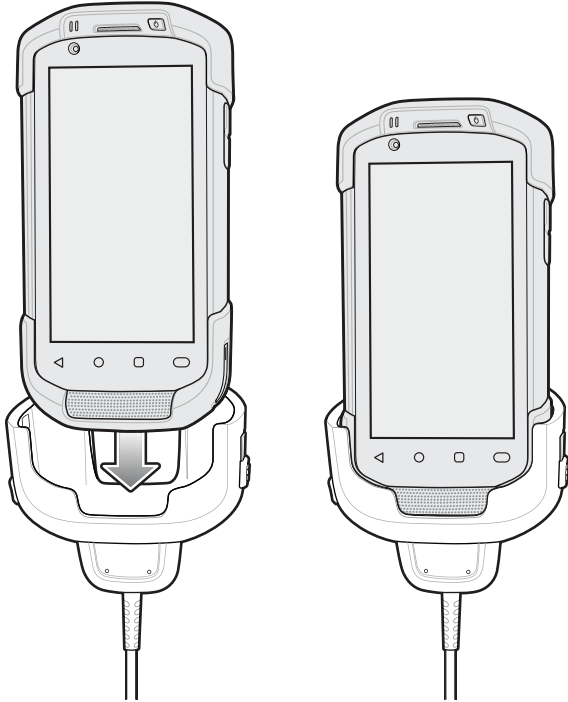

2. Ensure the device is seated properly.
3. Slide the two yellow locking tabs up to lock the cable to the device.

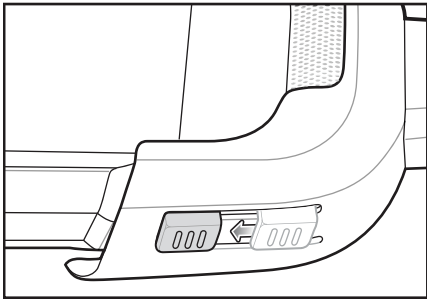

4. Insert the Cigarette Lighter plug into the vehicle cigarette lighter socket.

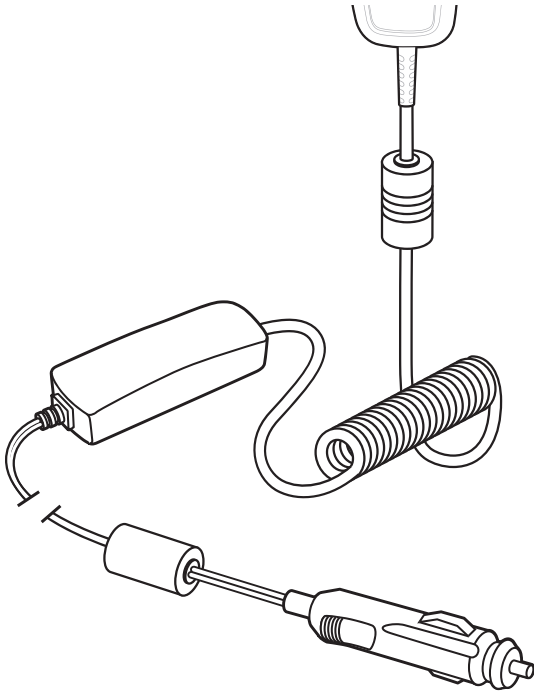


## Vehicle Cradle

The cradle:

- Holds the device securely in place
- Provides power for operating the device
- Re-charges the battery in the device.

The cradle is powered by the vehicle's 12V or 24V electrical system. The operating voltage range is 9V to 32V and supplies a maximum current of 3A.

**Figure 44** Vehicle Cradle

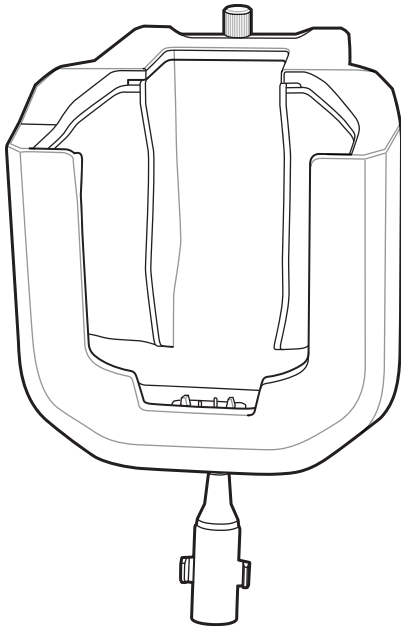


## Inserting the Device into the Vehicle Cradle



**CAUTION:** Ensure that the device is fully inserted into the cradle. Lack of proper insertion may result in property damage or personal injury. Zebra Technologies Corporation is not responsible for any loss resulting from the use of the products while driving.

To ensure the device was inserted correctly, listen for the audible click that signifies that the device locking mechanism was enabled and the device was locked into place.


**Figure 45** Install Device into Vehicle Cradle

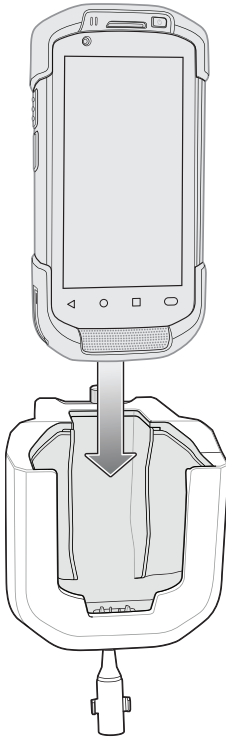

## Removing the Device from the Vehicle Cradle

To remove the device from the cradle, grasp the device and lift out of the cradle.

**Figure 46** Remove Device from Vehicle Cradle

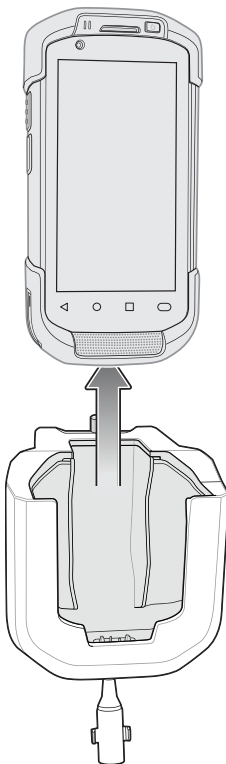

## Charging the Device in the Vehicle Cradle

Ensure the cradle is connected to a power source.

Insert the device into the cradle. The device starts to charge through the cradle as soon as it is inserted. This does not deplete the vehicle battery significantly. The battery charges in approximately four hours. See [Table 3 on page 27](#) for charging indications.



**NOTE:** The Vehicle Cradle operating temperature is  $-40^{\circ}\text{C}$  to  $+85^{\circ}\text{C}$ . When in the cradle, the device will only charge when its temperature is between  $0^{\circ}\text{C}$  to  $+40^{\circ}\text{C}$ .

## TC7X Vehicle Communication Charging Cradle


The Vehicle Communication Charging Cradle:

- holds the device securely in place
- provides power for operating the device
- re-charges the battery in the device.

The cradle is powered by the USB I/O Hub.

Refer to the TC7X Vehicle Cradle Installation Guide for information on installing the TC7X Vehicle Communication Charging Cradle.

**Figure 47** TC7X Vehicle Communication Charging Cradle

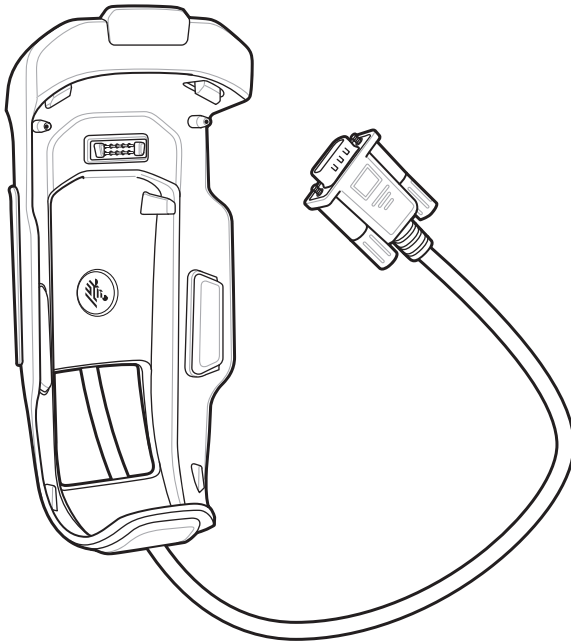

## Inserting the Device into the TC7X Vehicle Communication Charging Cradle


To ensure the device was inserted correctly, listen for the audible click that signifies that the device locking mechanism was enabled and the device was locked into place.





**CAUTION:** Ensure that the device is fully inserted into the cradle. Lack of proper insertion may result in property damage or personal injury. Zebra Technologies Corporation is not responsible for any loss resulting from the use of the products while driving.


**Figure 48** Insert Device into Cradle

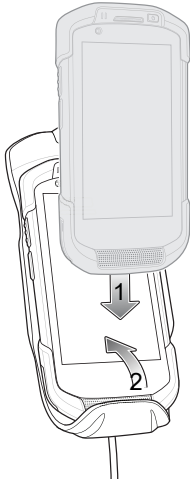

## Inserting the Device into the TC7X Vehicle Communication Charging Cradle

To remove the device from the cradle, press the release latch, grasp the device and lift out of the vehicle cradle.

**Figure 49** Remove Device from Cradle

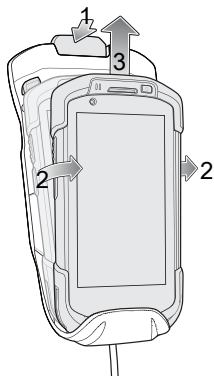

## Charging the Device in the TC7X Vehicle Communication Charging Cradle

Insert the device into the cradle. The device starts to charge through the cradle as soon as it is inserted. This does not deplete the vehicle battery significantly. The battery charges in approximately four hours. See [Table 3 on page 27](#) for all charging indications.



**NOTE:** The Vehicle Cradle operating temperature is  $-40^{\circ}\text{C}$  to  $+85^{\circ}\text{C}$ . When in the cradle, the device will only charge when its temperature is between  $0^{\circ}\text{C}$  to  $+40^{\circ}\text{C}$ .

## USB IO Hub

The USB I/O Hub:

- provides power to a vehicle cradle
- provides USB hub for three USB devices (such as printers)
- provides a powered USB port for charging another device.

The cradle is powered by the vehicle's 12V or 24V electrical system. The operating voltage range is 9V to 32V and supplies a maximum current of 3A to the vehicle cradle and 1.5 A to the four USB ports simultaneously.

Refer to the device Integrator Guide for Android 8.1 Oreo for information on installing the USB I/O Hub.


**Figure 50** USB I/O Hub




### Connecting Cables to the USB IO Hub

The USB I/O Hub provides three USB ports for connecting devices such as printers to a device in the vehicle cradle. To connect USB cables:


1. Slide the cable cover down and remove.

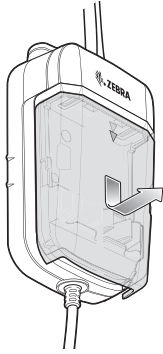

2. Insert the USB cable connector into one of the USB ports.
3. Place each cable into the cable holder.

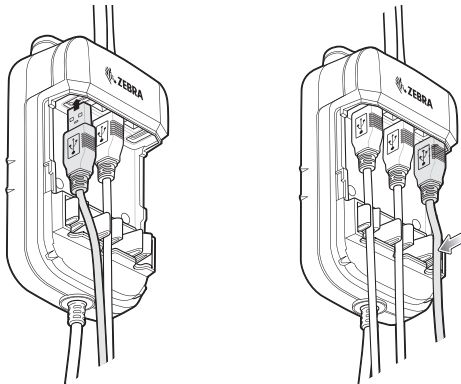

4. Align the cable cover onto the USB I/O Hub. Ensure that the cables are within the cover opening.

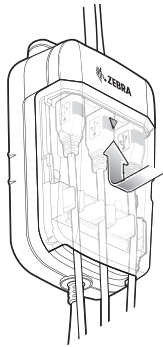


5. Slide cable cover up to lock into place.

## Connecting External Cable to the USB IO Hub

The USB I/O Hub provides a USB port for charging external devices such as cell phones. This port is for charging only.

1. Open the USB Access Cover.


2. Insert the USB cable connector into the USB port.

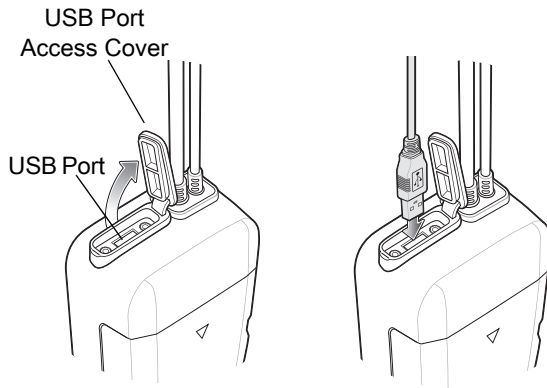

## Powering the Vehicle Cradle

The USB I/O Hub can provide power to a Vehicle Cradle.

1. Connect the Power Output Cable connector to the Power Input Cable connector of the Vehicle Cradle.
2. Tighten thumbscrews by hand until tight.

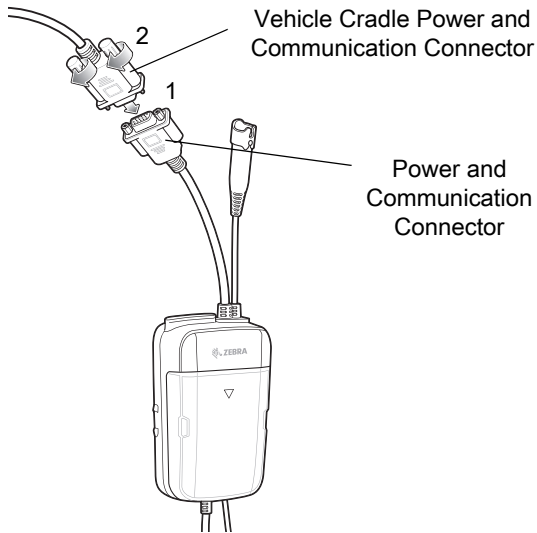


## Audio Headset Connection

The USB I/O Hub provides audio connection to the device in a vehicle cradle.

Depending upon the headset, connect the headset and audio adapter to the Headset connector.

**Figure 51** Connect Audio Headset

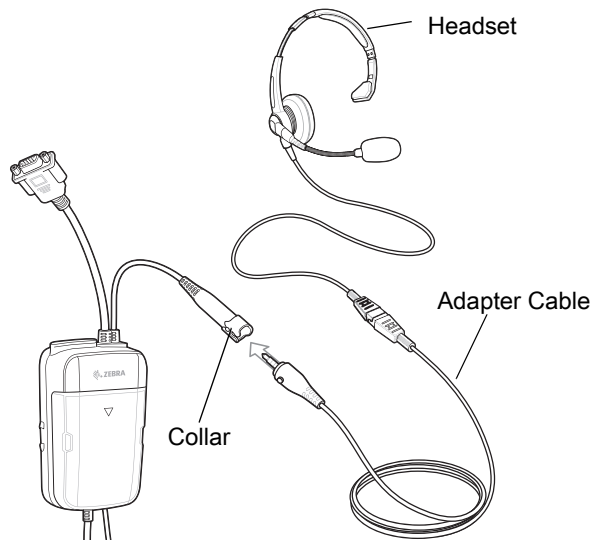


## Replacing the Hand Strap



**CAUTION:** Close all running applications prior to replacing the hand strap.


1. Press and hold the **Power** button until the menu appears.
2. Touch **Power Off**.
3. Touch **OK**.
4. Remove the hand strap clip from the hand strap mounting slot.

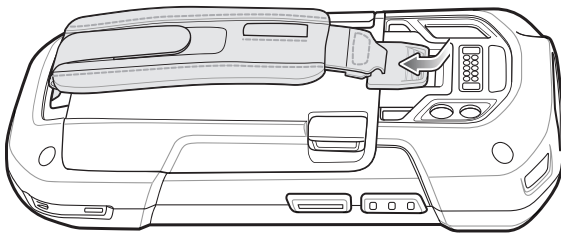

5. Press the two battery latches in.




6. Lift the battery from the device.

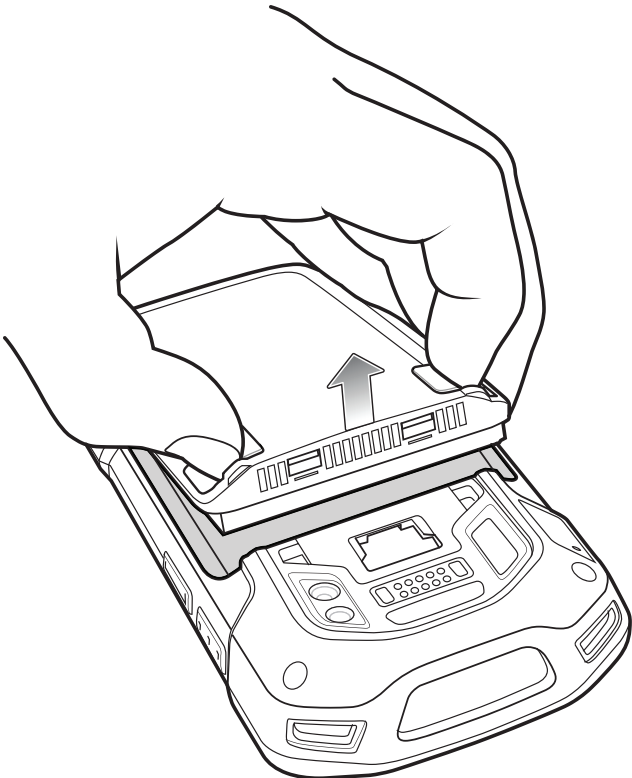


7. Remove the battery.
8. Remove the hand strap plate from the hand strap slot.

9. Insert the replacement hand strap plate into the hand strap slot.

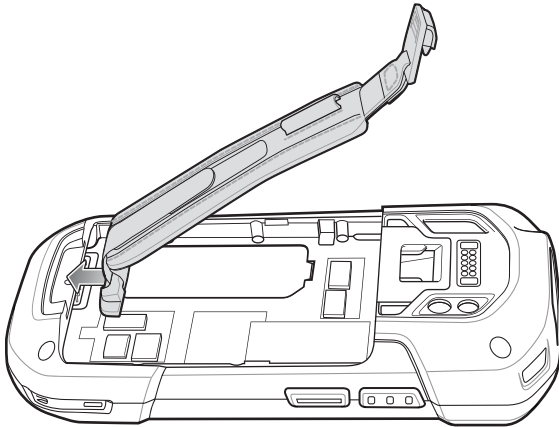


10. Insert the battery, bottom first, into the battery compartment.

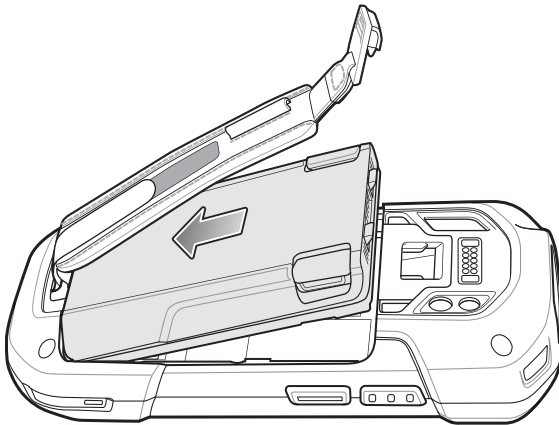


11. Rotate the top of the battery into the battery compartment.

12. Press the battery down into the battery compartment until the battery release latches snap into place.

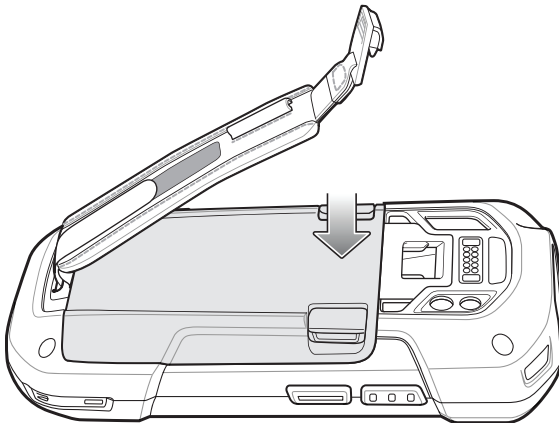

13. Place hand strap clip into hand strap mounting slot and pull down until it snaps into place.

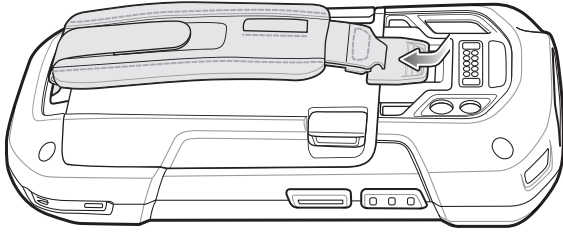



# Application Deployment

## Security

The device implements a set of security policies that determine whether an application is allowed to run and, if allowed, with what level of trust. To develop an application, you must know the security configuration of the device, and how to sign an application with the appropriate certificate to allow the application to run (and to run with the needed level of trust).



**NOTE:** Ensure the date is set correctly before installing certificates or when accessing secure web sites.

## Secure Certificates

If the VPN or Wi-Fi networks rely on secure certificates, obtain the certificates and store them in the device's secure credential storage, before configuring access to the VPN or Wi-Fi networks.

If downloading the certificates from a web site, set a password for the credential storage. The device supports X.509 certificates saved in PKCS#12 key store files with a .p12 extension (if key store has a .pfx or other extension, change to .p12).

The device also installs any accompanying private key or certificate authority certificates contained in the key store.

## Installing a Secure Certificate

To install a secure certificate:

1. Copy the certificate from the host computer to the root of the microSD card or the device's internal memory. See [USB Communication on page 58](#) for information about connecting the device to a host computer and copying files.
2. Go to **Settings**.
3. Touch **Security > Encryption & credentials**.
4. Touch **Install from storage**.
5. Navigate to the location of the certificate file.
6. Touch the filename of the certificate to install.
7. If prompted, enter the password for credential storage. If a password has not been set for the credential storage, enter a password for it twice and then touch **OK**.
8. If prompted, enter the certificate's password and touch **OK**.

9. Enter a name for the certificate and in the Credential use drop-down, select **VPN and apps** or **Wi-Fi**.
10. Touch **OK**.

The certificate can now be used when connecting to a secure network. For security, the certificate is deleted from the microSD card or internal memory.

### Configuring Credential Storage Settings

1. Go to **Settings**.
2. Touch **Security > Encryption & credentials**.
  - **Trusted credentials** - Touch to display the trusted system credentials.
  - **User credentials** - Touch to display user credentials.
  - **Install from storage** - Touch to install a secure certificate from the microSD card or internal storage.
  - **Clear credentials** - Deletes all secure certificates and related credentials.

## Development Tools

Development tools for Android include Android Studio, EMDK for Android, and StageNow.

### Android Application Development

#### Development Workstation

Android development tools are available at [developer.android.com](http://developer.android.com).

To start developing applications for the device, download Android Studio. Development can take place on a Microsoft® Windows®, Mac® OS X®, or Linux® operating system.

Applications are written in Java or Kotlin, but compiled and executed in the Dalvik virtual machine. Once the Java code is compiled cleanly, the developer tools make sure the application is packaged properly, including the AndroidManifest.xml file.

Android Studio contains a full featured IDE as well as SDK components required to develop Android applications.

#### Enabling Developer Options

The **Developer options** screen sets development related settings. By default, the Developer Options are hidden.

1. Go to **Settings**.
2. Touch **About phone**.
3. Scroll down to **Build number**.
4. Tap **Build number** seven times. The message **You are now a developer!** appears.
5. Touch the Back button.
6. Touch **System > Advanced > Developer options**.
7. Slide the **USB debugging** switch to the **ON** position.

### EMDK for Android

EMDK for Android provides developers with tools to create business applications for enterprise mobile devices. It is designed for use with Google's Android Studio and includes Android class libraries such as Barcode, sample applications with source code, and the associated documentation.

EMDK for Android allows applications to take full advantage of the capabilities that Zebra devices have to offer. It embeds Profile Manager technology within Android Studio IDE, providing a GUI-based development tool designed specifically for Zebra devices. This allows fewer lines of code, resulting in reduced development time, effort, and errors.

For more information go to: [techdocs.zebra.com](http://techdocs.zebra.com).

### StageNow

StageNow is Zebra's next-generation Android Staging Solution built on the MX platform. It allows quick and easy creation of device profiles, and can deploy to devices simply by scanning a barcode, reading a tag, or playing an audio file.

The StageNow Staging Solution includes the following components:

- The StageNow Workstation tool installs on the staging workstation (host computer) and lets the administrator easily create staging profiles for configuring device components, and perform other staging actions such as checking the condition of a target device to determine suitability for software upgrades or other activities. The StageNow Workstation stores profiles and other created content for later use.
- The StageNow Client resides on the device and provides a user interface for the staging operator to initiate staging. The operator uses one or more of the desired staging methods (print and scan a barcode, read an NFC tag or play an audio file) to deliver staging material to the device.

For more information go to: [techdocs.zebra.com](http://techdocs.zebra.com).

### GMS Restricted

GMS Restricted mode deactivates Google Mobile Services (GMS). All GMS apps are removed from the device and communication with Google (analytics data collection and location services) is disabled. It also provides enhanced security and privacy.

Use StageNow to disable or enable GMS Restricted mode. After a device is in GMS Restricted mode, enable and disable individual GMS apps and services using StageNow. To ensure GMS Restricted mode persists after an Enterprise Reset, use the Persist Manager option in StageNow. For more information on StageNow, refer to [techdocs.zebra.com](http://techdocs.zebra.com).

### ADB USB Setup

To use the ADB, install the USB driver. This assumes that the development SDK has been installed on the host computer. Go to [developer.android.com/sdk/index.html](http://developer.android.com/sdk/index.html) for details on setting up the development SDK.

ADB driver for Windows and Linux are available on the Zebra Support Central web site at [zebra.com/support](http://zebra.com/support). Download the ADB and USB Driver Setup package. Follow the instructions with the package to install the ADB and USB drivers for Windows and Linux.

### Enabling USB Debugging

By default, USB debugging is disabled.

1. Go to **Settings**.
2. Touch **About phone**.
3. Scroll down to **Build number**.
4. Tap **Build number** seven times. The message **You are now a developer!** appears.
5. Touch the Back button.
6. Touch **System > Advanced > Developer options**.
7. Slide the **USB debugging** switch to the **ON** position.
8. Touch **OK**.
9. Connect the device to the host computer using the Rugged Charge/USB Cable.  
The **Allow USB debugging?** dialog box appears on the device.
10. On the device, touch **OK**.
11. On the host computer, navigate to the **platform-tools** folder.
12. Type **adb devices**.  
The following displays:  
**List of devices attached**  
XXXXXXXXXXXXXXXXX device (where XXXXXXXXXXXXXXXXXXXX is the device number).



**NOTE:** If device number does not appear, ensure that ADB drivers are installed properly.

13. Touch the Home button.

## Application Installation

After an application is developed, install the application onto the device using one of the following methods:

- USB connection, see [Installing Applications Using the USB Connection on page 91](#).
- Android Debug Bridge, see [Installing Applications Using the Android Debug Bridge on page 92](#).
- microSD Card, see [Installing Applications Using a microSD Card on page 92](#).
- Mobile device management (MDM) platforms that have application provisioning. Refer to the MDM software documentation for details.

## Installing Applications Using the USB Connection




**CAUTION:** When connecting the device to a host computer and mounting the microSD card, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

1. Connect the device to a host computer using the Rugged Charge/USB cable.
2. Pull down the Notification panel and touch **Charging this device via USB**.
3. Touch **File Transfer**.
4. On the host computer, open a file manager application.

5. On the host computer, copy the application .apk file from the host computer to the device.



**CAUTION:** Carefully follow the host computer's instructions to unmount the microSD card and disconnect USB devices correctly to avoid losing information.

6. Disconnect the device from the host computer.
7. Swipe the screen up and select  to view files on the microSD card or Internal Storage.
8. Locate the application .apk file.
9. Touch the application file.
10. Touch **Continue** to install the app or **Cancel** to stop the installation.
11. To confirm installation and accept what the application affects, touch **Install** otherwise touch **Cancel**.
12. Touch **Open** to open the application or **Done** to exit the installation process. The application appears in the App list.

### Installing Applications Using the Android Debug Bridge

Use ADB commands to install application onto the device.



**CAUTION:** When connecting the device to a host computer and mounting its microSD card, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

1. Ensure that the ADB drivers are installed on the host computer. See [ADB USB Setup on page 90](#).
2. Connect the device to a host computer using USB. See [USB Communication on page 58](#).
3. Go to **Settings**.
4. Touch **System > Advanced > Developer options**.
5. Slide the switch to the **ON** position.
6. Touch **USB Debugging**. A check appears in the check box. The **Allow USB debugging?** dialog box appears.
7. Touch **OK**.
8. On the host computer, open a command prompt window and use the adb command:  

```
adb install <application>
```



where: <application> = the path and filename of the apk file.
9. Disconnect the device from the host computer. See [USB Communication on page 58](#).

### Installing Applications Using a microSD Card



**CAUTION:** When connecting the device to a host computer and mounting its microSD card, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

1. Copy the apk file to the root of the microSD card.
  - Copy the apk file to a microSD card using a host computer (see [USB Communication](#) for more information), and then installing the microSD card into the device (see [Replacing the microSD Card](#) for more information).

- Connect the device with a microSD card already installed to the host computer, and copy apk file to the microSD card. See USB Communication for more information. Disconnect the device from the host computer.
- 2. Connect the device to a host computer using USB. See USB Communication.
- 3. Copy the application APK file from the host computer to the microSD card.
- 4. Remove the microSD card from the host computer.
- 5. Press and hold the Power button on the device until the menu appears.
- 6. Touch **Power off**.
- 7. Press the two battery latches in.
- 8. Lift the battery from the device.
- 9. Lift the access door.
- 10. Insert the microSD card.
- 11. Replace the access door.
- 12. Insert the battery, bottom first, into the battery compartment in the back of the device.
- 13. Press the battery down until the battery release latches snap into place.
- 14. Replace the hand strap, if required.
- 15. Press and hold the Power button to turn on the device.
- 16. Swipe the screen up and select  to view files on the microSD card.
- 17. Touch  > **SD card**.
- 18. Locate the application .apk file.
- 19. Touch the application file.
- 20. Touch **Continue** to install the app or **Cancel** to stop the installation.
- 21. To confirm installation and accept what the application affects, touch **Install** otherwise touch **Cancel**.
- 22. Touch **Open** to open the application or **Done** to exit the installation process. The application appears in the App list.

## Uninstalling an Application

1. Go to **Settings**.
2. Touch **Apps & notifications**.
3. Touch **See all apps** to view all apps in the list.
4. Scroll through the list to the app.
5. Touch the app. The **App info** screen appears.
6. Touch **Uninstall**.
7. Touch **OK** to confirm.

## Performing a System Update

System Update packages can contain either partial or complete updates for the operating system. Zebra distributes the System Update packages on the Zebra Support & Downloads web site. Perform a system update using either a microSD card or using ADB.

### Downloading the System Update Package

1. Go to the Zebra Support & Downloads web site, [zebra.com/support](https://zebra.com/support).
2. Download the appropriate System Update package to a host computer.

### Performing a System Update Using microSD Card

1. Copy the System Update zip file to the root of the microSD card.
  - Copy the zip file to a microSD card using a host computer (see USB Communication for more information), and then installing the microSD card into the device (see Replacing the microSD Card for more information).
  - Connect the device with a microSD card already installed to the host computer, and copy zip file to the microSD card. See USB Communication for more information. Disconnect the device from the host computer.
2. Press and hold the Power button until the menu appears.
3. Touch **Restart**.
4. Press and hold the PTT button until the device vibrates. The System Recovery screen appears.
5. Press the Volume Up and Volume Down buttons to navigate to **Apply upgrade from SD card**.
6. Press the Power button.
7. Press the Volume Up and Volume Down buttons to navigate to **Full OTA Package** or **Diff OTA Package**.
8. Press the Power button.
9. Press the Volume Up and Volume Down buttons to navigate to the System Update file.
10. Press the Power button. The System Update installs and then the device returns to the Recovery screen.
11. Press the Power button to reboot the device.

### Performing a System Update Using ADB

1. Connect the device to a host computer using the Rugged Charge/USB cable or by inserting the device into the 1-Slot USB/Charge Only Cradle.
2. Go to **Settings**.
3. Touch **System > Advanced > Developer options**.
4. Slide the switch to the **ON** position.
5. Touch **USB Debugging**. A check appears in the check box. The **Allow USB debugging?** dialog box appears.
6. Touch **OK**.

7. On the host computer, open a command prompt window and use the adb command:

```
adb devices
```

The following displays:

```
List of devices attached
```

```
XXXXXXXXXXXXXXXXX device (where XXXXXXXXXXXXXXXXXXXX is the device number).
```



**NOTE:** If device number does not appear, ensure that ADB drivers are installed properly.

8. Type:

```
adb reboot recovery
```

9. Press Enter. The System Recovery screen appears on the device.

10. Press the Volume Up and Volume Down buttons to navigate to **Apply upgrade from ADB**.

11. Press the Power button.

12. Use the Volume Up and Volume Down buttons to navigate to **Full OTA Package** or **Diff OTA Package**.

13. Press the Power button.

14. On the host computer command prompt window type:

```
adb sideload <file>
```

where: <file> = the path and filename of the zip file.

15. Press Enter. The System Update installs (progress appears as percentage in the Command Prompt window) and then the System Recovery screen appears on the device.

16. Press the Power button to reboot the device.

## Verifying System Update Installation

1. Go to **Settings**.
2. Touch **About phone**.
3. Scroll down to **Build number**.
4. Ensure that the build number matches the new system update package file number.

## Enterprise Reset

An Enterprise Reset erases all user data in the `/data` partition, including data in the primary storage locations (`/sdcard` and emulated storage).

Before performing an Enterprise Reset, provision all necessary configuration files and restore after the reset.

Perform Enterprise Reset from the device settings, using a microSD card, or using ADB.

## Performing an Enterprise Reset From Device Settings

1. Go to **Settings**.
2. Touch **System > Reset options > Erase all data (enterprise reset)**.
3. Touch **Erase all data** twice to confirm the Enterprise Reset.



## Downloading the Enterprise Reset Package

1. Go to the Zebra Support & Downloads web site, [zebra.com/support](http://zebra.com/support).
2. Download the Enterprise Reset file to a host computer.

## Performing an Enterprise Reset Using microSD Card

1. Copy the Enterprise Reset zip file to the root of the microSD card.
  - Copy the zip file to a microSD card using a host computer (see USB Communication for more information) and then installing the microSD card into the device (see Replacing the microSD Card for more information).
  - Connect the device with a microSD card already installed to the host computer and copy zip file to the microSD card. See USB Communication for more information. Disconnect the device from the host computer.
2. Press and hold the Power button until the menu appears.
3. Touch **Restart**.
4. Press and hold the PTT button until the device vibrates. The System Recovery screen appears.
5. Press the Volume Up and Volume Down buttons to navigate to **Apply upgrade from SD card**.
6. Press the Power button.
7. Press the Volume Up and Volume Down buttons to navigate to **Full OTA Package**.
8. Press the Power button.
9. Press the Volume Up and Volume Down buttons to navigate to the Enterprise Reset file.
10. Press the Power button. The Enterprise Reset occurs and then the device returns to the Recovery screen.
11. Press the Power button to reboot the device.

## Performing an Enterprise Reset Using ADB

1. Connect the device to the Rugged Charge/USB cable or insert the device into the 1-Slot USB/Charge Only Cradle.
2. Connect the cable or cradle to the host computer.
3. Go to **Settings**.
4. Touch **System > Advanced > Developer options**.
5. Slide the switch to the **ON** position.
6. Touch **USB Debugging**. A check appears in the check box. The **Allow USB debugging?** dialog box appears.
7. Touch **OK**.
8. On the host computer, open a command prompt window and type:
 

```
adb devices.
```

The following displays:

**List of devices attached**

XXXXXXXXXXXXXXXXX device (where XXXXXXXXXXXXXXXXXXXX is the device number).



**NOTE:** If device number does not appear, ensure that ADB drivers are installed properly.

9. Type:

```
adb reboot recovery
```

10. Press Enter. The System Recovery screen appears on the device.

11. Press the Volume Up and Volume Down buttons to navigate to **Apply upgrade from ADB**.

12. Press the Power button.

13. Press the Volume Up and Volume Down buttons to navigate to **Full OTA Package**.

14. Press the Power button.

15. On the host computer command prompt window type:

```
adb sideload <file>
```

where: <file> = the path and filename of the zip file.

16. Press Enter. The Enterprise Reset package installs and then the System Recovery screen appears on the device.

17. Press the Power button to reboot the device.

## Performing a Factory Reset

A Factory Reset erases all data in the `/data` and `/enterprise` partitions in internal storage and clears all device settings. A Factory Reset returns the device to the last installed operating system image. To revert to a previous operating system version, re-install that operating system image. See [Performing a System Update](#) for more information.

### Downloading the Factory Reset Package

To download the Factory Reset package:

1. Go to the Zebra Support & Downloads web site, [zebra.com/support](http://zebra.com/support).
2. Download the appropriate Factory Reset file to a host computer.

### Performing a Factory Reset Using microSD Card

1. Copy the Factory Reset zip file to the root of the microSD card.
  - Copy the zip file to a microSD card using a host computer (see USB Communication for more information) and then installing the microSD card into the device (see Replacing the microSD Card for more information).
  - Connect the device with a microSD card already installed to the host computer and copy zip file to the microSD card. See USB Communication for more information. Disconnect the device from the host computer.
2. Press and hold the Power button until the menu appears.
3. Touch **Restart**.
4. Press and hold the PTT button until the device vibrates. The System Recovery screen appears.
5. Press the Volume Up and Volume Down buttons to navigate to **Apply upgrade from SD card**.
6. Press the Power button.

7. Use the Volume Up and Volume Down buttons to navigate to **Full OTA Package**.
8. Press the Power button.
9. Use the Volume Up and Volume Down buttons to navigate to the Factory Reset file.
10. Press the Power button. The Factory Reset occurs and then the device returns to the Recovery screen.
11. Press the Power button to reboot the device.

### Performing a Factory Reset Using ADB

To perform an Factory Reset using ADB:

1. Connect the device to the Rugged Charge/USB cable or insert the device into the 1-Slot USB/Charge Only Cradle.
2. Connect the cable or cradle to the host computer.
3. Go to **Settings**.
4. Touch **System > Advanced > Developer options**.
5. Slide the switch to the **ON** position.
6. Touch **USB Debugging**. A check appears in the check box. The **Allow USB debugging?** dialog box appears.
7. Touch **OK**.
8. On the host computer, open a command prompt window and type:

```
adb devices.
```

The following displays:

```
List of devices attached
```

```
XXXXXXXXXXXXXXXXX device (where XXXXXXXXXXXXXXXXXXXX is the device number).
```



**NOTE:** If device number does not appear, ensure that ADB drivers are installed properly.

9. Type:

```
adb reboot recovery
```
10. Press Enter. The System Recovery screen appears on the device.
11. Press the Volume Up and Volume Down buttons to navigate to **Apply upgrade from ADB**.
12. Press the Power button.
13. Press the Volume Up and Volume Down buttons to navigate to **Full OTA Package**.
14. Press the Power button.
15. On the host computer command prompt window type:

```
adb sideload <file>
```

where: <file> = the path and filename of the zip file.
16. Press Enter. The Factory Reset package installs and then the System Recovery screen appears on the device.
17. Press the Power button to reboot the device.

## Storage

The device contains the following types of file storage:

- Random Access Memory (RAM)
- Internal storage
- External storage (microSD card)
- Enterprise folder.

## Random Access Memory

Executing programs use RAM to store data. Data stored in RAM is lost upon a reset. The operating system manages how applications use RAM. It only allows applications and component processes and services to use RAM when required. It may cache recently used processes in RAM, so they restart more quickly when opened again, but it will erase the cache if it needs the RAM for new activities.

The screen displays the amount of used and free RAM.

- **Performance** - Indicates memory performance.
- **Total memory** - Indicates the total amount of RAM available.
- **Average used (%)** - Indicates the average amount of memory (as a percentage) used during the period of time selected (default - 3 hours).
- **Free** - Indicates the total amount of unused RAM.
- **Memory used by apps** - Touch to view RAM usage by individual apps.

## Viewing Memory

1. Go to **Settings**.
2. Touch **System > Advanced > Developer options > Memory**.

## Internal Storage

The device has internal storage. The internal storage content can be viewed and files copied to and from when the device is connected to a host computer. Some applications are designed to be stored on the internal storage rather than in internal memory.

## Viewing Internal Storage

1. Go to **Settings**.
  2. Touch **Storage**.
- **Internal Storage** - Displays the total amount of space on internal storage and amount used.

If the device has removable storage installed, touch **Internal shared storage** to display a the amount of internal storage used by apps, photos, videos, audio and other files.

## External Storage

The device can have a removable microSD card. The microSD card content can be viewed and files copied to and from when the device is connected to a host computer.

## Viewing External Storage


1. Go to **Settings**.
2. Touch **Storage**.

Portable storage displays the total amount of space on the installed microSD card and the amount used.

To unmount the microSD card, touch .


Touch **SD card** to view the contents of the card.

## Formatting a microSD Card

1. Touch **SD card**.
2. Touch  > **Storage settings**.
3. Touch **Format**.
4. Touch **ERASE & FORMAT**.
5. Touch **DONE**.

## Formatting a microSD Card as Internal Memory

You can format a microSD card as internal memory to increase the actual amount of the device's internal memory. Once formatted, the microSD card can only be read by this device.


1. Touch **SD card**.
2. Touch  > **Storage settings**.
3. Touch **Format as internal**.
4. Touch **ERASE & FORMAT**.
5. Touch **DONE**.

## Enterprise Folder

The Enterprise folder (within internal flash) is a super-persistent storage that is persistent after a reset and an Enterprise Reset. The Enterprise folder is erased during a Factory Reset. The Enterprise folder is used for deployment and device-unique data. The Enterprise folder is approximately 128 MB (formatted). Applications can persist data after an Enterprise Reset by saving data to the enterprise/user folder. The folder is ext4 formatted and is only accessible from a host computer using ADB or from an MDM.

## Managing Apps

Apps use two kinds of memory: storage memory and RAM. Apps use storage memory for themselves and any files, settings, and other data they use. They also use RAM when they are running.

1. Go to **Settings**.
2. Touch **Apps & notifications**.
3. Touch **See all XX apps** to view all apps on the device.
4. Touch  > **Show system** to include system processes in the list.
5. Touch an app, process, or service in the list to open a screen with details about it and, depending on the item, to change its settings, permissions, notifications and to force stop or uninstall it.




## App Details

Apps have different kinds of information and controls.

- **Force stop** - Stop an app.
- **Disable** - Disable an app.
- **Uninstall** - Remove the app and all of its data and settings from the device. See [Uninstalling an Application on page 93](#) for information about uninstalling apps.
- **Notifications** - Set the app notification settings.
- **Permissions** - Lists the areas on the device that the app has access to.
- **Storage & cache** - Lists how much information is stored, and includes buttons for clearing it.
- **Mobile data & Wi-Fi** - Provides information about data consumed by an app.
- **Advanced**
  - **Screen time** - Displays the amount of time the app has displayed on the screen.
  - **Battery** - Lists the amount of computing power used by the app.
  - **Open by default** - If you have configured an app to launch certain file types by default, you can clear that setting here.
  - **Display over other apps** - allows an app to display on top of other apps.
  - **App details** - Provides a link to additional app details on the Play store.
  - **Additional settings in the app** - Opens settings in the app.
  - **Modify system settings** - Allows an app to modify the system settings.

## Managing Downloads

Files and apps downloaded using the Browser or Email are stored on the microSD card or Internal storage in the Download directory. Use the Downloads app to view, open, or delete downloaded items.

1. Swipe the screen up and touch .
2. Touch  > **Downloads**.
3. Touch and hold an item, select items to delete and touch . The item is deleted from the device.

# Maintenance and Troubleshooting

## Maintaining the Device

For trouble-free service, observe the following tips when using the device:

- To avoid scratching the screen, use a Zebra approved capacitive compatible stylus intended for use with a touch-sensitive screen. Never use an actual pen or pencil or other sharp object on the surface of the device screen.
- The touch-sensitive screen of the device is glass. Do not drop the device or subject it to strong impact.
- Protect the device from temperature extremes. Do not leave it on the dashboard of a car on a hot day, and keep it away from heat sources.
- Do not store the device in any location that is dusty, damp, or wet.
- Use a soft lens cloth to clean the device. If the surface of the device screen becomes soiled, clean it with a soft cloth moistened with an approved cleanser. For a list of approved cleansers, see Approved Cleanser Active Ingredients.
- Periodically replace the rechargeable battery to ensure maximum battery life and product performance. Battery life depends on individual usage patterns.

## Battery Safety Guidelines

- The area in which the units are charged should be clear of debris and combustible materials or chemicals. Particular care should be taken where the device is charged in a non commercial environment.
- Follow battery usage, storage, and charging guidelines found in this guide.
- Improper battery use may result in a fire, explosion, or other hazard.
- To charge the mobile device battery, the ambient battery and charger temperatures must be between +32°F and +104°F (0°C and +40°C).
- Do not use incompatible batteries and chargers, including non-Zebra batteries and chargers. Use of an incompatible battery or charger may present a risk of fire, explosion, leakage, or other hazard. If you have any questions about the compatibility of a battery or a charger, contact the Global Customer Support Center.
- For devices that utilize a USB port as a charging source, the device shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not disassemble or open, crush, bend or deform, puncture, or shred the battery.
- Severe impact from dropping any battery-operated device on a hard surface could cause the battery to overheat.
- Do not short circuit a battery or allow metallic or conductive objects to contact the battery terminals.

- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire, explosion, or other hazard.
- Do not leave or store the equipment in or near areas that might get very hot, such as in a parked vehicle or near a radiator or other heat source. Do not place battery into a microwave oven or dryer.
- Battery usage by children should be supervised.
- Please follow local regulations to properly dispose of used rechargeable batteries.
- Do not dispose of batteries in fire.
- In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with water for 15 minutes, and seek medical advice.
- If you suspect damage to your equipment or battery, contact Customer Support to arrange for inspection.

## Best Practices for Enterprise Mobile Computing Devices Operating in Hot Environments and Direct Sunlight

Exceeding the operating temperature by external hot environments will cause the device's thermal sensor to notify the user of a shutdown of the WAN modem or shutdown the device until the device's temperature returns to the operational temperature range.

- Avoid direct sunlight to the device - The easiest way to prevent overheating is to keep the device out of direct sunlight. The device absorbs light and heat from the sun and retains it, getting hotter the longer it remains in sunlight and heat.
- Avoid leaving the device in a vehicle on a hot day or hot surface - Similar to leaving the device out in direct sunlight, the device will also absorb the thermal energy from a hot surface or when left on the dashboard of a vehicle or seat, getting warmer the longer it remains on the hot surface or inside the hot vehicle.
- Turn off unused apps on the device. Open, unused apps running in the background can cause the device to work harder, which in turn may cause it to heat up. This will also improve your mobile computer device's battery life performance.
- Avoid turning your screen brightness up - Just the same as running background apps, turning your brightness up will force your battery to work harder and create more heat. Minimizing your screen brightness may extend operating the mobile computer device in hot environments.

## Cleaning Instructions



**CAUTION:** Always wear eye protection.

Read warning label on alcohol product before using.

If you have to use any other solution for medical reasons please contact the Global Customer Support Center for more information.



**WARNING:** Avoid exposing this product to contact with hot oil or other flammable liquids. If such exposure occurs, unplug the device and clean the product immediately in accordance with these guidelines.

## Approved Cleanser Active Ingredients

100% of the active ingredients in any cleaner must consist of one or some combination of the following: isopropyl alcohol, bleach/sodium hypochlorite<sup>1</sup> (see important note below), hydrogen peroxide, ammonium chloride, or mild dish soap.





**IMPORTANT:** Use pre-moistened wipes and do not allow liquid cleaner to pool.

<sup>1</sup>When using sodium hypochlorite (bleach) based products, always follow the manufacturer's recommended instructions: use gloves during application and remove the residue afterwards with a damp alcohol cloth or a cotton swab to avoid prolonged skin contact while handling the device.

Due to the powerful oxidizing nature of sodium hypochlorite, the metal surfaces on the device are prone to oxidation (corrosion) when exposed to this chemical in the liquid form (including wipes). In the event that these type of disinfectants come in contact with metal on the device, prompt removal with an alcohol-dampened cloth or cotton swab after the cleaning step is critical.

### Harmful Ingredients

The following chemicals are known to damage the plastics on the device and should not come in contact with the device: acetone; ketones; ethers; aromatic and chlorinated hydrocarbons; aqueous or alcoholic alkaline solutions; ethanolamine; toluene; trichloroethylene; benzene; carbolic acid and TB-lysoform.

Many vinyl gloves contain phthalate additives, which are often not recommended for medical use and are known to be harmful to the housing of the device.

### Device Cleaning Instructions

Do not apply liquid directly to the device. Dampen a soft cloth or use pre-moistened wipes. Do not wrap the device in the cloth or wipe, instead gently wipe the unit. Be careful not to let liquid pool around the display window or other places. Before use, allow the unit to air dry.



**NOTE:** For thorough cleaning, it is recommended to first remove all accessory attachments, such as hand straps or cradle cups, from the mobile device and to clean them separately.

### Special Cleaning Notes

Do not handle the device while wearing vinyl gloves containing phthalates. Remove vinyl gloves and wash hands to eliminate any residue left from the gloves.

If products containing any of the harmful ingredients listed above are used prior to handling the device, such as a hand sanitizer that contains ethanolamine, hands must be completely dry before handling the device to prevent damage to the device.



**IMPORTANT:** If the battery connectors are exposed to cleaning agents, thoroughly wipe off as much of the chemical as possible and clean with an alcohol wipe. It is also recommended to install the battery in the terminal prior to cleaning and disinfecting the device to help minimize buildup on the connectors.

When using cleaning/disinfectant agents on the device, it is important to follow the directions prescribed by the cleaning/disinfectant agent manufacturer.

### Cleaning Materials Required

- Alcohol wipes
- Lens tissue
- Cotton-tipped applicators
- Isopropyl alcohol

- Can of compressed air with a tube.

### Cleaning Frequency

The cleaning frequency is at the customer's discretion due to the varied environments in which the mobile devices are used and may be cleaned as frequently as required. When dirt is visible, it is recommended to clean the mobile device to avoid build up of particles which make the device more difficult to clean later on.

For consistency and optimum image capture, it is recommended to clean the camera window periodically especially when used in environments prone to dirt or dust.

### Cleaning the Device

#### Housing

Thoroughly wipe the housing, including all buttons and triggers, using an approved alcohol wipe.

#### Display

The display can be wiped down with an approved alcohol wipe, but care should be taken not to allow any pooling of liquid around the edges of the display. Immediately dry the display with a soft, non-abrasive cloth to prevent streaking.

#### Camera and Exit Window

Wipe the camera and exit window periodically with a lens tissue or other material suitable for cleaning optical material such as eyeglasses.

### Cleaning Battery Connectors

1. Remove the main battery from the mobile computer.
2. Dip the cotton portion of the cotton-tipped applicator in isopropyl alcohol.
3. To remove any grease or dirt, rub the cotton portion of the cotton-tipped applicator back-and-forth across the connectors on the battery and terminal sides. Do not leave any cotton residue on the connectors.
4. Repeat at least three times.
5. Use a dry cotton-tipped applicator and repeat steps 3 and 4. Do not leave any cotton residue on the connectors.
6. Inspect the area for any grease or dirt and repeat the cleaning process if necessary.



**CAUTION:** After cleaning the battery connectors with bleach-based chemicals, follow the Battery Connector Cleaning instructions to remove bleach from the connectors.

### Cleaning Cradle Connectors

1. Remove the DC power cable from the cradle.
2. Dip the cotton portion of the cotton-tipped applicator in isopropyl alcohol.

3. Rub the cotton portion of the cotton-tipped applicator along the pins of the connector. Slowly move the applicator back-and-forth from one side of the connector to the other. Do not leave any cotton residue on the connector.
4. All sides of the connector should also be rubbed with the cotton-tipped applicator.
5. Remove any lint left by the cotton-tipped applicator.
6. If grease and other dirt can be found on other areas of the cradle, use a lint-free cloth and alcohol to remove.
7. Allow at least 10 to 30 minutes (depending on ambient temperature and humidity) for the alcohol to air dry before applying power to cradle.

If the temperature is low and humidity is high, longer drying time is required. Warm temperature and low humidity requires less drying time.



**CAUTION:** After cleaning the cradle connectors with bleach-based chemicals, follow the Cleaning Cradle Connectors instructions to remove bleach from the connectors.

## Troubleshooting

### Performing a Soft Reset

Perform a soft reset if applications stop working.

1. Press and hold the Power button until the menu appears.
2. Touch **Restart**.

The device reboots.

### Performing a Hard Reset



**CAUTION:** Performing a hard reset with a microSD card installed in the device may cause damage or data corruption to the microSD card. All un-saved data is lost after performing a hard reset.

Perform a hard reset if the device stops responding.

1. Simultaneously press the Power, Scan and Volume Up buttons for at least four seconds.
2. When the screen turns off, release the buttons.

The device reboots.

## TC72/TC77

The following tables provides typical problems that might arise and the solution for correcting the problem.

**Table 17** Troubleshooting the TC72/TC77

| Problem   | Cause                           | Solution                                     |
|---|---------------------------------|--|
| When pressing the power button the device does not turn on. | Battery not charged.            | Charge or replace the battery in the device. |
|   | Battery not installed properly. | Install the battery properly.                |
|   | System crash.                   | Perform a reset.                             |

**Table 17** Troubleshooting the TC72/TC77 (Continued)

| Problem  | Cause   | Solution  |
|--|---|---|
| When pressing the power button the device does not turn on but two LEDs blink.                           | Battery charge is at a level where data is maintained but battery should be re-charged. | Charge or replace the battery in the device.  |
| Battery did not charge.  | Battery failed.   | Replace battery. If the device still does not operate, perform a reset.                                   |
|  | Device removed from cradle while battery was charging.                                  | Insert device in cradle. The 4,620 mAh battery fully charges in less than five hours at room temperature. |
|  | Extreme battery temperature.  | Battery does not charge if ambient temperature is below 0°C (32°F) or above 40°C (104°F).                 |
| Cannot see characters on display.  | Device not powered on.  | Press the <b>Power</b> button.  |
| During data communication with a host computer, no data transmitted, or transmitted data was incomplete. | Device removed from cradle or disconnected from host computer during communication.     | Replace the device in the cradle, or reattach the communication cable and re-transmit.                    |
|  | Incorrect cable configuration.  | See the system administrator.   |
|  | Communication software was incorrectly installed or configured.                         | Perform setup.  |
| During data communication over Wi-Fi, no data transmitted, or transmitted data was incomplete.           | Wi-Fi radio is not on.  | Turn on the Wi-Fi radio.  |
|  | You moved out of range of an access point.  | Move closer to an access point.   |
| During data communication over WAN, no data transmitted, or transmitted data was incomplete.             | You are in an area of poor cellular service.  | Move into an area that has better service.  |
|  | APN is not set up correctly.  | See system administrator for APN setup information.   |
|  | SIM card not installed properly.  | Remove and re-install the SIM card.   |
|  | Data plan not activated.  | Contact your service provider and ensure that your data plan is enable.                                   |
| During data communication over Bluetooth, no data transmitted, or transmitted data was incomplete.       | Bluetooth radio is not on.  | Turn on the Bluetooth radio.  |
|  | You moved out of range of another Bluetooth device.                                     | Move within 10 meters (32.8 feet) of the other device.  |
| No sound.  | Volume setting is low or turned off.  | Adjust the volume.  |

**Table 17** Troubleshooting the TC72/TC77 (Continued)

| Problem  | Cause   | Solution   |
|--|---|--|
| Device shuts off.  | Device is inactive.                                     | The display turns off after a period of inactivity. Set this period to 15 seconds, 30 seconds, 1, 2, 5, 10 or 30 minutes.  |
|  | Battery is depleted.                                    | Replace the battery.   |
| Tapping the window buttons or icons does not activate the corresponding feature. | The device is not responding.                           | Reset the device.  |
| A message appears stating that the device memory is full.                        | Too many files stored on the device.                    | Delete unused memos and records. If necessary, save these records on the host computer (or use an SD card for additional memory).  |
|  | Too many applications installed on the device.          | Remove user-installed applications on the device to recover memory. Select <b>⚙ &gt; Storage &gt; FREE UP SPACE &gt; REVIEW RECENT ITEMS</b> . Select the unused program(s) and tap <b>FREE UP</b> .   |
| The device does not decode with reading bar code.                                | Scanning application is not loaded.                     | Load a scanning application on the device or enable DataWedge. See the system administrator.   |
|  | Unreadable bar code.                                    | Ensure the symbol is not defaced.  |
|  | Distance between exit window and bar code is incorrect. | Place the device within proper scanning range.   |
|  | Device is not programmed for the bar code.              | Program the device to accept the type of bar code being scanned. Refer to the EMDK or DataWedge application.   |
|  | Device is not programmed to generate a beep.            | If the device does not beep on a good decode, set the application to generate a beep on good decode.   |
|  | Battery is low.   | If the scanner stops emitting a laser beam upon a trigger press, check the battery level. When the battery is low, the scanner shuts off before the device low battery condition notification. Note: If the scanner is still not reading symbols, contact the distributor or the Global Customer Support Center. |

**Table 17** Troubleshooting the TC72/TC77 (Continued)

| Problem  | Cause   | Solution   |
|--|---|--|
| Device cannot find any Bluetooth devices nearby. | Too far from other Bluetooth devices.                 | Move closer to the other Bluetooth device(s), within a range of 10 meters (32.8 feet).   |
|  | The Bluetooth device(s) nearby are not turned on.     | Turn on the Bluetooth device(s) to find.   |
|  | The Bluetooth device(s) are not in discoverable mode. | Set the Bluetooth device(s) to discoverable mode. If needed, refer to the device's user documentation for help.  |
| Cannot unlock device.                            | User enters incorrect password.                       | If the user enters an incorrect password eight times, the user is requested to enter a code before trying again.<br><br>If the user forgot the password, contact system administrator. |



## 2-Slot Charge Only Cradle

**Table 18** Troubleshooting the 2-Slot Charge only Cradle

| Symptom   | Possible Cause   | Action  |
|---|--|---|
| LEDs do not light when device or spare battery is inserted. | Cradle is not receiving power.   | Ensure the power cable is connected securely to both the cradle and to AC power.  |
|   | Device is not seated firmly in the cradle.                                     | Remove and re-insert the device into the cradle, ensuring it is firmly seated.  |
|   | Spare battery is not seated firmly in the cradle.                              | Remove and re-insert the spare battery into the charging slot, ensuring it is firmly seated.  |
| Device battery is not charging.                             | Device was removed from cradle or cradle was unplugged from AC power too soon. | Ensure cradle is receiving power. Ensure device is seated correctly. Confirm main battery is charging. The 4,620 mAh battery fully charges in less than five hours. |
|   | Battery is faulty.   | Verify that other batteries charge properly. If so, replace the faulty battery.   |
|   | The device is not fully seated in the cradle.                                  | Remove and re-insert the device into the cradle, ensuring it is firmly seated.  |
|   | Extreme battery temperature.   | Battery does not charge if ambient temperature is below 0 °C (32 °F) or above 40 °C (104 °F).   |
| Spare battery is not charging.                              | Battery not fully seated in charging slot.                                     | Remove and re-insert the spare battery in the cradle, ensuring it is firmly seated. The 4,620 mAh battery fully charges in less than five hours.                    |
|   | Battery inserted incorrectly.  | Re-insert the battery so the charging contacts on the battery align with the contacts on the cradle.  |
|   | Battery is faulty.   | Verify that other batteries charge properly. If so, replace the faulty battery.   |


## 2-Slot USB/Ethernet Cradle

**Table 19** Troubleshooting the 2-Slot USB/Ethernet Cradle

| Symptom  | Possible Cause   | Action   |
|--|--|--|
| During communication, no data transmits, or transmitted data was incomplete. | Device removed from cradle during communications.                              | Replace device in cradle and retransmit.   |
|  | Incorrect cable configuration.   | Ensure that the correct cable configuration.   |
|  | Device has no active connection.   | An icon is visible in the status bar if a connection is currently active.  |
|  | USB/Ethernet module switch in not in the correct position.                     | For Ethernet communication, slide the switch to the  position. For USB communication, slide the switch to the  position. |
| LEDs do not light when device or spare battery is inserted.                  | Cradle is not receiving power.   | Ensure the power cable is connected securely to both the cradle and to AC power.   |
|  | Device is not seated firmly in the cradle.                                     | Remove and re-insert the device into the cradle, ensuring it is firmly seated.   |
|  | Spare battery is not seated firmly in the cradle.                              | Remove and re-insert the spare battery into the charging slot, ensuring it is firmly seated.   |
| Device battery is not charging.  | Device was removed from cradle or cradle was unplugged from AC power too soon. | Ensure cradle is receiving power. Ensure device is seated correctly. Confirm main battery is charging. The 4,620 mAh battery fully charges in less than five hours.  |
|  | Battery is faulty.   | Verify that other batteries charge properly. If so, replace the faulty battery.  |
|  | The device is not fully seated in the cradle.                                  | Remove and re-insert the device into the cradle, ensuring it is firmly seated.   |
|  | Extreme battery temperature.   | Battery does not charge if ambient temperature is below 0 °C (32 °F) or above 40 °C (104 °F).  |
| Spare battery is not charging.   | Battery not fully seated in charging slot.                                     | Remove and re-insert the spare battery in the cradle, ensuring it is firmly seated. The 4,620 mAh battery fully charges in less than five hours.   |
|  | Battery inserted incorrectly.  | Re-insert the battery so the charging contacts on the battery align with the contacts on the cradle.   |
|  | Battery is faulty.   | Verify that other batteries charge properly. If so, replace the faulty battery.  |

## 5-Slot Charge Only Cradle

**Table 20** Troubleshooting the 5-Slot Charge Only Cradle

| Problem                  | Cause   | Solution  |
|--------------------------|---|---|
| Battery is not charging. | Device removed from the cradle too soon.        | Replace the device in the cradle. The battery fully charges in approximately five hours.  |
|                          | Battery is faulty.                              | Verify that other batteries charge properly. If so, replace the faulty battery.   |
|                          | Device is not inserted correctly in the cradle. | Remove the device and reinsert it correctly. Verify charging is active. Touch  > <b>System</b> > <b>About phone</b> > <b>Battery Information</b> to view battery status. |
|                          | Ambient temperature of the cradle is too warm.  | Move the cradle to an area where the ambient temperature is between -10 °C (+14 °F) and +60 °C (+140 °F).   |



## 5-Slot Ethernet Cradle

**Table 21** Troubleshooting the 5-Slot Ethernet Cradle

| Problem  | Cause   | Solution   |
|--|---|--|
| During communication, no data transmits, or transmitted data was incomplete. | Device removed from cradle during communications. | Replace device in cradle and retransmit.   |
|  | Incorrect cable configuration.                    | Ensure that the correct cable configuration.   |
|  | Device has no active connection.                  | An icon is visible in the status bar if a connection is currently active.  |
| Battery is not charging.   | Device removed from the cradle too soon.          | Replace the device in the cradle. The battery fully charges in approximately five hours.   |
|  | Battery is faulty.                                | Verify that other batteries charge properly. If so, replace the faulty battery.  |
|  | Device is not inserted correctly in the cradle.   | Remove the device and reinsert it correctly. Verify charging is active. Touch <b>⚙</b> > <b>System</b> > <b>About phone</b> > <b>Battery Information</b> to view battery status. |
|  | Ambient temperature of the cradle is too warm.    | Move the cradle to an area where the ambient temperature is between -10 °C (+14 °F) and +60 °C (+140 °F).  |

## 4-Slot Battery Charger

**Table 22** Troubleshooting the 4-Slot Battery Charger

| Problem   | Cause                                  | Solution  |
|---|--|---|
| Spare Battery Charging LED does not light when spare battery is inserted. | Spare battery is not correctly seated. | Remove and re-insert the spare battery into the charging slot, ensuring it is correctly seated. |

**Table 22** Troubleshooting the 4-Slot Battery Charger (Continued)

| Problem                     | Cause   | Solution   |
|-----------------------------|---|--|
| Spare Battery not charging. | Charger is not receiving power.   | Ensure the power cable is connected securely to both the charger and to AC power.  |
|                             | Spare battery is not correctly seated.  | Remove and re-insert the battery into the battery adapter, ensuring it is correctly seated.  |
|                             | Battery adapter is not seated properly.   | Remove and re-insert the battery adapter into the charger, ensuring it is correctly seated.  |
|                             | Battery was removed from the charger or charger was unplugged from AC power too soon. | Ensure charger is receiving power. Ensure the spare battery is seated correctly. If a battery is fully depleted, it can take up to five hours to fully recharge a Standard Battery and it can take up to eight hours to fully recharge an Extended Life Battery. |
|                             | Battery is faulty.  | Verify that other batteries charge properly. If so, replace the faulty battery.  |

# Technical Specifications

For device technical specifications, go to [www.zebra.com/support](http://www.zebra.com/support).

## Data Capture Supported Symbologies

| Item         | Description   |
|--------------|---|
| 1D Bar Codes | Code 128, EAN-8, EAN-13, GS1 DataBar Expanded, GS1 128, GS1 DataBar Coupon, UPCA, Interleaved 2 of 5, UPC Coupon Code |
| 2D Bar Codes | PDF-417, QR Code, Digimarc, Dotcode   |

## SE4750-SR Decode Distances

The table below lists the typical distances for selected bar code densities. The minimum element width (or “symbol density”) is the width in mils of the narrowest element (bar or space) in the symbol.


| Symbol Density/ Bar Code Type | Typical Working Ranges |                      |
|-------------------------------|------------------------|----------------------|
|                               | Near                   | Far                  |
| 3 mil Code 39                 | 4.1 in.<br>10.41 cm    | 4.9 in.<br>12.45 cm  |
| 5.0 mil Code 128              | 3.5 in.<br>8.89 cm     | 6.8 in.<br>17.27 cm  |
| 5 mil PDF417                  | 4.4 in.<br>11.18 cm    | 6.3 in.<br>16.00 cm  |
| 6.67 mil PDF417               | 3.2 in.<br>8.13 cm     | 8.1 in.<br>20.57 cm  |
| 10 mil Data Matrix            | 3.3 in.<br>8.38 cm     | 8.5 in.<br>21.59 cm  |
| 100% UPCA                     | 2.0 in.<br>5.08 cm     | 18.0 in.<br>45.72 cm |

## Technical Specifications

| Symbol Density/ Bar Code Type | Typical Working Ranges |                      |
|-------------------------------|------------------------|----------------------|
|                               | Near                   | Far                  |
| 15 mil Code 128               | 2.6 in.<br>6.06 cm     | 19.8 in.<br>50.29 cm |
| 20 mil Code 39                | 1.8 in.<br>4.57 cm     | 27.0 in.<br>68.58 cm |

Note: Photographic quality bar code at 18° tilt pitch angle under 30 fcd ambient illumination.

## I/O Connector Pin-Outs

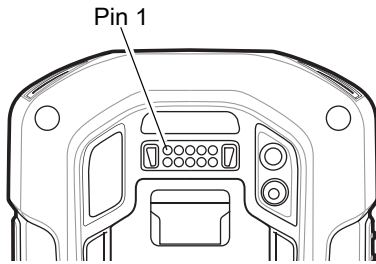

| Pin | Signal       | Description                    |
|-----|--------------|--------------------------------|
| 1   | GND          | Power/signal ground.           |
| 2   | RXD_MIC      | UART RXD + Headset microphone. |
| 3   | PWR_IN_CON   | External 5.4 VDC power input.  |
| 4   | TRIG_PTT     | Trigger or PTT input.          |
| 5   | GND          | Power/signal ground.           |
| 6   | USB-OTG_ID   | USB OTG ID pin.                |
| 7   | TXD_EAR      | UART TXD, Headset ear.         |
| 8   | USB_OTG_VBUS | USB VBUS                       |
| 9   | USB_OTG_DP   | USB DP                         |
| 10  | USB_OTG_DM   | USB DM                         |

## 2-Slot Charge Only Cradle Technical Specifications

| Item                  | Description  |
|-----------------------|--|
| Dimensions            | Height: 10.6 cm (4.17 in.)<br>Width: 19.56 cm (7.70 in.)<br>Depth: 13.25 cm (5.22 in.) |
| Weight                | 748 g (26.4 oz.)   |
| Input Voltage         | 12 VDC   |
| Power Consumption     | 30 watts   |
| Operating Temperature | 0 °C to 50 °C (32 °F to 122 °F)  |
| Storage Temperature   | -40 °C to 70 °C (-40 °F to 158 °F)   |
| Charging Temperature  | 0 °C to 40 °C (32 °F to 104 °F)  |

## Technical Specifications

| Item                          | Description   |
|-------------------------------|---|
| Humidity                      | 5% to 95% non-condensing  |
| Drop                          | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature. |
| Electrostatic Discharge (ESD) | +/- 20kV air<br>+/- 10 kV contact<br>+/- 10 kV indirect discharge     |

### 2-Slot USB/Ethernet Cradle Technical Specifications

| Item                          | Description  |
|-------------------------------|--|
| Dimensions                    | Height: 20 cm (7.87 in.)<br>Width: 19.56 cm (7.70 in.)<br>Depth: 13.25 cm (5.22 in.) |
| Weight                        | 870 g (30.7 oz.)   |
| Input Voltage                 | 12 VDC   |
| Power Consumption             | 30 watts   |
| Operating Temperature         | 0 °C to 50 °C (32 °F to 122 °F)  |
| Storage Temperature           | -40 °C to 70 °C (-40 °F to 158 °F)   |
| Charging Temperature          | 0 °C to 40 °C (32 °F to 104 °F)  |
| Humidity                      | 5% to 95% non-condensing   |
| Drop                          | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature.                |
| Electrostatic Discharge (ESD) | +/- 20kV air<br>+/- 10kV contact<br>+/- 10kV indirect discharge                      |

### 5-Slot Charge Only Cradle Technical Specifications

| Item                  | Description  |
|-----------------------|--|
| Dimensions            | Height: 90.1 mm (3.5 in.)<br>Width: 449.6 mm (17.7 in.)<br>Depth: 120.3 mm (4.7 in.) |
| Weight                | 1.31 kg (2.89 lbs.)  |
| Input Voltage         | 12 VDC   |
| Power Consumption     | 65 watts<br>90 watts with 4-Slot Battery Charger installed.                          |
| Operating Temperature | 0 °C to 50 °C (32 °F to 122 °F)  |
| Storage Temperature   | -40 °C to 70 °C (-40 °F to 158 °F)   |
| Charging Temperature  | 0 °C to 40 °C (32 °F to 104 °F)  |

## Technical Specifications

| Item                          | Description   |
|-------------------------------|---|
| Humidity                      | 0% to 95% non-condensing  |
| Drop                          | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature. |
| Electrostatic Discharge (ESD) | +/- 20kV air<br>+/- 10kV contact<br>+/- 10kV indirect discharge       |

### 5-Slot Ethernet Cradle Technical Specifications

| Item                          | Description   |
|-------------------------------|---|
| Dimensions                    | Height: 21.7 cm (8.54 in.)<br>Width: 48.9 cm (19.25 in.)<br>Depth: 13.2 cm (5.20 in.) |
| Weight                        | 2.25 kg (4.96 lbs)  |
| Input Voltage                 | 12 VDC  |
| Power Consumption             | 65 watts<br>90 watts with 4-Slot Battery Charger installed.                           |
| Operating Temperature         | 0 °C to 50 °C (32 °F to 122 °F)   |
| Storage Temperature           | -40 °C to 70 °C (-40 °F to 158 °F)  |
| Charging Temperature          | 0 °C to 40 °C (32 °F to 104 °F)   |
| Humidity                      | 5% to 95% non-condensing  |
| Drop                          | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature.                 |
| Electrostatic Discharge (ESD) | +/- 20kV air<br>+/- 10kV contact<br>+/- 10kV indirect discharge                       |

### 4-Slot Battery Charger Technical Specifications

| Item                  | Description   |
|-----------------------|---|
| Dimensions            | Height: 4.32 cm (1.7 in.)<br>Width: 20.96 cm (8.5 in.)<br>Depth: 15.24 cm (6.0 in.) |
| Weight                | 386 g (13.6 oz.)  |
| Input Voltage         | 12 VDC  |
| Power Consumption     | 40 watts  |
| Operating Temperature | 0 °C to 40 °C (32 °F to 104 °F)   |
| Storage Temperature   | -40 °C to 70 °C (-40 °F to 158 °F)  |
| Charging Temperature  | 0 °C to 40 °C (32 °F to 104 °F)   |

## Technical Specifications

| Item                          | Description   |
|-------------------------------|---|
| Humidity                      | 5% to 95% non-condensing  |
| Drop                          | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature. |
| Electrostatic Discharge (ESD) | +/- 20kV air<br>+/- 10kV contact<br>+/- 10kV indirect discharge       |

### Charge Only Vehicle Cradle Technical Specifications

| Item                          | Description  |
|-------------------------------|--|
| Dimensions                    | Height: 12.3 cm (4.84 in.)<br>Width: 11.0 cm (4.33 in.)<br>Depth: 8.85 cm (3.48 in.) |
| Weight                        | 320 g (11.3 oz.)   |
| Input Voltage                 | 12/24 VDC  |
| Power Consumption             | 40 watts   |
| Operating Temperature         | -40 °C to 85 °C (-40 °F to 185 °F)   |
| Storage Temperature           | -40 °C to 85 °C (-40 °F to 185 °F)   |
| Charging Temperature          | 0 °C to 40 °C (32 °F to 104 °F)  |
| Humidity                      | 5% to 95% non-condensing   |
| Drop                          | 76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature.                |
| Electrostatic Discharge (ESD) | +/- 20kV air<br>+/- 10kV contact   |

### Trigger Handle Technical Specifications

| Item                          | Description  |
|-------------------------------|--|
| Dimensions                    | Height: 11.2 cm (4.41 in.)<br>Width: 6.03 cm (2.37 in.)<br>Depth: 13.4 cm (5.28 in.) |
| Weight                        | 110 g (3.8 oz.)  |
| Operating Temperature         | -20 °C to 50 °C (-4 °F to 122 °F)  |
| Storage Temperature           | -40 °C to 70 °C (-40 °F to 158 °F)   |
| Humidity                      | 10% to 95% non-condensing  |
| Drop                          | 1.8 m (6 feet) drops to concrete over temperature range.                             |
| Electrostatic Discharge (ESD) | +/- 20kV air<br>+/- 10kV contact   |

## Charging Cable Cup Technical Specifications

| Item                          | Description                        |
|-------------------------------|------------------------------------|
| Length                        | 25.4 cm (10.0 in.)                 |
| Input Voltage                 | 5.4 VDC                            |
| Operating Temperature         | -20 °C to 50 °C (-4 °F to 122 °F)  |
| Storage Temperature           | -40 °C to 70 °C (-40 °F to 158 °F) |
| Humidity                      | 10% to 95% non-condensing          |
| Electrostatic Discharge (ESD) | +/- 20kV air<br>+/- 10kV contact   |

## Snap-On USB Cable Technical Specifications

| Item                          | Description                        |
|-------------------------------|------------------------------------|
| Length                        | 1.5 cm (60.0 in.)                  |
| Input Voltage                 | 5.4 VDC (external power supply)    |
| Operating Temperature         | -20 °C to 50 °C (-4 °F to 122 °F)  |
| Storage Temperature           | -40 °C to 70 °C (-40 °F to 158 °F) |
| Humidity                      | 10% to 95% non-condensing          |
| Electrostatic Discharge (ESD) | +/- 20kV air<br>+/- 10kV contact   |

## DEX Cable Technical Specifications

| Item                          | Description                        |
|-------------------------------|------------------------------------|
| Length                        | 1.5 cm (60.0 in.)                  |
| Operating Temperature         | -20 °C to 50 °C (-4 °F to 122 °F)  |
| Storage Temperature           | -40 °C to 70 °C (-40 °F to 158 °F) |
| Humidity                      | 10% to 95% non-condensing          |
| Electrostatic Discharge (ESD) | +/- 20kV air<br>+/- 10kV contact   |



# Index

- A**
  - adaptive frequency hopping 12
  - adjust volume 20
  - ambient display setting 61
  - apn 10
  - approved cleanser 103
  - apps
    - accessing 73
    - camera 76
    - datawedge demonstration 81
    - PTT Express 83
    - RxLogger 87
    - RxLogger Utility 88
    - sound recorder 88
  - audio modes 19
- B**
  - barcode scanning
    - digital camera 36
    - DS3678 digital scanner 37
    - integrated imager 35
  - battery
    - low battery notification 57
    - monitor usage 57
  - battery management 56
    - battery level 56
    - battery present status 56
  - battery optimization 56
  - battery safety guidelines 102
  - bluetooth 1, 12
    - change name 15
    - PIN 13
    - power states 14
    - profiles 13
    - security 12
  - Bluetooth call 22
- C**
  - call forwarding 23
  - call waiting 24
  - caller ID 24
  - camera 70, 76
    - front camera photo settings 79
    - front camera video settings 81
    - photo settings 78
    - rear camera photo settings 78
    - rear camera video settings 80
    - recording videos 77
    - taking panoramic photos 77
    - taking photos 76
    - video settings 80
  - camera settings 78, 80
  - cast 16
  - change bluetooth name 15
  - cleaning 103, 104
    - battery connectors 105
    - camera and exit window 105
    - cradle connectors 105
    - display 105
    - frequency 105
    - housing 105
    - instructions 103
    - materials 104
  - cleaning instructions 104
  - conference call 22
  - cradle
    - connector cleaning 105
- D**
  - data capture
    - digital camera 36
    - DS3678 digital scanner 37
    - integrated imager 35
  - data capture options 12
  - datawedge 47
    - decoders 47
    - disabling 47
    - enable 47
  - datawedge demonstration 81
  - decoders 47

- digital camera 36
  - barcode scanning 36
  - data capture 36
- disconnect host computer 59
- display 12
- display settings 60
- DS3678
  - pairing 46
  - pairing using Bluetooth HID 46
  - scanning 42
- DS3678 digital scanner
  - barcode scanning 37
  - data capture 37

## E

- EAP 1
- edit apn 10
- emergency calling 19

## F

- file transfer 58
- fixed dialing numbers 23
- Flash 12
- font size 62

## G

- general sound setting 64

## H

- handset mode 19
- hard reset 106
- harmful ingredients 104
- headset mode 19
- home screen 50
  - rotation 51

## I

- imager 12
- integrated imager
  - barcode scanning 35
  - data capture 35
  - operational modes 35
- interactive sensor technology 57

## K

- keyboards 65
  - additional character tab 67
  - alpha tab 67
  - configuration 66

- editing text 66
- numeric tab 67

## L

- lock screen notifications 68
- low battery notification 57

## M

- maintenance
  - battery safety guidelines 102
  - clean battery connectors 105
  - clean camera and exit window 105
  - clean cradle connectors 105
  - clean display 105
  - clean housing 105
  - cleaning frequency 105
  - cleaning instructions 103
  - cleaning materials required 104
  - device cleaning instructions 104
  - harmful ingredients 104
  - maintaining the device 102
  - special cleaning notes 104
- managing notifications 54
- memory 12
- messaging 72
- monitor battery usage 57

## N

- near field communication 1
- near field communications 16
- NFC 16
  - sharing information 17
- notational conventions 12
- notification icons 51
- notifications
  - lock screen 68
  - managing 54

## O

- operating system 12
- operational modes
  - decode mode 35
  - pick list mode 35

## P

- pairing
  - DS3678 46
  - RS507/RS6000 hands-free imager 43
  - using Bluetooth HID (RS507/RS6000) 45
  - using Bluetooth HID(DS3678) 46

- using simple serial interface(RS507/RS6000) 44
- Pairing Using Bluetooth Human Interface Device 45
- panoramic 77
- photo transfer 58
- photos
  - camera settings 78
  - panoramic 77
  - taking 76
- PTT Express
  - audible indicators 84
  - disabling communication 86
  - enabling communication 84
  - group calls 85
  - notification icons 84
  - private response 85
  - talk groups 85
  - user interface 83
  - Voice Client 83
- PTT-Express
  - PTT communication 85

## Q

- quick access panel 55
- quick settings
  - edit icons 56

## R

- radios 12
- RAM 12
- remove wi-fi 2
- reset device
  - hard reset 106
  - soft reset 106
- RS507
  - scanning 39
- RS507 hands-free imager 36
- RS507 scanning 40, 42
- RS507/RS6000
  - pairing 43
  - pairing using Bluetooth HID 45
  - pairing using simple serial interface 44
- RS6000
  - bluetooth ring scanner 36
  - scanning 41
- RS6000 scanning 41
- RxLogger 87
  - configuration 87
  - configuration file 87
  - disable logging 87
  - enable logging 87
  - extract log files 87
- RxLogger Utility 88

## S

- scanning
  - considerations 37
  - DS3678 42
  - RS507 39
  - RS6000 41
- screen font size 62
- security 1
- setting
  - camera 78, 80
- settings 60
  - accessing 60
  - ambient display 61
  - camera photos 78
  - camera videos 80
  - display 60
  - general sound 64
- sharing information using NFC 17
- SMS 72
- soft reset 106
- software version 14
- software versions 13
- sound recorder 88
- speaker mode 19
- status bar 51
- symbologies 114

## T

- taking a panoramic photo 77
- transferring files using USB 58
- troubleshooting 106
  - TC75x 106

## U

- USB 58
- using a wired headset 19
- using the dialer 20

## V

- vehicle cradle 79, 81
- videos
  - camera settings 80
  - recording 77
- voicemail setup 24

## W

- WEP 1
- Wi-Fi direct 7
- wired headset 19
- wireless local area network 1

wireless wide area network 1  
WLAN 1  
WPA 1  
WWAN 1

