

AVIATION

USER MANUAL

KPM180H

TK180

CUSTOM

CUSTOM S.p.A.
Via Isaac Newton 4
43010 Fontevivo (PR)
Italy
Tel. : +39 0521-680111
Fax : +39 0521-610701
http: www.custom.biz

Customer Service Department:
www.custom4u.it

© 2025 CUSTOM S.p.A. – Italy.

All rights reserved. Total or partial reproduction of this manual in whatever form, whether by printed or electronic means, is forbidden. While guaranteeing that the information contained in it has been carefully checked, CUSTOM S.p.A. and other entities utilized in the realization of this manual bear no responsibility for how the manual is used.

Information regarding any errors found in it or suggestions on how it could be improved are appreciated. Since products are subject to continuous check and improvement, CUSTOM S.p.A. reserves the right to make changes in information contained in this manual without prior notification.

The pre-installed multimedia contents are protected from Copyright CUSTOM S.p.A. Other company and product names mentioned herein may be trademarks of their respective companies. Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. CUSTOM S.p.A. assumes no responsibility with regard to the performance or use of these products.

THE IMAGES USED IN THIS MANUAL ARE USED AS AN ILLUSTRATIVE EXAMPLES. THEY COULDN'T REPRODUCE THE DESCRIBED MODEL FAITHFULLY.

UNLESS OTHERWISE SPECIFIED, THE INFORMATION GIVEN IN THIS MANUAL ARE REFERRED TO ALL MODELS IN PRODUCTION AT THE ISSUE DATE OF THIS DOCUMENT.

GENERAL INSTRUCTIONS

CUSTOM S.p.A. declines all responsibility for accidents or damage to persons or property occurring as a result of tampering, structural or functional modifications, unsuitable or incorrect installations, environments not in keeping with the equipment's protection degree or with the required temperature and humidity conditions, failure to carry out maintenance and periodical inspections and poor repair work.

GENERAL SAFETY INFORMATION

Your attention is drawn to the following actions that could compromise the characteristics of the product:

- Read and retain the instructions which follow.
- Follow all indications and instructions given on the device.
- Make sure that the surface on which the device rests is stable. If it is not, the device could fall, seriously damaging it.
- Make sure that the device rests on a hard (non-padded) surface and that there is sufficient ventilation.
- Do not fix indissolubly the device or its accessories such as power supplies unless specifically provided in this manual.
- When positioning the device, make sure cables do not get damaged.
- [Only OEM equipment] The equipment must be installed in a kiosk or system that provides mechanical, electrical and fire protection.
- The mains power supply must comply with the rules in force in the Country where you intend to install the equipment.
- Make sure that there is an easily-accessible outlet with a capacity of no less than 10A closely to where the device is to be installed.
- Make sure the power cable provided with the appliance, or that you intend to use is suitable with the wall socket available in the system.
- Make sure the electrical system that supplies power to the device is equipped with a ground wire and is protected by a differential switch.
- Before any type of work is done on the machine, disconnect the power supply.
- Use the type of electrical power supply indicated on the device label.
- These devices are intended to be powered by a separately certified power module having an SELV, non-energy hazardous output. (IEC60950-1 second edition).
- [Only POS equipment] The energy to the equipment must be provided by power supply approved by CUSTOM S.p.A.
- Take care the operating temperature range of equipment and its ancillary components.
- Do not block the ventilation openings.
- Do not insert objects inside the device as this could cause short-circuiting or damage components that could jeopardize printer functioning.
- Do not carry out repairs on the device yourself, except for the normal maintenance operations given in the user manual.
- The equipment must be accessible on these components only to trained, authorized personnel.
- Periodically perform scheduled maintenance on the device to avoid dirt build-up that could compromise the correct, safe operation of the unit.
- Do not touch the head heating line with bare hands or metal objects. Do not perform any operation inside the printer immediately after printing because the head and motor tend to become very hot.
- Use consumables approved by CUSTOM S.p.A.



THE CE MARK AFFIXED TO THE PRODUCT CERTIFY THAT THE PRODUCT SATISFIES THE BASIC SAFETY REQUIREMENTS.

The device is in conformity with the essential Electromagnetic Compatibility and Electric Safety requirements laid down in Directives 2014/30/EU and 2014/35/EU inasmuch as it was designed in conformity with the provisions laid down in the following Standards:

- EN 55032 (*Electromagnetic compatibility of multimedia equipment - Emission Requirements*)
- EN 55024/EN55035 (*Electromagnetic compatibility of multimedia equipment - Immunity requirements*)
- EN IEC/EN62368-1 (*Audio/video, information and communication technology equipment*)

The device is in conformity with the essential requirements laid down in Directives 2014/53/EU about devices equipped with intentional radiators. The Declaration of Conformity and other available certifications can be downloaded from the site www.custom4u.it.



GUIDELINES FOR THE DISPOSAL OF THE PRODUCT

The crossed-out rubbish bin logo means that used electrical and electronic products shall NOT be mixed with unsorted municipal waste. For more detailed information about recycling of this product, refer to the instructions of your country for the disposal of these products.

- Do not dispose of this equipment as miscellaneous solid municipal waste, but arrange to have it collected separately.
- The re-use or correct recycling of the electronic and electrical equipment (EEE) is important in order to protect the environment and the wellbeing of humans.
- In accordance with European Directive WEEE 2012/19/EU, special collection points are available to which to deliver waste electrical and electronic equipment and the equipment can also be handed over to a distributor at the moment of purchasing a new equivalent type.
- The public administration and producers of electrical and electronic equipment are involved in facilitating the processes of the re-use and recovery of waste electrical and electronic equipment through the organisation of collection activities and the use of appropriate planning arrangements.
- Unauthorised disposal of waste electrical and electronic equipment is punishable by law with the appropriate penalties.
- For the waste sorting of the packaging materials, please check the local waste disposal laws.



The format used for this manual improves use of natural resources reducing the quantity of necessary paper to print this copy.



FCC STATEMENT
(FEDERAL COMMUNICATIONS COMMISSIONS).

This product meets the ENERGY STAR®
guidelines for energy efficiency.

This note is valid only for device bringing FCC
trademark.

For more information about ENERGY STAR®,
visit www.energystar.gov.

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following conditions:
The devices may not cause harmful interference.
The devices must accept any interference received,
including interference that may cause undesired
operation.


This note is valid only for device bringing
ENERGY STAR® trademark.

NOTE: This equipment has been tested and found
to comply with the limits for a Class B digital device,
pursuant to Part 15 of the FCC Rules. These limits are
designed to provide reasonable protection against
harmful interference in a residential installation. This
equipment generates, uses and can radiate radio
frequency energy and, if not installed and used in
accordance with the instructions, may cause harmful
interference to radio communications. However,
there is no guarantee that interference will not occur
in a particular installation. If this equipment does
cause harmful interference to radio or television
reception, which can be determined by turning the
equipment off and on, the user is encouraged to try
and correct the interference by one or more of the
following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment
and receiver.
Connect the equipment into an outlet on a circuit
different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV
technician for help.

Modifications to this product not authorized by
CUSTOM S.p.A. could void the FCC & Industry Canada
regulations and negate your authority to operate
the product.

This Class B digital apparatus complies with
Canadian ICES-003.
Cet appareil numérique de la classe B est conforme
à la norme NMB-003 du Canada.

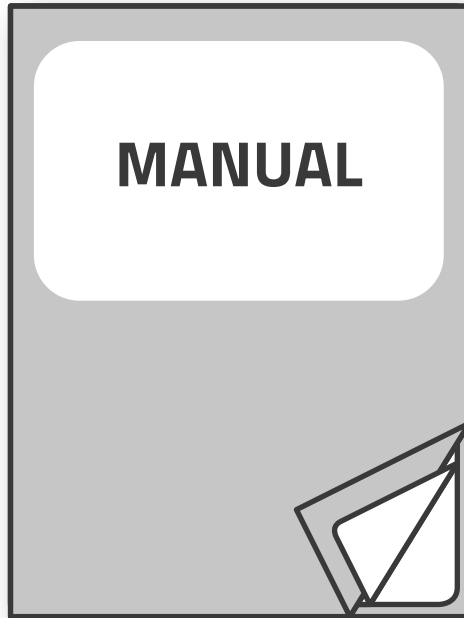

For details about using of tool "PrinterSet",
refer to the manual with code **78200000001800**.


TABLE OF CONTENTS

1	INTRODUCTION	9
2	IDENTIFICATION OF THE MODELS	11
3	DESCRIPTION	13
3.1	Box contents	13
3.2	Device components: external views	19
3.3	Device components: keys and connectors panel	28
3.4	Device components: internal views	29
3.5	Product labels	33
3.6	Key functions: power up	34
3.7	Key functions: standby	35
3.8	Status messages	36
3.9	Display messages	37
4	INSTALLATION	39
4.1	Fastening	39
4.2	Low paper sensor	45
4.3	Connections	47
4.4	Pinout	48
4.5	Driver and SDK	51
5	OPERATION	53
5.1	Opening device cover	53
5.2	Adjusting device for 82.5 mm paper width	55
5.3	Adjusting device for 54 mm paper width	56
5.4	Adjusting device for 20 mm to 25 mm paper width	59
5.5	Adjusting the alignment sensors	60
5.6	Switch the device on	62
5.7	Loading the paper roll	71
5.8	Issuing ticket	75
5.9	License activation for RFID tag reading	77

6	CONFIGURATION	79
6.1	Configuration by keys	79
6.2	Configuration by software	81
6.3	Configuration by file	83
6.4	Device status	85
6.5	Communication parameters	86
6.6	Operation parameters	88
6.7	Alignment parameters	91
6.8	Hexadecimal dump	92
7	ALIGNMENT	93
7.1	Enable alignment	94
7.2	Calibration	95
8	MAINTENANCE	99
8.1	Printer paper jam	99
8.2	Autocutter paper jam	100
8.3	Planning of cleaning operations	102
8.4	Cleaning	104
8.5	Upgrade firmware	110
9	SPECIFICATION	111
9.1	Hardware specifications	111
9.2	Device dimensions	116
9.3	Device dimensions with pretensioner modules	125
9.4	Device dimensions with paper roll holder	127
9.5	Device dimensions with paper roll holder	131
9.6	Device dimensions with ATB ticket tray	133
9.7	Device dimensions with ATB ticket tray	135
9.8	Device dimensions with paper roll holder	136
9.9	Device dimensions with rear connectors protection	137
9.10	Paper roll holder dimensions with power supply container	139
9.11	Dimensions of power supply and power cord	141
10	ACCESSORIES	143
11	TECHNICAL SERVICE	153

1 INTRODUCTION

This document is divided into sections and chapters. Each chapter can be reached by the index at the beginning of this document. The index can be reached by the button on each page as shown in the diagram below.

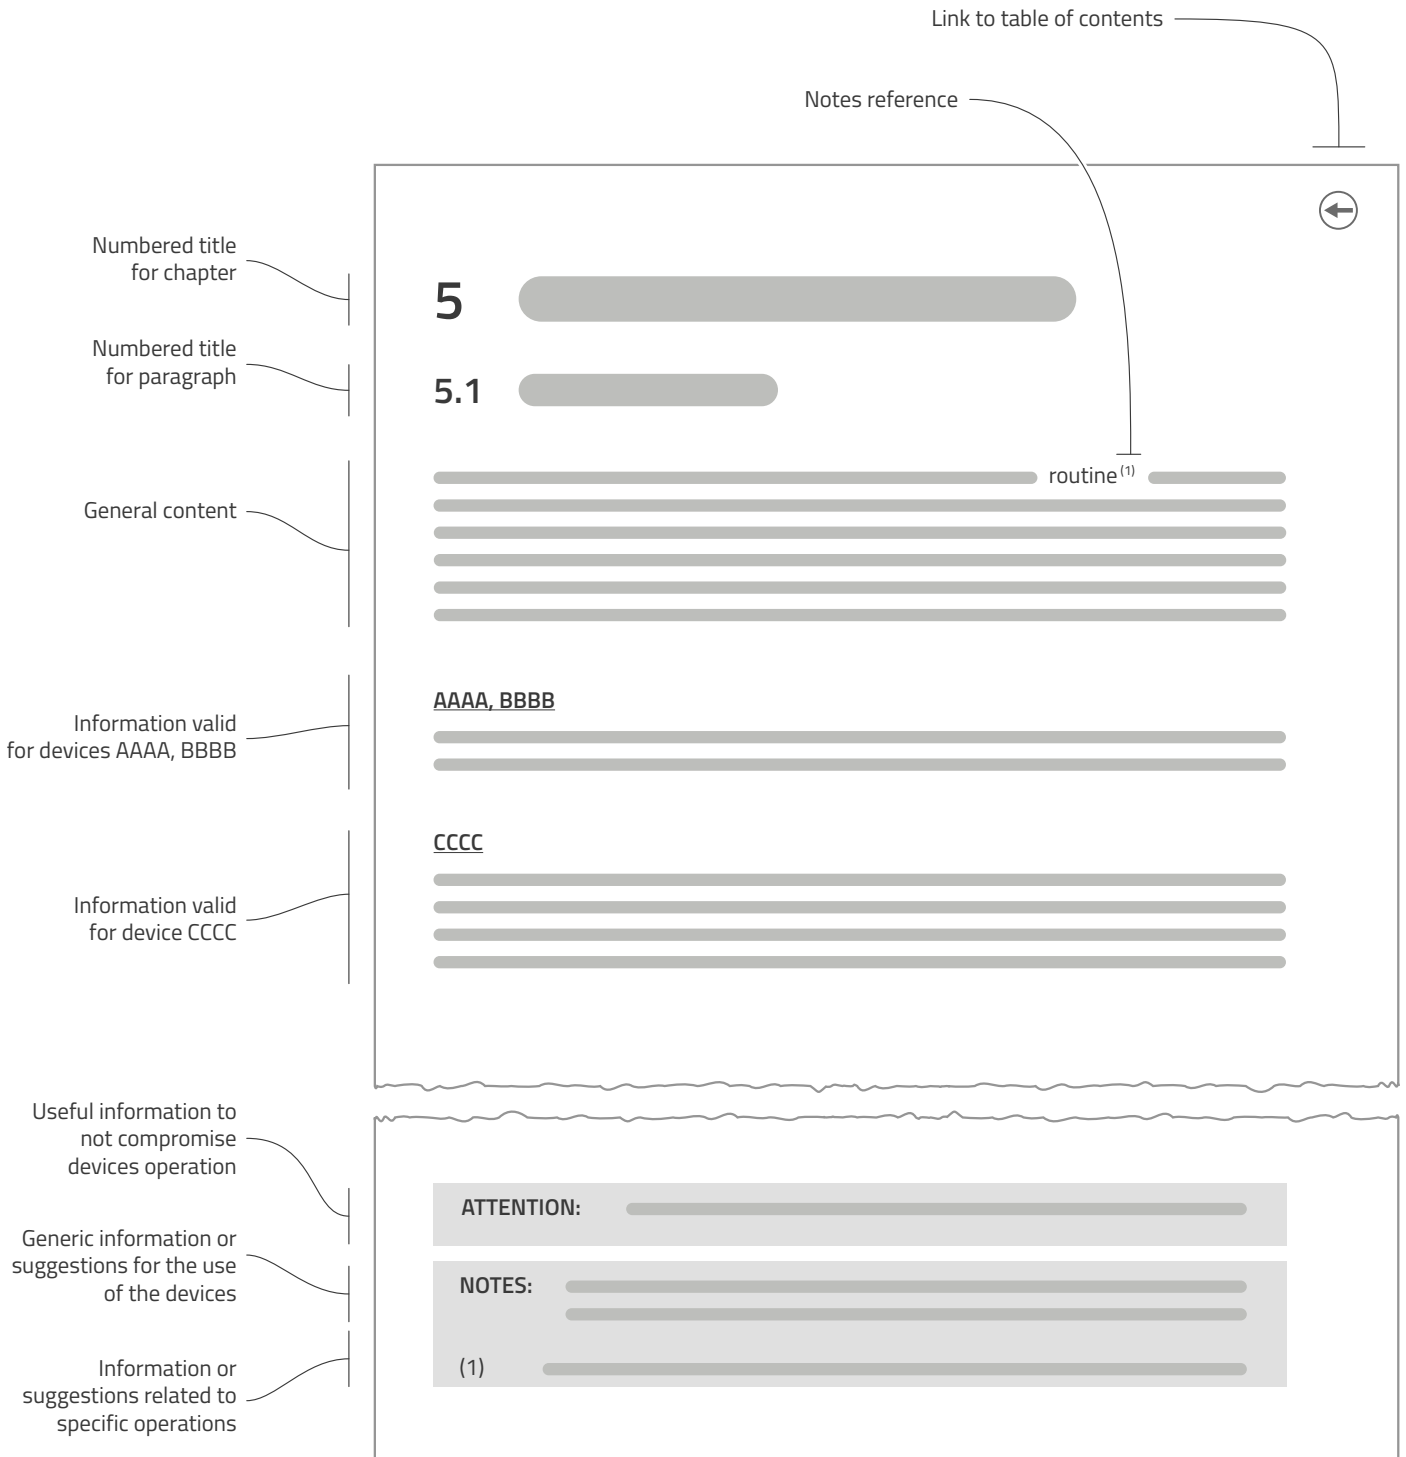





2 IDENTIFICATION OF THE MODELS

NOMENCLATURE	DESCRIPTION
KPM180H 1	KPM180H base configuration
KPM180H 2	KPM180H with autocutter and presenter
KPM180H 3	KPM180H with autocutter, presenter and external RFID reader/writer
KPM180H 4	KPM180H with autocutter and presenter (linerless model)
KPM180H 5	KPM180H with autocutter, presenter and external RFID reader/writer (linerless model)
KPM180H 6	KPM180H with autocutter, presenter and internal RFID reader/writer (linerless model)
TK180 MET 1	TK180 with metal chassis
TK180 MET 2	TK180 with metal chassis and external RFID reader/writer
TK180 MET 3	TK180 with metal chassis and internal RFID reader/writer (linerless model)
TK180 CUT 1	TK180 with metal chassis, autocutter and presenter
TK180 CUT 2	TK180 with metal chassis, autocutter, presenter and external RFID reader/writer
TK180 CUT 3	TK180 with metal chassis, autocutter, presenter and internal RFID reader/writer (linerless model)
TK180 CUT 4	TK180 with metal chassis, autocutter, presenter and external RFID reader/writer (linerless model)
TK180 PLAS 1	TK180 with plastic chassis
TK180 PLAS 2	TK180 with plastic chassis and external RFID reader/writer
TK180 PLAS 3	TK180 with plastic chassis and internal RFID reader/writer (linerless model)





3 DESCRIPTION


3.1 Box contents

Remove all the box contents (see following figures) being careful not to damage the packing material so that it may be re-used if the device is to be transported in the future.

Make sure that all the components illustrated below are present and that there are no signs of damage. If there are, contact customer service.

KPM180H 1, KPM180H 2, KPM180H 3
KPM180H 4, KPM180H 5


1. Documentation (installation instruction sheet)
2. Cable for low paper sensor
3. Board for external low paper sensor
4. Reducer for paper width (optional)
5. Paper block guide
6. Device

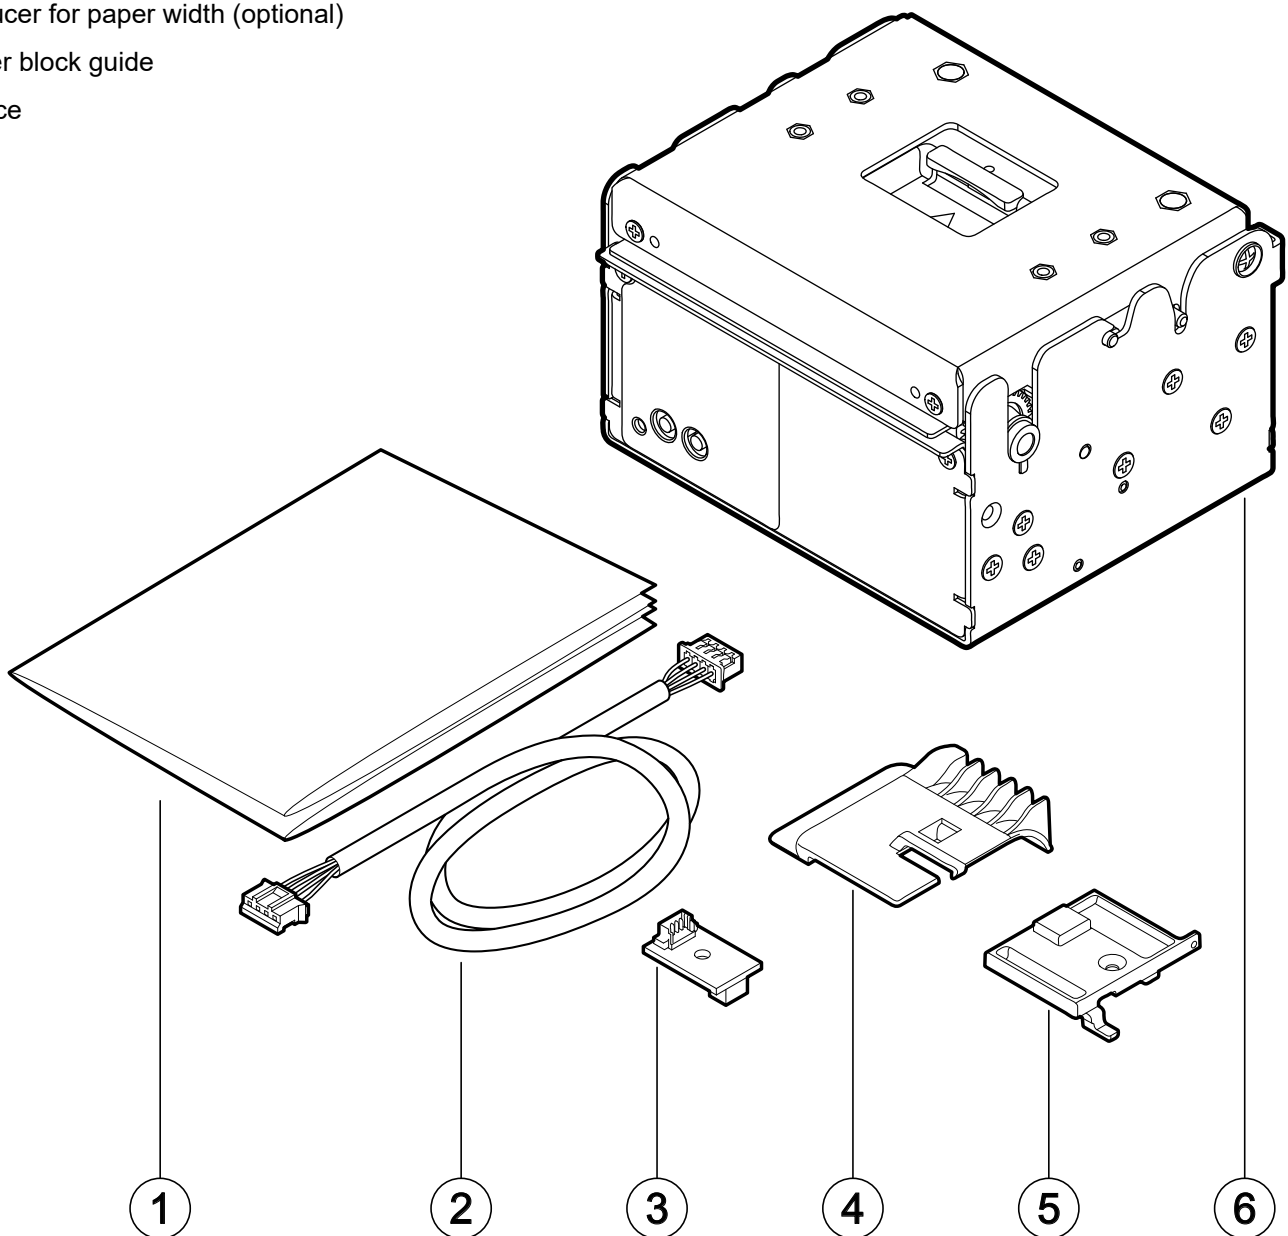



KPM180H 6


1. Documentation (installation instruction sheet)
2. Cable for low paper sensor
3. Board for external low paper sensor
4. Paper block guide
5. Screw for paper block guide fixing
6. Device

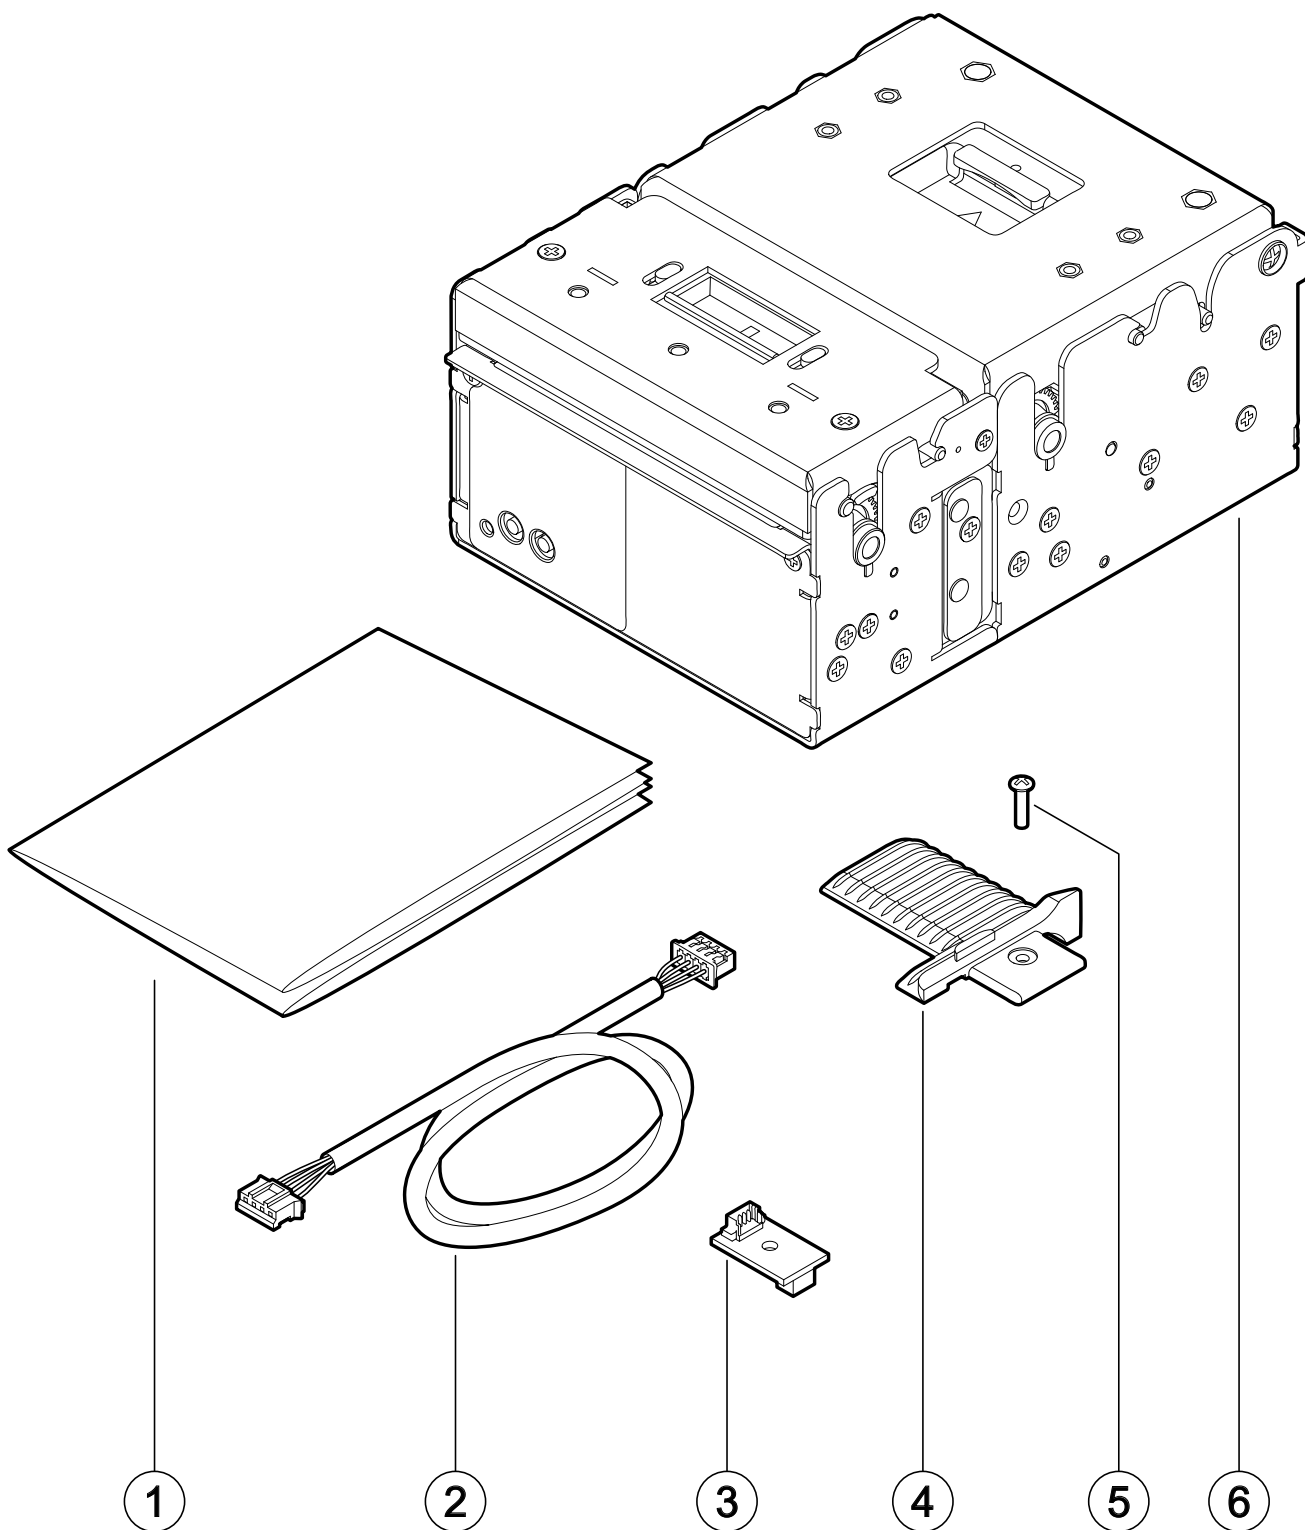



TK180 MET 1, TK180 MET 2
TK180 CUT 1, TK180 CUT 2, TK180 CUT 4


1. AC adapter
2. Documentation (short guide)
3. Reducer for paper width (optional)
4. Paper block guide
5. Device

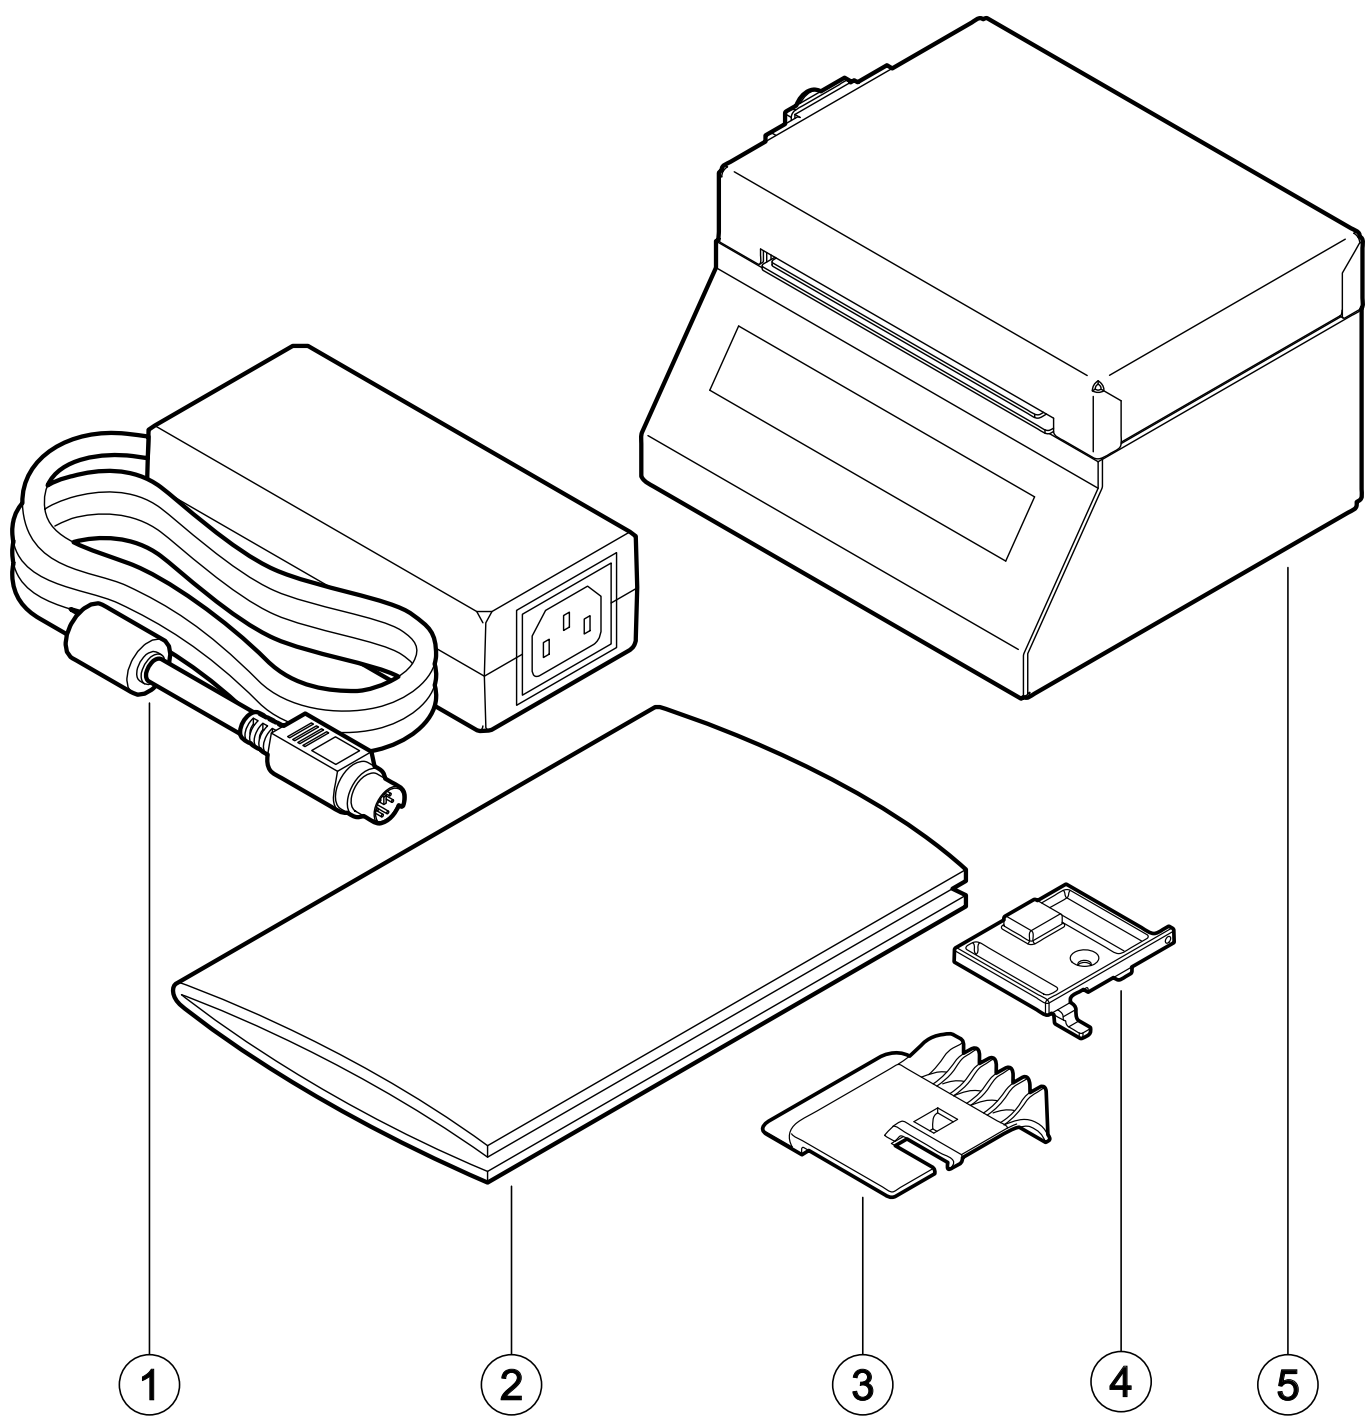



TK180 MET 3
TK180 CUT 3


1. AC adapter
2. Documentation (short guide)
3. Paper block guide
4. Screw for paper block guide fixing
5. Device

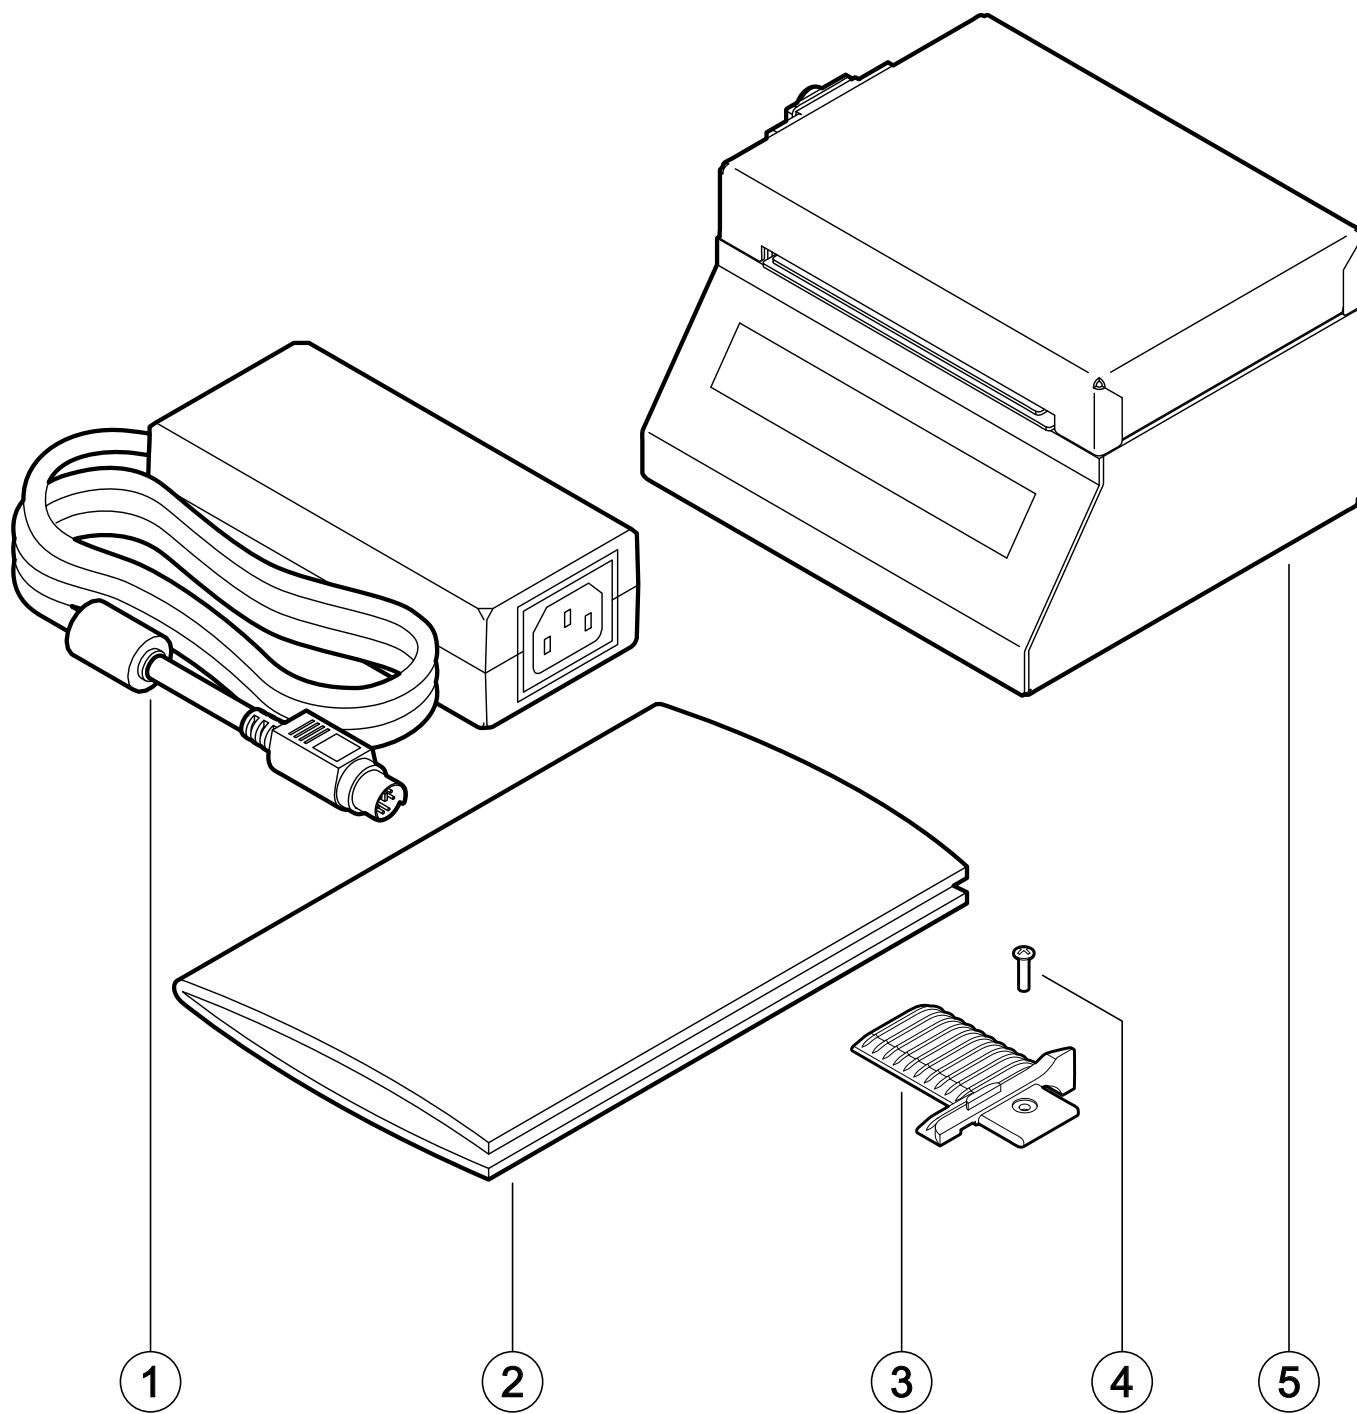



TK180 PLAS 1, TK180 PLAS 2


1. Documentation (short guide)
2. Reducer for paper width (optional)
3. Paper block guide
4. AC adapter
5. Device

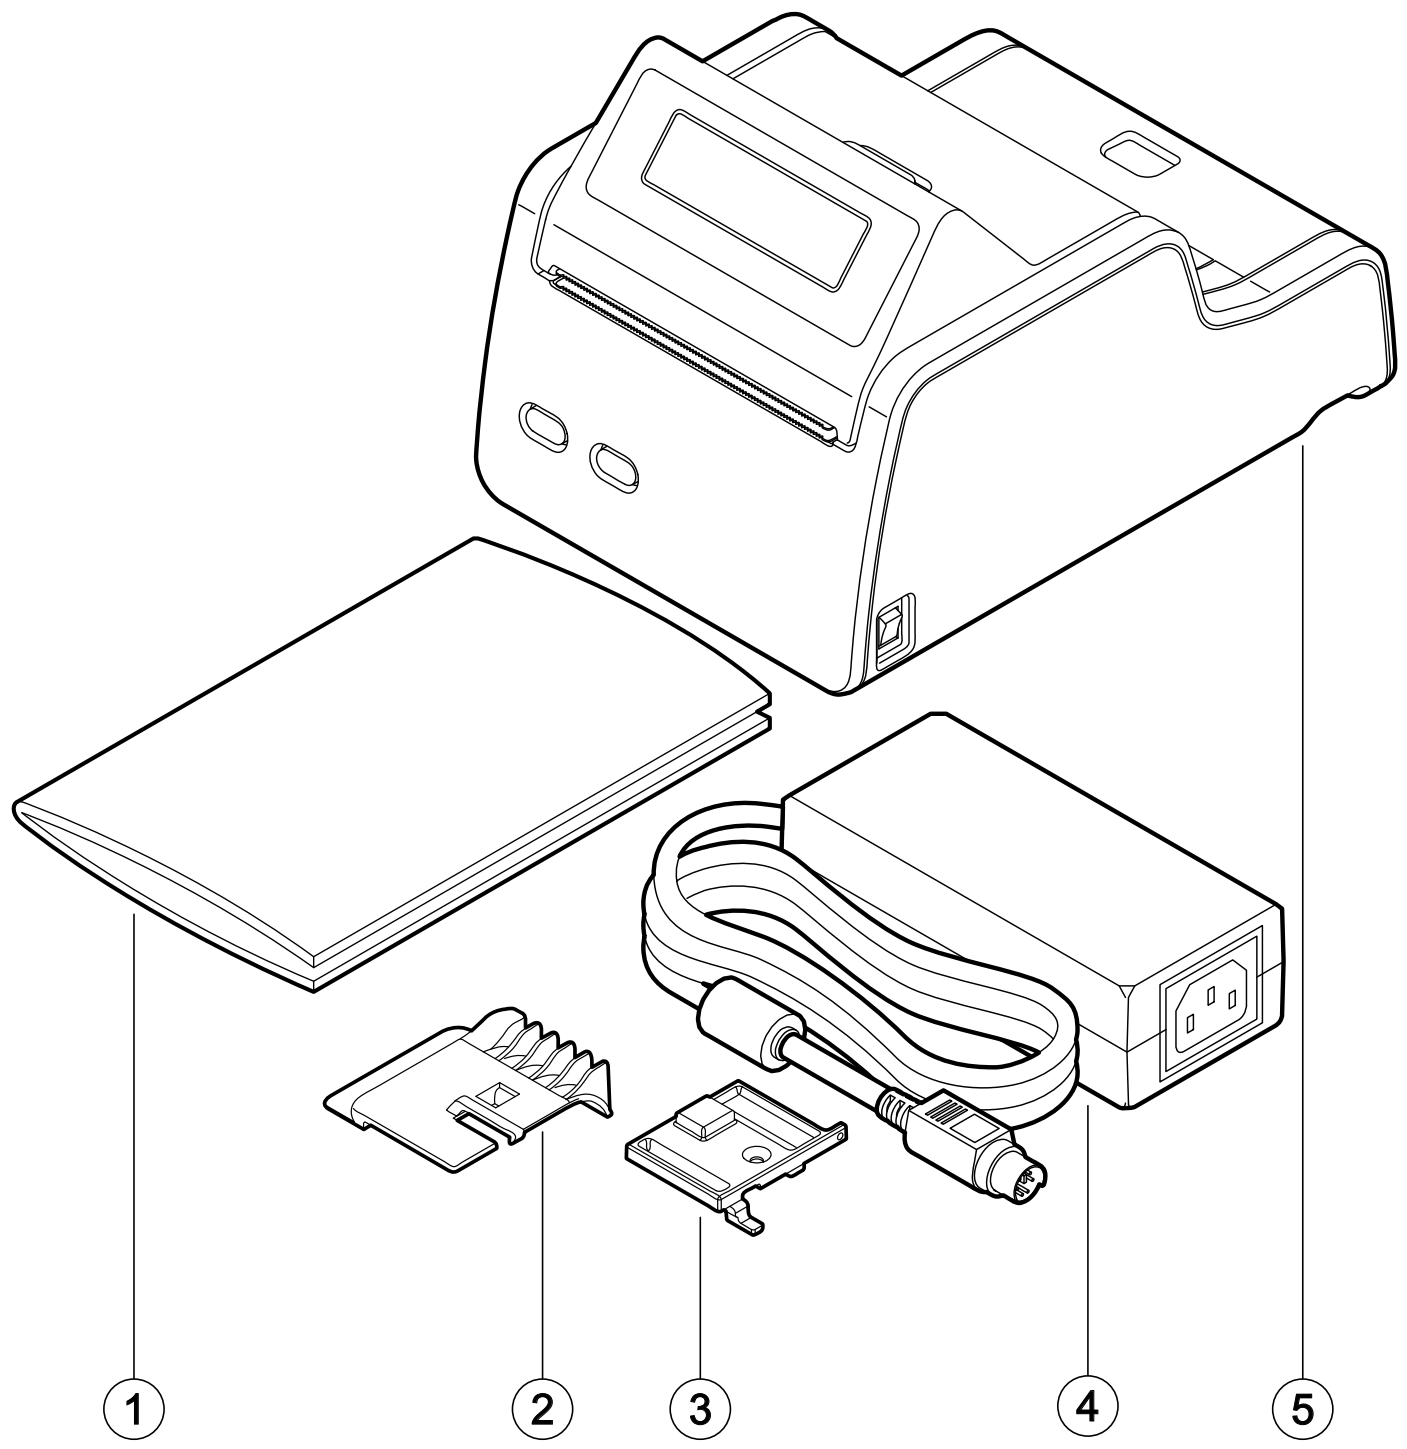



TK180 PLAS 3

1. Documentation (short guide)
2. Paper block guide
3. Screw for paper block guide fixing
4. AC adapter
5. Device

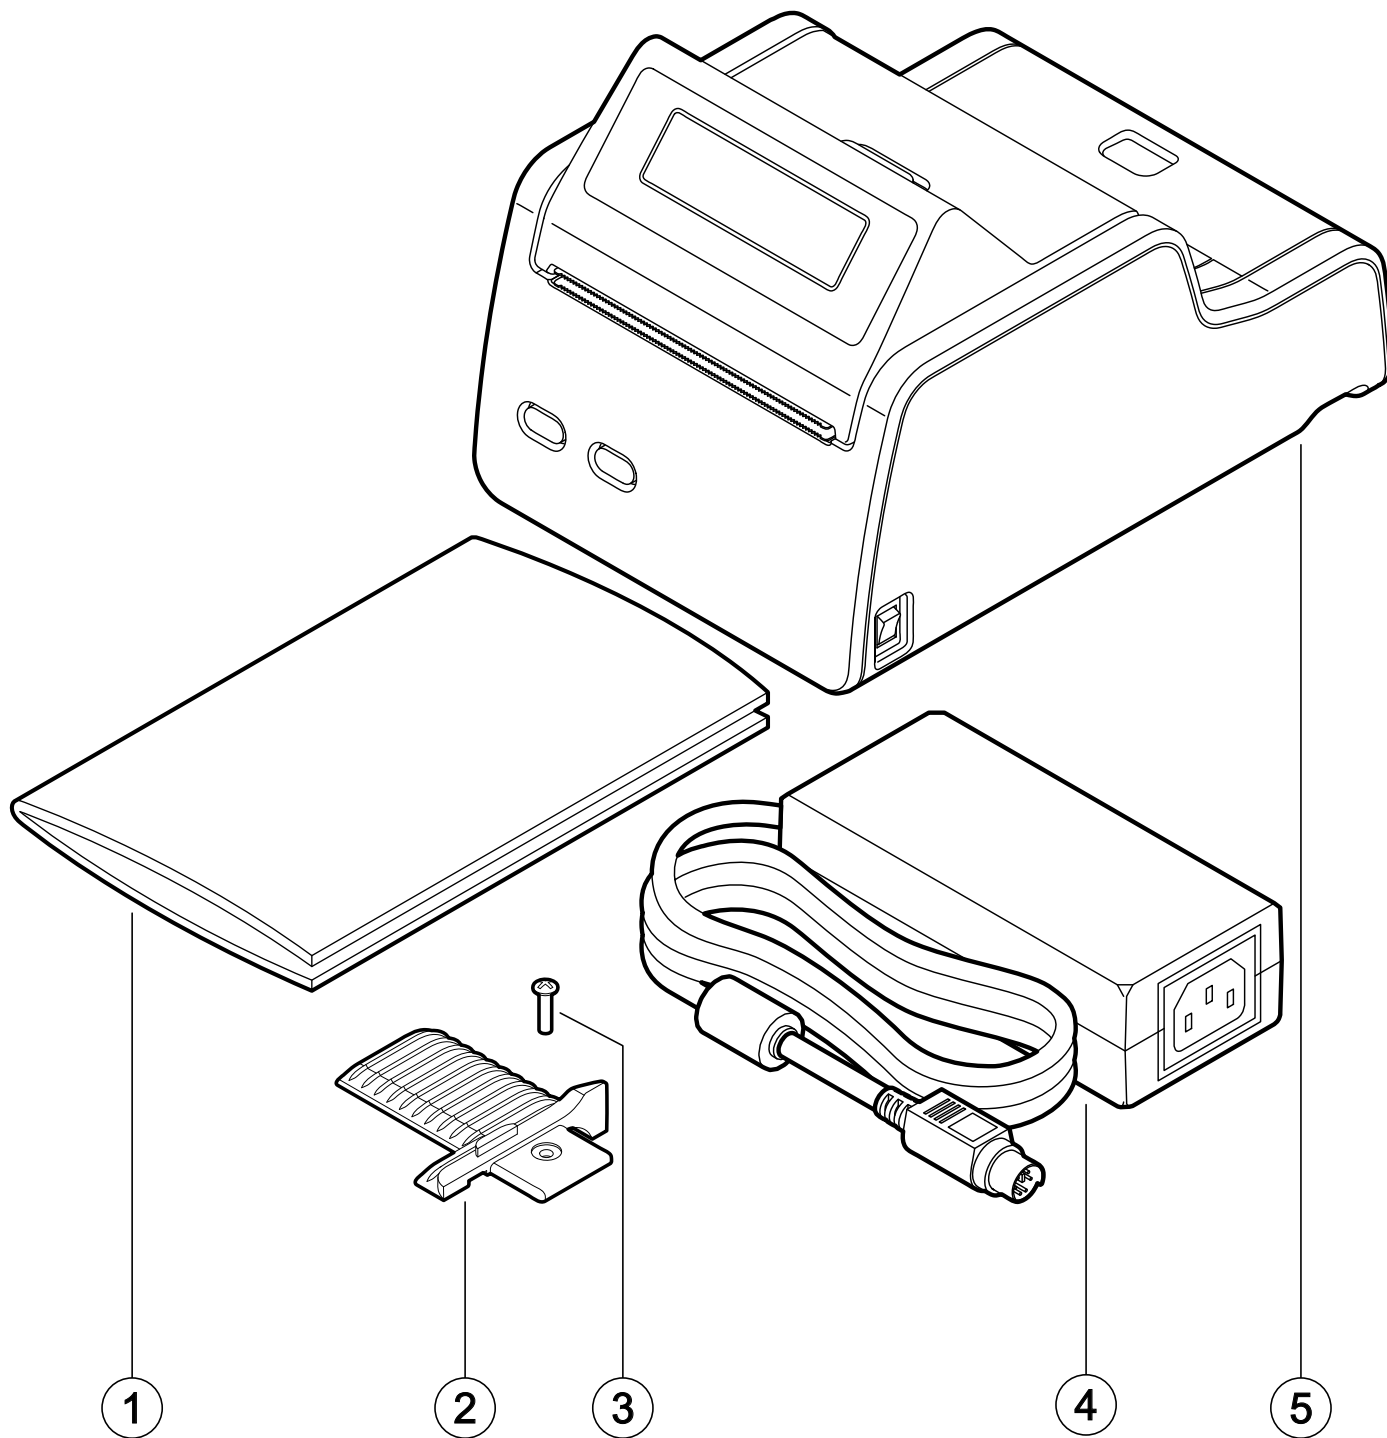




3.2 Device components: external views

KPM180H 1


1. Device chassis
2. Device cover
3. Opening lever for device cover
4. Paper out
5. Status LED
6. LF key
7. FF key
8. Paper input
9. Adjustable cursor for paper in
10. Keys and connectors panel
(see [paragraph 3.3](#))
11. Product label

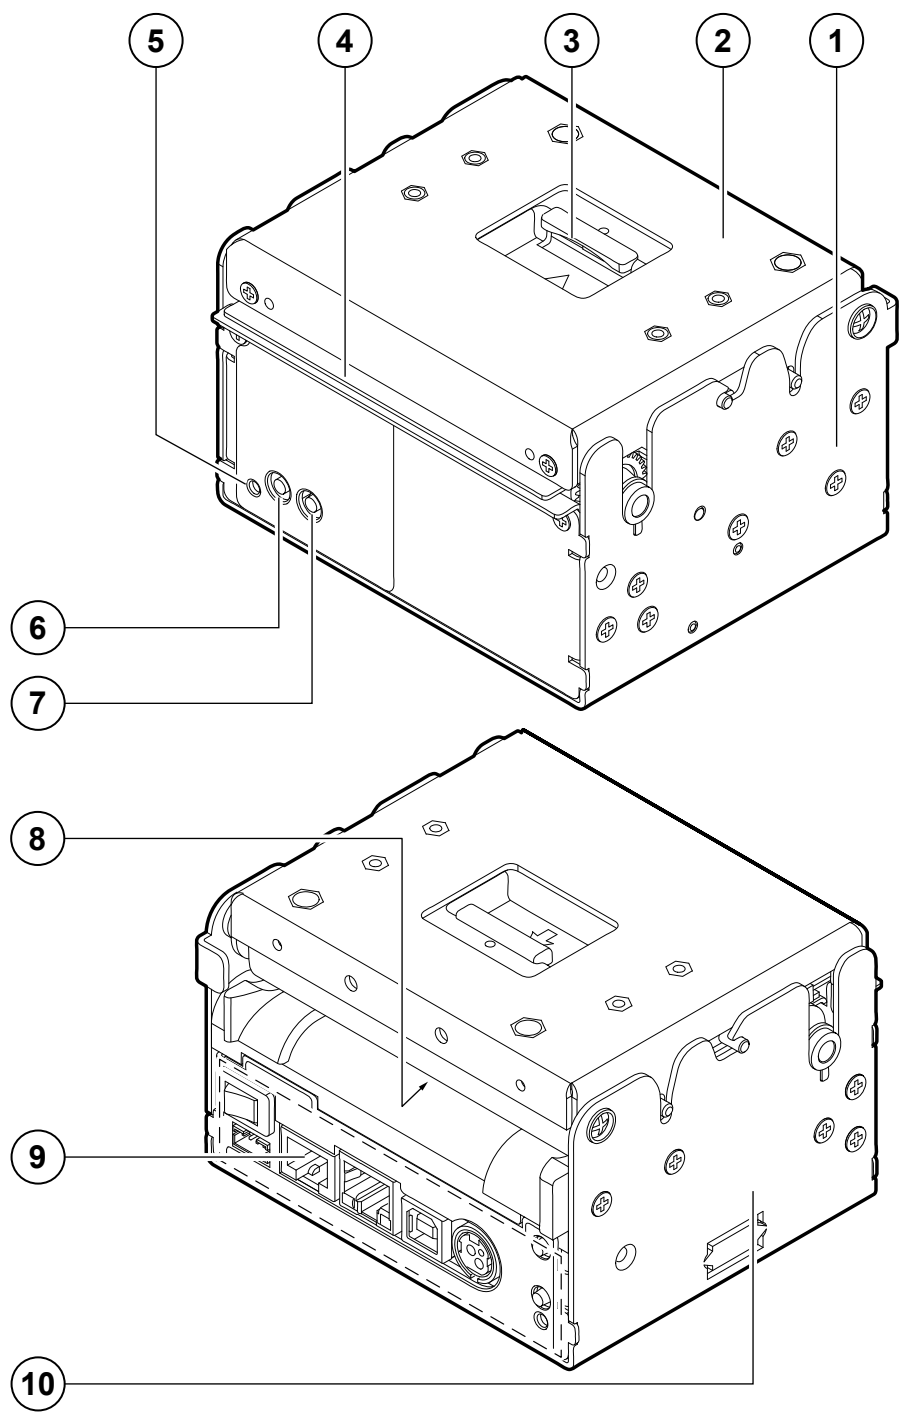



KPM180H 2, KPM180H 4, KPM180H 6


1. Device chassis
2. Device cover
3. Opening lever for printer group cover
4. Autocutter
5. Release lever for presenter group cover
6. Paper out
7. Status LED
8. LF key
9. FF key
10. Presenter group
11. RFID antenna
(only for KPM180H 6)
12. Paper input
13. Keys and connectors panel
(see [paragraph 3.3](#))
14. Product label

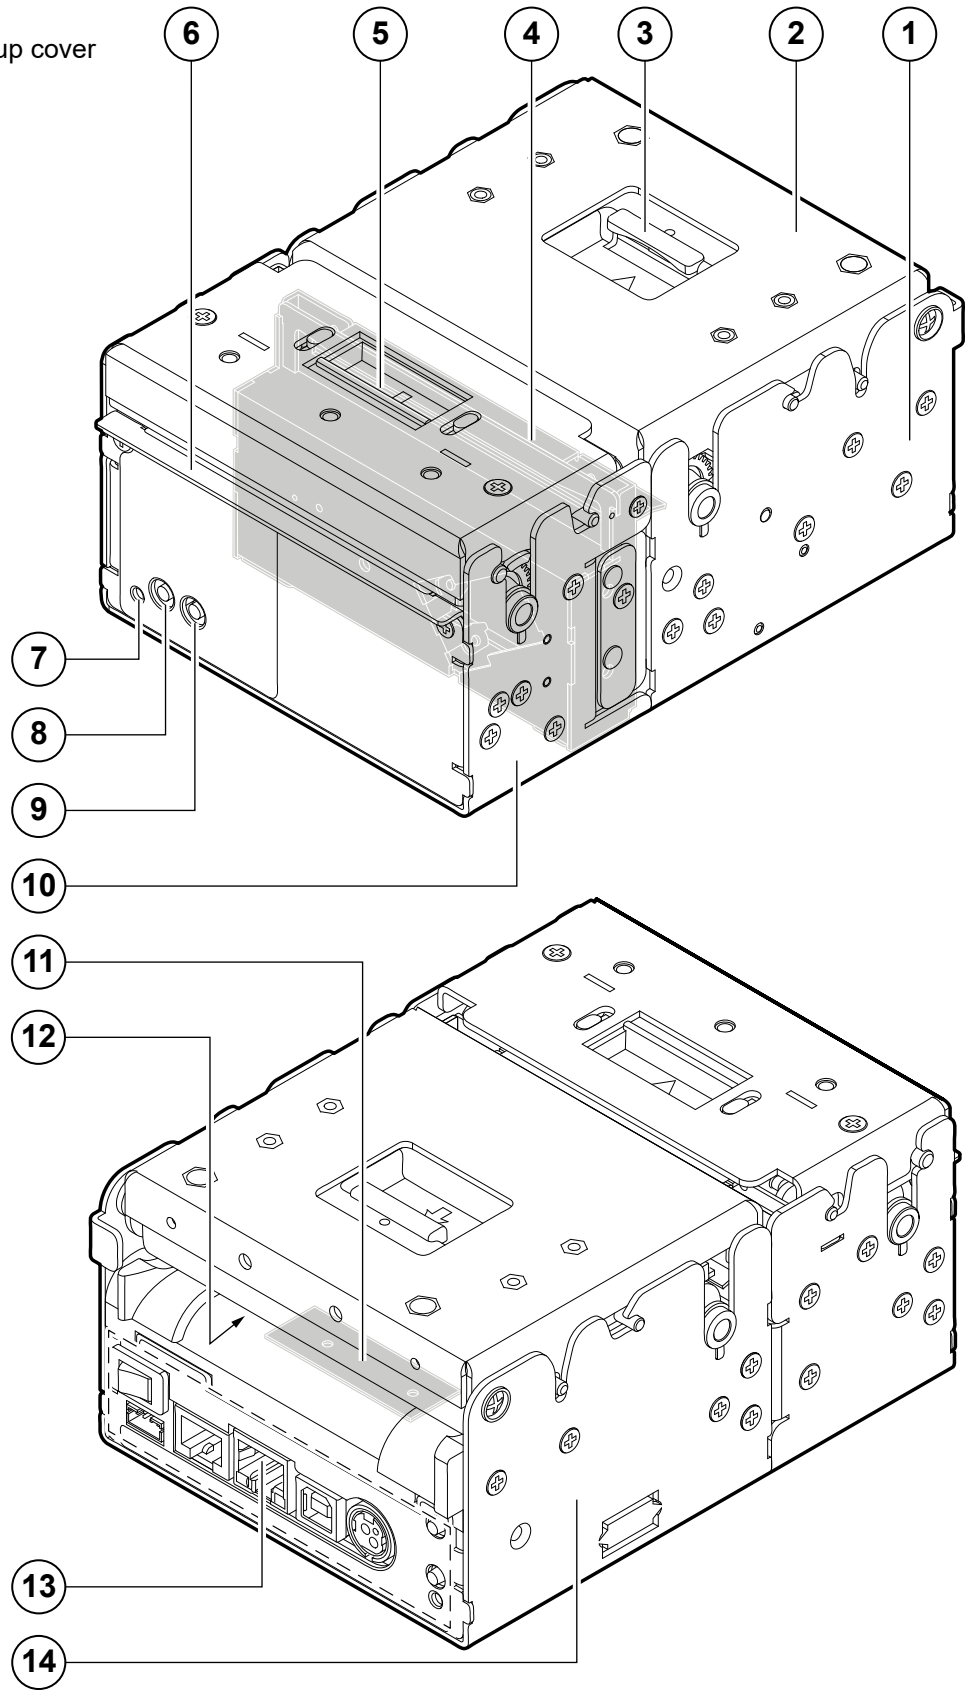



KPM180H 3, KPM180H 5



- 1. RFID reader
- 2. Device cover
- 3. Opening lever for printer group cover
- 4. Autocutter
- 5. Release lever for presenter group cover
- 6. Paper out
- 7. Status LED
- 8. LF key
- 9. FF key
- 10. Presenter group
- 11. Device chassis
- 12. Paper input
- 13. Keys and connectors panel
(see [paragraph 3.3](#))
- 14. Product label

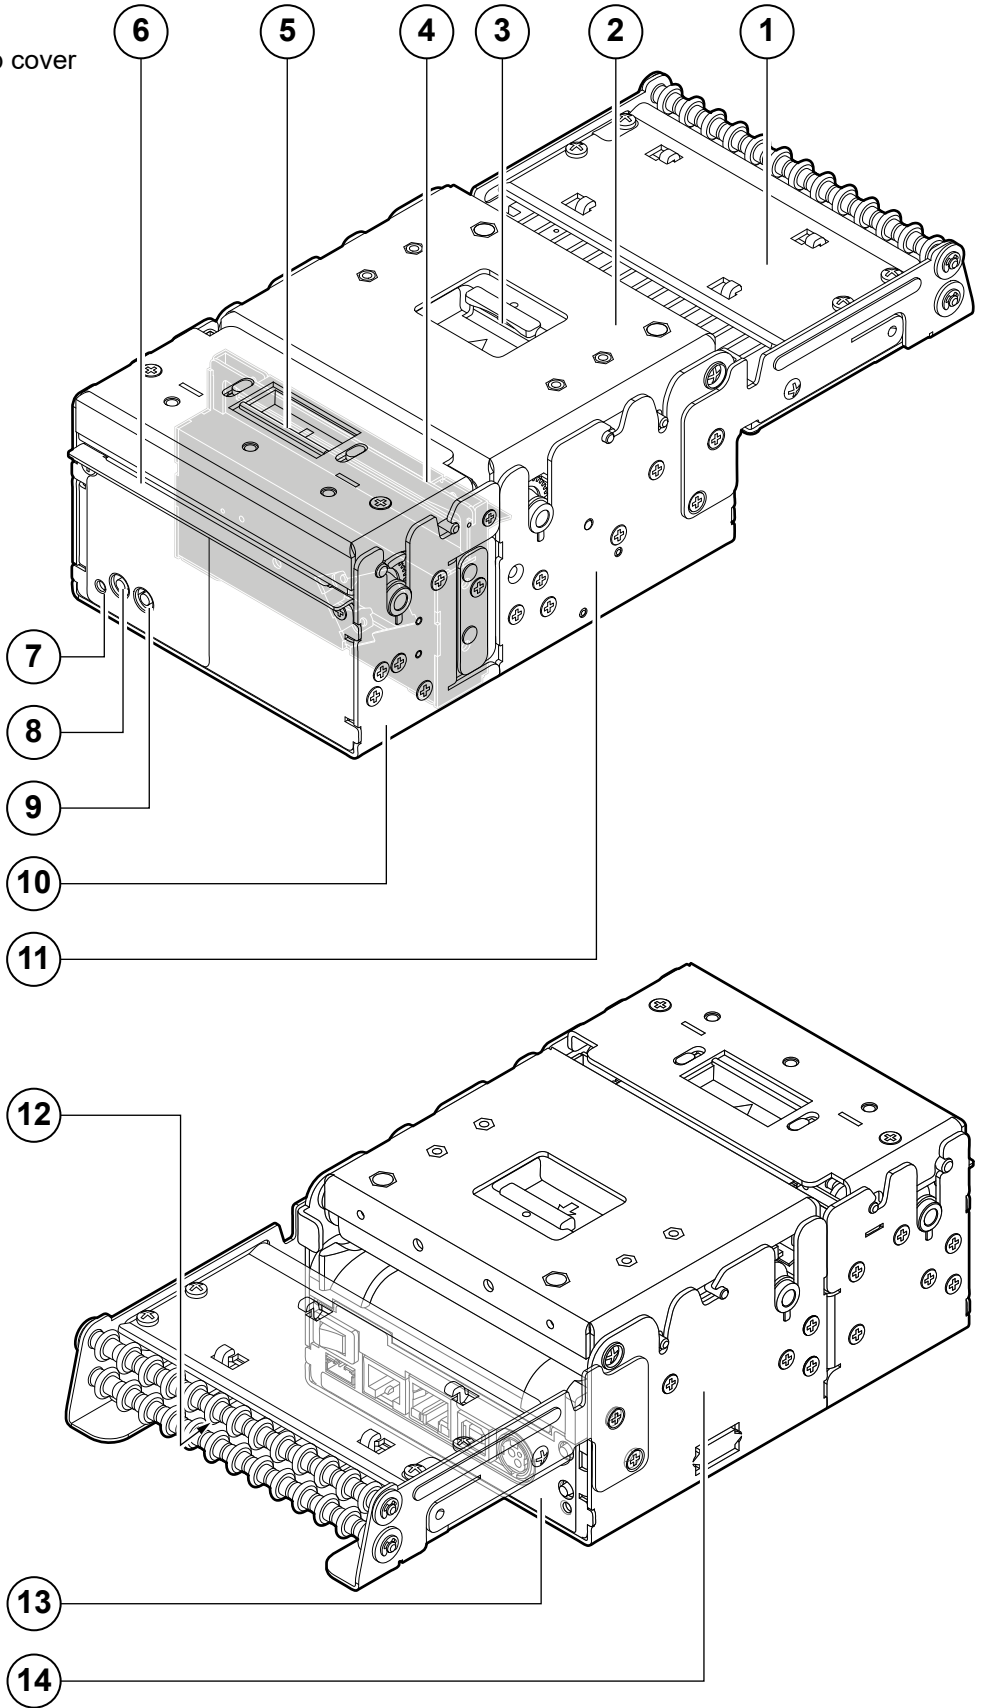



TK180 MET 1, TK180 MET 3



- 1. Device chassis
- 2. Device cover
- 3. Paper out
- 4. Display
- 5. RFID antenna
(only for TK180 MET 3)
- 6. Paper input
- 7. Keys and connectors panel
(see [paragraph 3.3](#))

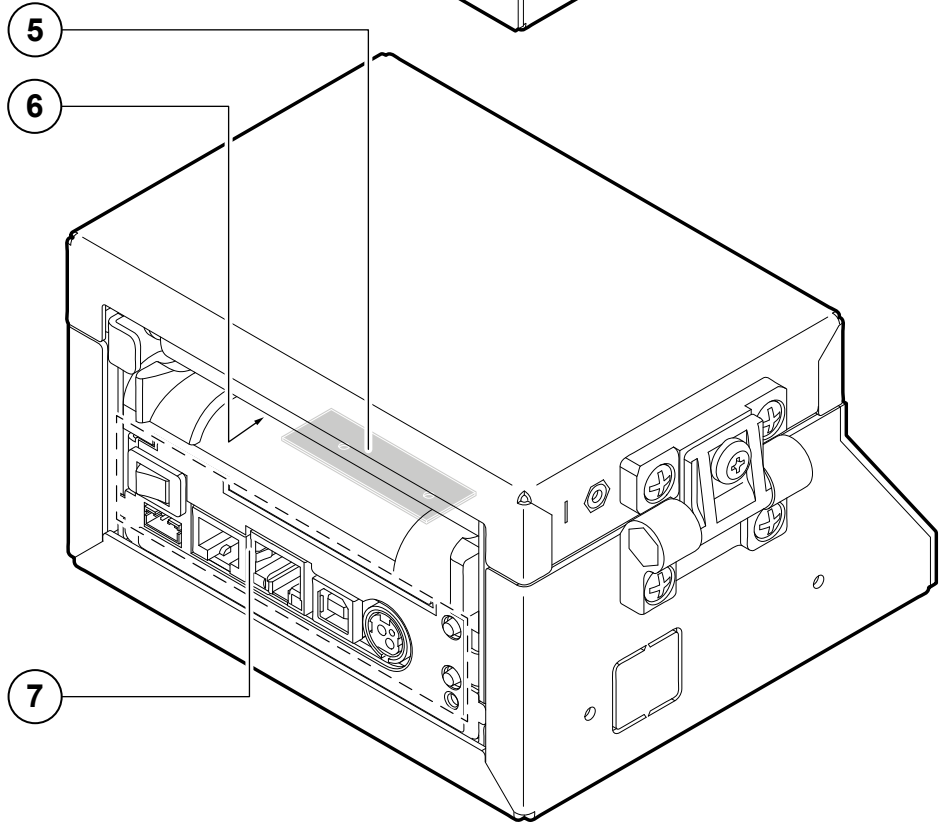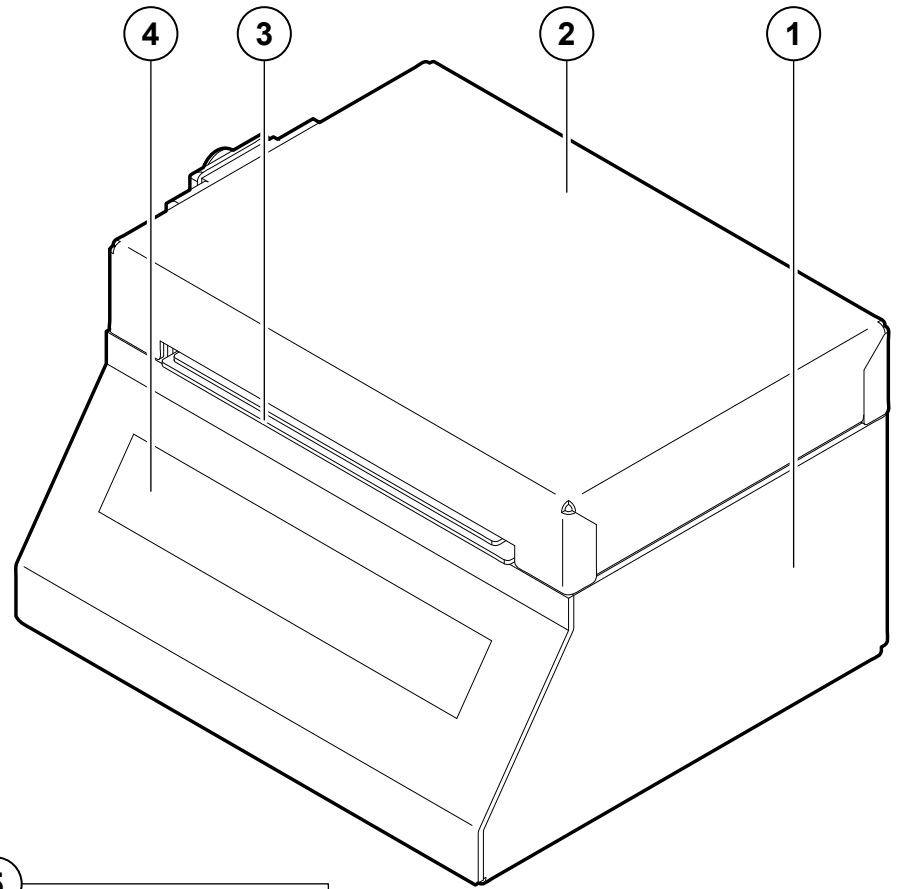



TK180 CUT 1, TK180 CUT 3



- 1. Device chassis
- 2. Device cover
- 3. Autocutter
- 4. Display
- 5. Paper out
- 6. RFID antenna
(only for TK180 CUT 3)
- 7. Paper input
- 8. Keys and connectors panel
(see [paragraph 3.3](#))

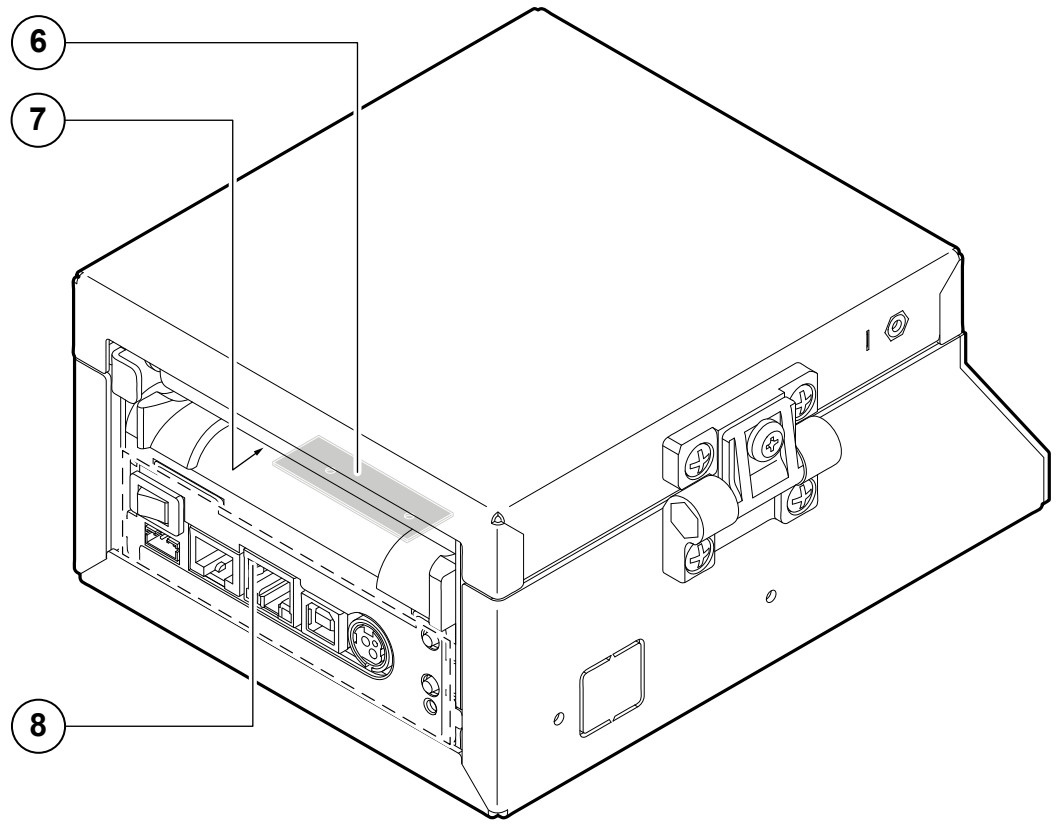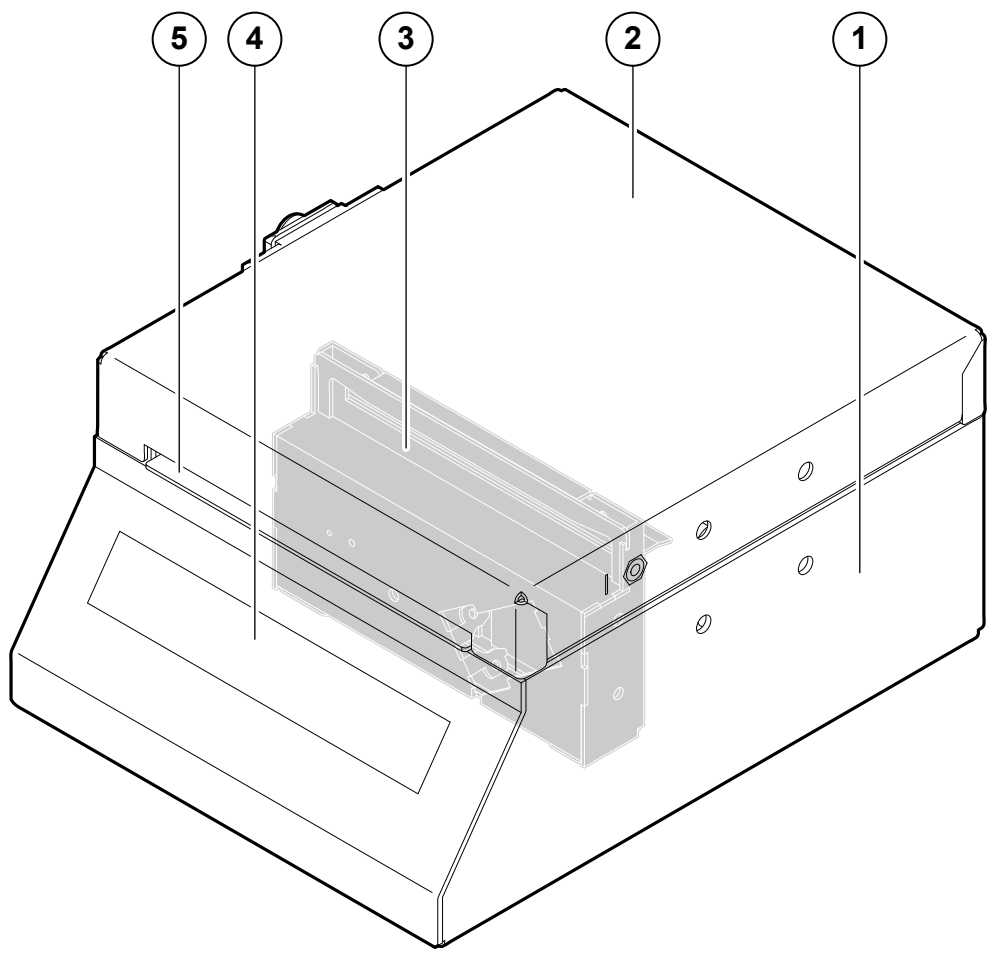



TK180 CUT 2, TK180 CUT 4



- 1. RFID reader
- 2. Device chassis
- 3. Device cover
- 4. Autocutter
- 5. Display
- 6. Paper out
- 7. Paper input
- 8. Keys and connectors panel
(see [paragraph 3.3](#))

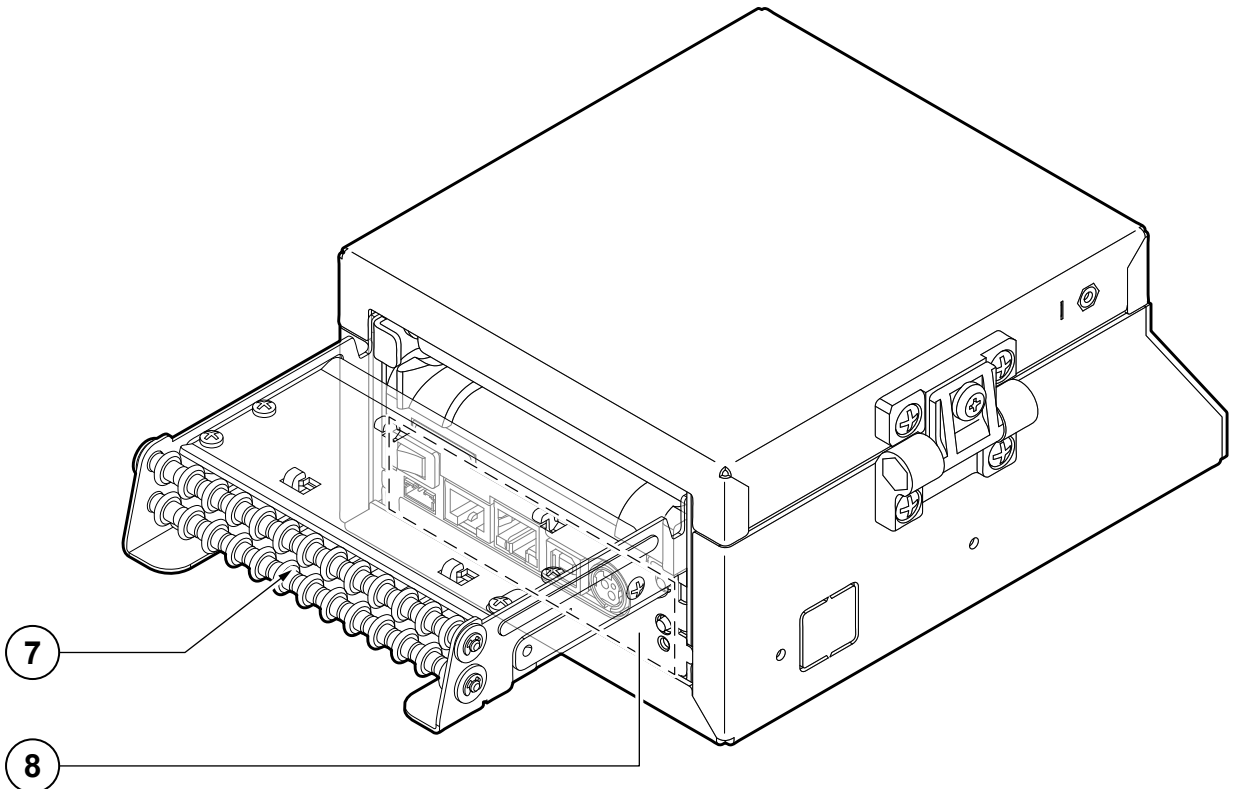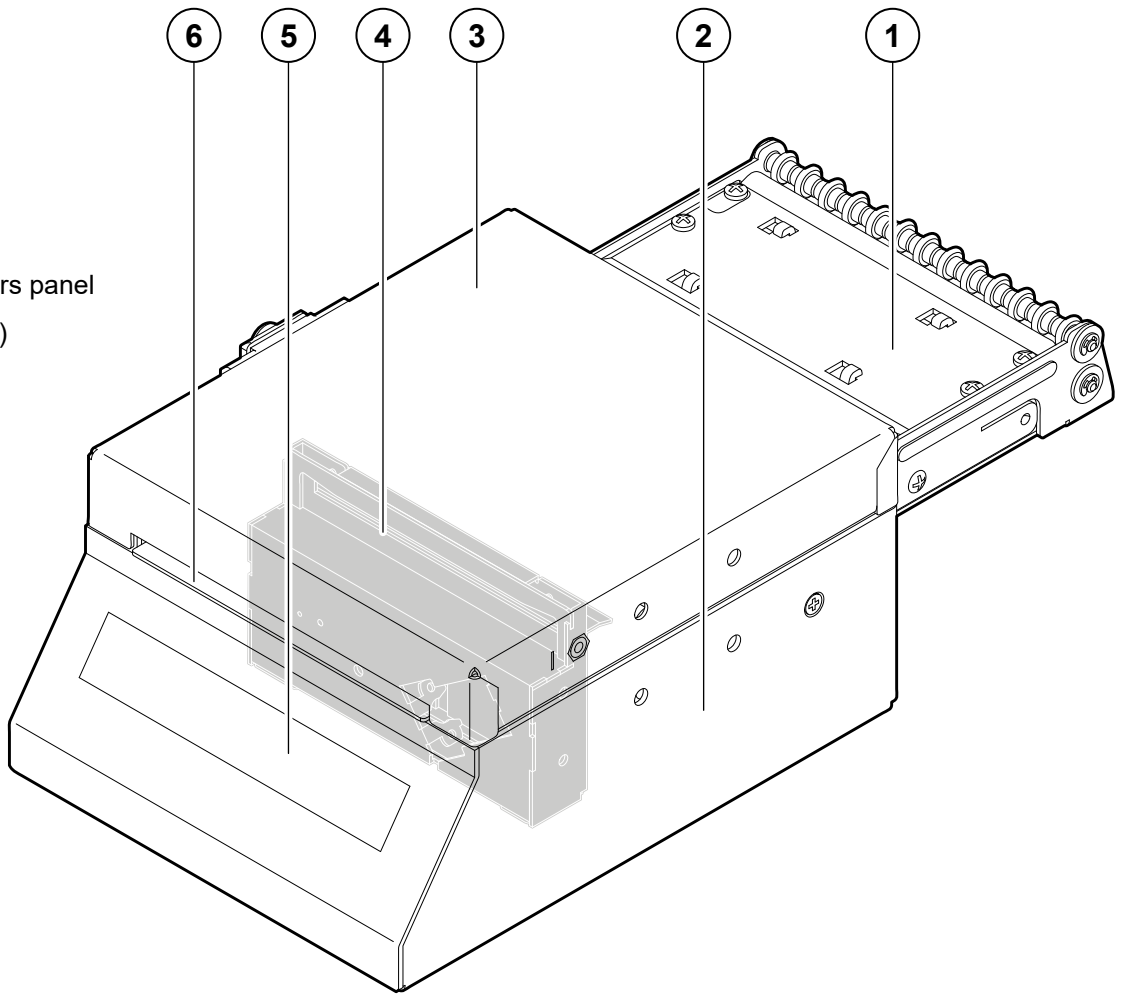



TK180 MET 2


- 1. RFID reader
- 2. Device chassis
- 3. Device cover
- 4. Paper out
- 5. Display
- 6. Paper input
- 7. Keys and connectors panel
(see [paragraph 3.3](#))

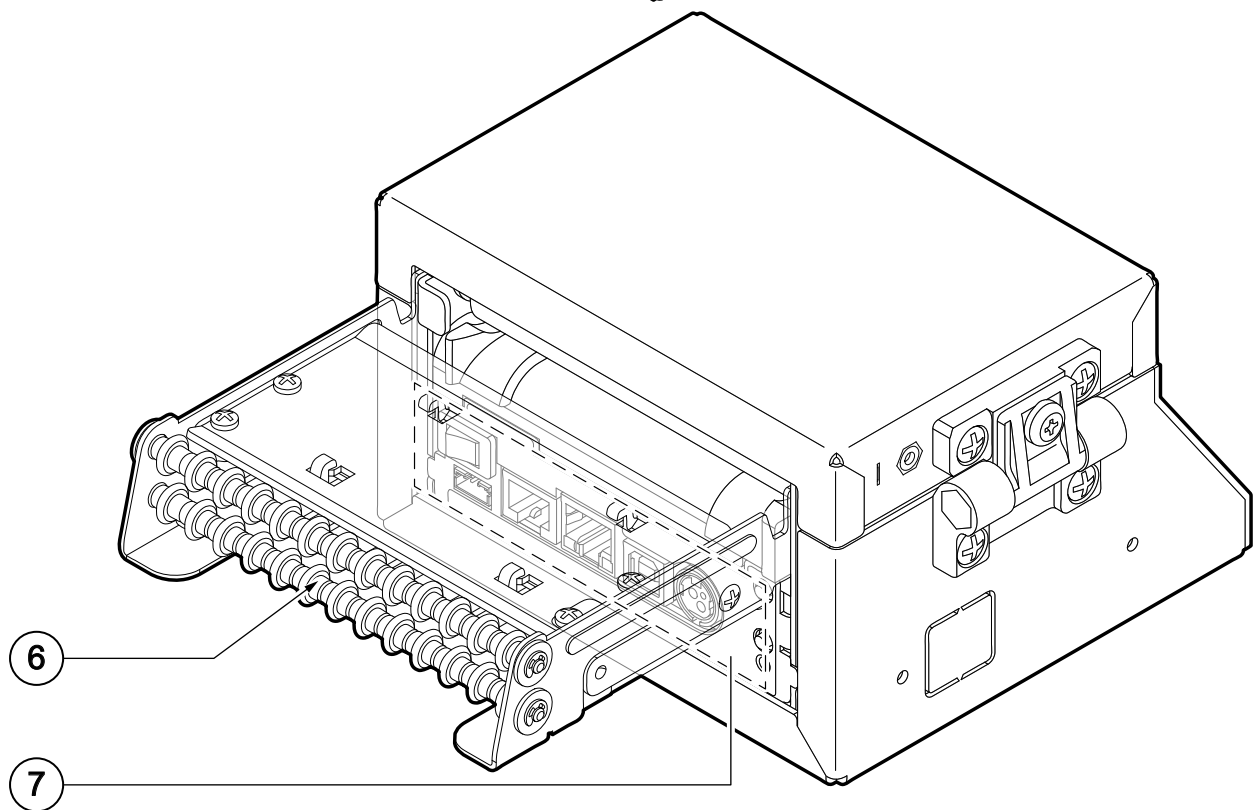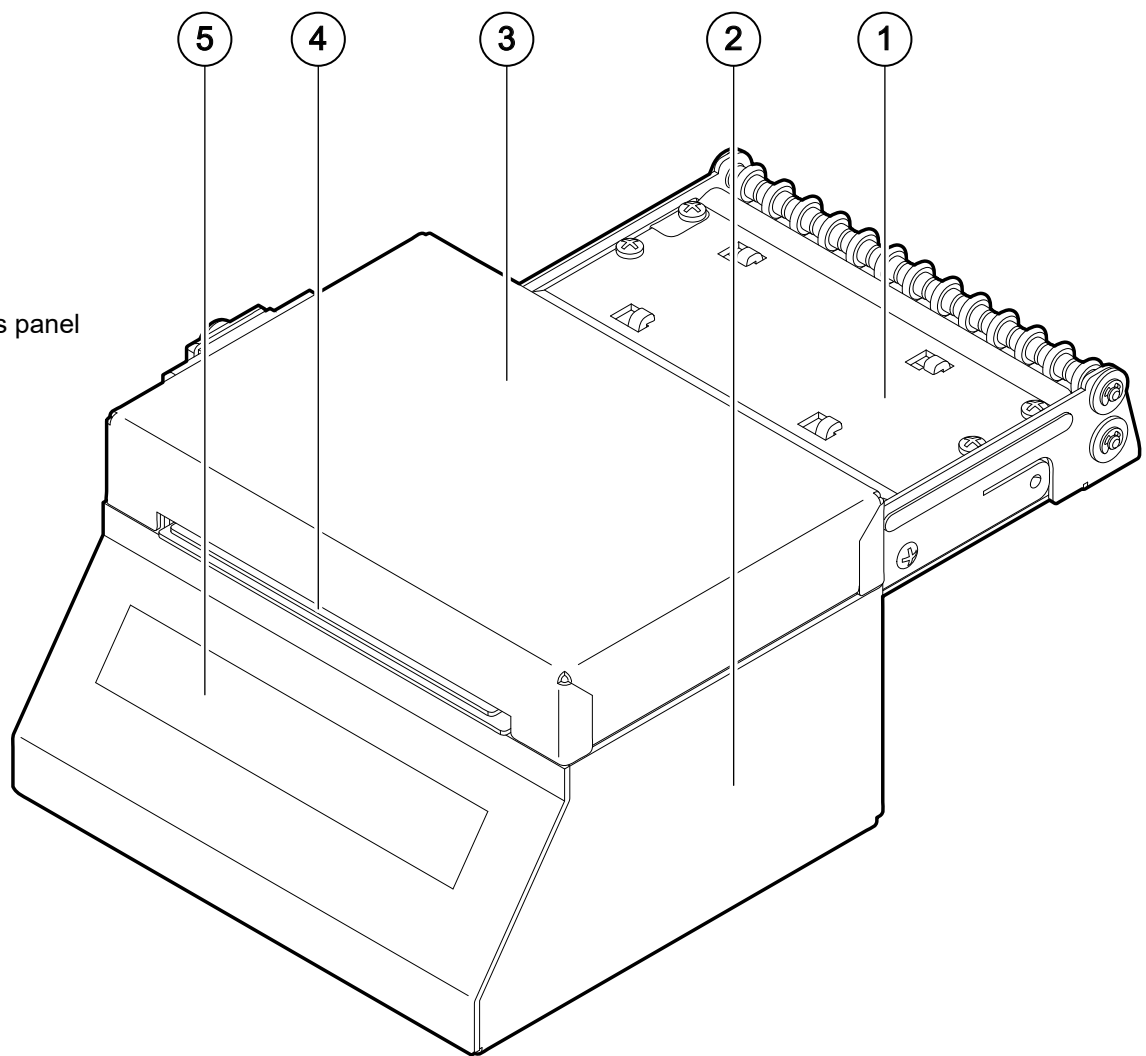



TK180 PLAS 1, TK180 PLAS 3


1. Connectors cover
2. Display
3. Paper out
4. LF key
5. FF key
6. ON/OFF key
7. Device cover
8. Opening lever for device cover
9. RFID antenna
(only for TK180 PLAS 3)
10. Paper input
11. Keys and connectors panel
(see [paragraph 3.3](#))

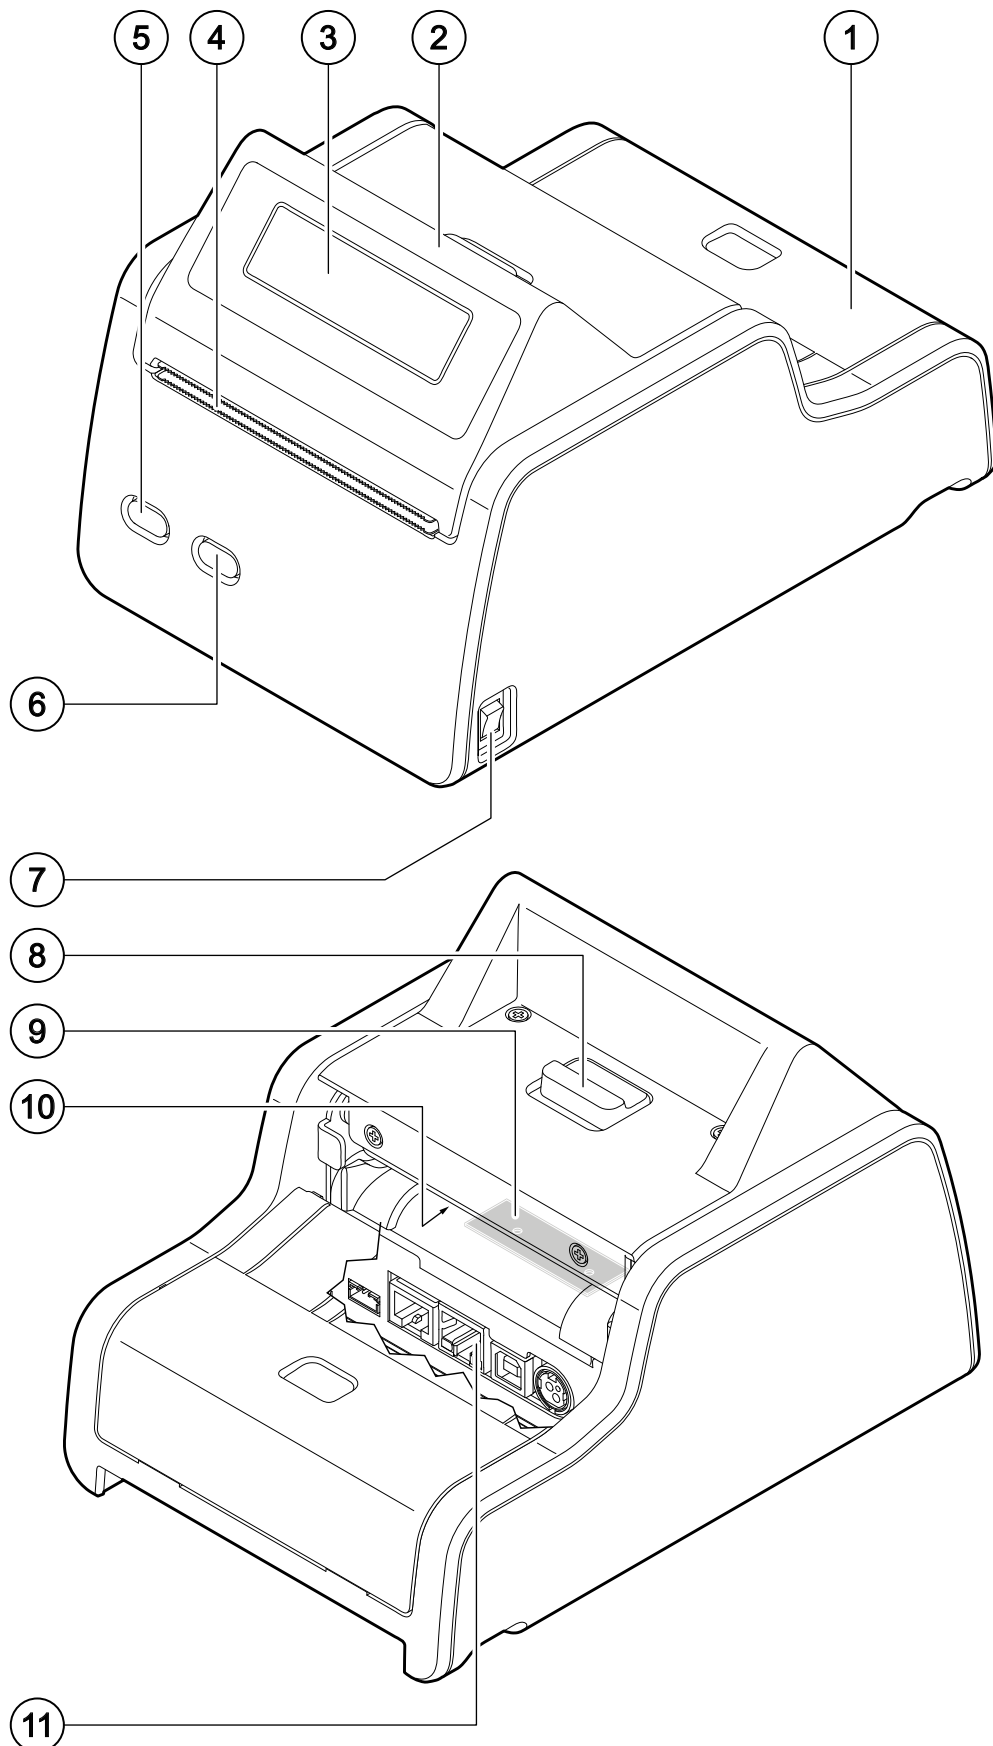




TK180 PLAS 2

1. RFID reader
2. Display
3. Paper out
4. LF key
5. FF key
6. ON/OFF key
7. Device cover
8. Opening lever for device cover
9. Paper input
10. Keys and connectors panel
(see [paragraph 3.3](#))

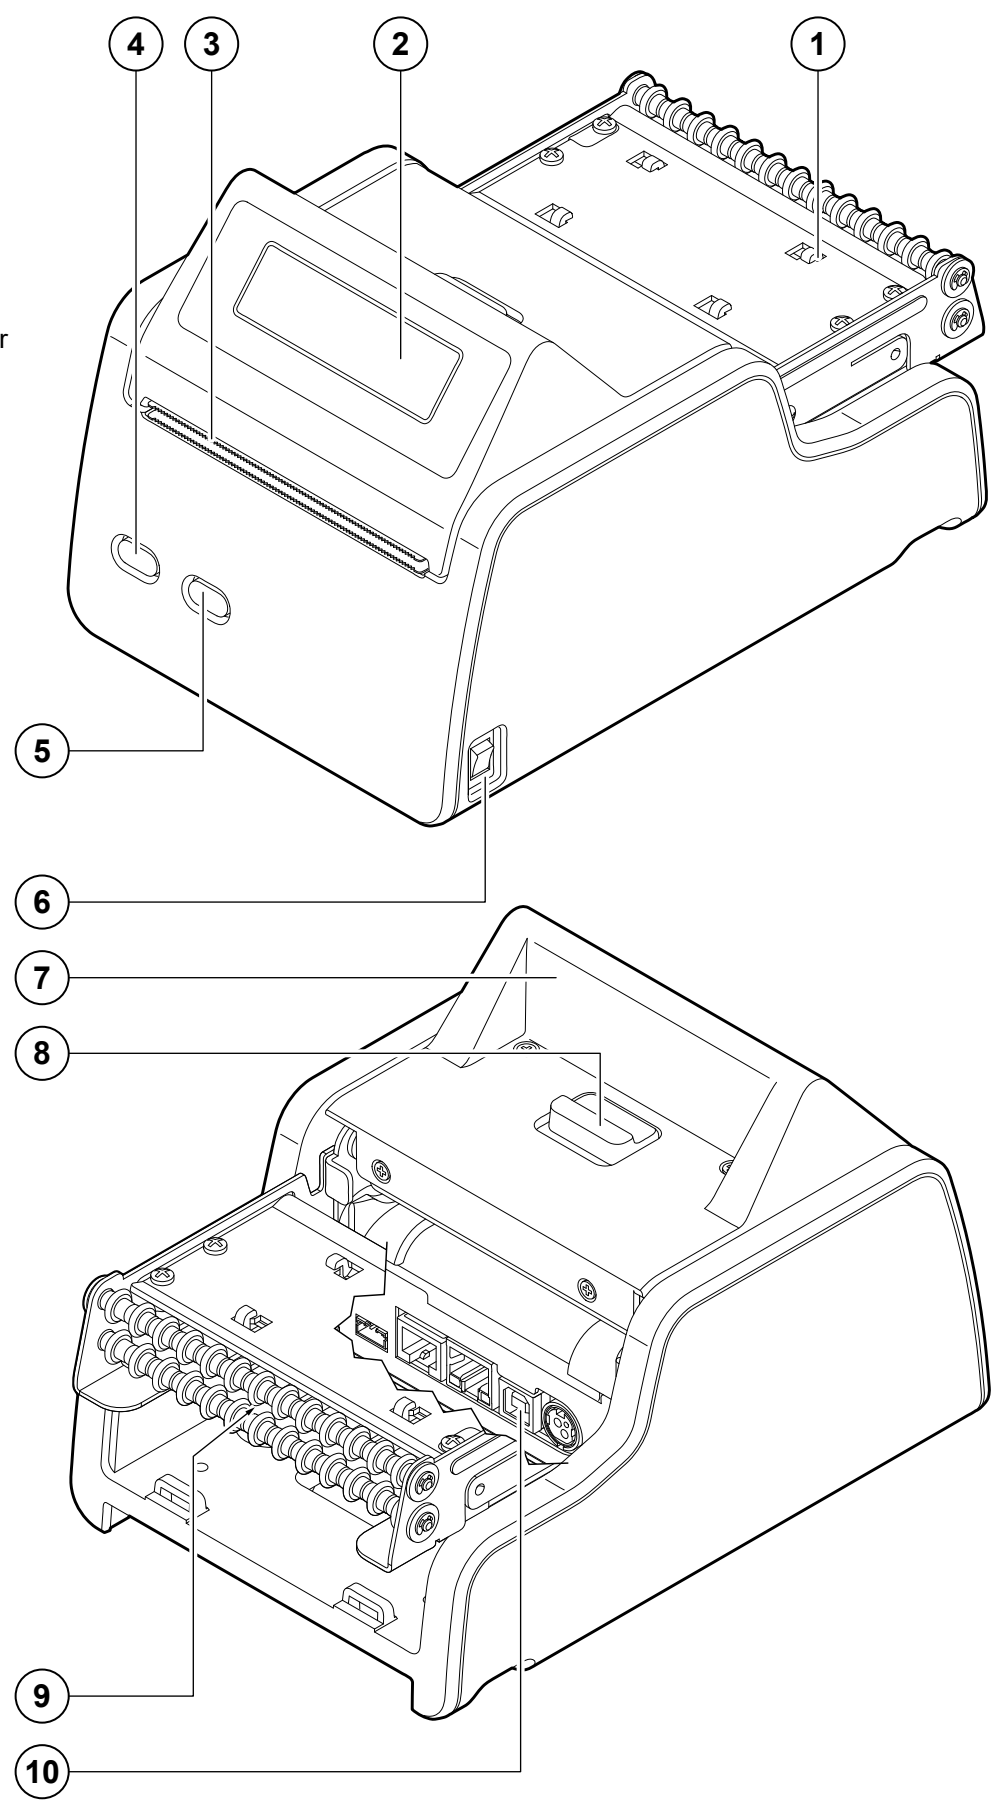

3.3 Device components: keys and connectors panel

1. ON/OFF key (except for TK180 PLAS 1, TK180 PLAS 3)
2. Connector for low paper sensor (external)
3. RS232 serial port (RJ45)
4. Ethernet port
5. USB port
6. Power supply port
7. Status LED
8. FF key
9. LF key

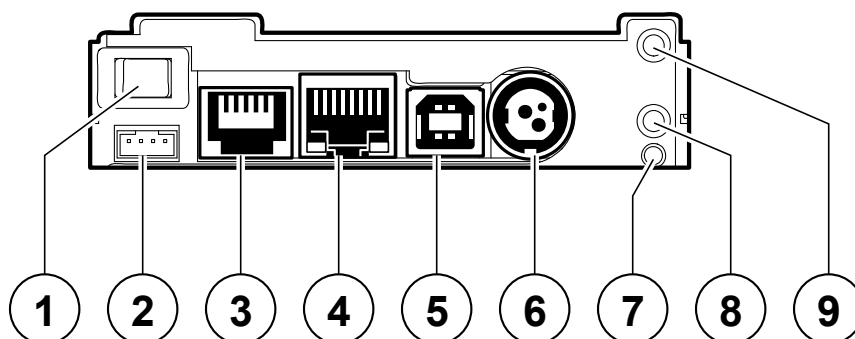


3.4 Device components: internal views

KPM180H 1

TK180 MET 1, TK180 MET 2

TK180 PLAS 1, TK180 PLAS 2


1. Printhead with temperature sensor
2. Top mobile sensor for detecting black mark on the thermal side of paper or hole between tickets
3. Sensors for detecting paper in presence
4. Sensor for cover opening detection
5. Bottom mobile sensor for detecting black mark on the thermal side of paper or hole between tickets
6. Sensors for detecting paper out presence
7. Adjustable cursor for paper in

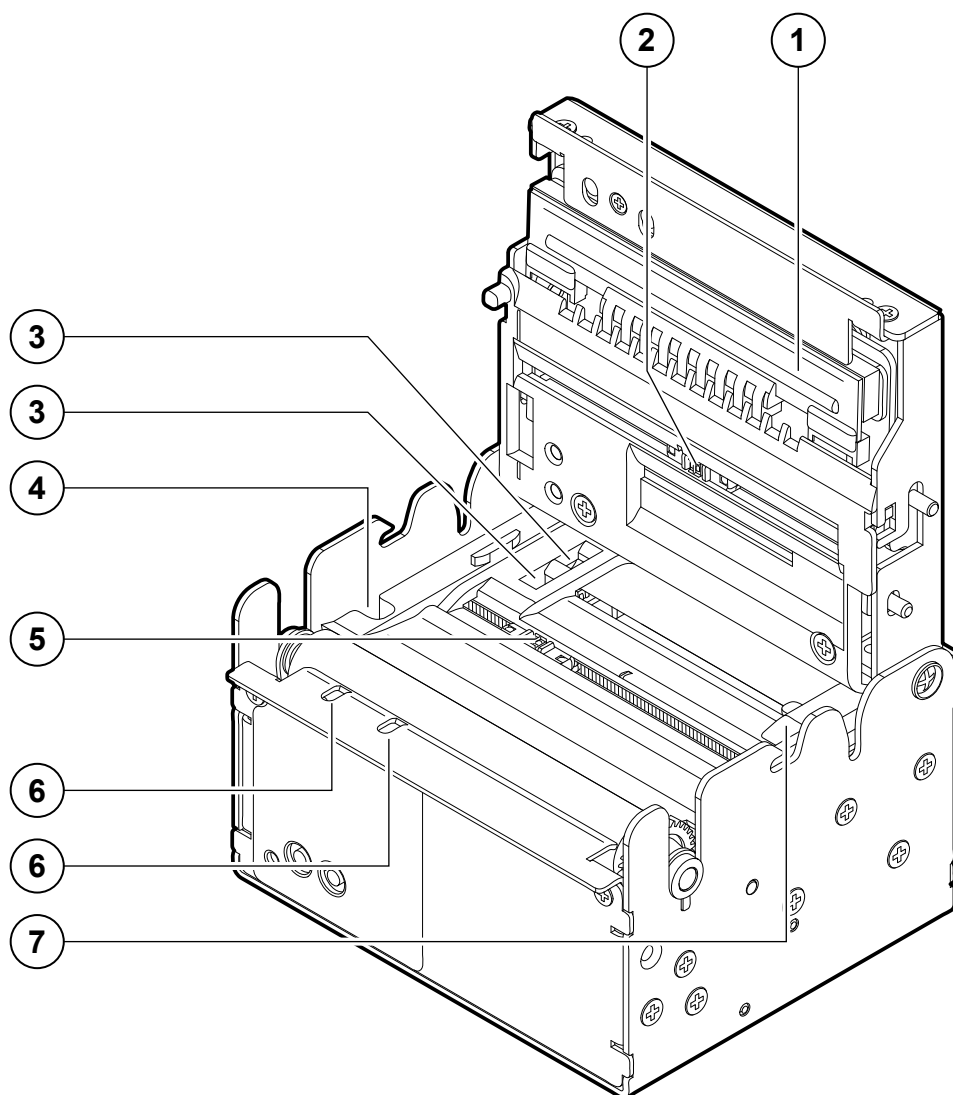



TK180 MET 3
TK180 PLAS 3


1. Printhead with temperature sensor
2. Top mobile sensor for detecting black mark on the thermal side of paper or hole between tickets
3. Sensors for detecting paper in presence
4. Sensor for cover opening detection
5. Bottom mobile sensor for detecting black mark on the thermal side of paper or hole between tickets
6. Sensors for detecting paper out presence
7. Adjustable cursor for paper in

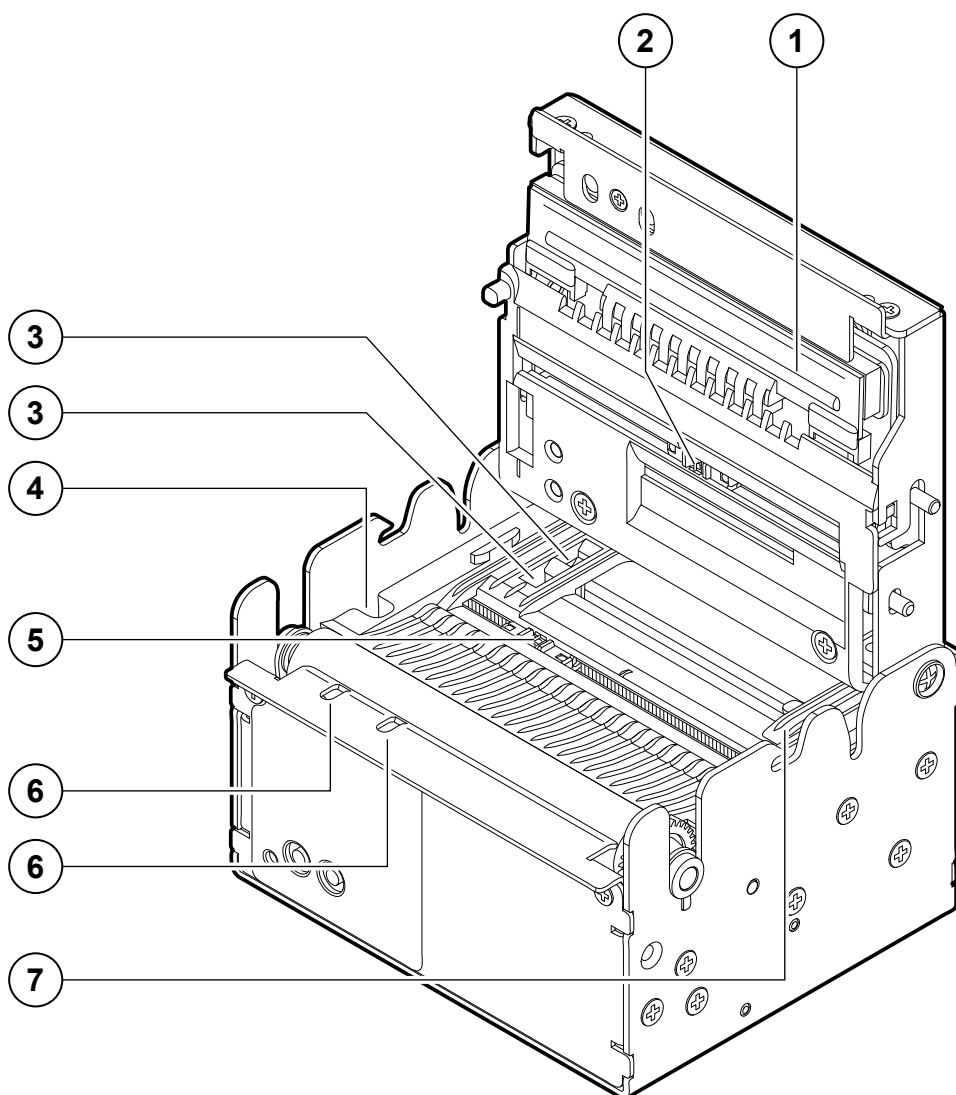




KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5
TK180 CUT 1, TK180 CUT 2

1. Printhead with temperature sensor
2. Top mobile sensor for detecting black mark on the thermal side of paper or hole between tickets
3. Sensors for detecting paper in presence
4. Bottom mobile sensor for detecting black mark on the thermal side of paper or hole between tickets
5. Sensor for detecting the opening of the printer group cover
6. Sensor for detecting the release of the presenter group cover
7. Sensors for detecting paper out presence
8. Adjustable cursor for paper in

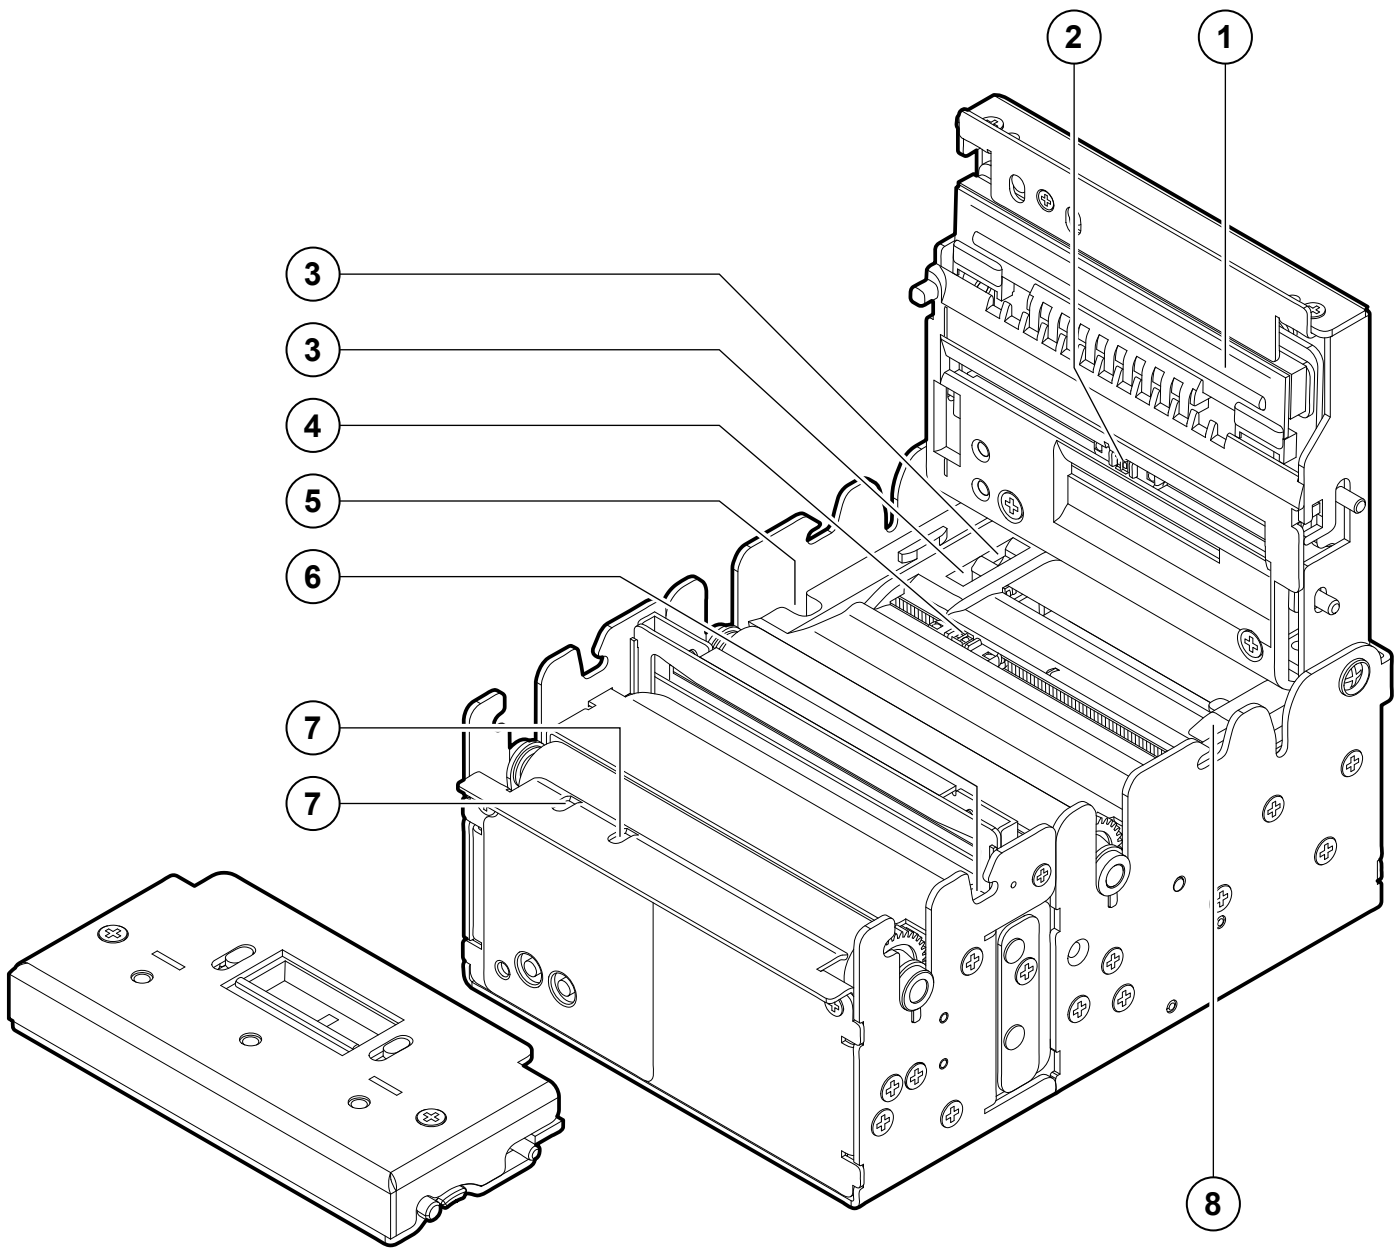

KPM180H 6
TK180 CUT 3
TK180 CUT 4

1. Printhead with temperature sensor
2. Top mobile sensor for detecting black mark on the thermal side of paper or hole between tickets
3. Sensors for detecting paper in presence
4. Bottom mobile sensor for detecting black mark on the thermal side of paper or hole between tickets
5. Sensor for detecting the opening of the printer group cover
6. Sensor for detecting the release of the presenter group cover
7. Sensors for detecting paper out presence
8. Adjustable cursor for paper in

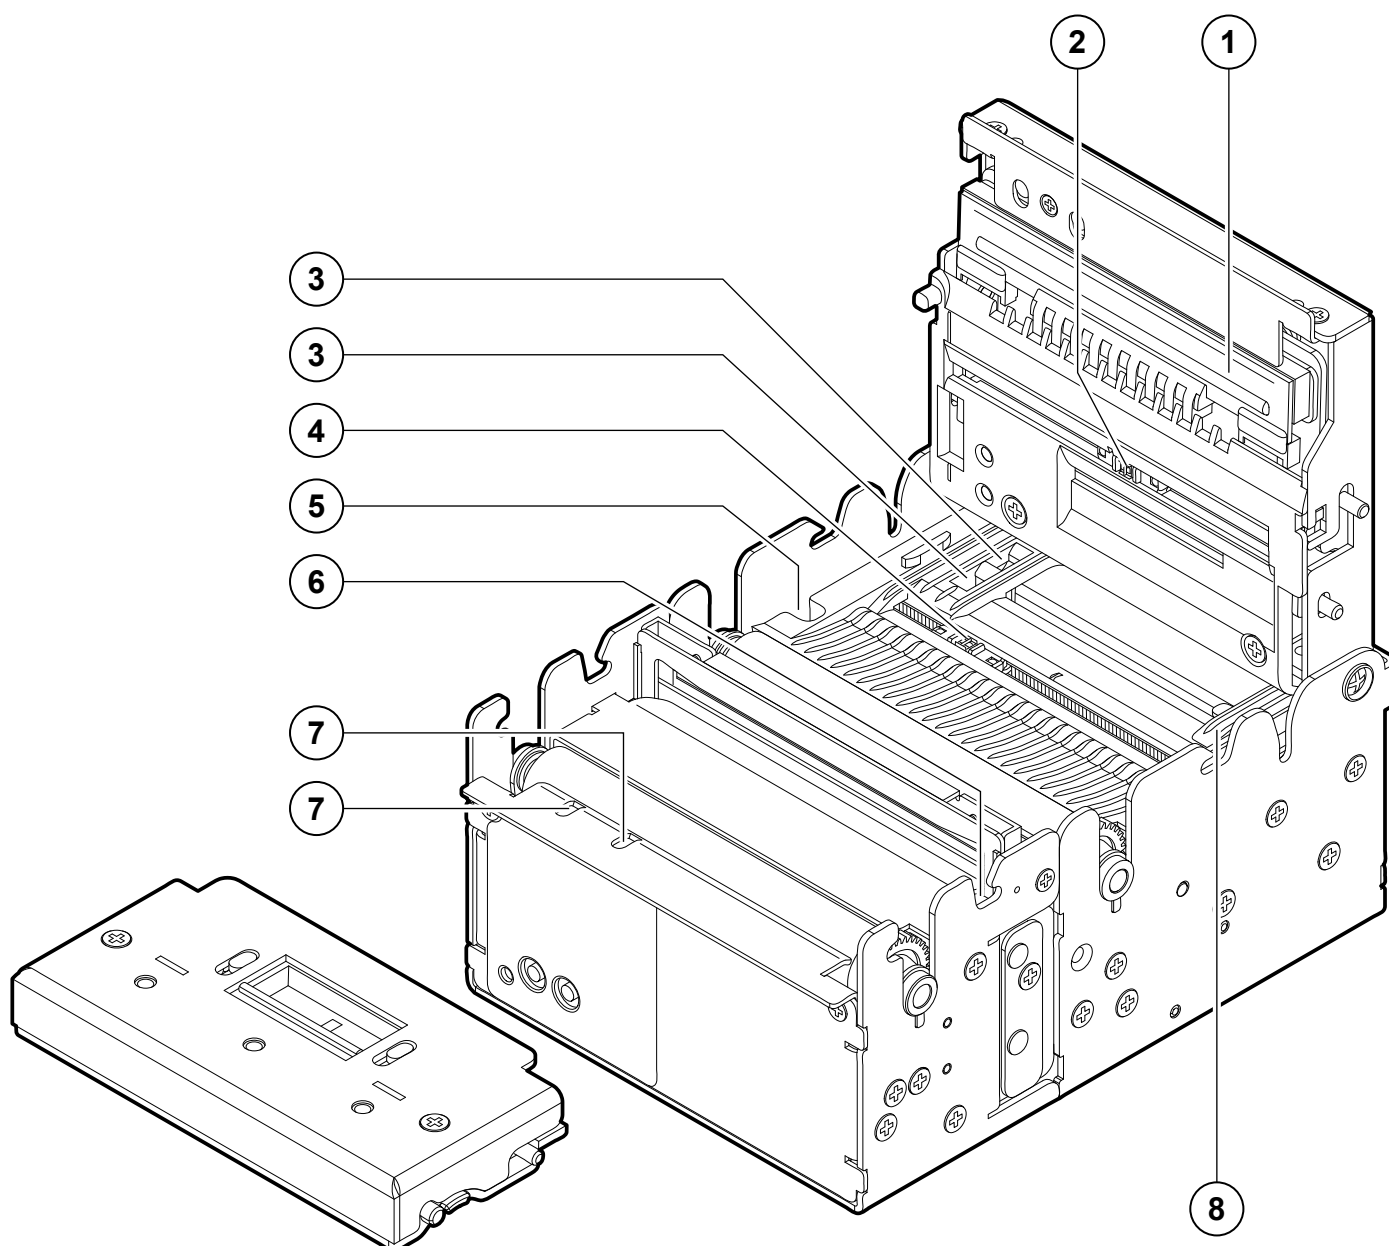

3.5 Product labels


The main data used to identify the machine are shown on the two labels attached to the upper cover or to the bottom of the device.

In particular, the product label shows the electrical data for the connection to a power source and the product code. The additional product label shows the serial number and the hardware revision (R).






3.6 Key functions: power up

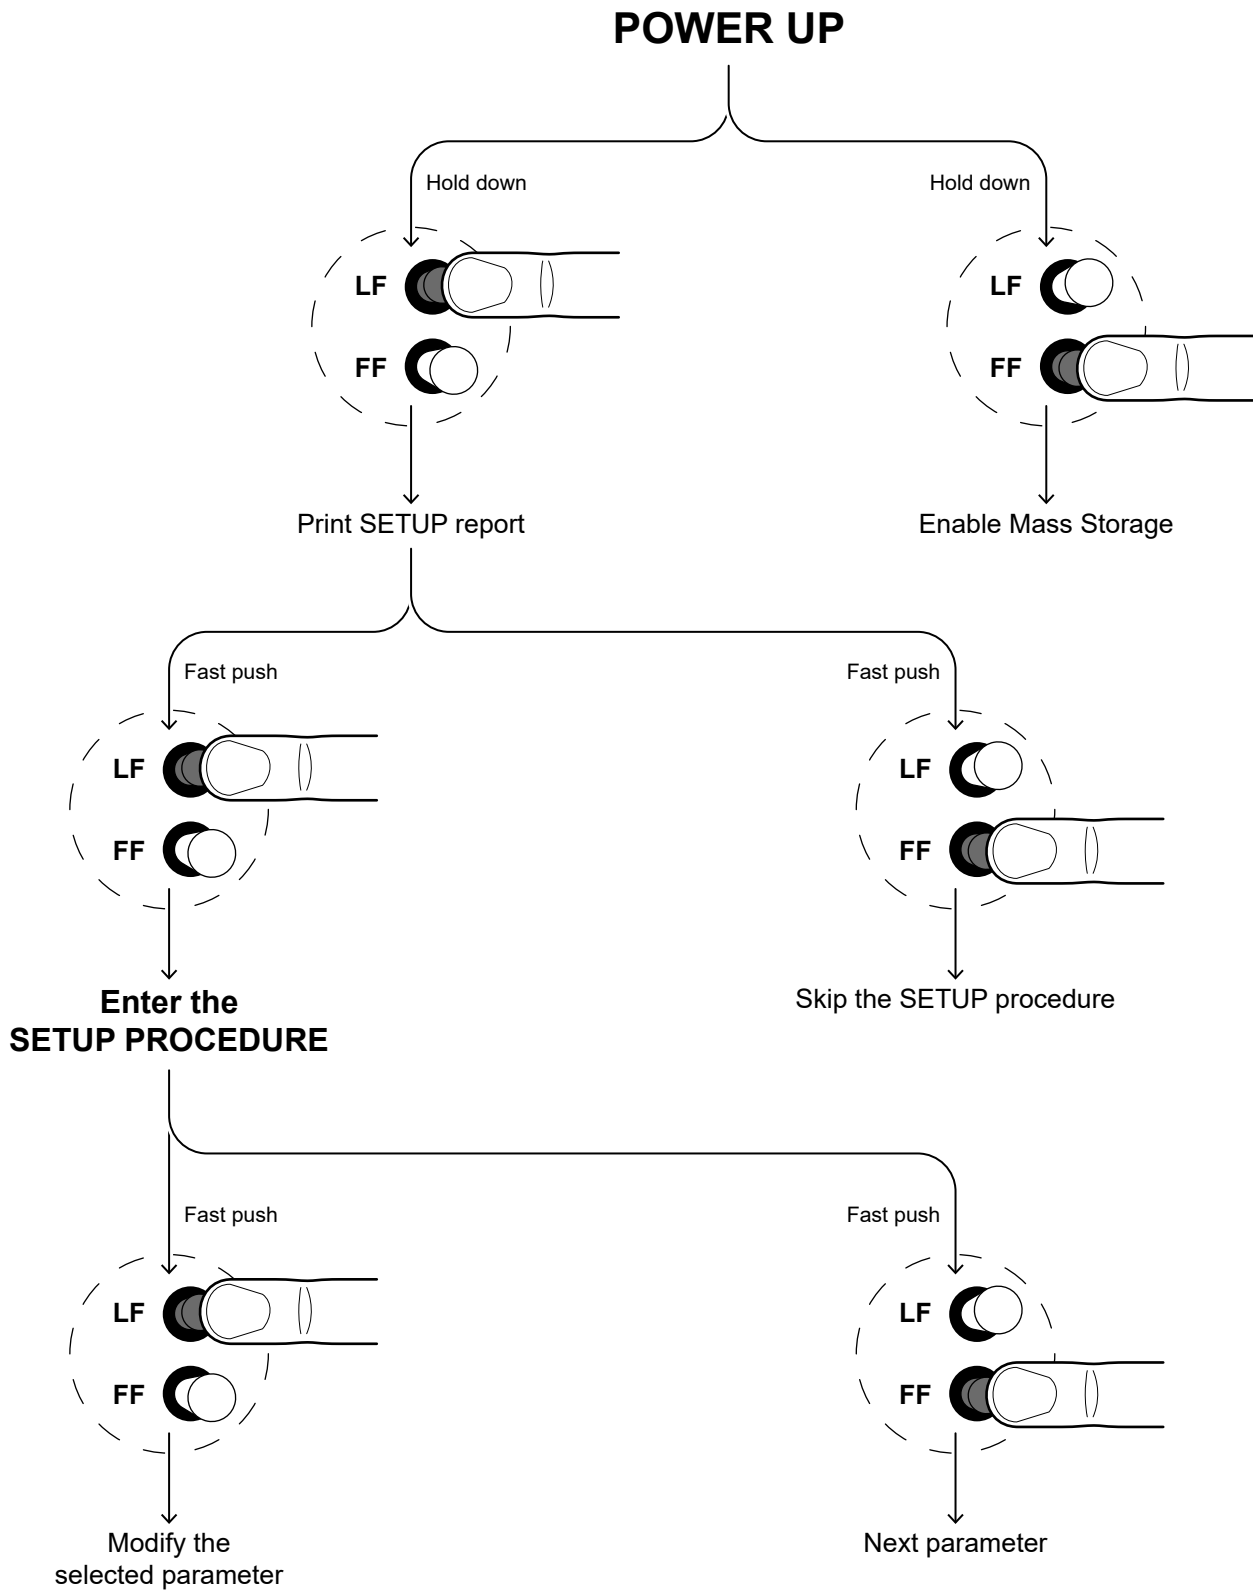

3.7 Key functions: standby

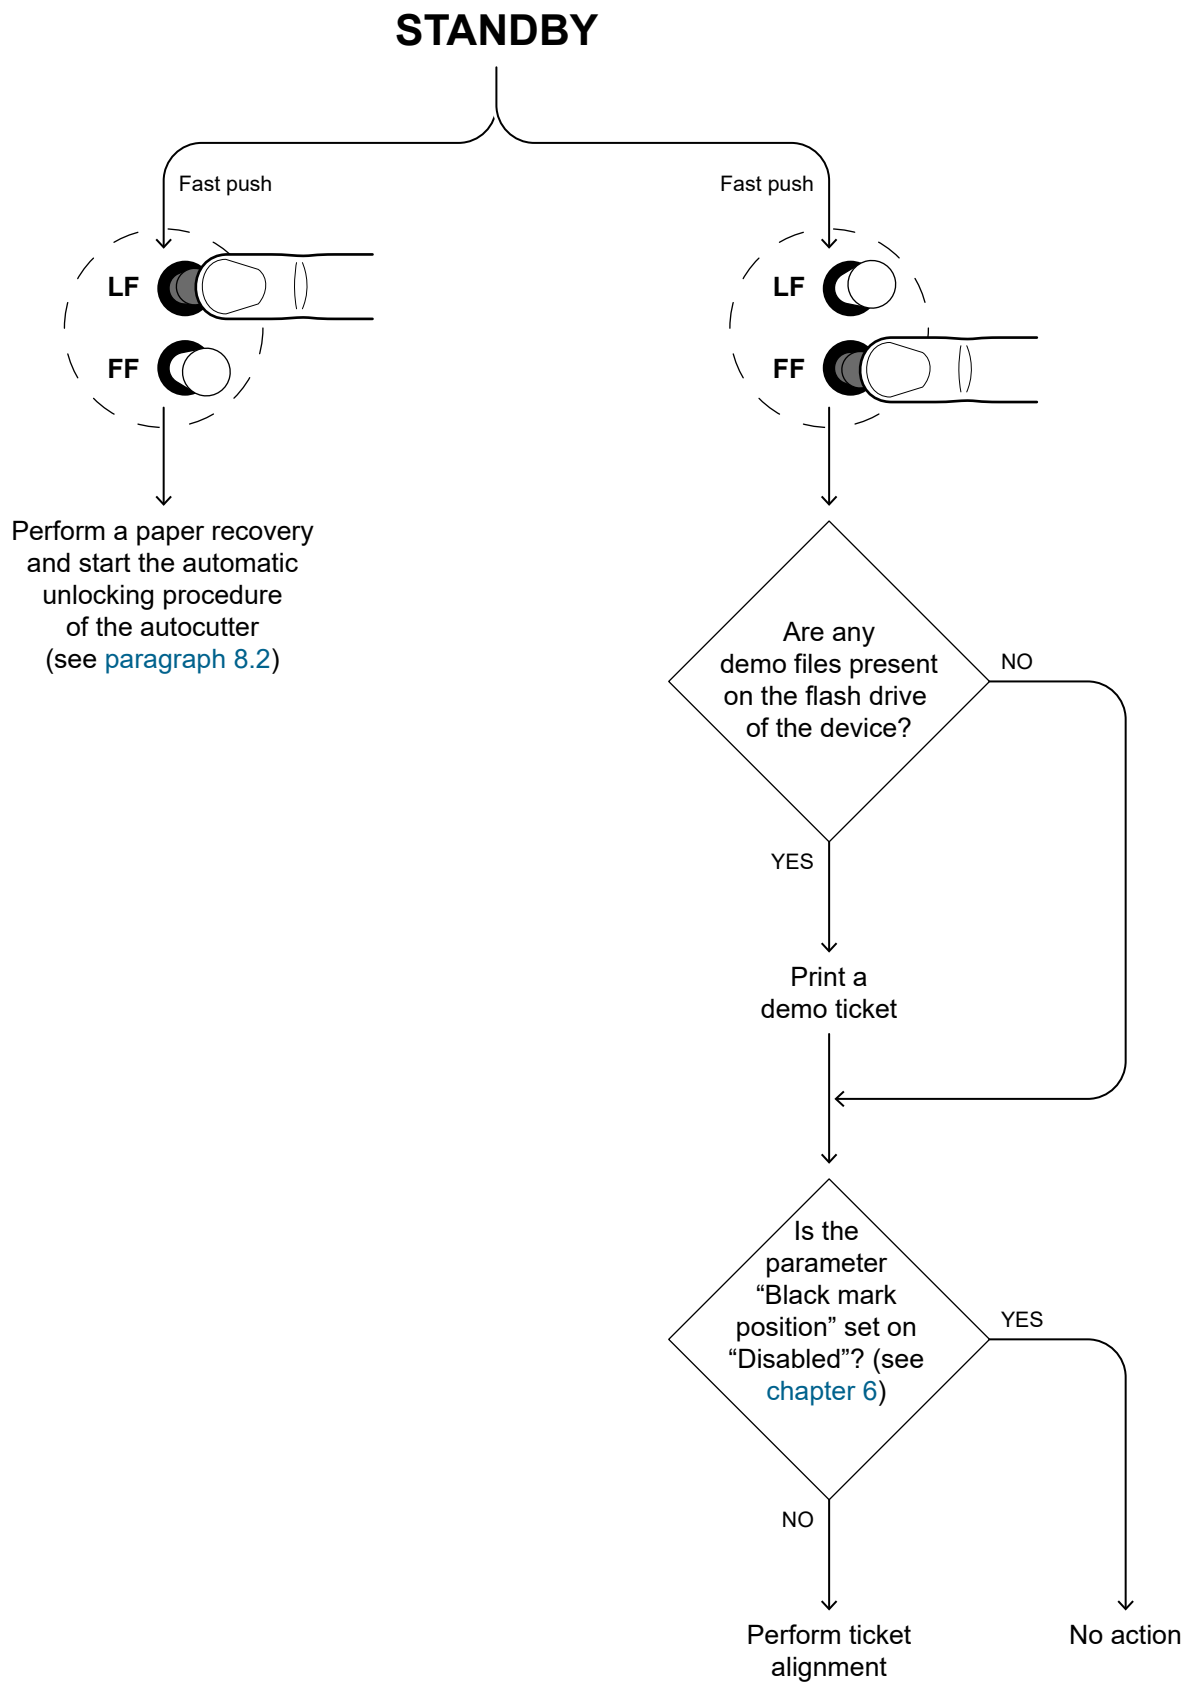



3.8 Status messages


The status LED indicates hardware status of device. Given in the table below are the various LED signals and the corresponding device status.

STATUS LED		DESCRIPTION
-	OFF	DEVICE OFF
GREEN	ON	DEVICE ON: NO ERROR
GREEN COMMUNICATION STATUS	x 1	RECEIVE DATA
	x 2	RECEPTION ERRORS (PARITY, FRAME ERROR, OVERRUN ERROR)
	x 3	COMMAND NOT RECOGNIZED
	x 4	COMMAND RECEPTION TIME OUT
YELLOW RECOVERABLE ERROR	x 2	PRINTHEAD OVERHEATED
	x 3	PAPER END
	x 4	PAPER JAM
	x 5	POWER SUPPLY VOLTAGE INCORRECT
	x 6	COVER OPEN
RED UNRECOVERABLE ERROR	x 3	RAM ERROR

3.9 Display messages

TK180 MET 1, TK180 MET 2, TK180 MET 3
TK180 CUT 1, TK180 CUT 2, TK180 CUT 3, TK180 CUT 4
TK180 PLAS 1, TK180 PLAS 2, TK180 PLAS 3

The display shows the emulation currently set, the firmware release and a device status message on the upper row. The lower row reports an error code (for example, ERR8) and the error description, in case of not successful outcome of commands (see following image).

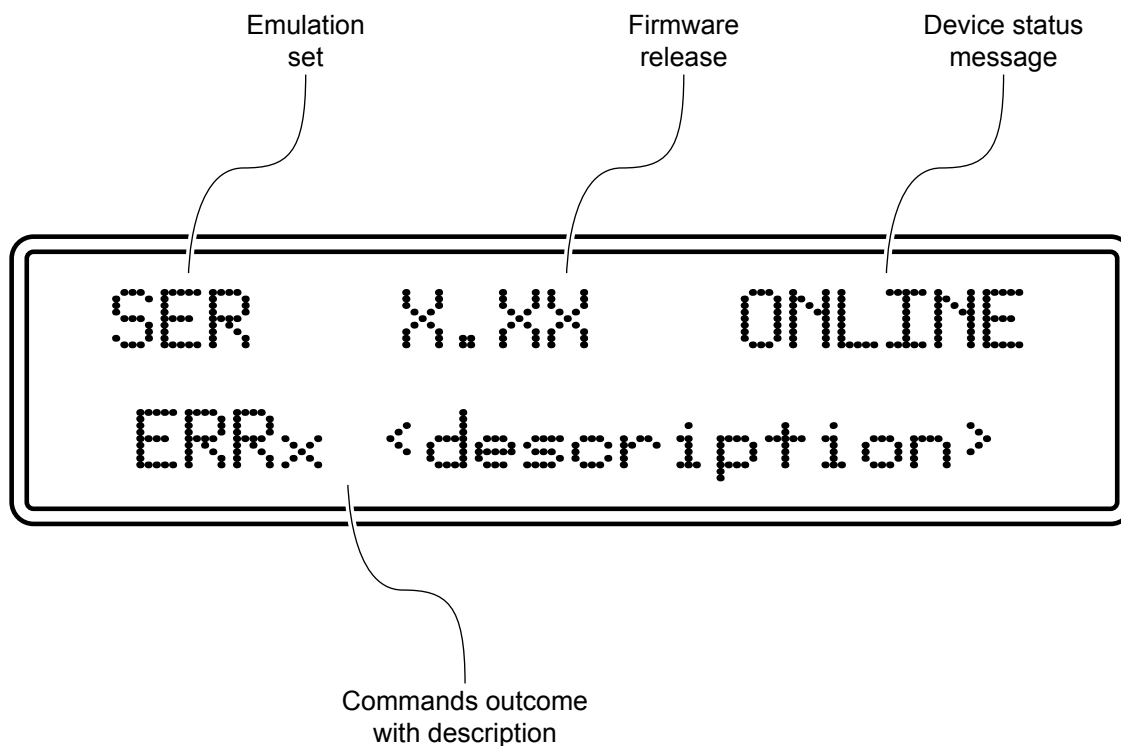

The possible status messages are the following:

- ONLINE The device is ready (standby message)
- OFFLINE The device is in a "busy" condition (during commands sending, on paper jam, and so on)
- LINK DOWN The serial connection cable is unplugged
- COVEROPEN The upper cover is open
- NOPAPER No paper loaded into the device
- PAPERJAM The paper is jammed inside the device




4 INSTALLATION


4.1 Fastening

KPM180H 1

The device is provided with four fixing holes on the bottom of device (see following figure, dimensions in millimetres). To fasten the device on a panel, use four M3 screws.

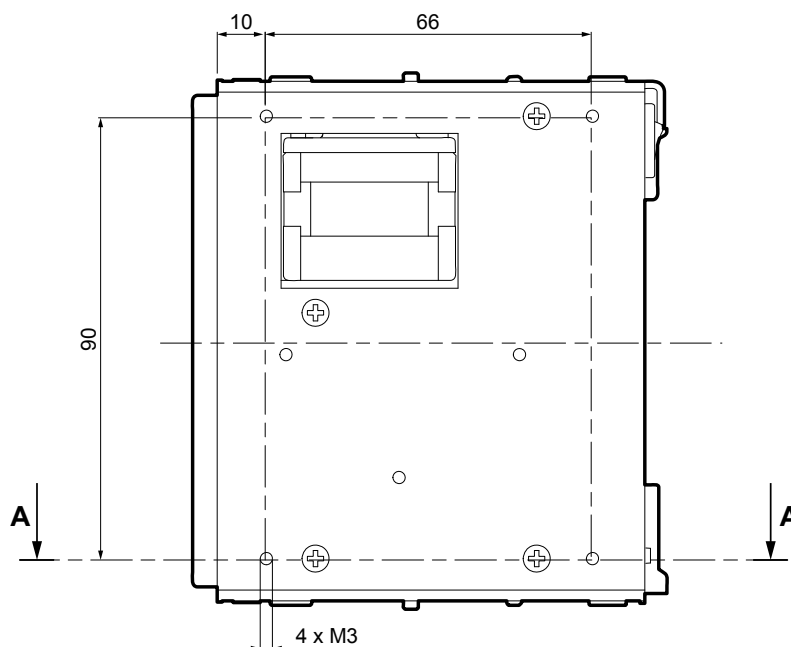

It's very important to consider the screws length not to damage the internal components placed near the fixing holes (see following figure, dimensions in millimetres).

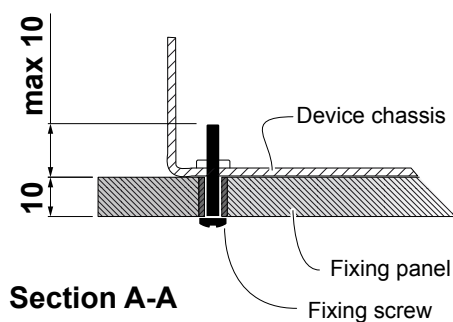

The screw length (L) will be calculated according to the thickness of the panel (Sp) on which the device is fixed, as follows:

$$L \leq 10 \text{ mm} + Sp$$


For example, if panel thickness is 10 mm (Sp = 10 mm), the maximum length for screws will be 20 mm.

ATTENTION: Correctly prepare the fixing holes for screws and the drilling for the paper mouth in order to avoid deformation and torsion of the device or its components which could compromise its operation.




KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5, KPM180H 6

The device is provided with six fixing holes on the bottom of device (see following figure, dimensions in millimetres). To fasten the device on a panel, use six M3 screws.

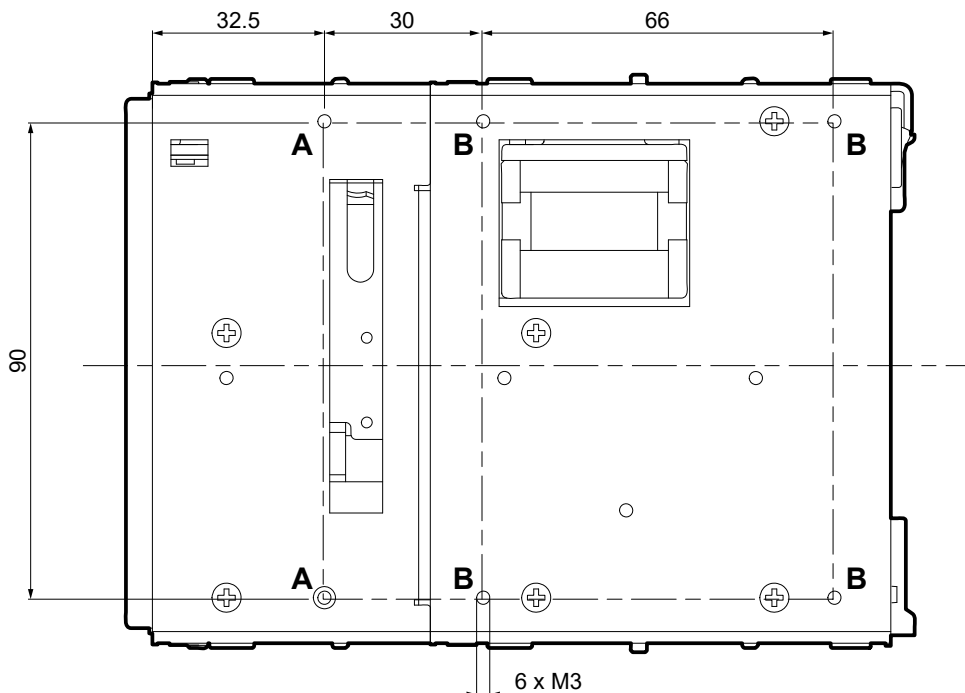


Additionally, the panel must provide an opening for dust of paper that meets the following measures (in millimetres):

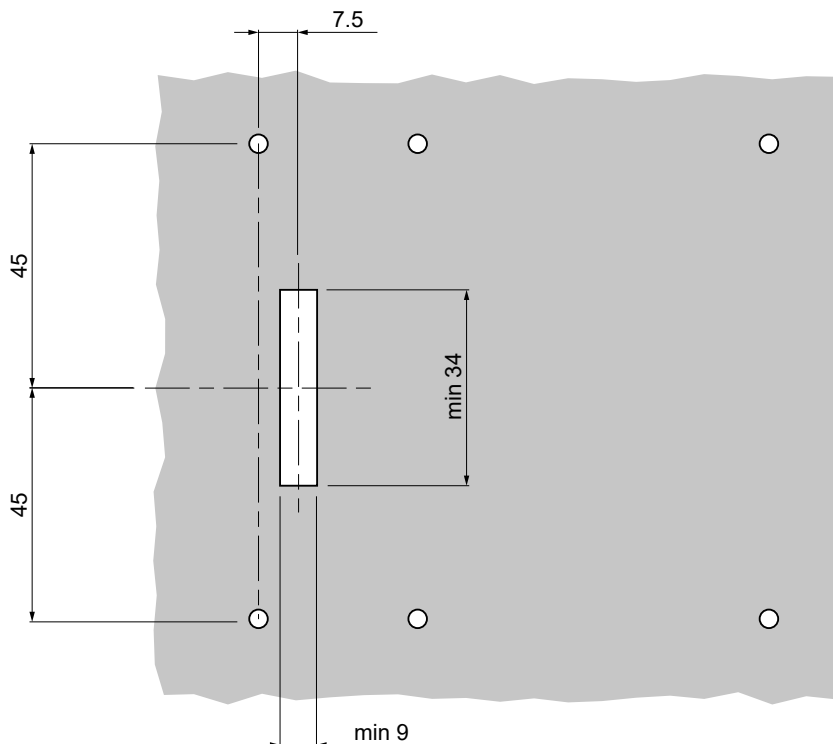

ATTENTION: Correctly prepare the fixing holes for screws and the drilling for the paper mouth in order to avoid deformation and torsion of the device or its components which could compromise its operation.



It's very important to consider the screws length not to damage the internal components placed near the fixing holes (see following figure, dimensions in millimetres).

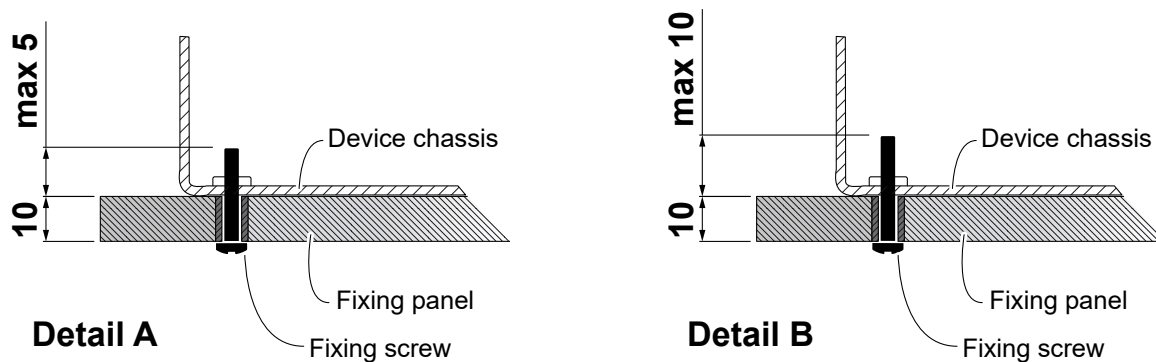


The screw length (L) will be calculated according to the thickness of the panel (Sp) on which the device is fixed, as follows:

$$L \leq 5 \text{ mm} + Sp \text{ (Detail A)}$$

$$L \leq 10 \text{ mm} + Sp \text{ (Detail B)}$$

For example, if panel thickness is 10 mm (Sp = 10 mm), The maximum screw length will be 15 mm (detail A) or 20 mm (detail B).


In presence of a front panel, consider a distance of at least 2 mm between the front panel and the cover of the presenter group (see following figure, dimensions in millimetres).

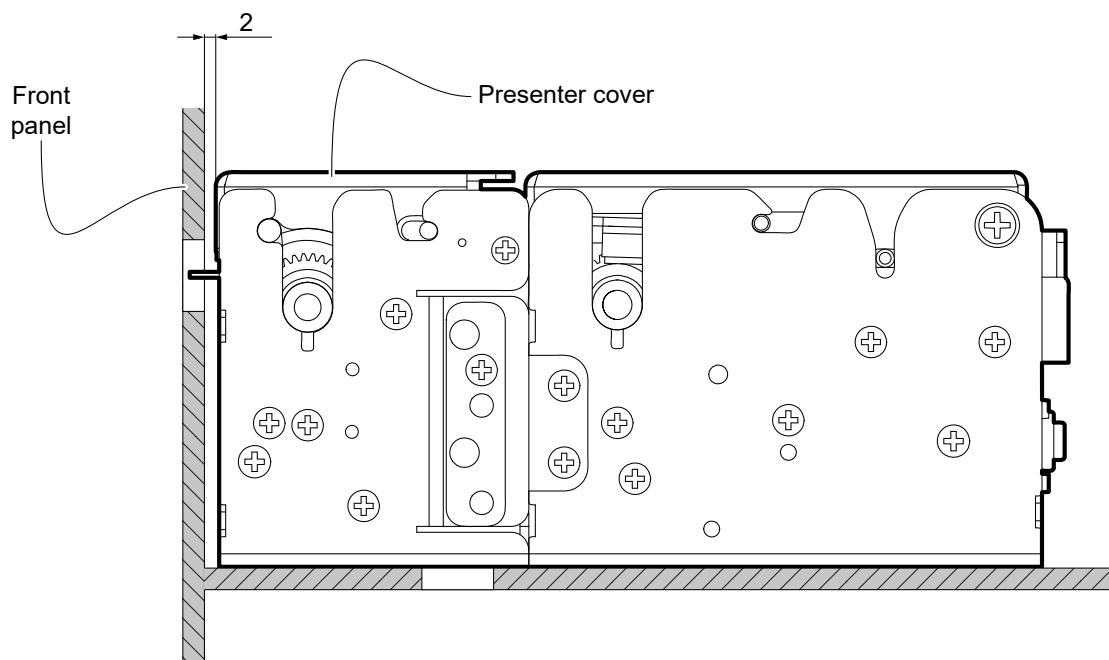



When you place the device in the operating position, make sure to leave the proper free space around the device of at least 20 mm, also considering the space for activating the mobile components (as the inspection door or the ejector group) so to not compromise operation and maintenance.



Refer to [paragraph 9.2](#) for models dimensions.

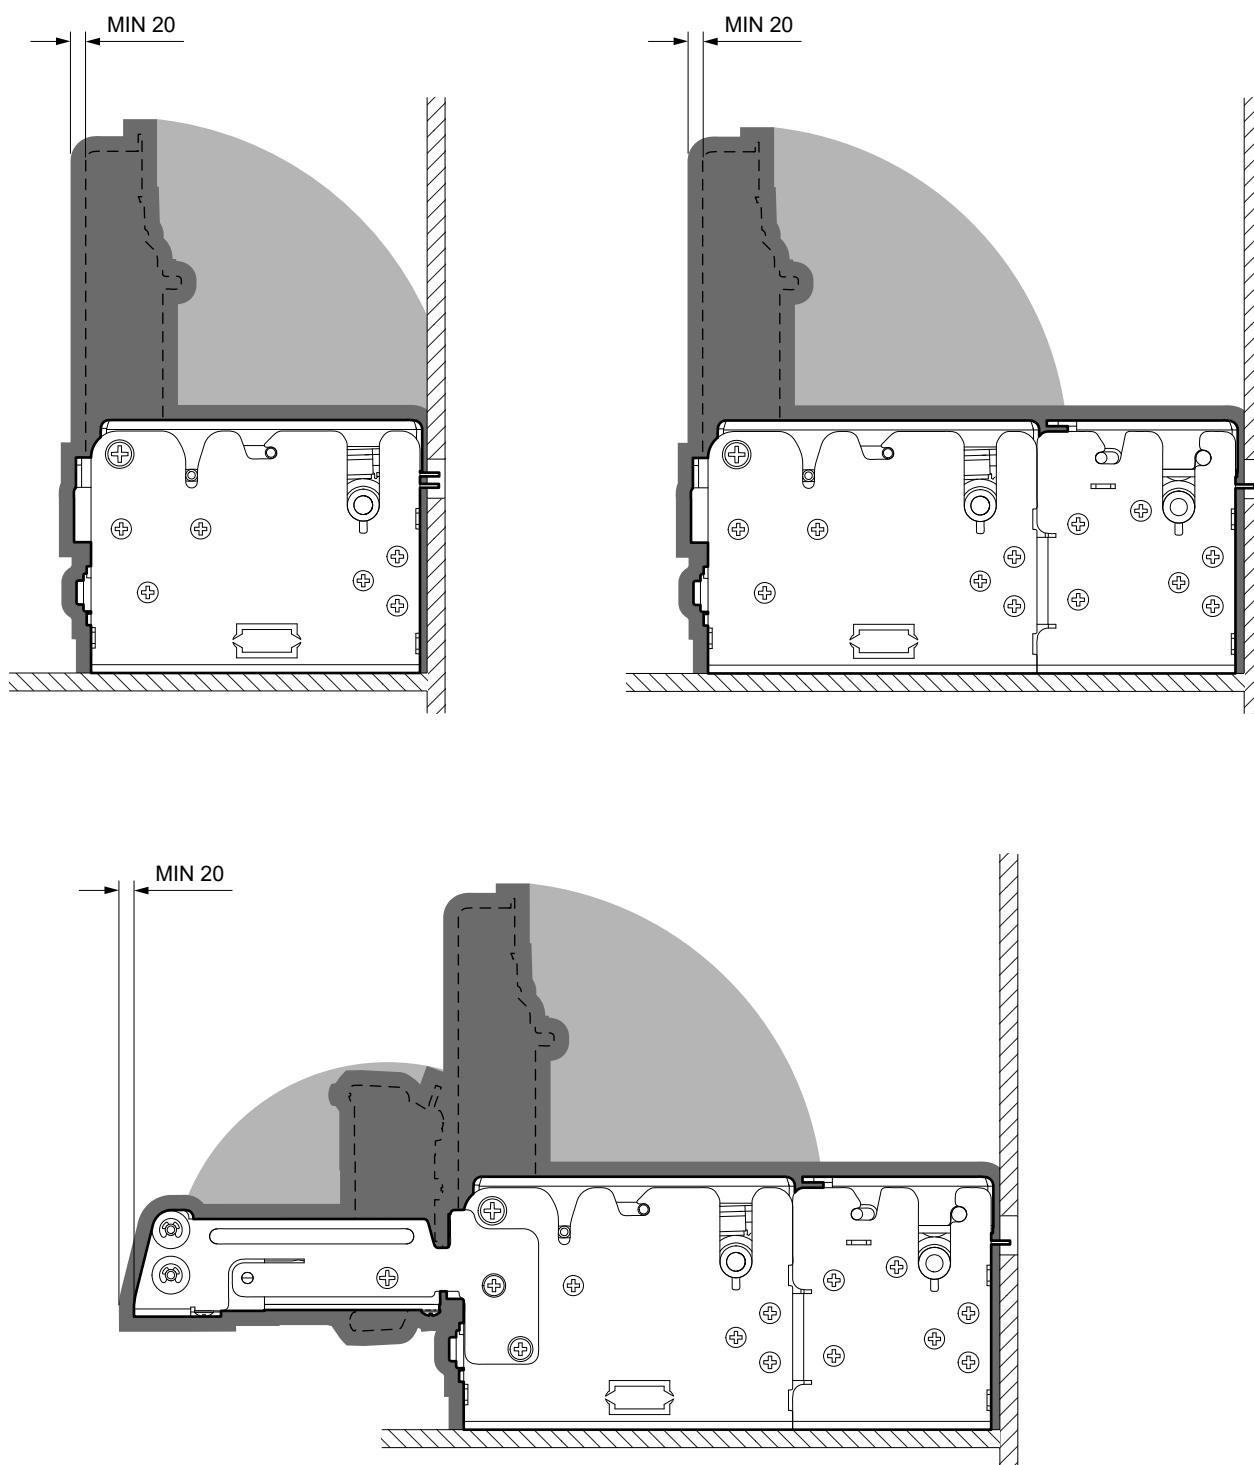



Additionally, the panel can provide an opening for the passage of the connection cables that meets the hole at the bottom of the device and two pins for a further fixing to the panel.


The measures (in millimeters) of the opening and the fixing pins are shown in the following figures:

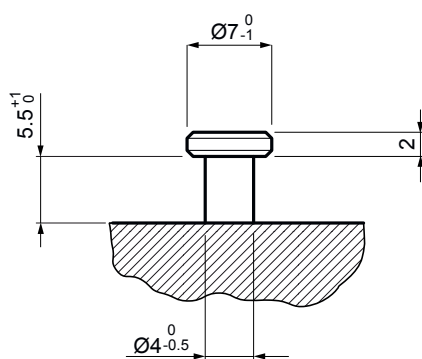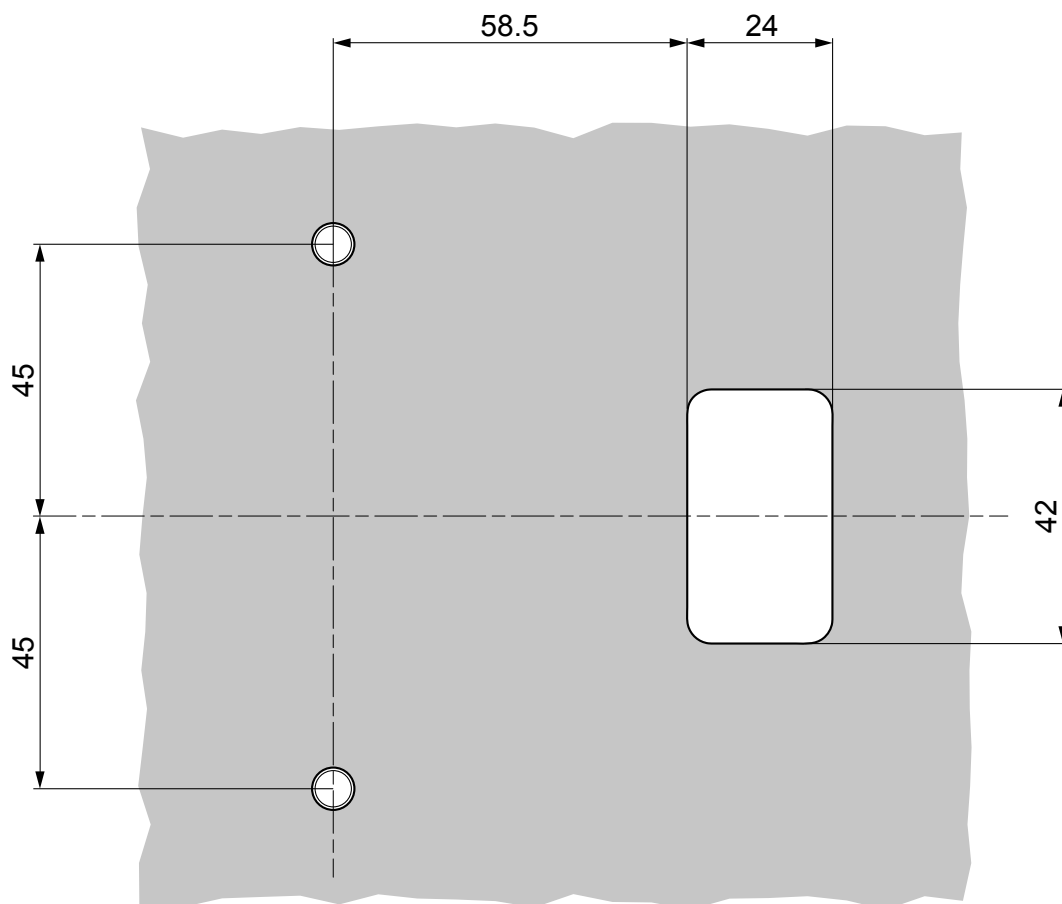


4.2 Low paper sensor

KPM180H 1, KPM180H 2, KPM180H 3
KPM180H 4, KPM180H 5, KPM180H 6


The device includes a low paper sensor with the cable (see following figure). To fix the sensor, use an M3 screw not supplied.

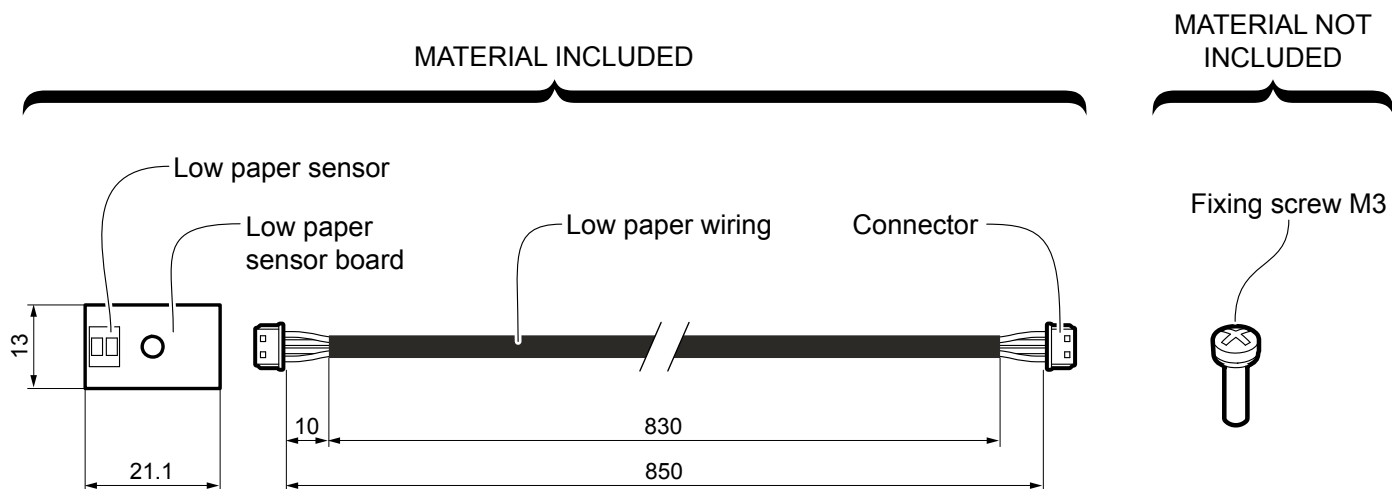

For the assembly procedure, proceed as follows:

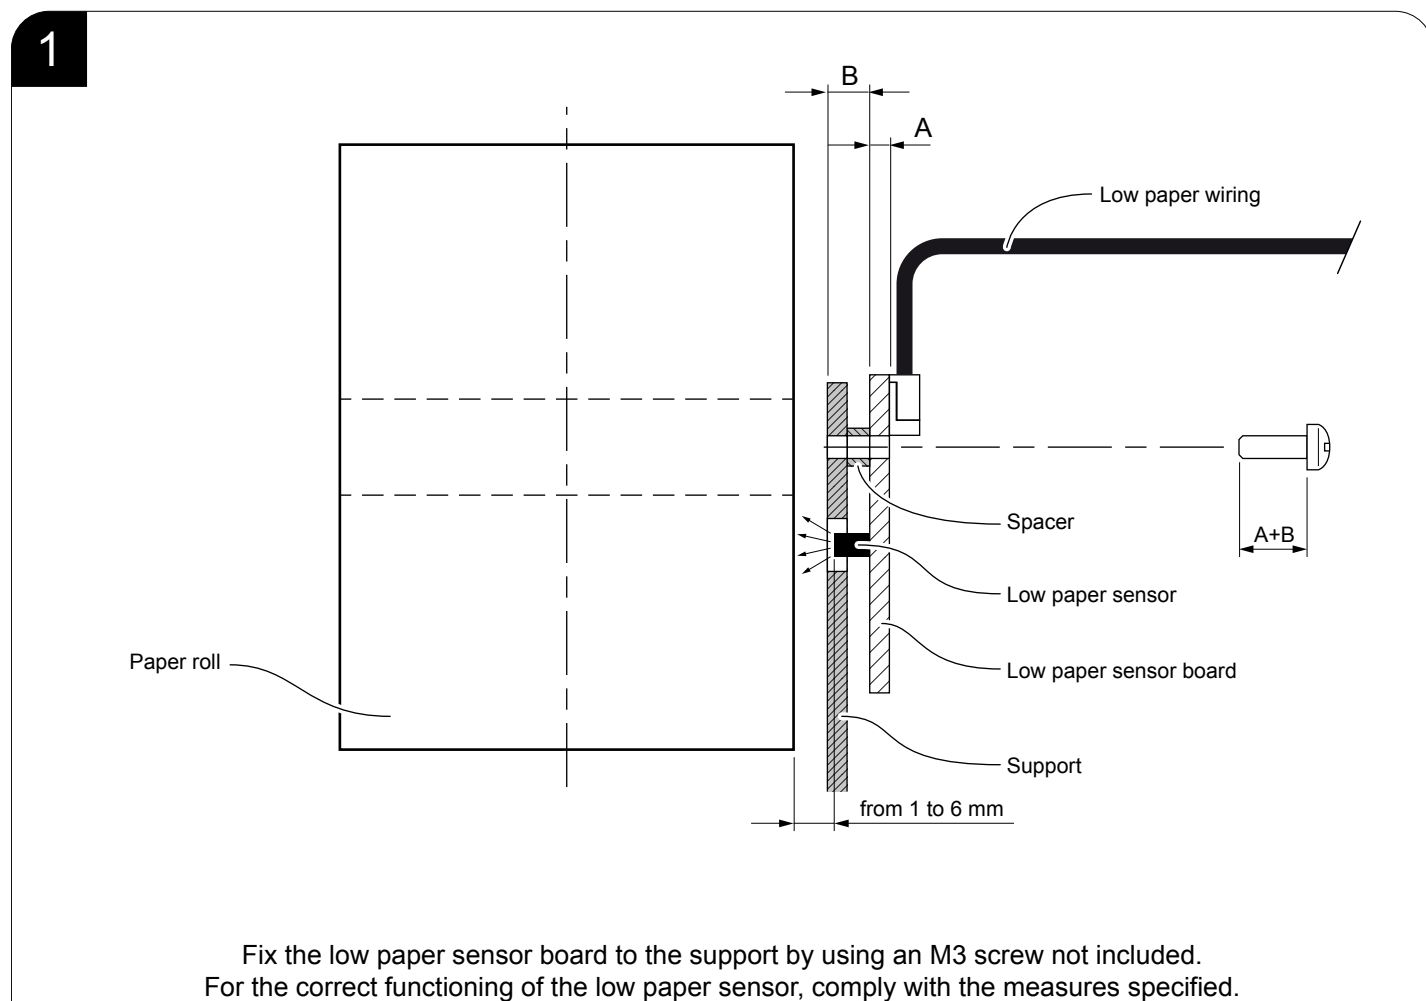


2

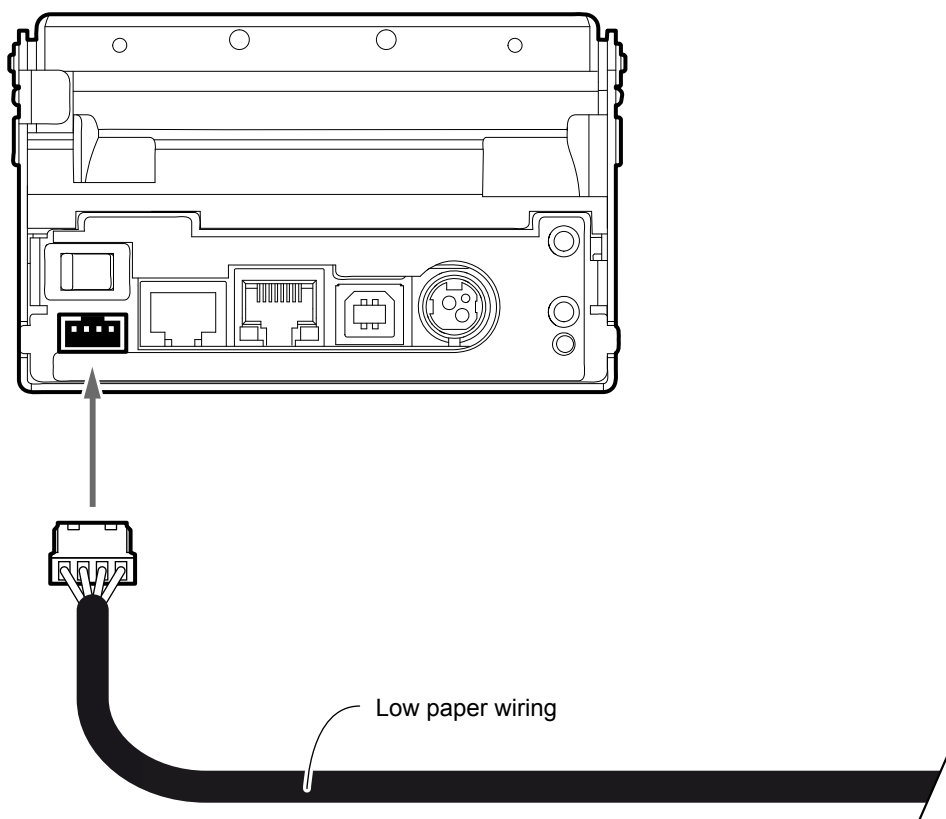

Connect the wiring coming from the low paper sensor board at the connector shown in figure.

4.3 Connections

The following figure shows the possible connections for the device. When the RS232 and USB communication cables are connected to the printer at the same time, communication takes place via the USB port.

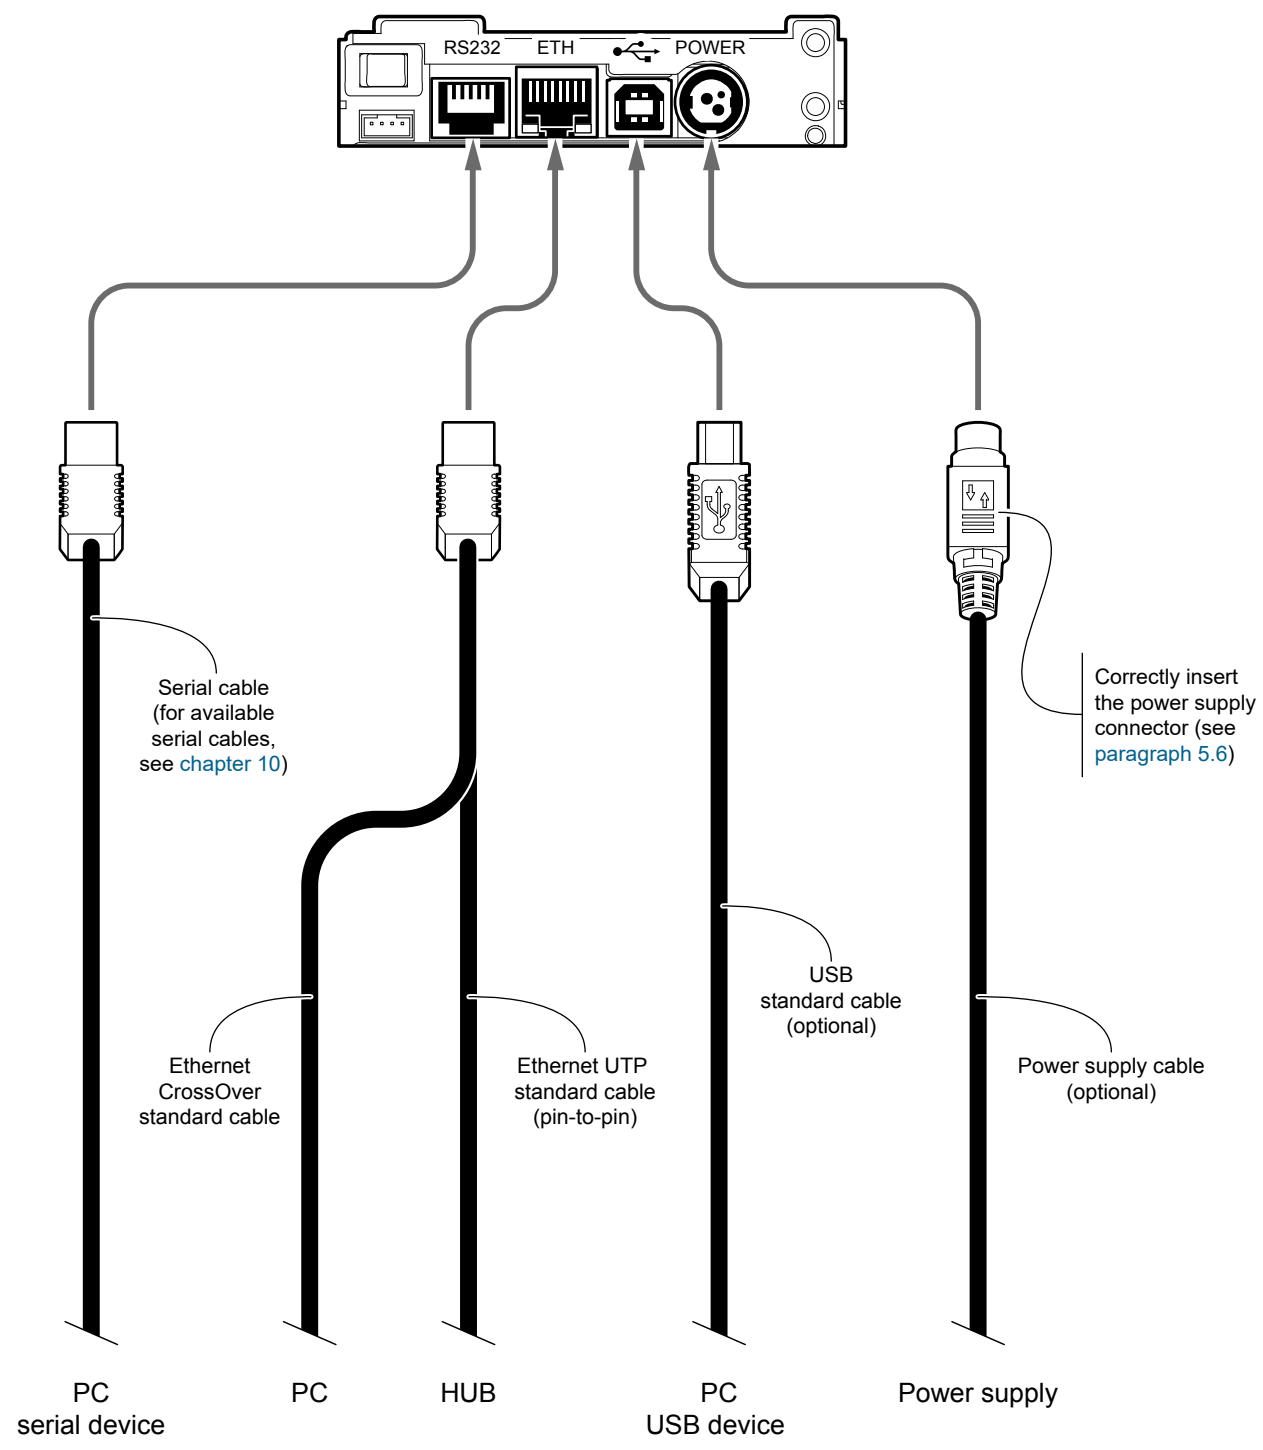

ATTENTION: In some conditions, we recommend the installation of a ferrite core on the power supply cable.




4.4 Pinout




POWER SUPPLY
Tripolar female connector

J20	1	GND
	2	+24 Vdc
	3	GND
	4	Frame GND


The following figure shows the connector pinout of the power supply cable for the device:

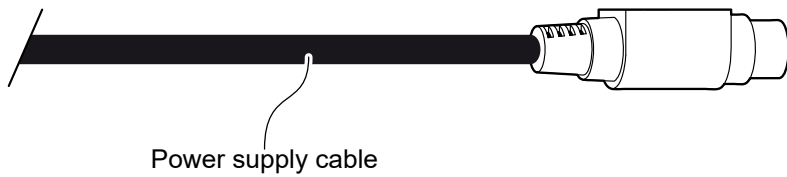

Tripolar male connector

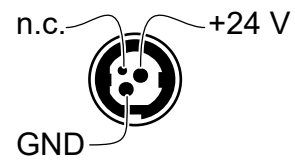


ATTENTION:
Respect power supply polarity.

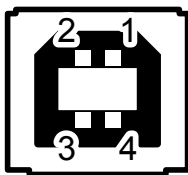

USB INTERFACE
Female USB type B connector

J2	1	USB0-VBUS (in)
	2	USB0_D- (in/out)
	3	USB0_D+ (in/out)
	4	GND
	SH1	SHIELD
	SH2	SHIELD

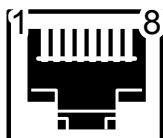

RS232 SERIAL INTERFACE


Female RJ45 connector

J1	1	DT	(in)	When +VRS232, device is power on
	2	TX	(out)	During transmission, takes the values -VRS232 and +VRS232 depending on data
	3	RX	(in)	During reception, takes the values -VRS232 and +VRS232 depending on data
	4	DS		
	5	GND		
	6	DT	(in)	When +VRS232, device is power on
	7	CT		
	8	RT	(out)	When +VRS232, device is ready to receive data


Given the presence of the RS232 standard, logic value "0" corresponds to the voltage value +VRS232 (voltage value between +3Vdc and +15Vdc) and logic value "1" corresponds to the voltage value -VRS232 (voltage value between -3Vdc and -15Vdc).

DEVICE > PC connection

The following picture shows an example of connection between the device and a personal computer using an 8 pin RJ45 male and a 9 pin RS232 serial connector:

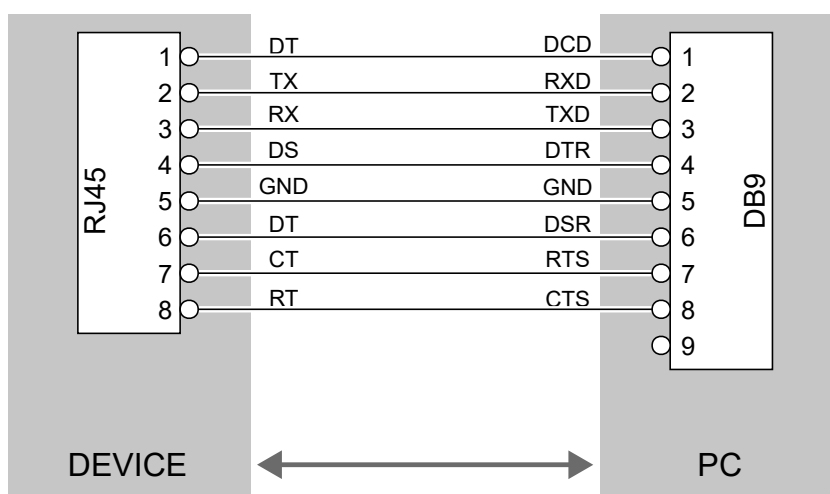

When use a serial cable, we recommend the installation of a ferrite core at the end of the same cable.

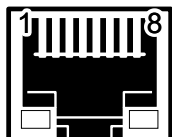

ETHERNET INTERFACE

Female RJ45 connector

J23	1	RX +1
	2	+3.3V ETH
	3	RX -1
	4	TX +1
	5	+3.3V ETH
	6	TX -1
	7	n.c
	8	GND
	9	+3.3 V
	10	LED-LNK
	11	+3.3 V
	12	LED-LAN
	13	Shield
	14	Shield

The functionality of two LED are specified in the following tables:

- For 10Base-T connection:

LED	FUNCTION
LED-LNK	Link (yellow color): the LED lights up when a connection is active
LED-LAN	Rx/Tx: (green color): the LED lights up when occurs a data reception or transmission

- For 10/100Base-TX connection:

LED	FUNCTION
LED-LNK	The LED light (yellow color) on when a connection is active and flashes when occurs a data reception or transmission
LED-LAN	The LED light (green color) on when occurs a 100 Mbit connection and off when occurs a 10 Mbit connection

The device automatically recognizes the type of connection (cross or pin-to-pin).

The pinout shown in table represents the input signals to component J23 before the isolation voltage transformer (through-hole pin).



4.5 Driver and SDK

The drivers for the following operating system are available in the website www.custom4u.it.

OPERATING SYSTEM	DESCRIPTION	INSTALLATION PROCEDURE
Windows	Driver for Windows XP	From the Start menu, press Run and type-in the path where the SW was saved on your PC, then click OK. Follow the instructions that appear on the screen to install the driver.
	Driver for Windows VISTA (32/64 bit)	
	Driver for Windows 7 (32/64 bit)	
	Driver for Windows 8 (32/64 bit)	
	Driver for Windows 8.1 (32/64 bit)	
	Driver for Windows 10 (32/64 bit)	
	Driver for Virtual COM (32/64 bit) with or without silent installation (see paragraph 6.5)	
Driver for OPOS		
Linux	(32/64 bit)	Follow the instruction get back on the "Readme.txt" file. You can find it in the software package downloaded in advance.
Android	SDK for CustomAndroidAPI	Extract the zipped folder to the destination path desired. Follow the instructions present in the software package that you downloaded on how to install and use the SDK.
iOS	SDK for CustomiOSApi	Extract the zipped folder to the destination path desired. Follow the instructions present in the software package that you downloaded on how to install and use the SDK.






5 OPERATION

5.1 Opening device cover

KPM180H 1, KPM180H 2, KPM180H 3
KPM180H 4, KPM180H 5, KPM180H 6


TK180 PLAS 1, TK180 PLAS 2
TK180 PLAS 3

1

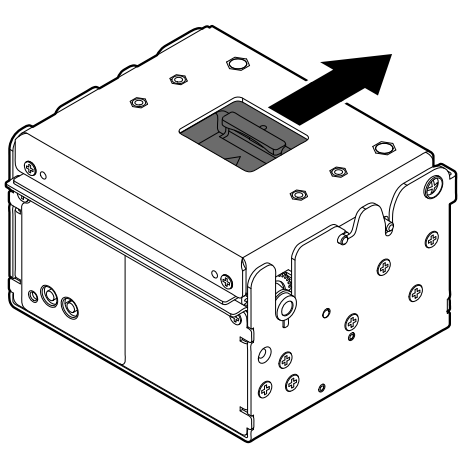


Push the opening lever in the direction shown in the figure.

2

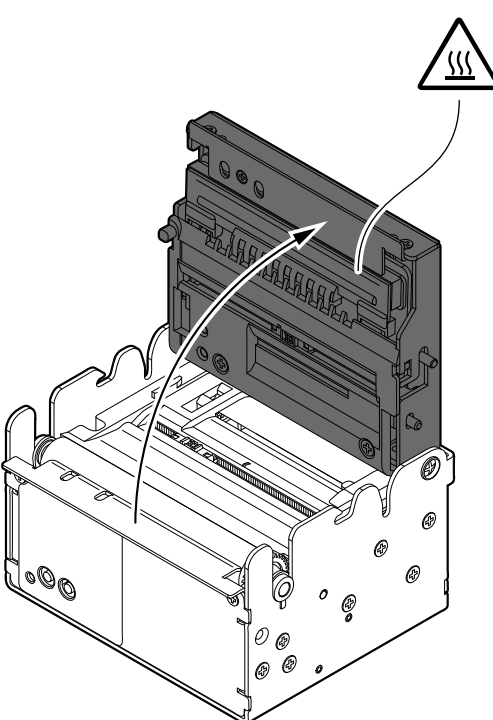


Open the device cover.

1

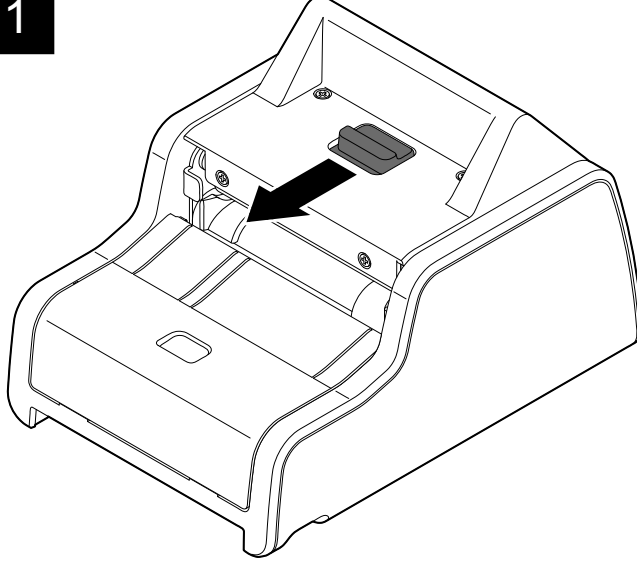

Push the opening lever in the direction shown in the figure.


2

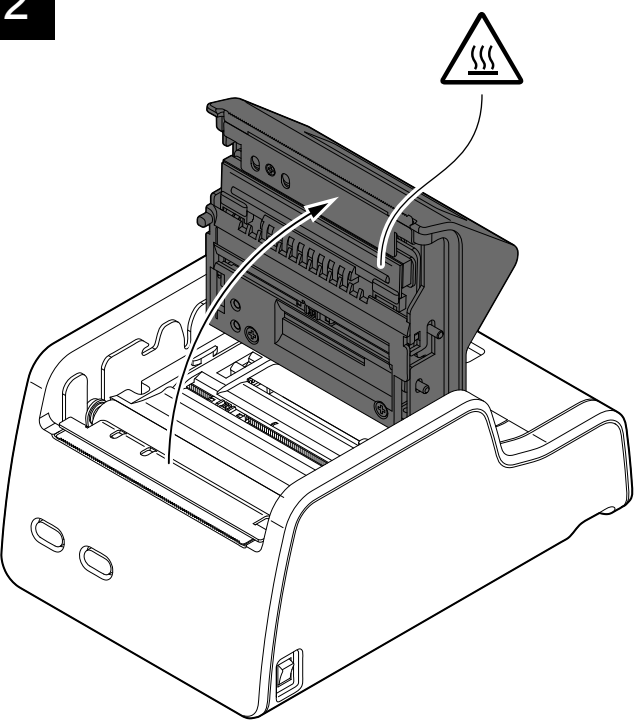

Open the device cover.


TK180 MET 1, TK180 MET 2, TK180 MET 3
TK180 CUT 1, TK180 CUT 2, TK180 CUT 3, TK180 CUT 4

1

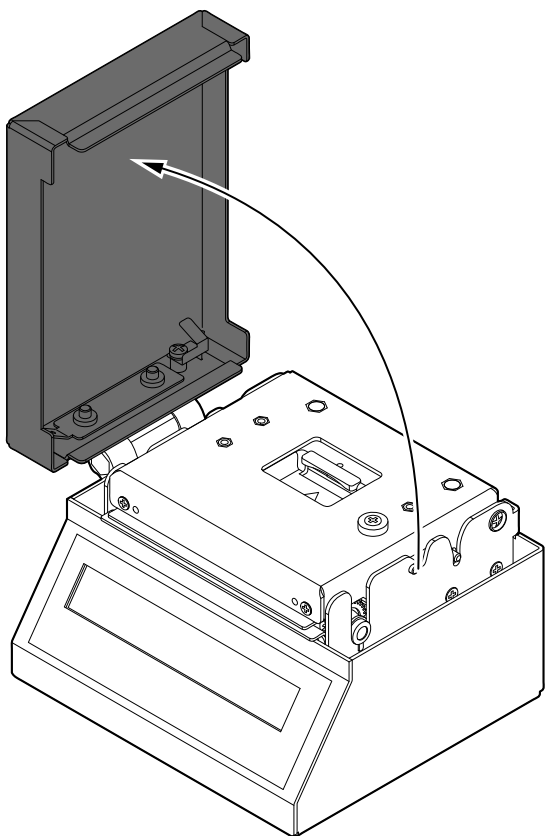


Open the metallic cover.

2

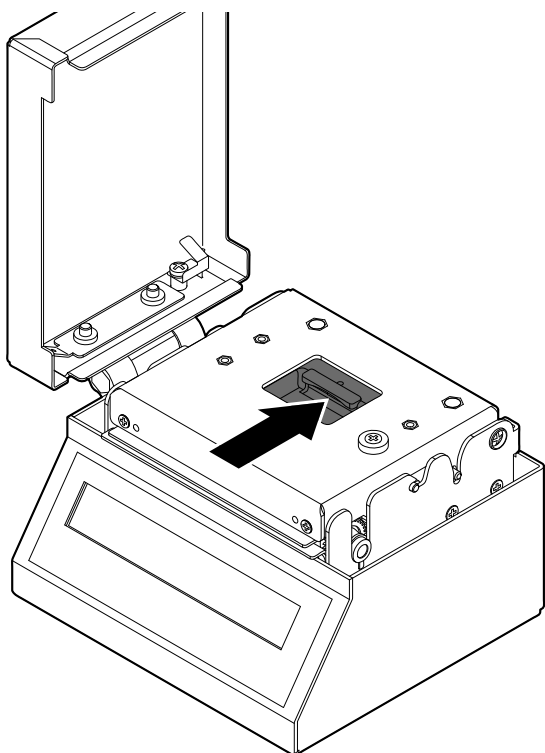

Push the opening lever shown in figure.


3

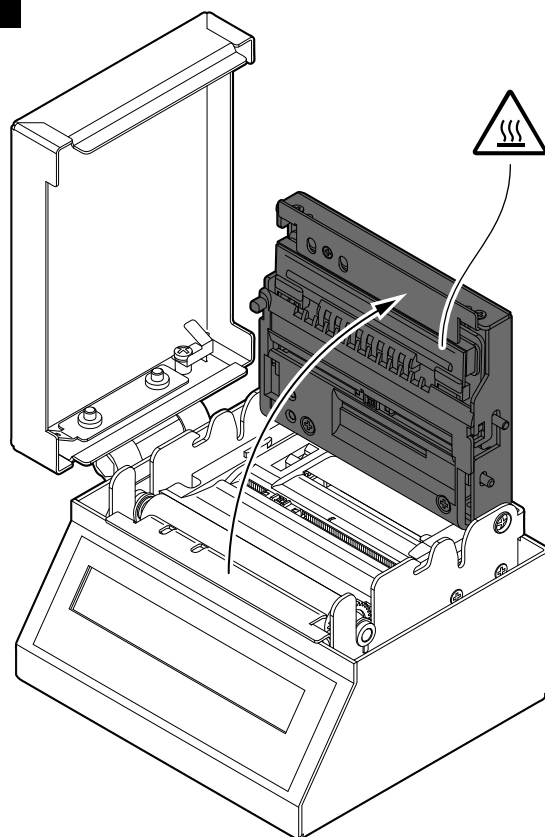

Open the device cover.

5.2 Adjusting device for 82.5 mm paper width

To manage paper width of 82.5 mm, move the adjustable cursor at the right end point as shown in the following figure (for some models, only the internal printer group is represented).

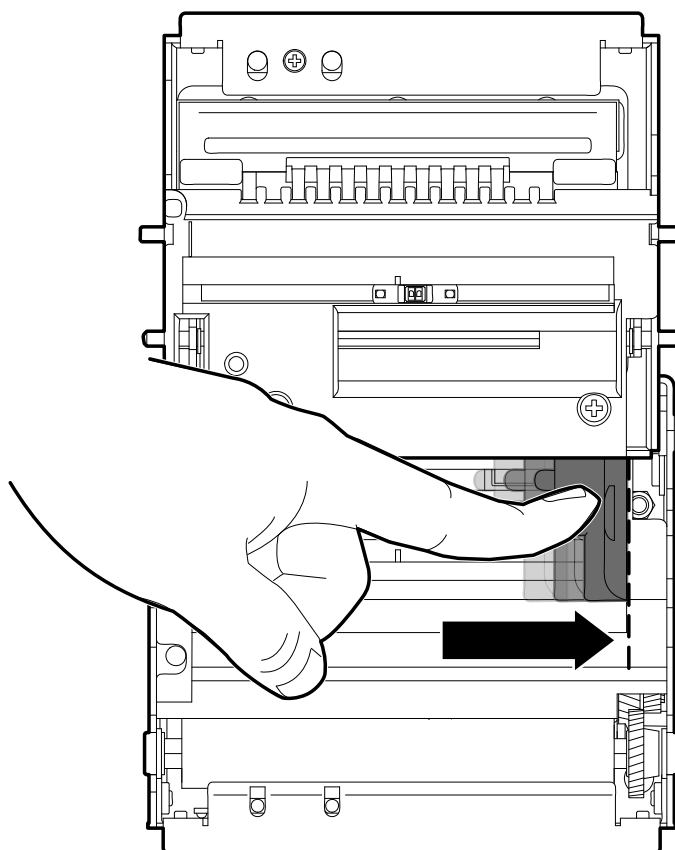

TK180 MET 1, TK180 MET 2, TK180 MET 3
TK180 CUT 1, TK180 CUT 2, TK180 CUT 3, TK180 CUT 4
TK180 PLAS 1, TK180 PLAS 2, TK180 PLAS 3


If you use the device with the paper roll holder code 974HL010000009 or 974HL020000006, provided as an accessory (see [chapter 10](#)), adjust the two bushing on the roll holder pin by placing both the bushings on the external notches (position A) or on the internal notches (position B) as shown in figure.



5.3 Adjusting device for 54 mm paper width


KPM180H 6
TK180 MET 3
TK180 CUT 3
TK180 PLAS 3

The device is provided with the paper block guide already assembled to manage paper width of 54 mm (for some models, only the internal printer group is represented).

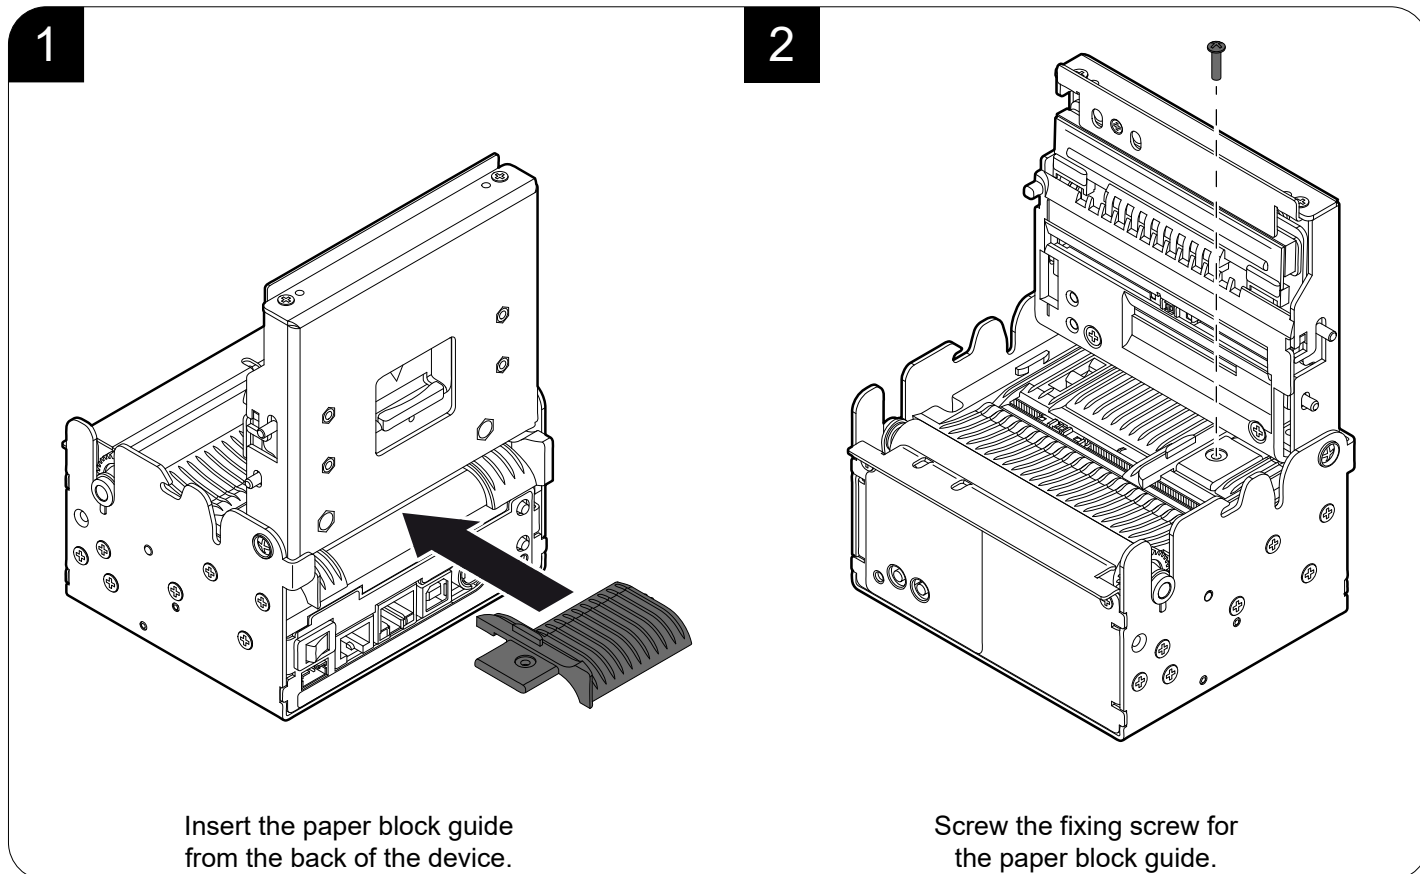


KPM180H 1, KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5
TK180 MET 1, TK180 MET 2
TK180 CUT 1, TK180 CUT 2, TK180 CUT 4
TK180 PLAS 1, TK180 PLAS 2


To manage paper width of 54 mm, it is recommended to assemble the paper block guide shown in the following figure, provided with the device.

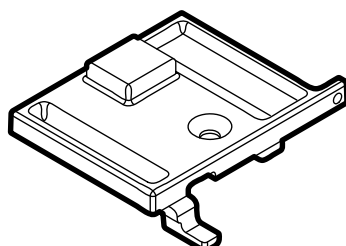


To assemble the paper block guide proceed as follows (for some models, only the internal printer group is represented).

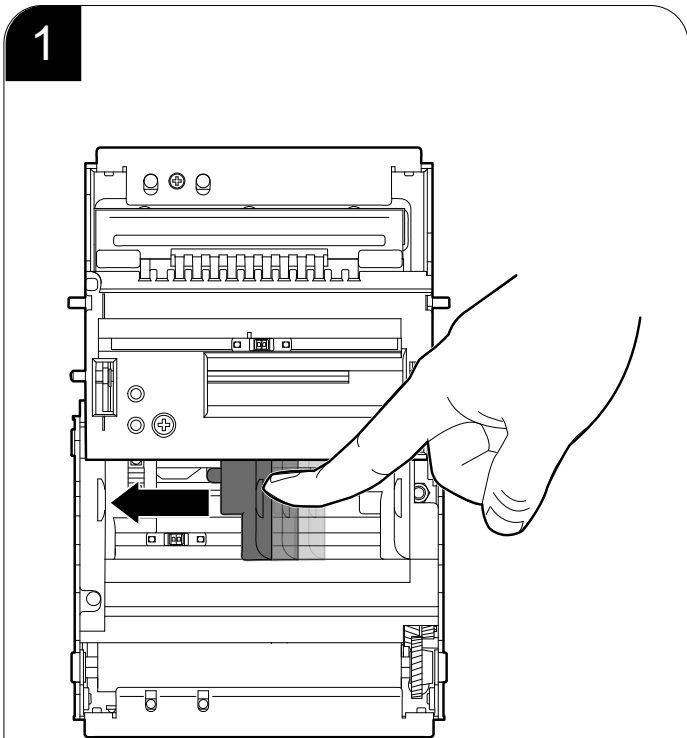


Move the adjustable cursor in the direction shown in the figure.

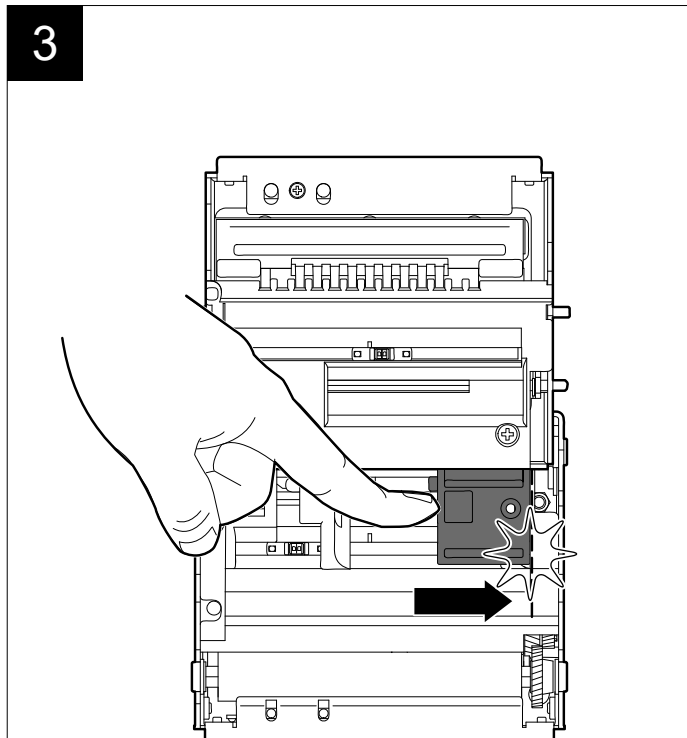

Move the paper block guide to the end point against the right edge of the track B.

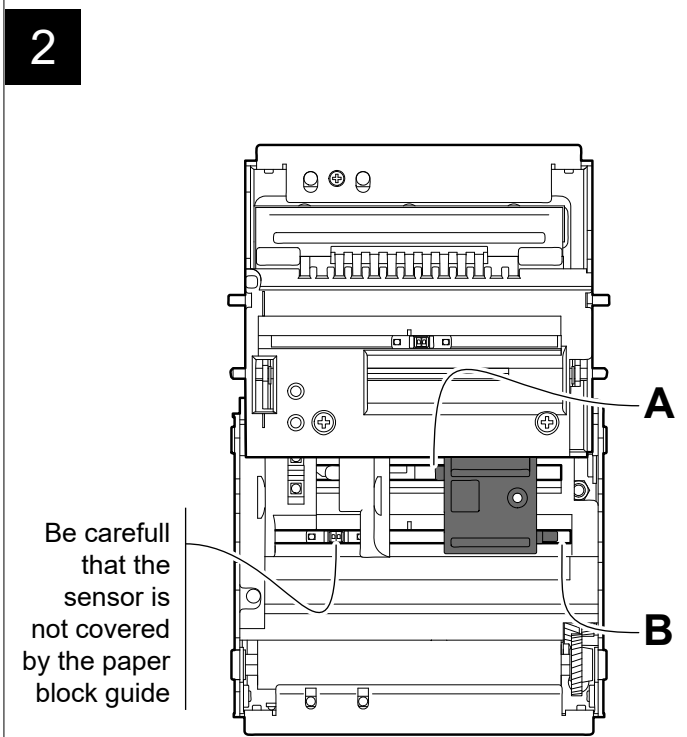

Assemble the paper block guide as shown in figure by inserting the two plastic pins into the tracks A and B.

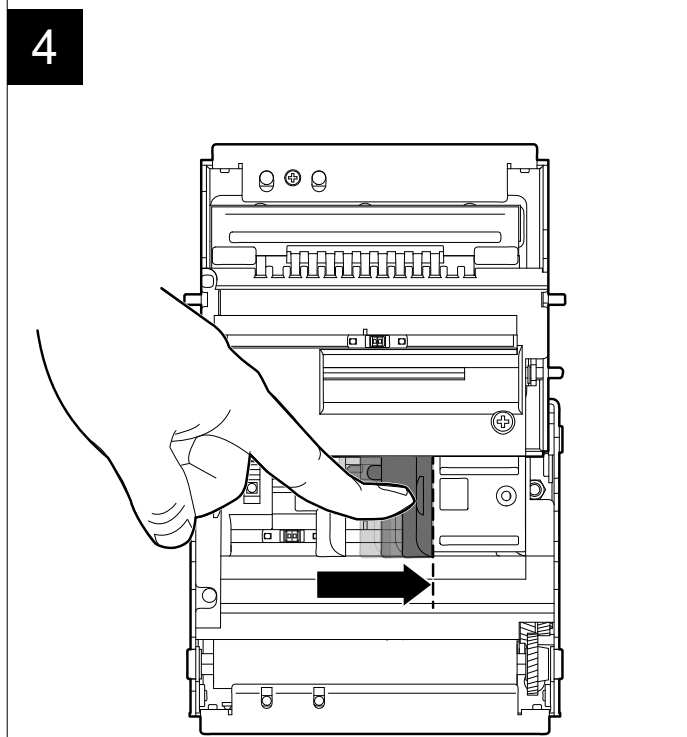


Move the adjustable cursor to the end point against the left edge of the paper block guide.



TK180 MET 1, TK180 MET 2, TK180 MET 3
TK180 CUT 1, TK180 CUT 2, TK180 CUT 3, TK180 CUT 4
TK180 PLAS 1, TK180 PLAS 2, TK180 PLAS 3

If you use the device with the paper roll holder code 974HL010000009 or 974HL020000006, provided as an accessory (see [chapter 10](#)), adjust the two bushing on the roll holder pin by placing the bushings on the two adjacent notches located on the same side of the mobile paper guide of the device, according to the assembling side of the frame (right or left).

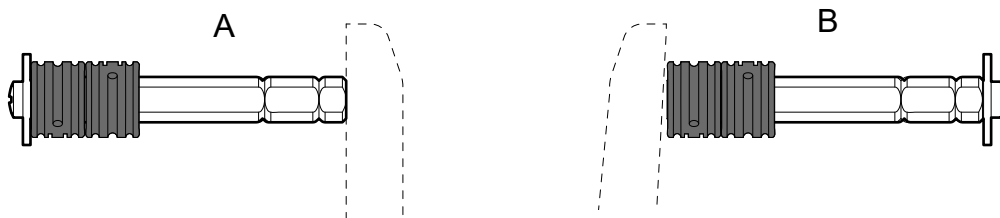

5.4 Adjusting device for 20 mm to 25 mm paper width


KPM180H 1, KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5

TK180 MET 1, TK180 MET 2


TK180 CUT 1, TK180 CUT 2, TK180 CUT 4

TK180 PLAS 1, TK180 PLAS 2

The devices described in this document are intended exclusively for use with 82.5 mm and 54 mm paper width. However, they can be optionally provided with a spacer (shown in following figure) for the use of paper with from 20 mm to 25 mm.

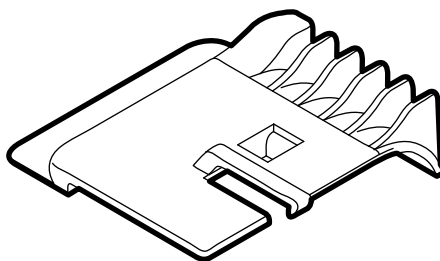

Assemble the reducer as shown in the following figure (for some models, only the internal printer group is represented).

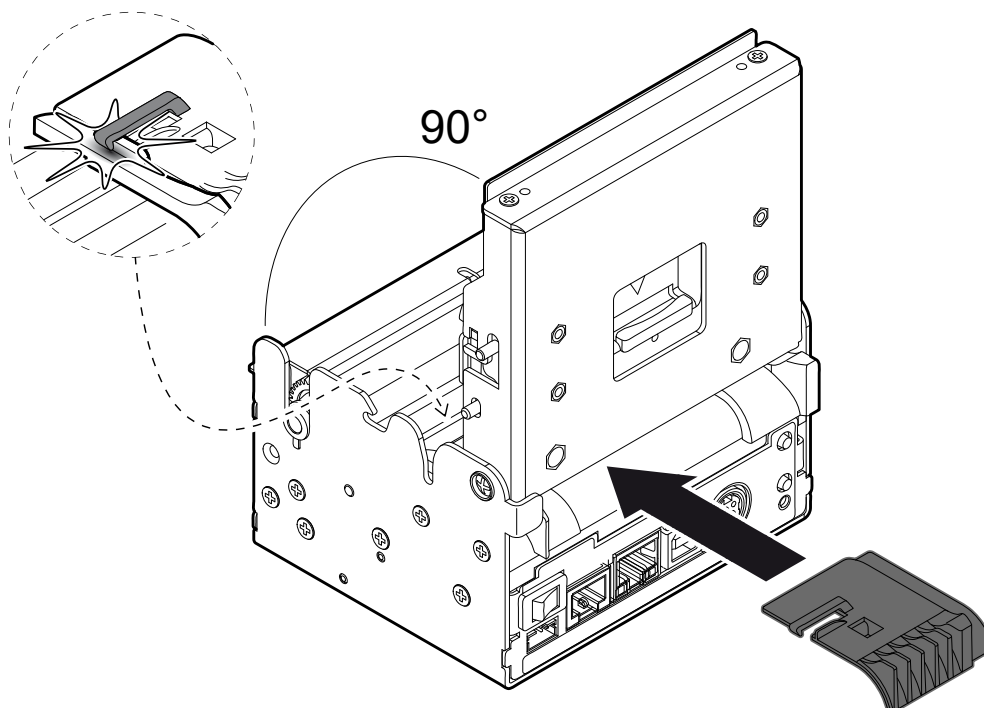


5.5 Adjusting the alignment sensors

The device is equipped with two mobile sensors for the detection of the alignment black mark placed both on the thermal side and on the non-thermal side of paper as shown in the following figure (for some models, only the internal printer group is represented).


By factory, the mobile sensors are both placed in the central position but the user can manually move the sensors according to the position and the type of the black mark printed on the paper (see [chapter 7](#)).

To use these sensors, the “Black mark position” setup parameter must be correctly set (see [chapter 6](#)).

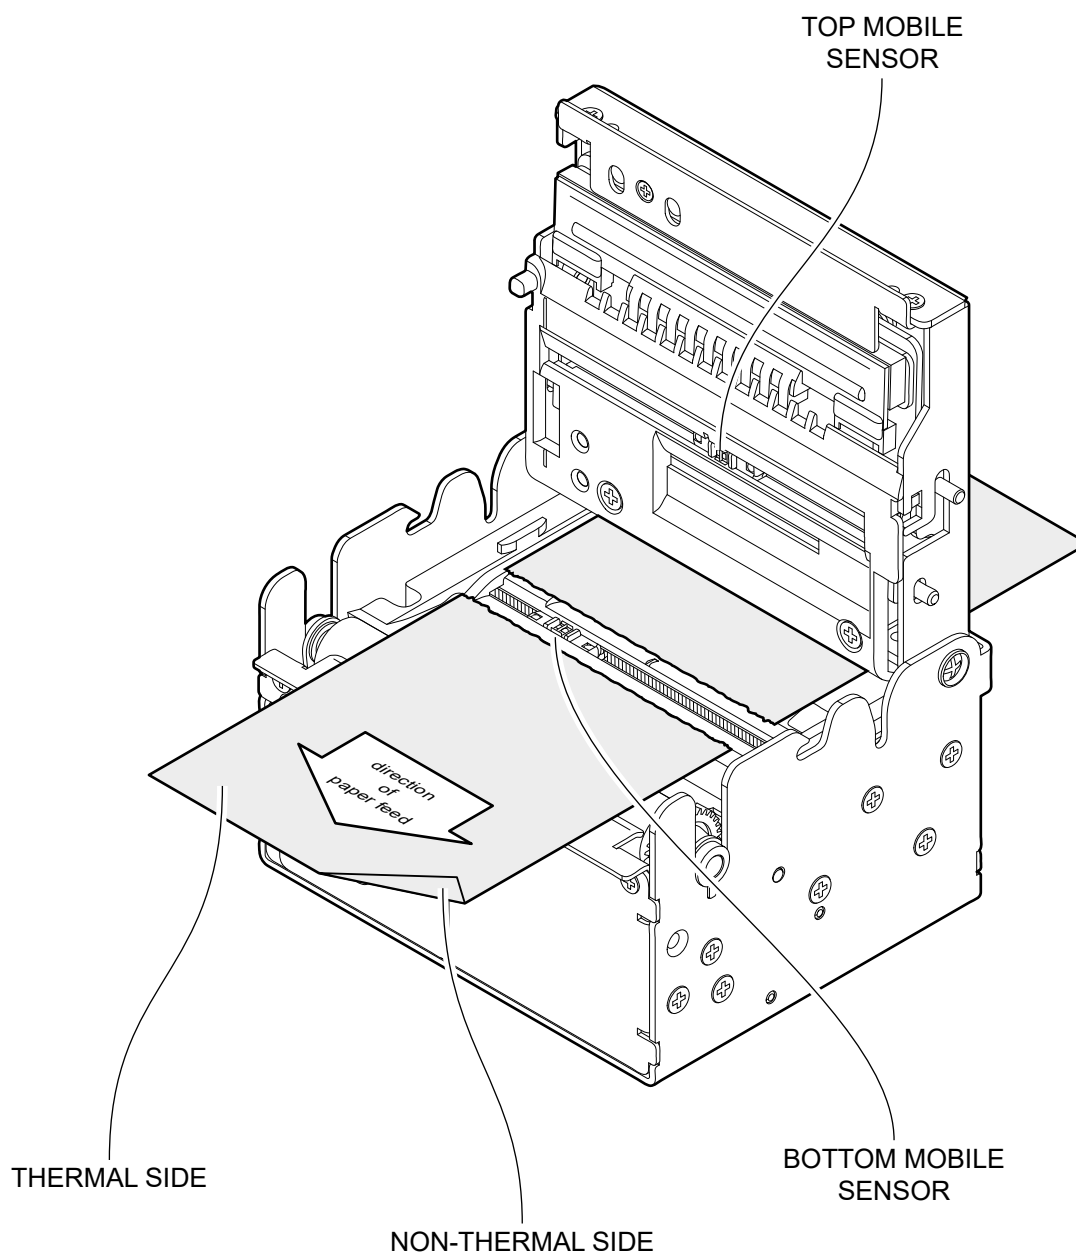


To adjust the mobile sensors position according to the position and type of black mark, open the device cover (see [paragraph 5.1](#)) and move the sensors to the desired position using a small screwdriver or a pointed object.

On both the flat there is a reference notch to facilitate the adjustment of the mobile sensors in the central position (see following image).

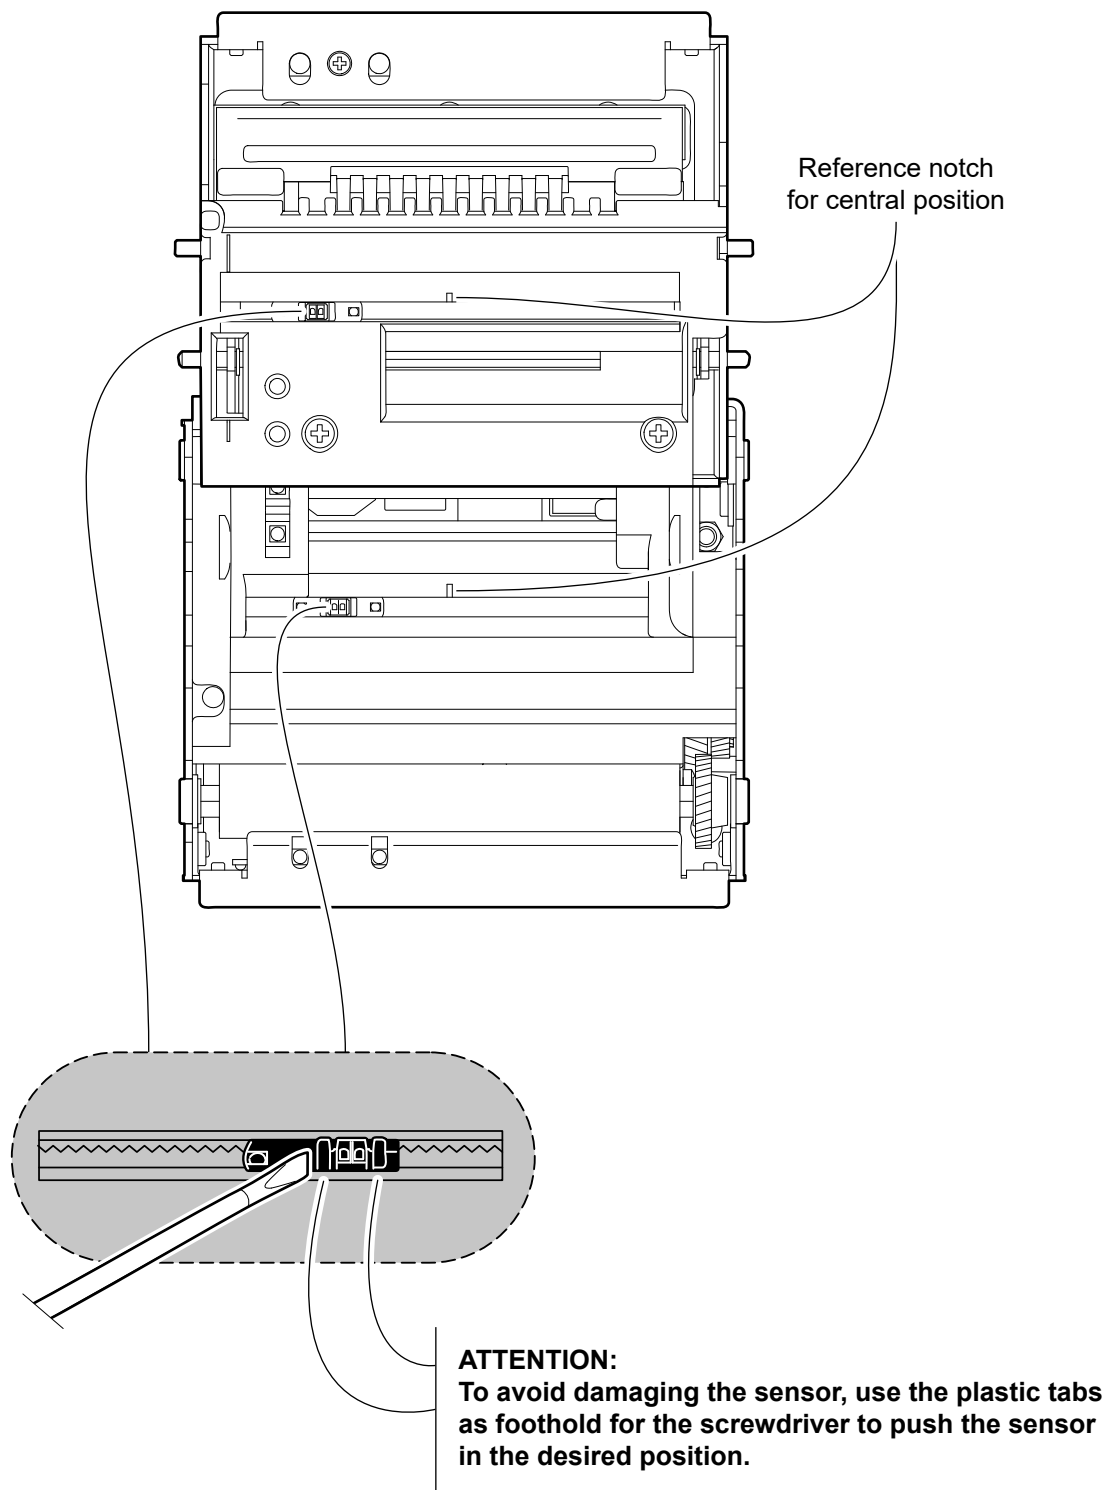


5.6 Switch the device on

KPM180H 1, KPM180H 2, KPM180H 3
KPM180H 4, KPM180H 5, KPM180H 6

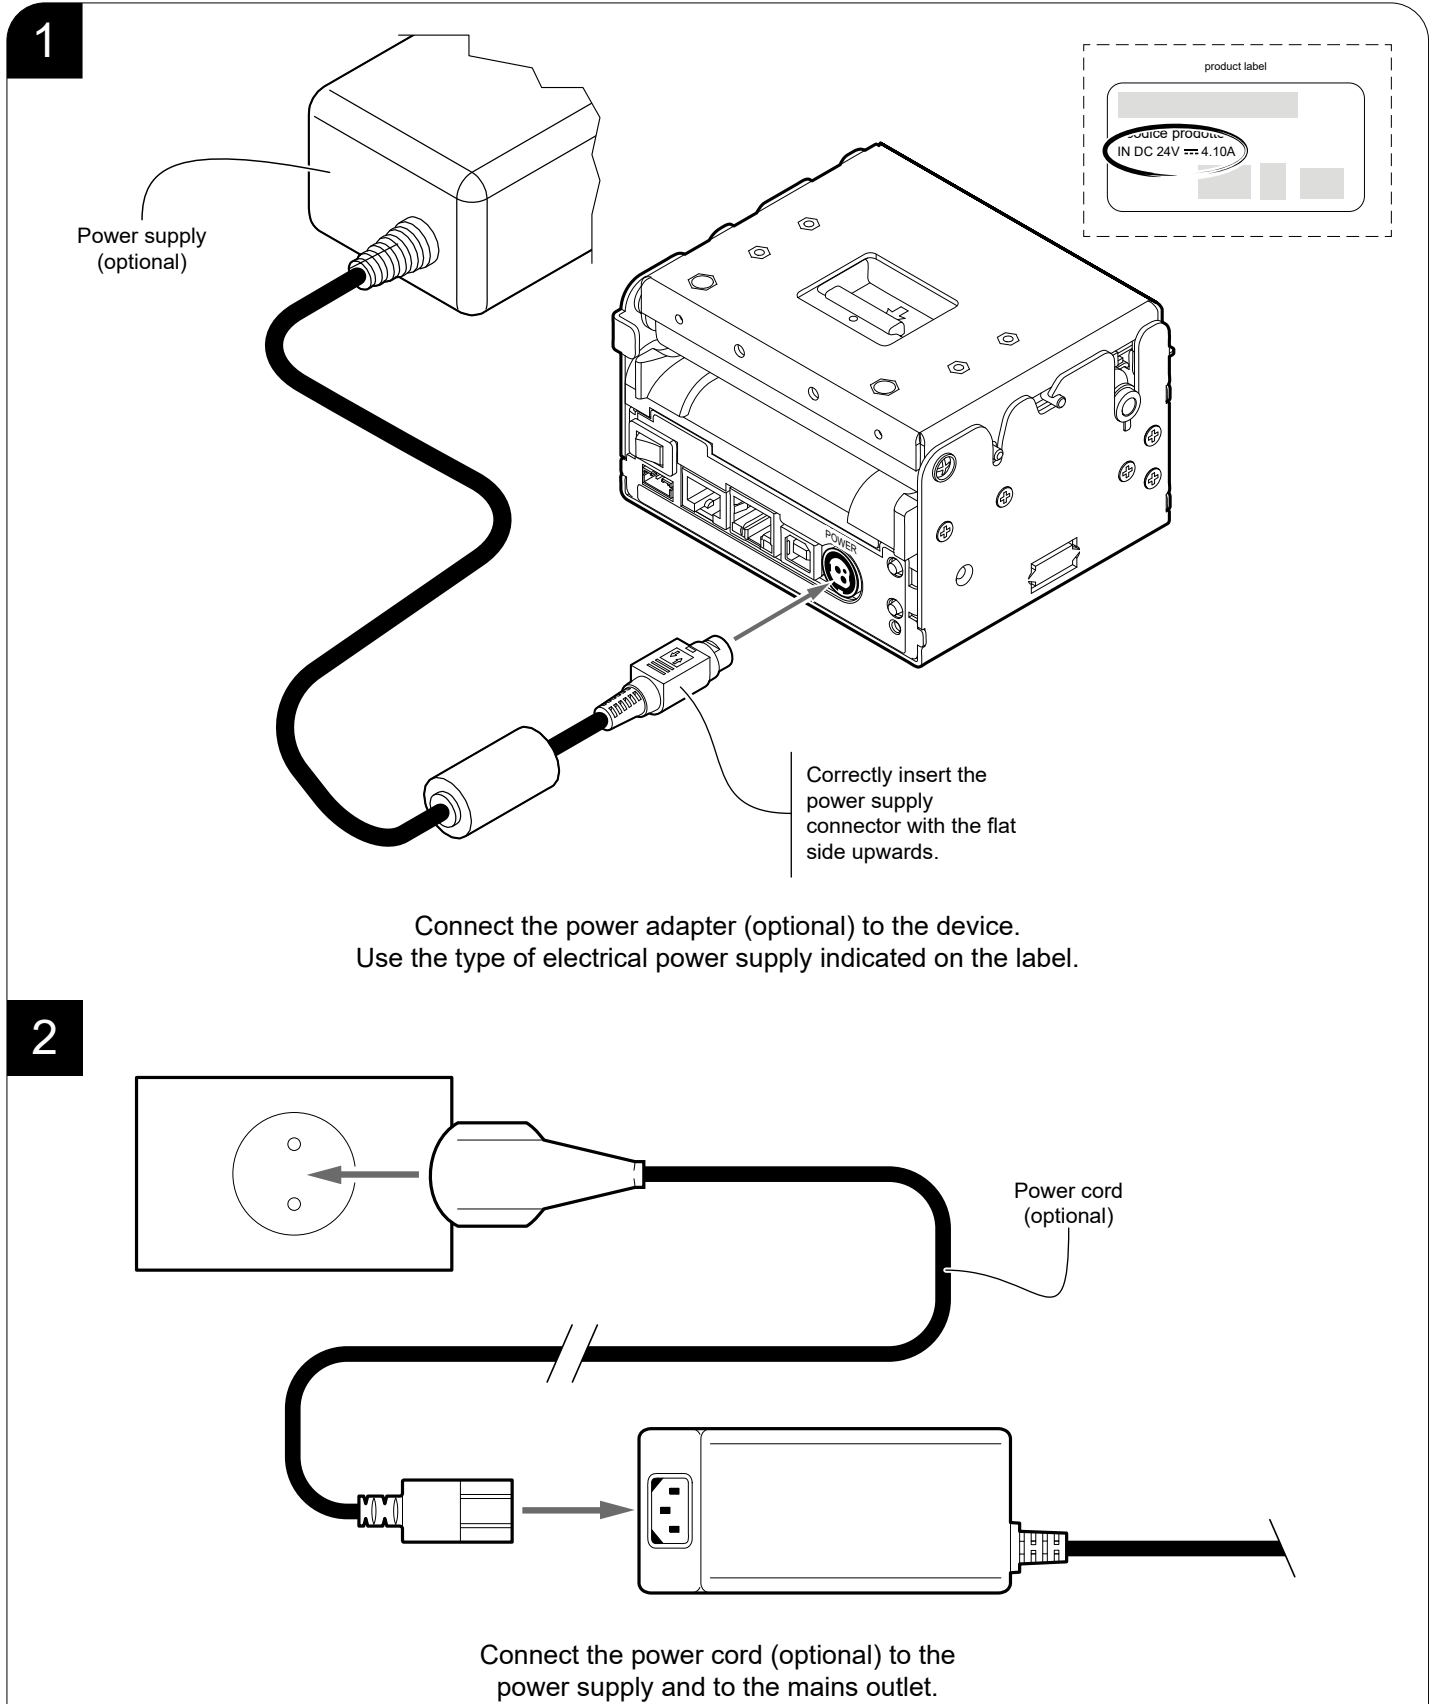


3

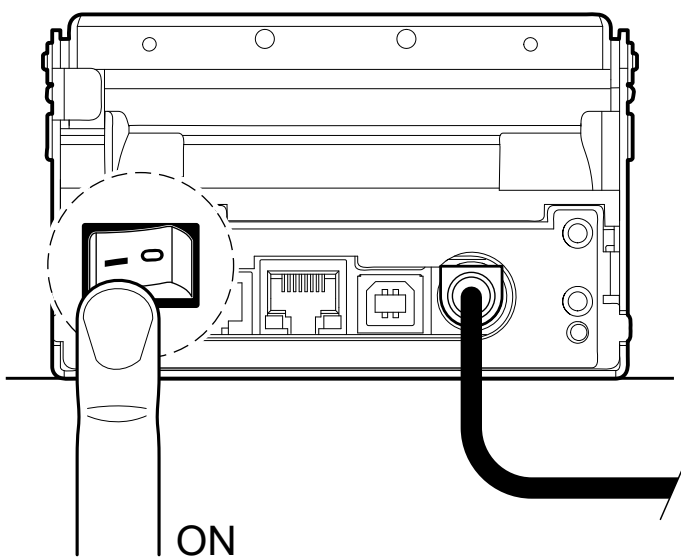

Switch device on
pressing the ON/OFF key.

4

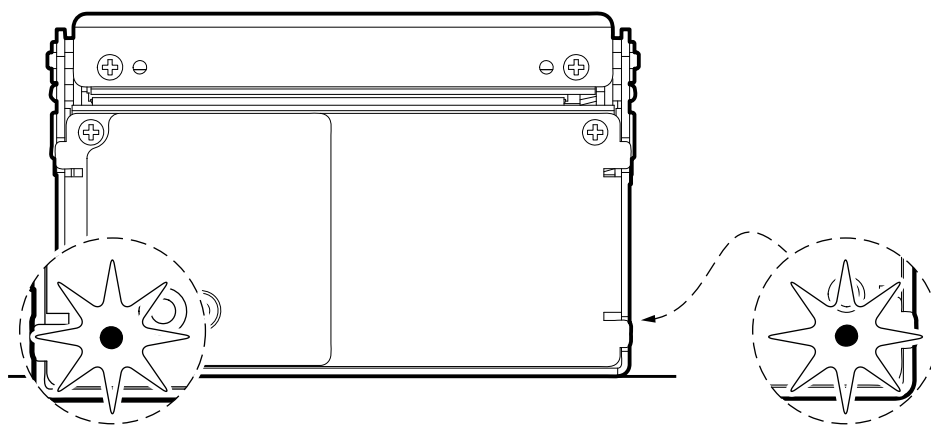


The green LEDs (front and rear) turn on
and the device is ready.




TK180 MET 1, TK180 MET 2, TK180 MET 3
TK180 CUT 1, TK180 CUT 2, TK180 CUT 3, TK180 CUT 4

1

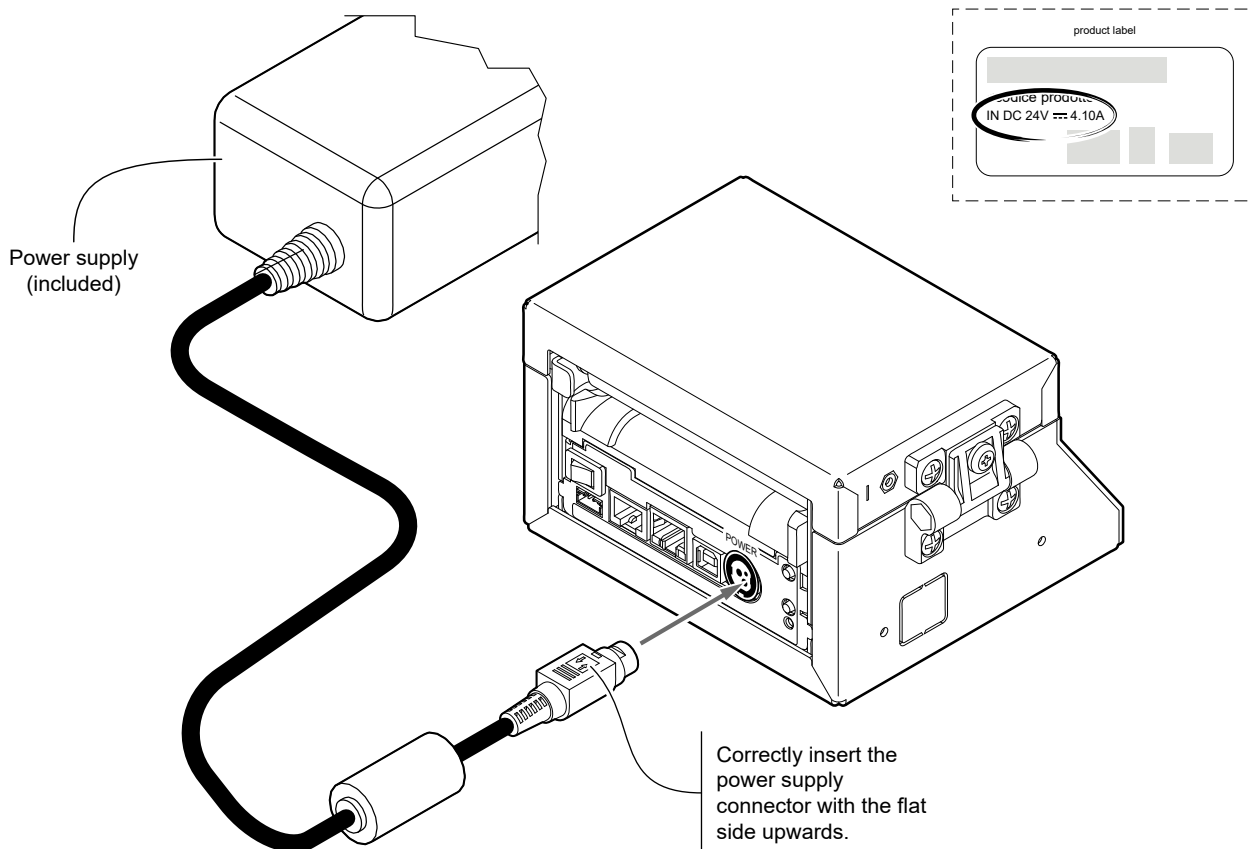


Connect the power adapter to the device.
Use the type of electrical power supply indicated on the label.

2

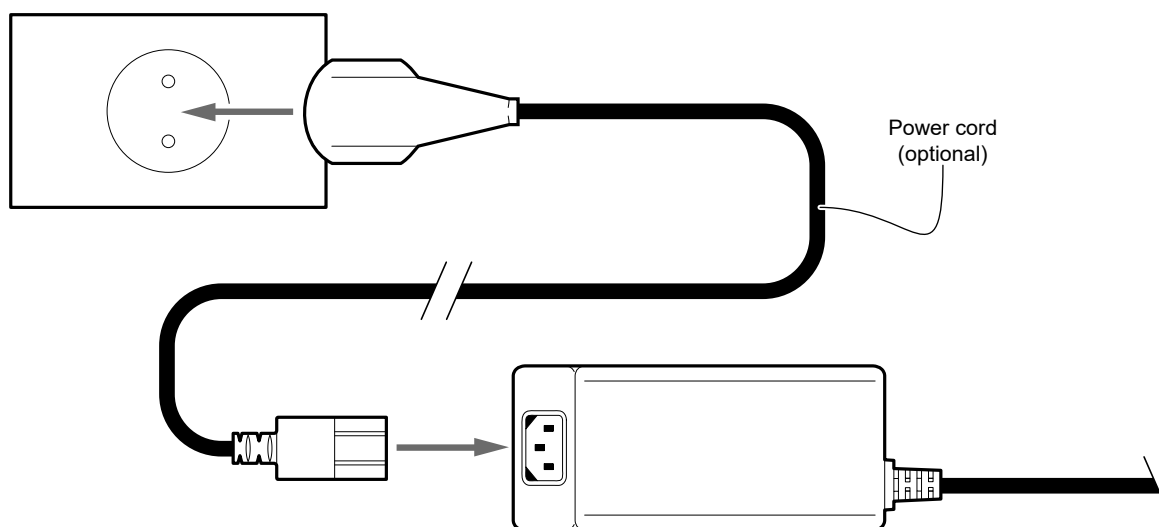

Connect the power cord (optional) to the power supply and to the mains outlet.


3

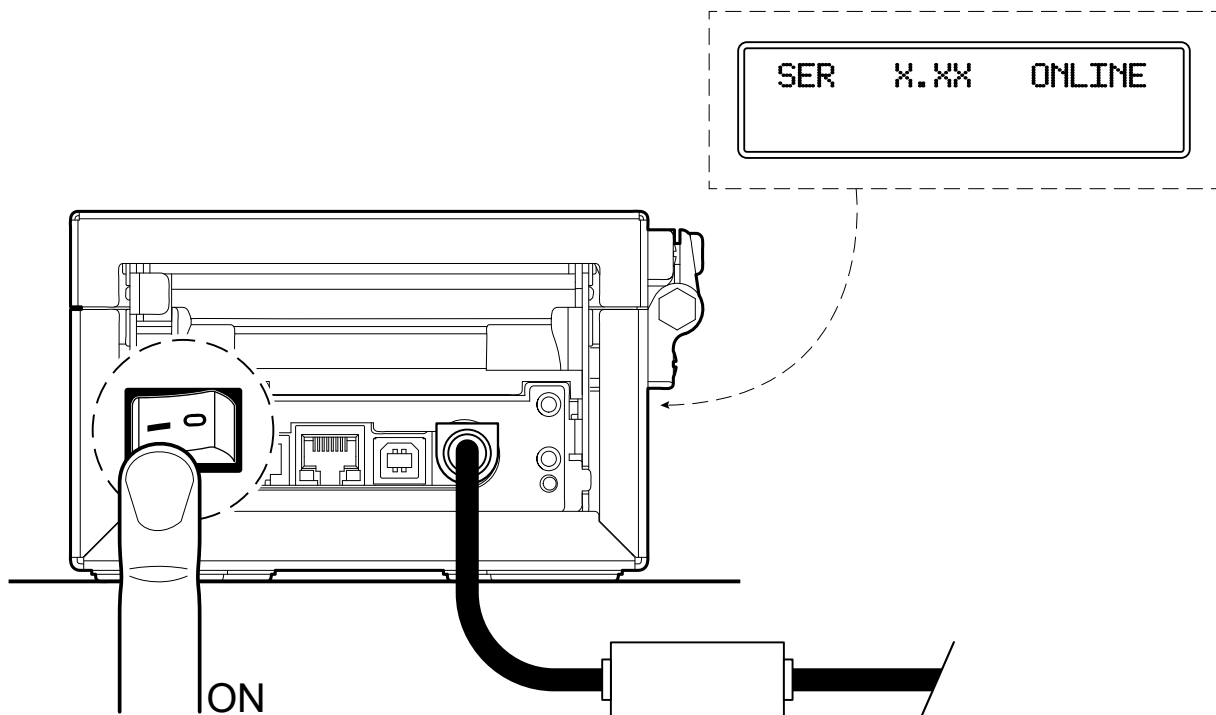

Switch device on pressing the ON/OFF key.
The display turns on and shows the message in figure.

TK180 PLAS 1, TK180 PLAS 3

1

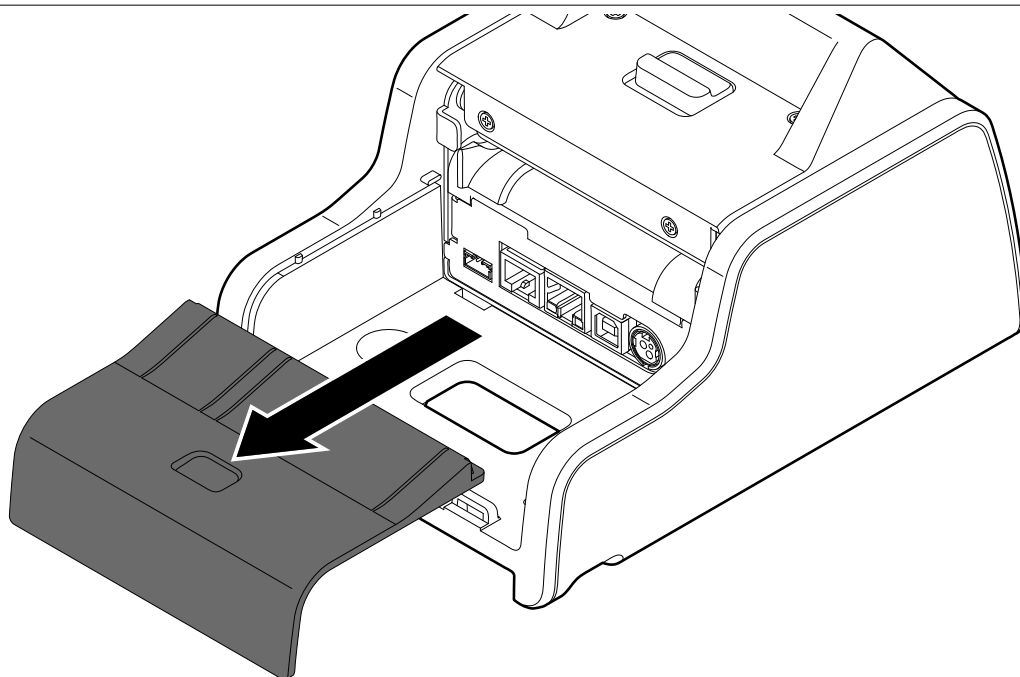


Remove the cover of the connector compartment
by sliding it in the direction shown.

2

Place the ferrite core of the power supply cable inside the connectors compartment.


Correctly insert the power supply connector with the flat side upwards.

Power supply (included)

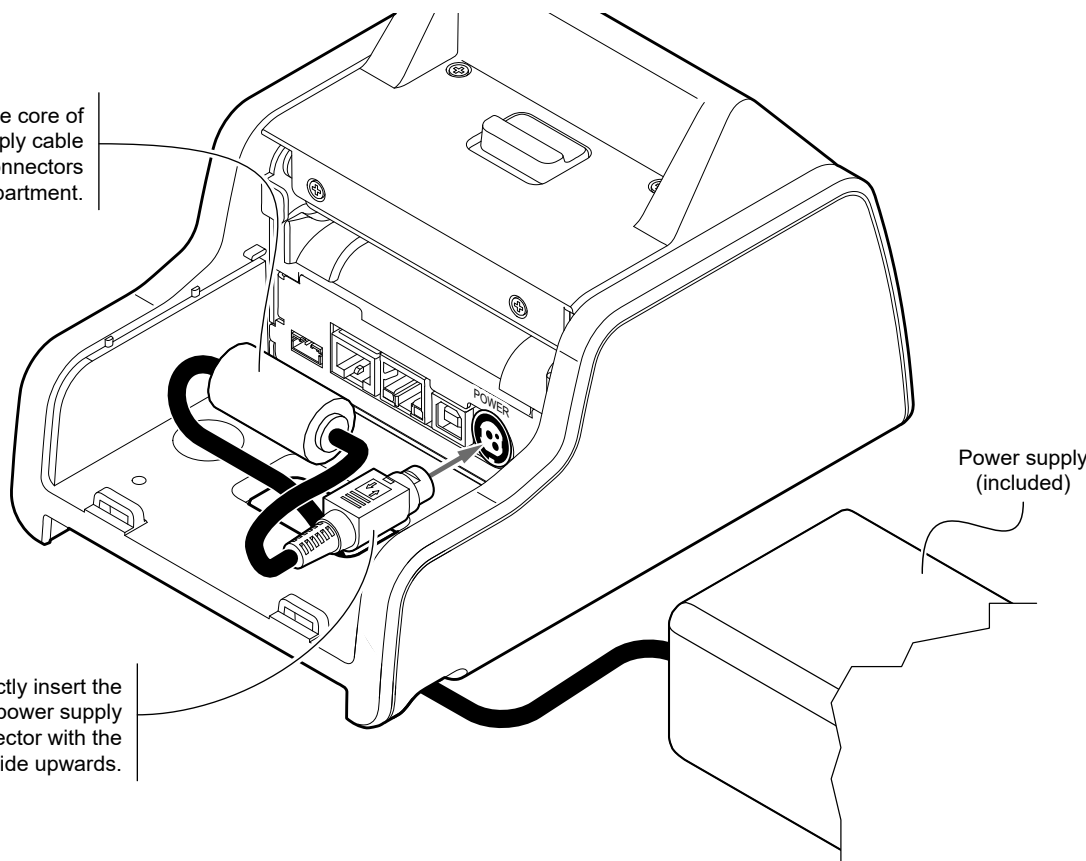


Connect the power adapter to the device by placing the cable as shown. Use the type of electrical power supply indicated on the label.

3

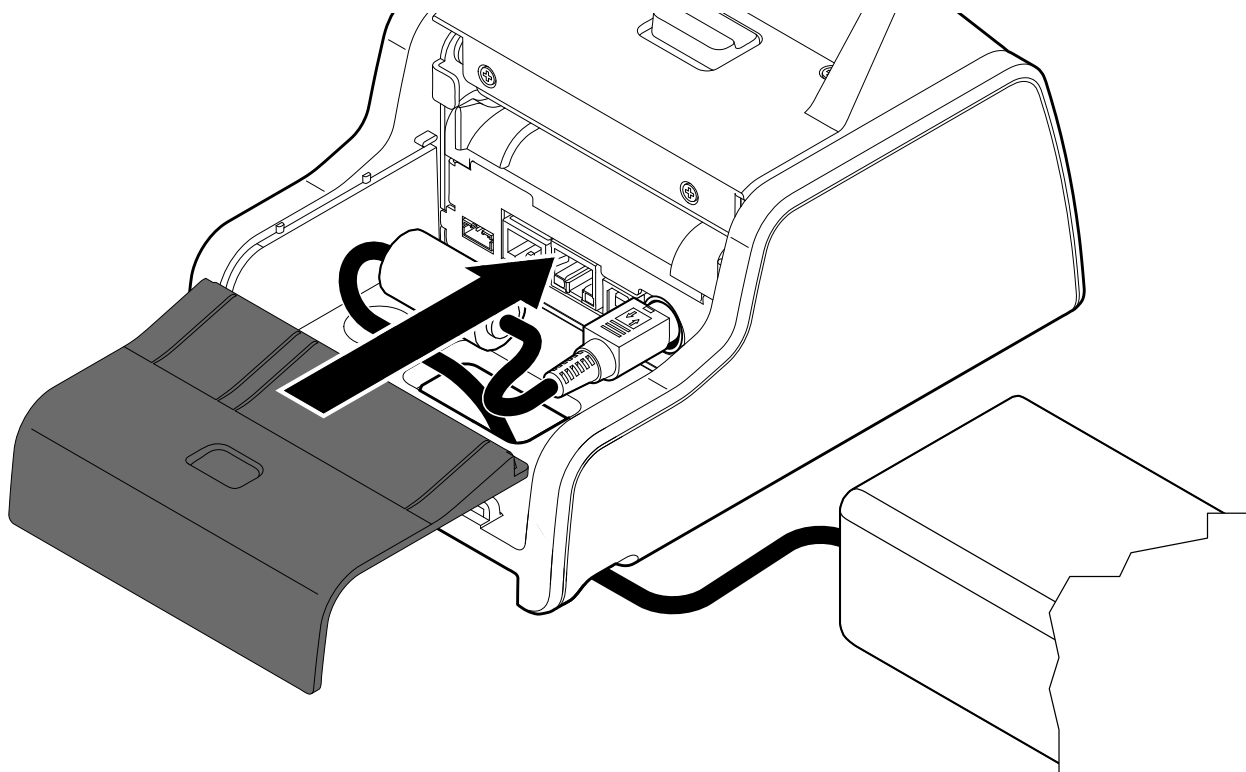


Close the connectors compartment by placing the cover previously removed.

4

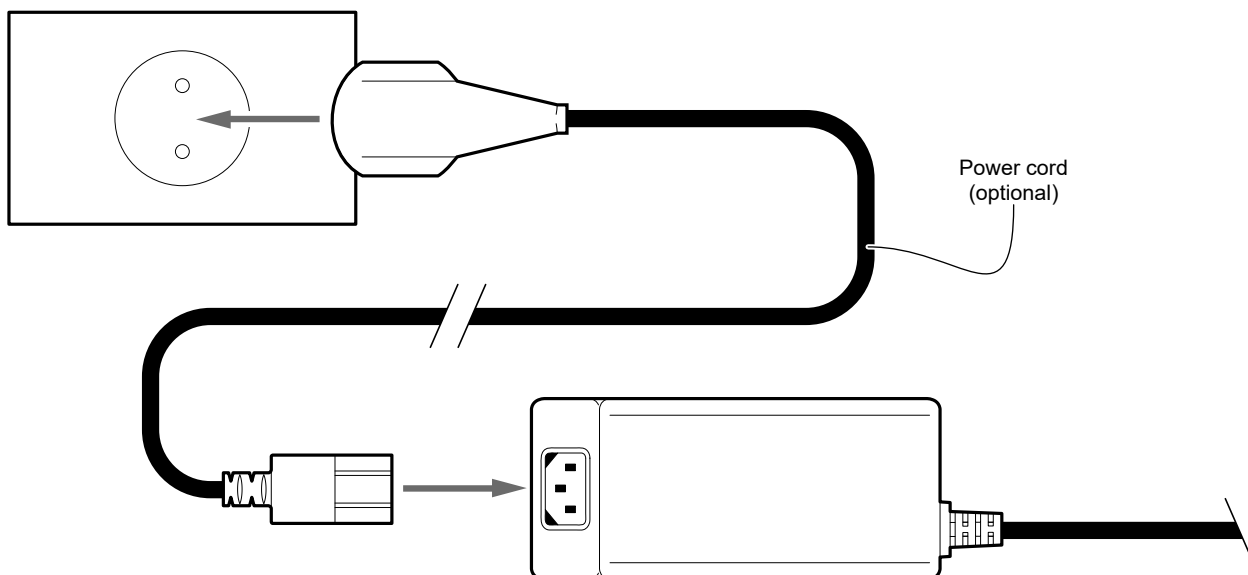

Connect the power cord (optional) to the power supply and the mains outlet.


5

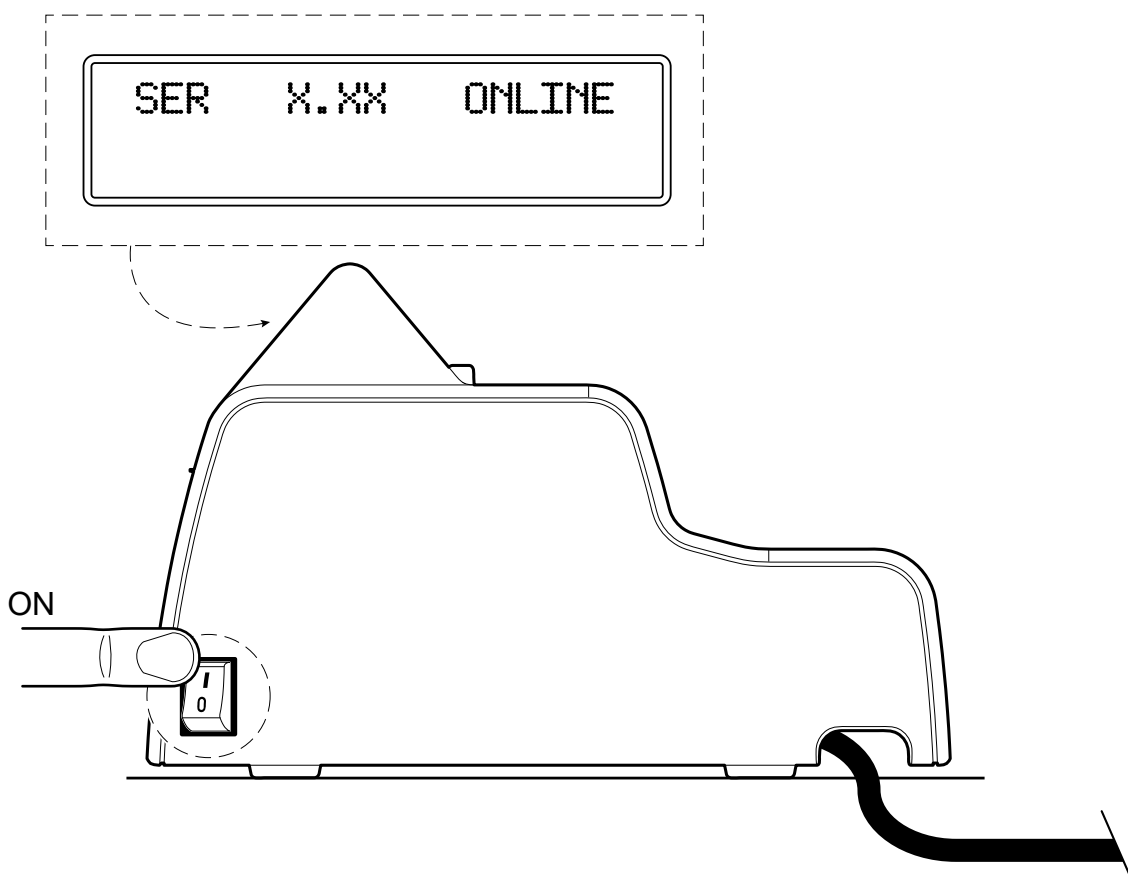

Switch device on pressing the ON/OFF key.
The display turns on and shows the message in figure.




1

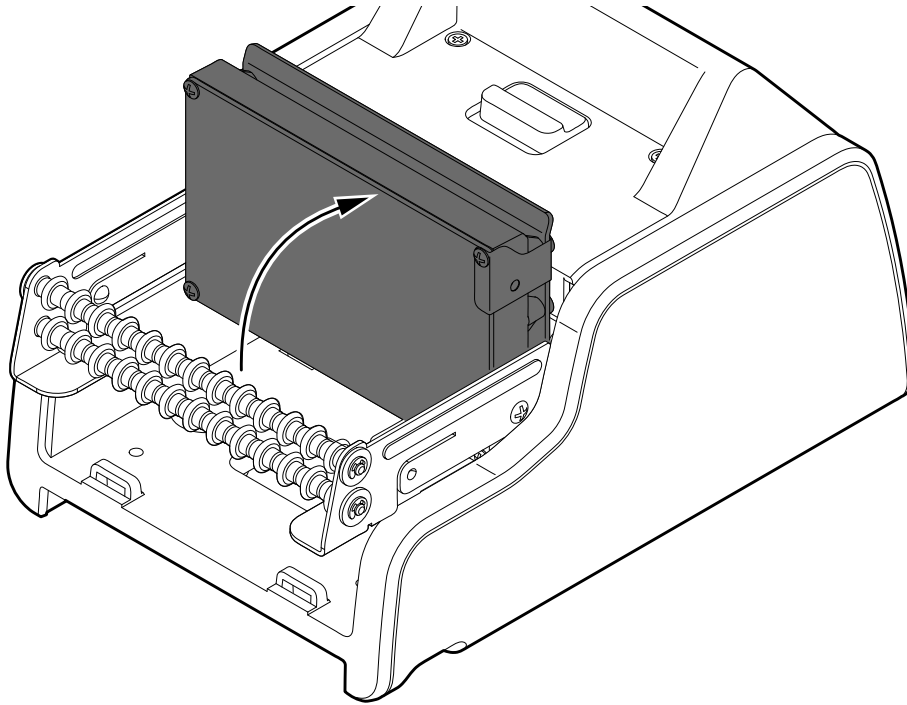

Lift the RFID reader by rotating it in the shown direction.

2


Place the ferrite core of the power supply cable inside the connectors compartment.

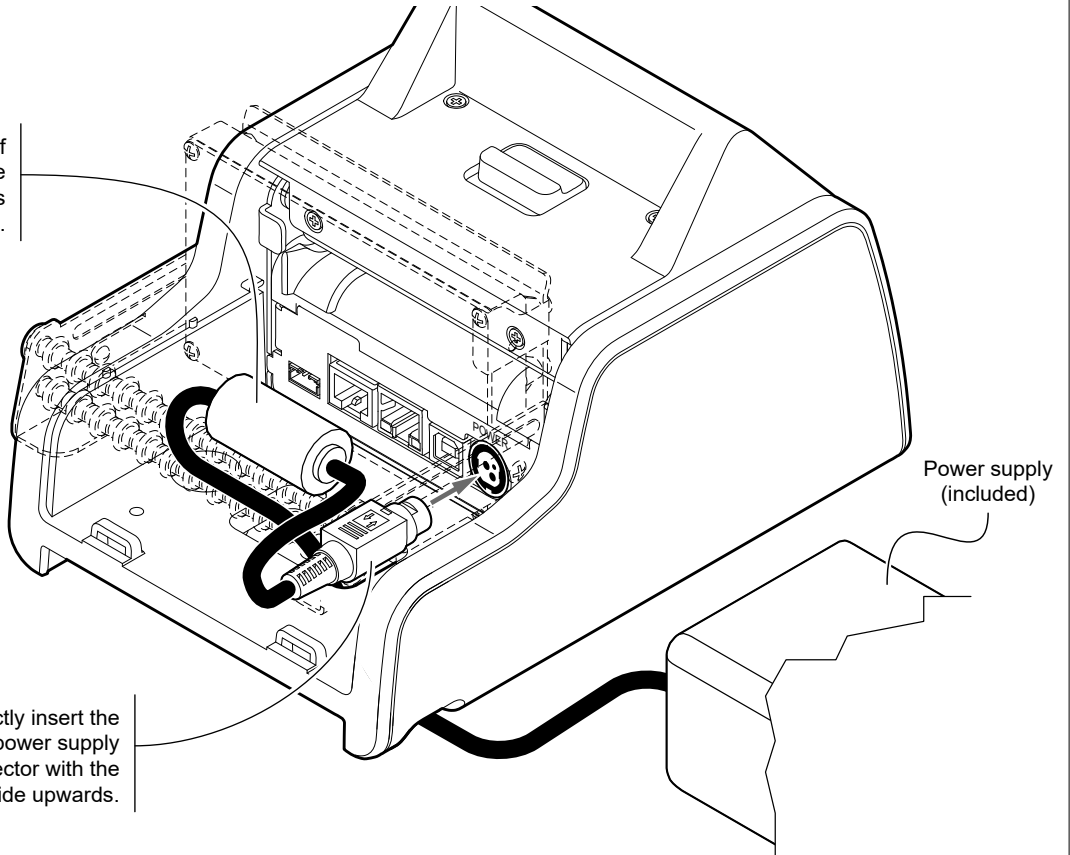

Correctly insert the power supply connector with the flat side upwards.


Connect the power adapter to the device by placing the cable as shown. Use the type of electrical power supply indicated on the label.

3

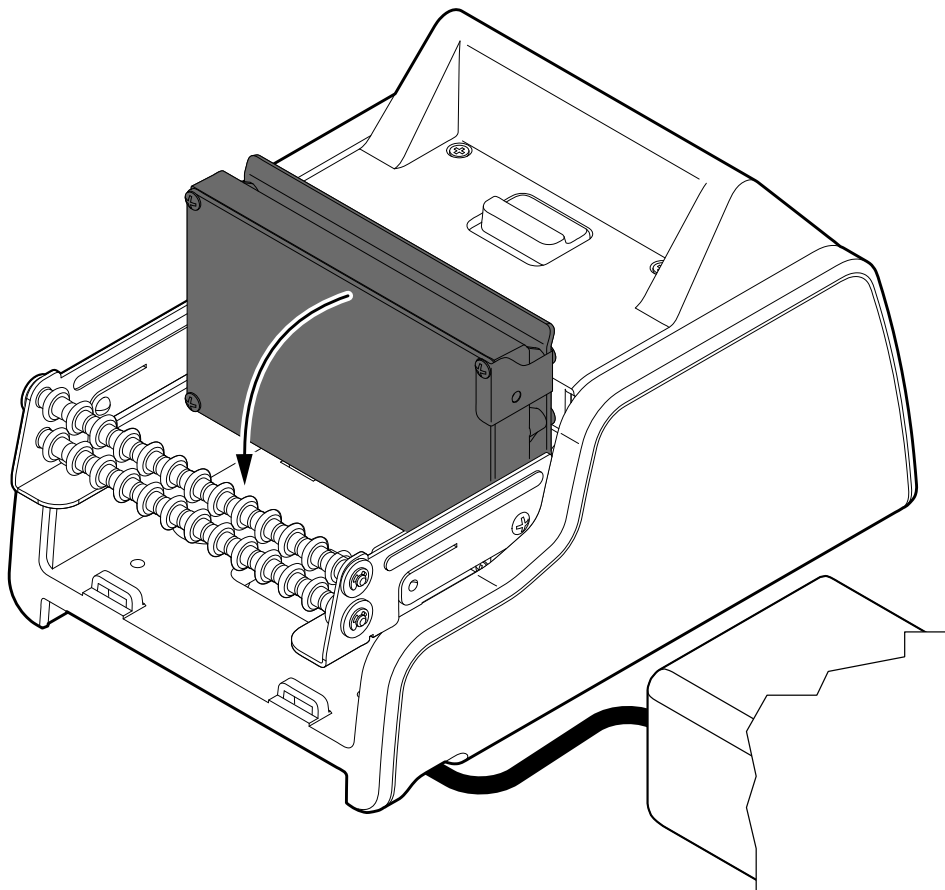

Lower the RFID reader by rotating it in the shown direction.


4

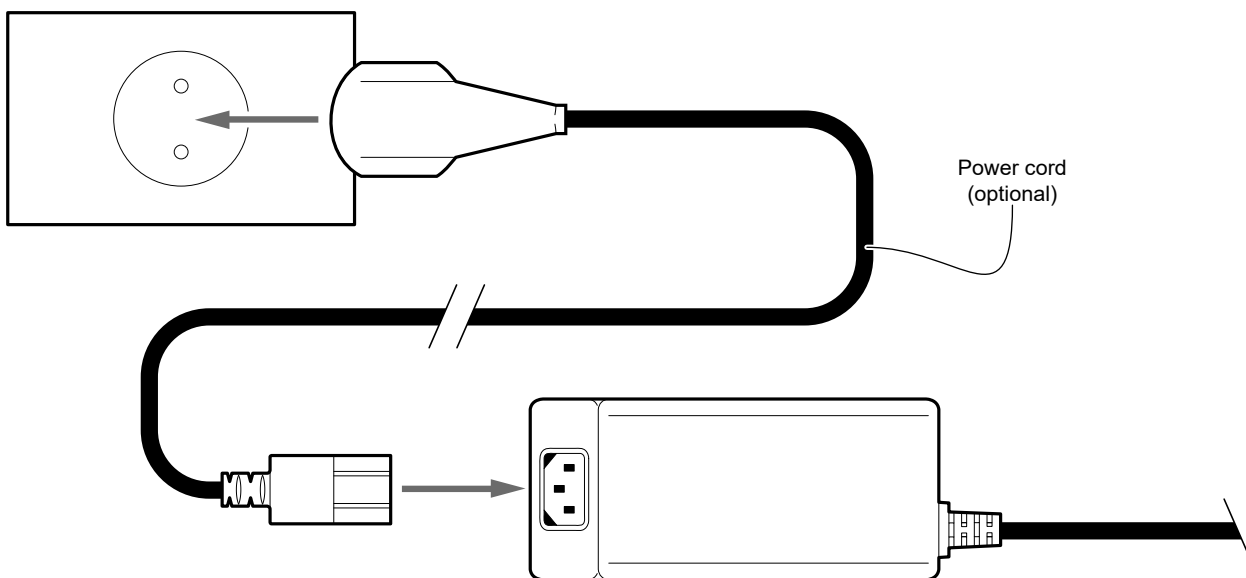

Power cord (optional)

Connect the power cord (optional) to the power supply and the mains outlet.

5

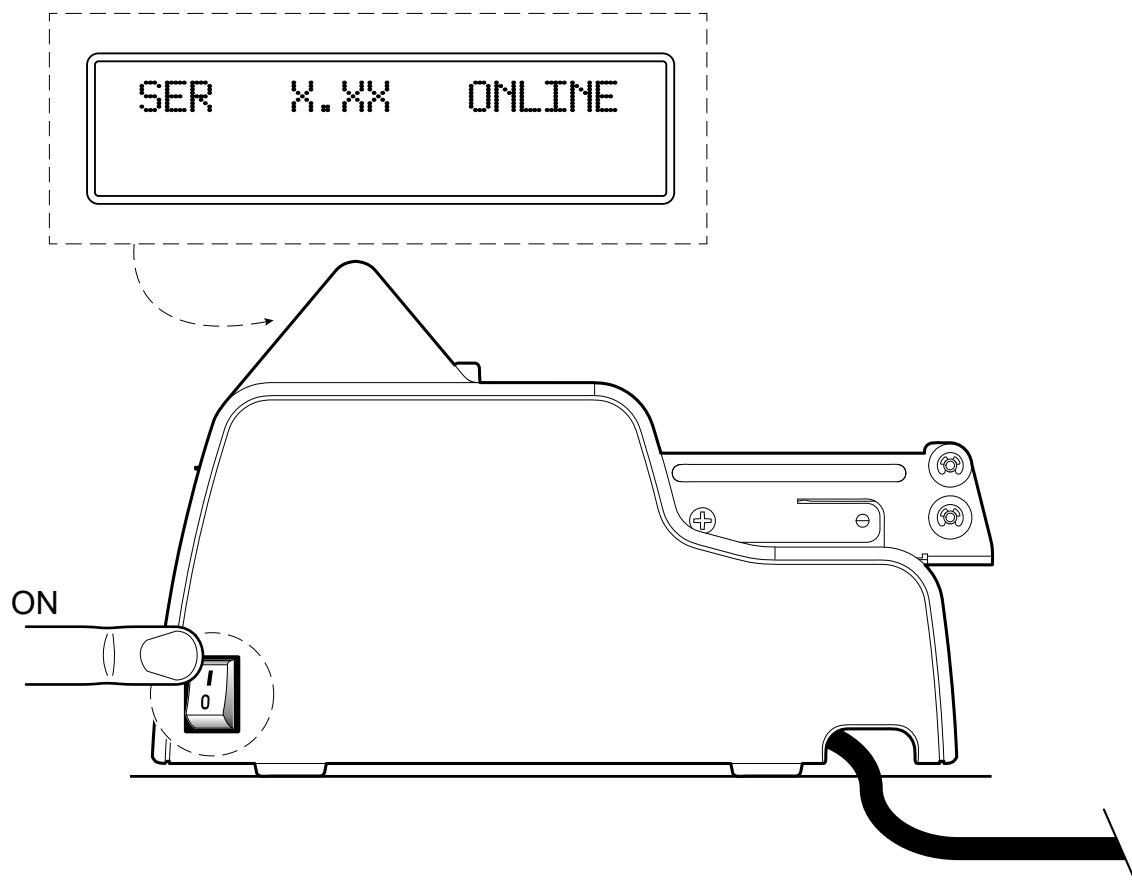


Switch device on pressing the ON/OFF key.
The display turns on and shows the message in figure.

5.7 Loading the paper roll


To change the paper proceed as follows (for some models, only the internal printer group is represented). At every change of paper, check inside the device to locate and remove any scraps of paper.

1

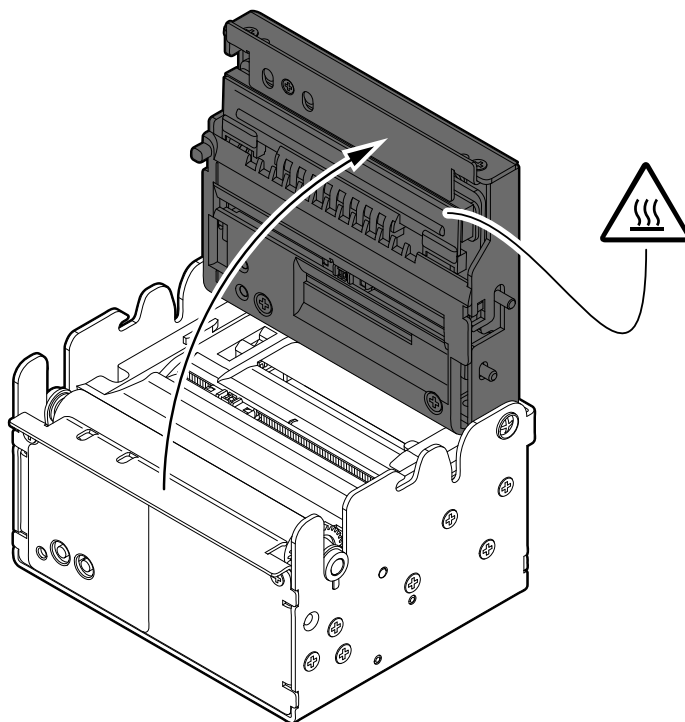


Open the device cover
(see [paragraph 5.1](#))

2

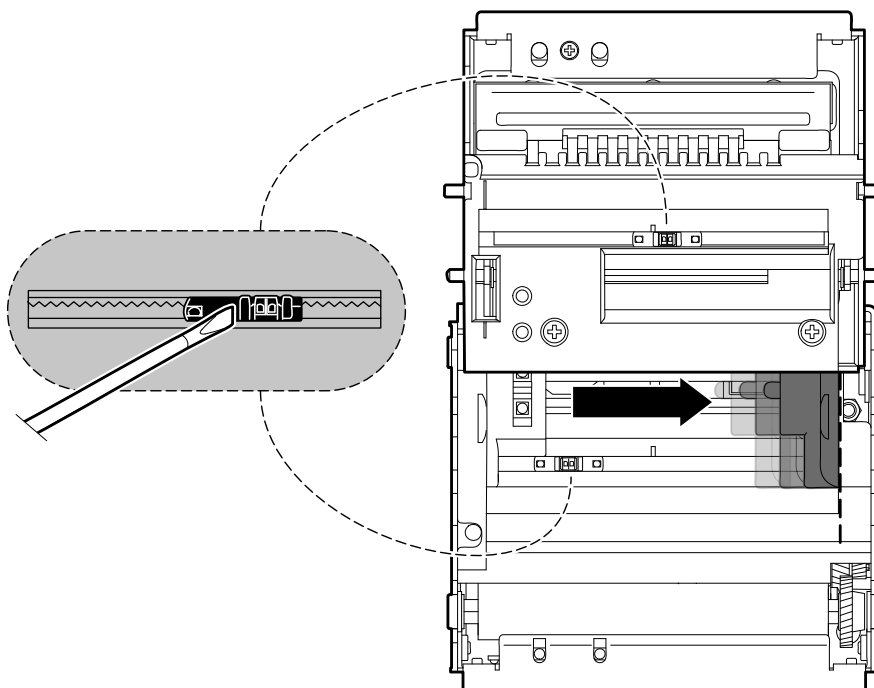


Adjust the paper width (see [paragraph 5.2](#))
and the black mark sensor position (see [paragraph 5.5](#)).

3

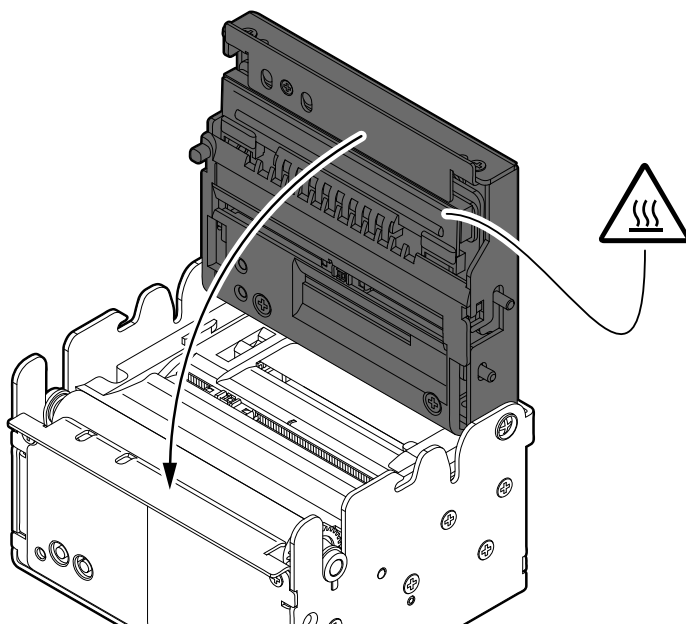



Close the device cover.

4

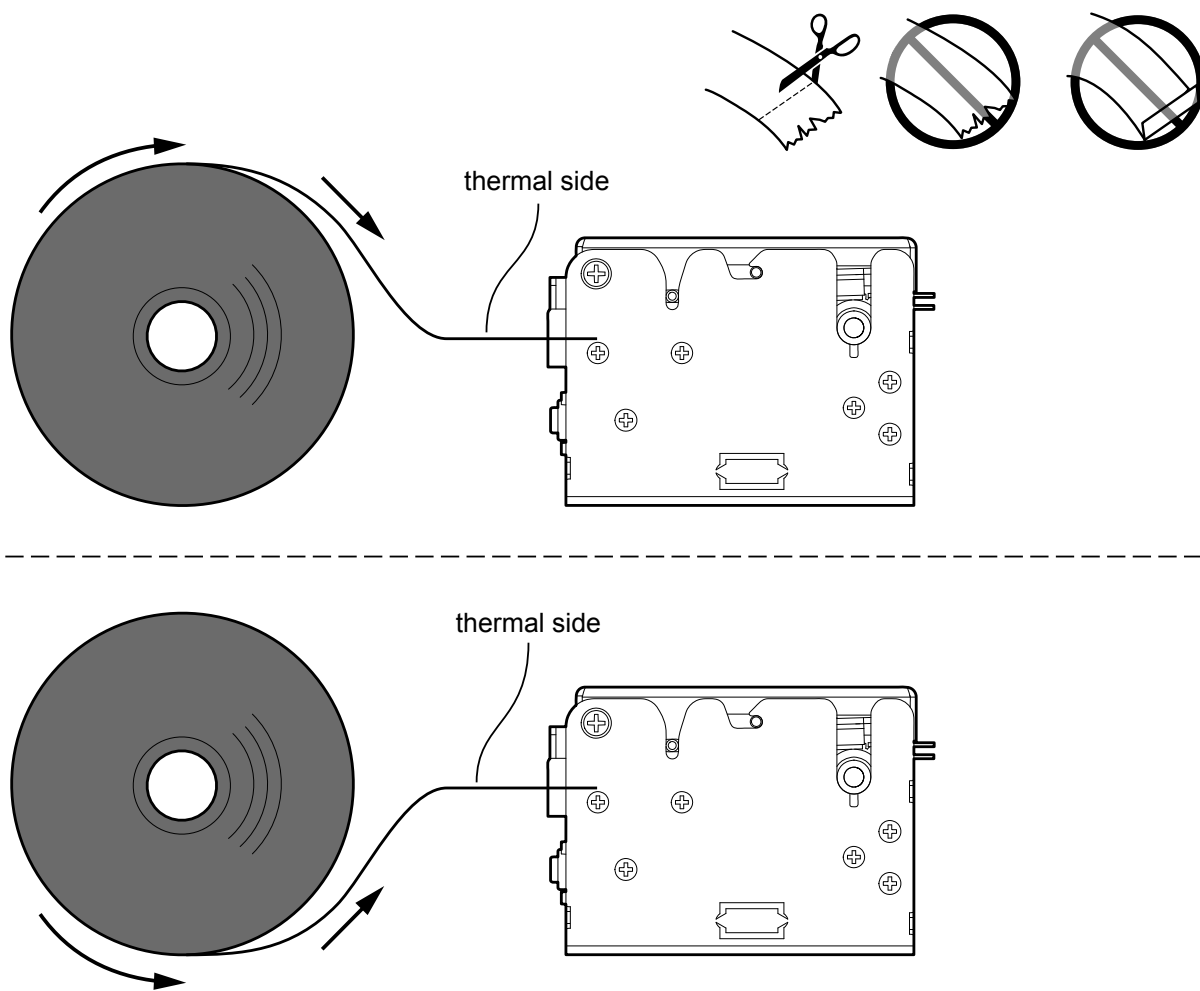

Insert the paper into the input mouth so that it unrolls correctly.
Be sure that the paper is correctly positioned into paper guides.


5

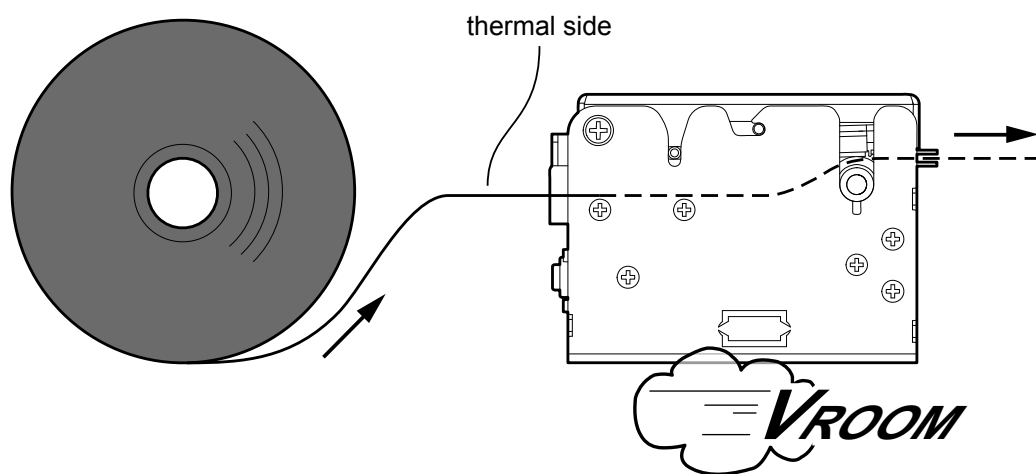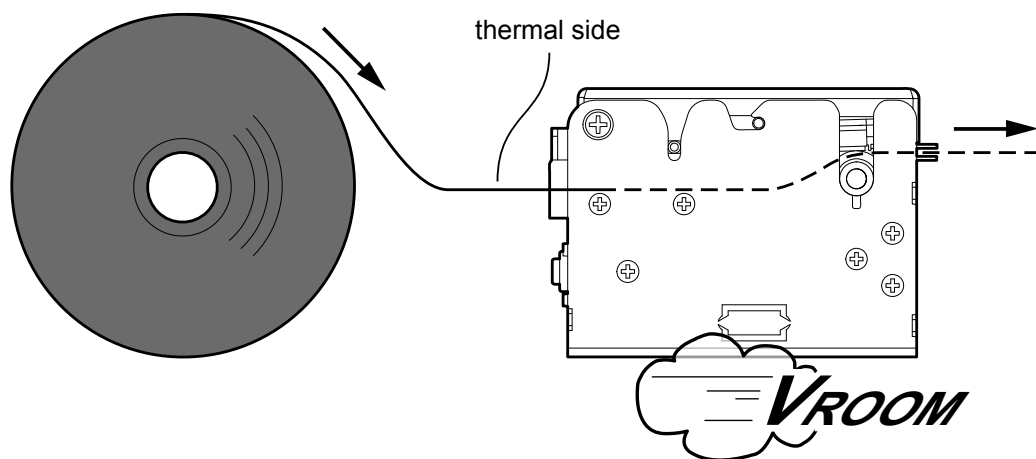

Wait until the paper is automatically loaded.



The following figure gives the limit positions of the paper roll related to the device for a correct paper loading without a paper roll holder support (for some models, only the internal printer group is represented). The direction of the paper will always form a maximum angle of 90° or -90° with the insertion plane of paper inside the device.

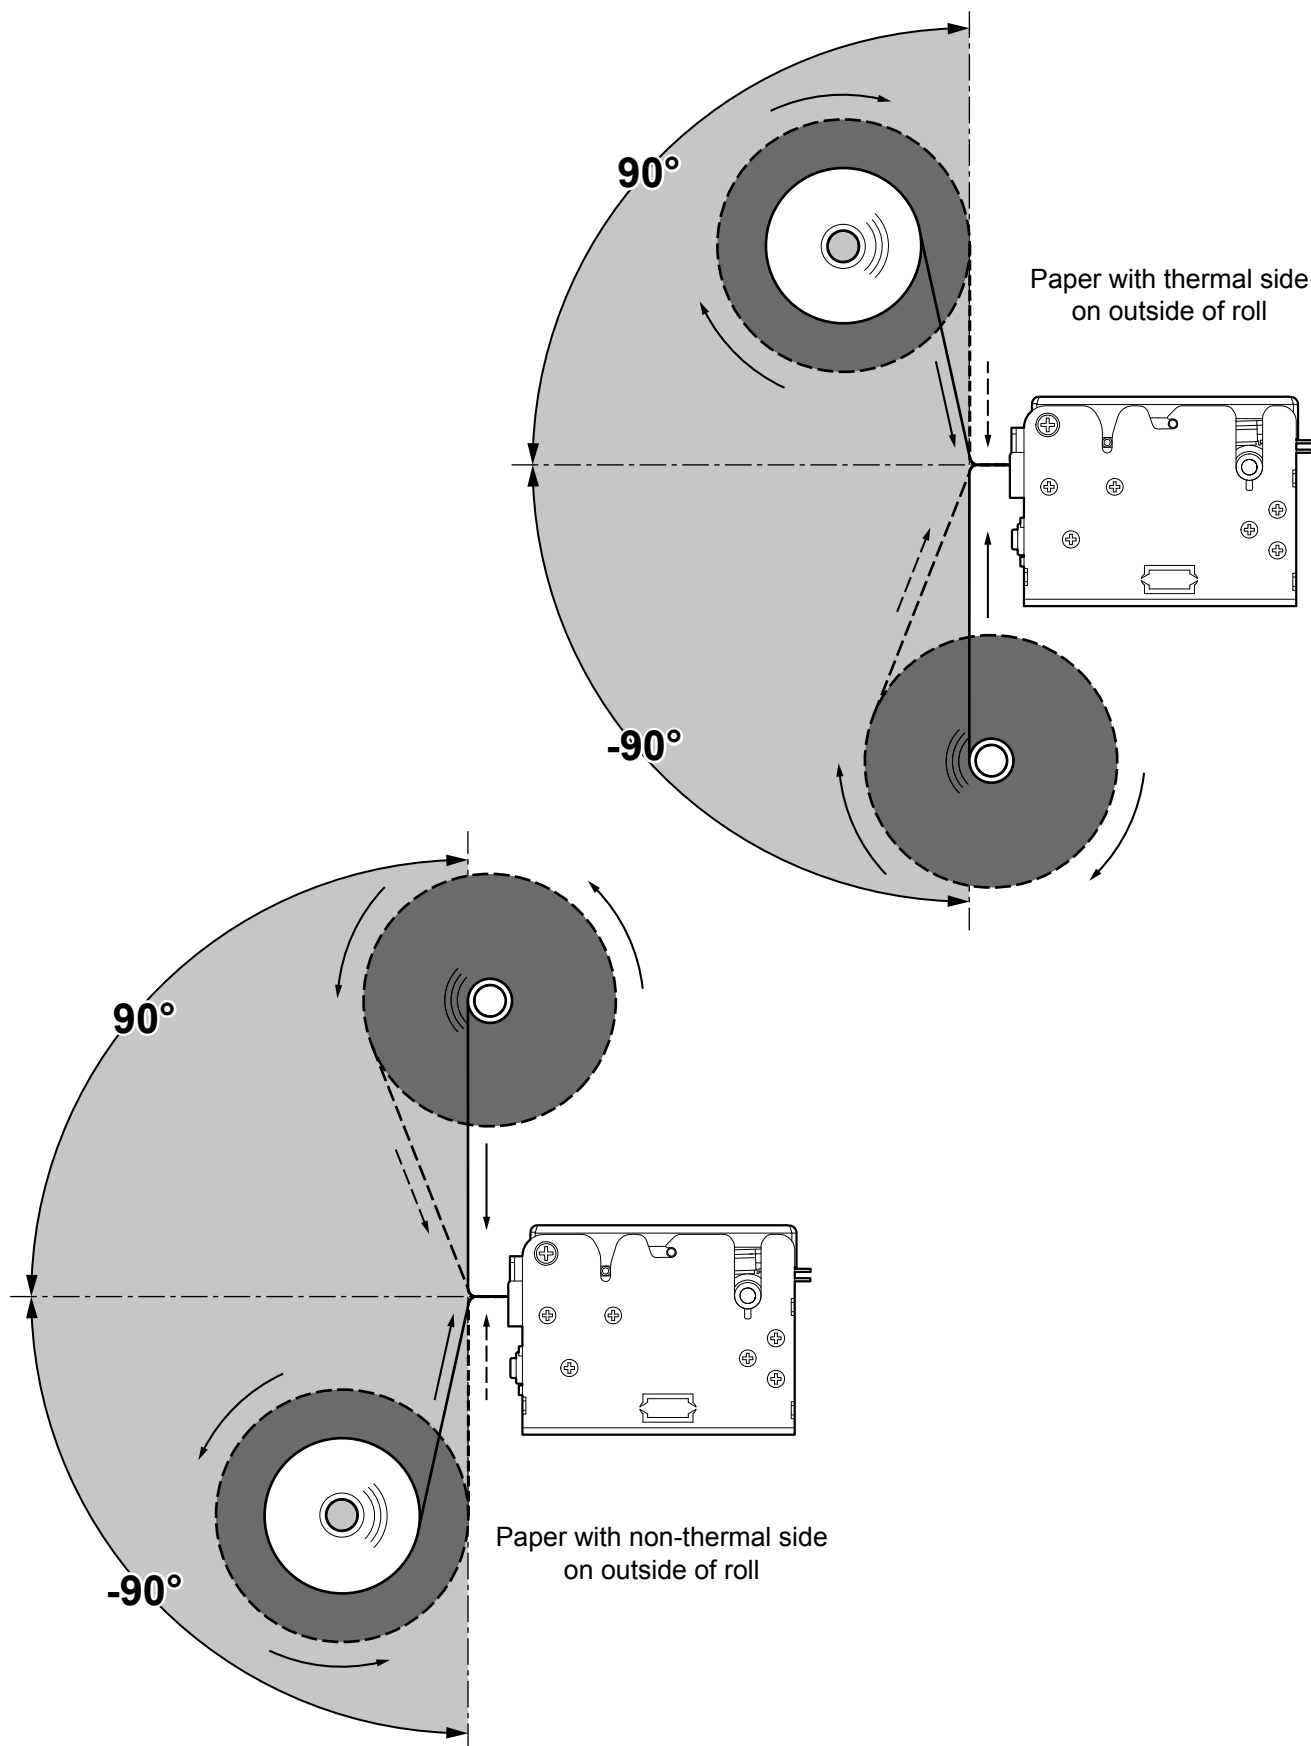


5.8 Issuing ticket

KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5
TK180 CUT 1, TK180 CUT 2, TK180 CUT 4


The device allows the following operating mode for the issuance of printed tickets. The operating mode shown in the following images, depend on the settings of the configuration parameters and commands sent to the device (see [chapter 6](#) and commands manual of the device).

For some models, only the internal printer group is represented.

"PRESENT" mode

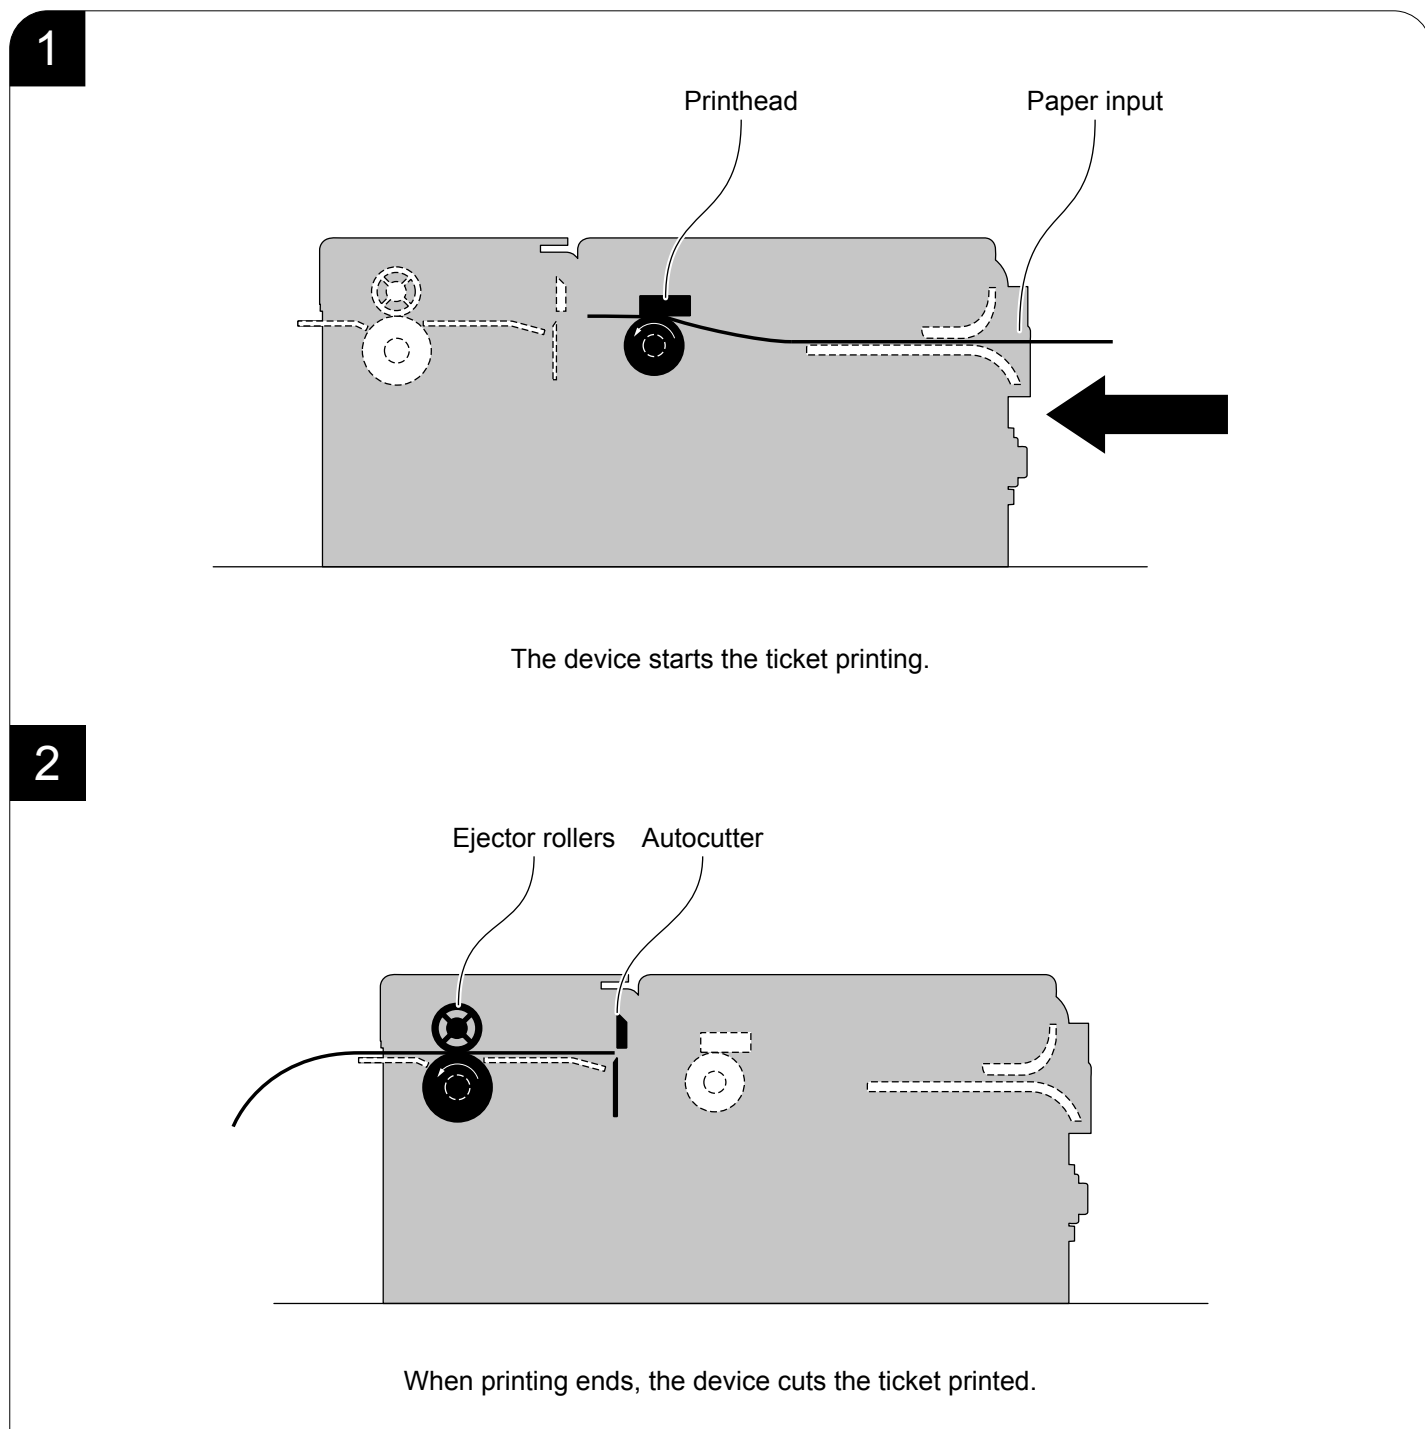


3

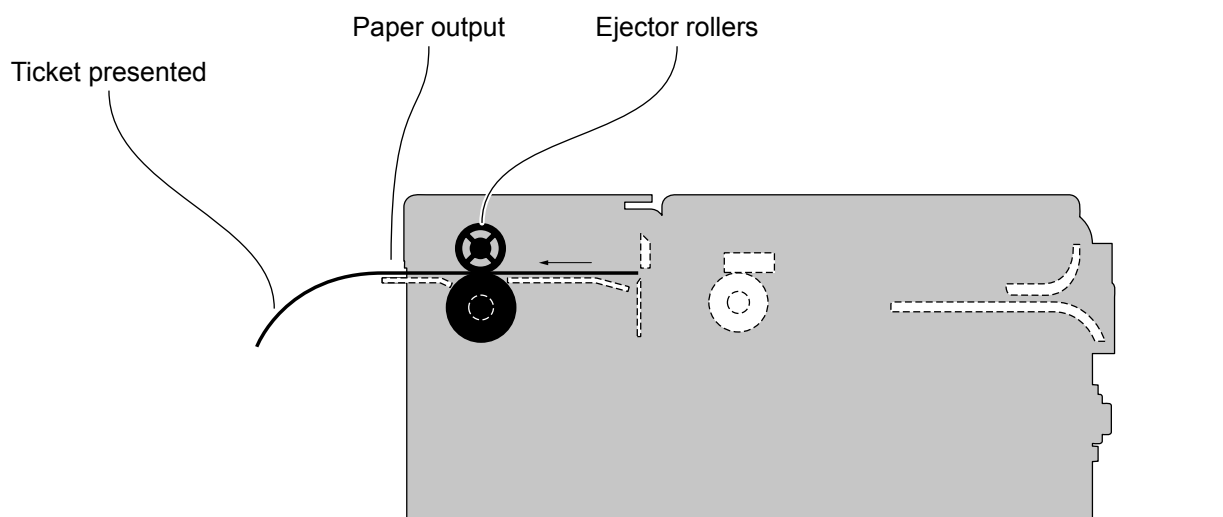

The device presents a portion of the ticket printed and hold it between the ejector rollers.

4

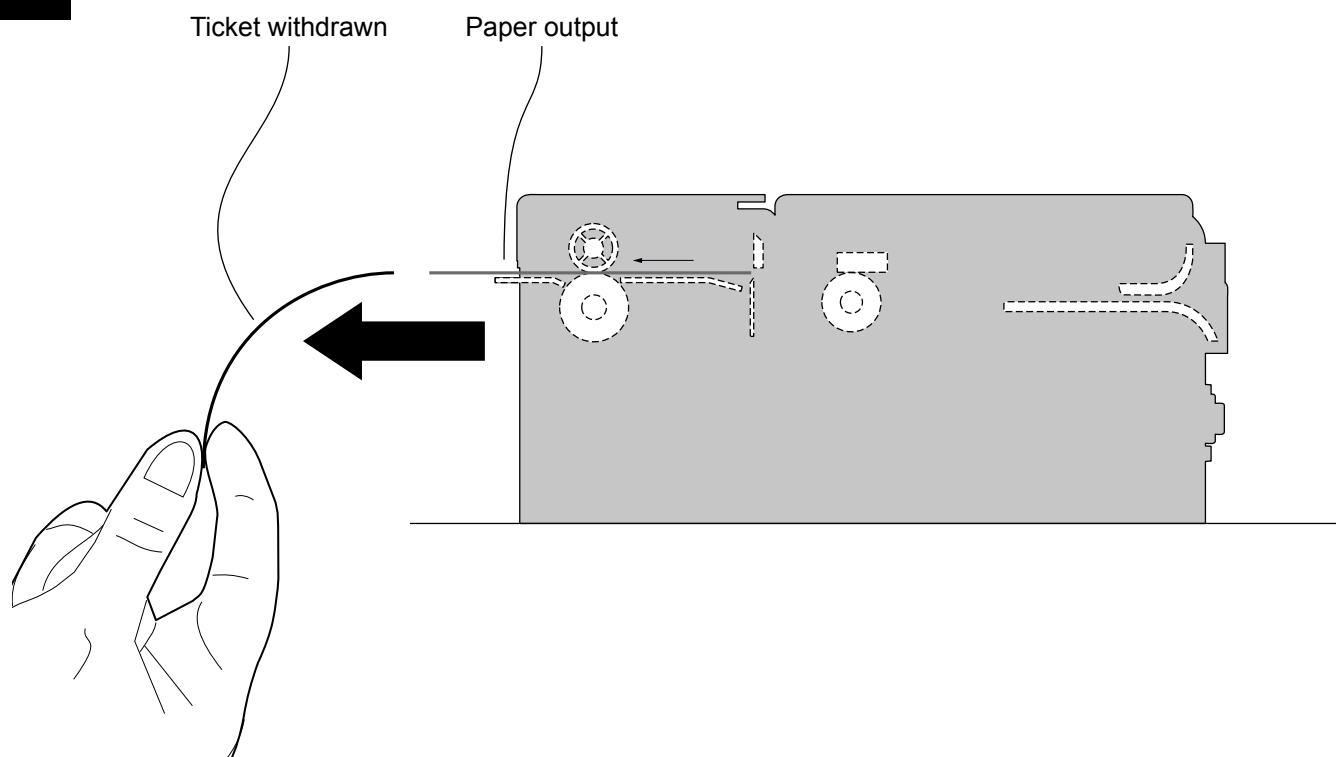

The user withdraws the ticket printed.



5.9 License activation for RFID tag reading

KPM180H 6
TK180 MET 3
TK180 CUT 3
TK180 PLAS 3

The device models with internal RFID reader/writer are equipped with an RFID transceiver, provided with antenna, that allows to send and receive RF data to and from the tag.

To activate and use this feature, it is necessary to purchase a specific license. Contact the technical support or your dealer.




6 CONFIGURATION

6.1 Configuration by keys


To enter the configuration mode and print a setup report with the operating parameters of the device, proceed as follows.

1

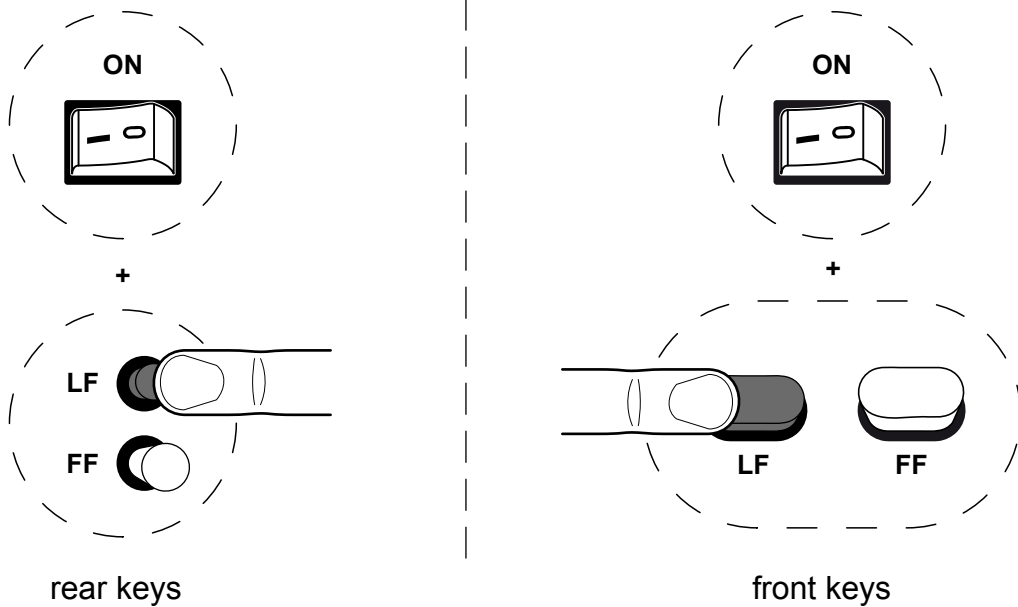

While pressing the LF key,
switch on the device by pressing the ON/OFF key.

2

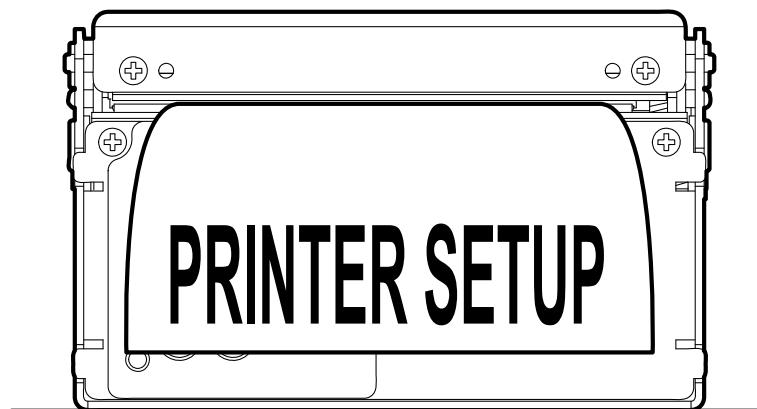

The device prints the report with the settings parameters. Follow the instruction printed on the paper or shown on display to proceed with configuration procedure.



The following figure shows the setup report of the device. The shown values for parameters are sample values; for the list and the description of device parameters see the following paragraphs.

DEVICE NAME AND
FIRMWARE MODULES
RELEASE

```

      <device name>
SCODE. <code>           - rel 1.00
DCODE. <code>           - rel 1.00
FCODE. <code>           - rel 1.00
  
```

PRINthead
STATUS

PRINTER SETTINGS

1 «*****» 640

PRINthead WORKING GOOD!

DEVICE
STATUS

```

PRINTER TYPE ..... <device model>
RFID Module ..... Not Present
PRINthead TYPE ..... <head model>
INTERFACE ..... RS232
PROGRAM MEMORY TEST..... OK
DYNAMIC RAM TEST..... OK
EXTERNAL MEMORY TEST ..... OK
CUTTER TEST..... OK
HEAD VOLTAGE           [V] = 23,37
HEAD TEMPERATURE      [°C] = 25
POWER ON COUNTER      = 4
PAPER PRINTED         [cm] = 40
CUT COUNTER           = 1
DATE - TIME           = <date-time>
  
```

PARAMETERS
FOR DEVICE
CONFIGURATION

```


IP ADDRESS ..... 192.168.0.1
SUBNET MASK ..... 255.255.240.0
GATEWAY ..... 192.168.0.5
DNS PRIMARY..... 0.0.0.0
DNS SECONDARY..... 0.0.0.0
MAC ADDRESS ..... 00.0E.E2.0D.C8.4F

Printer Emulation..... : SERVICE
RS232 Baud Rate ..... : 115200 bps
RS232 Data Length ..... : 8 bits/chr
RS232 Parity ..... : None
USB Class ..... : Printer
USB Address Number ..... : 0
Print Mode ..... : Normal
After Cut Ejecter Type ..... : Presenter
Speed / Quality..... : Normal
Paper Threshold ..... : 40%
Black mark Position ..... : Transparent
Black mark Threshold ..... : 40%
Service Alignment Type ..... : Edge
Low Paper ..... : Disabled
Busy Paper End ..... : Disabled
Check Last Ticket ..... : Disabled
Casing Type..... : Plastic
Barcode ID 4 ..... : DataMatrix
Vertical Scale [%] ..... : +00.0
Presenter Offset [mm] ..... : +00
Recovery Mode ..... : Auto Check
ATB RePrint after ERRS..... : Disabled
ATB ticket length..... : Auto
ATB Black mark Set..... : Printer Setup
ERRS StockType Unknown..... : Enabled
PrintHead Test PowerOn..... : Disabled
  
```

6.2 Configuration by software


The configuration parameters can be set by the "PrinterSet" software tool available on www.custom4u.it. For a detailed description of operating parameters for the device, see the following paragraphs.
To set the device by software, proceed as follows.

1

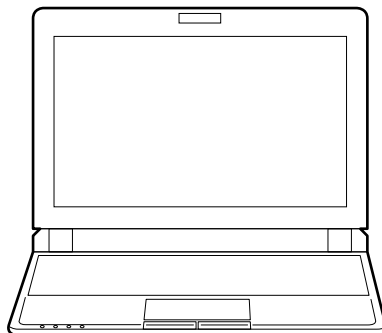


Connect the device to a PC directly (see [paragraph 4.3](#)), without using HUB devices.

2

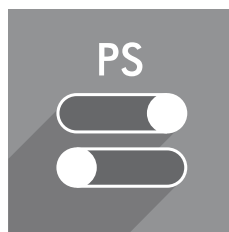


Start "PrinterSet" software tool.

3

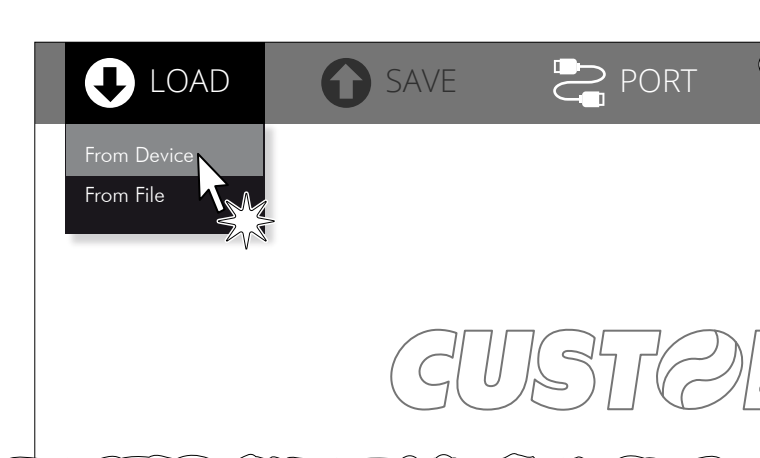


Click on LOAD > FROM DEVICE and select the device connected to the PC.

4

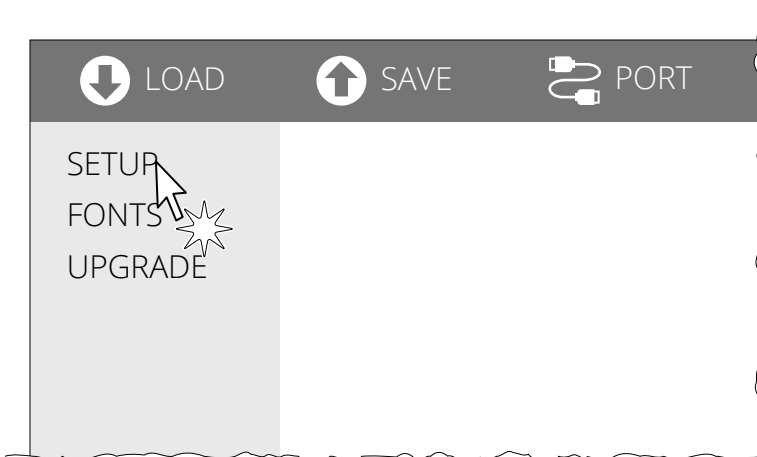


Click on SETUP to access the operating parameters of the device to be configured.

5

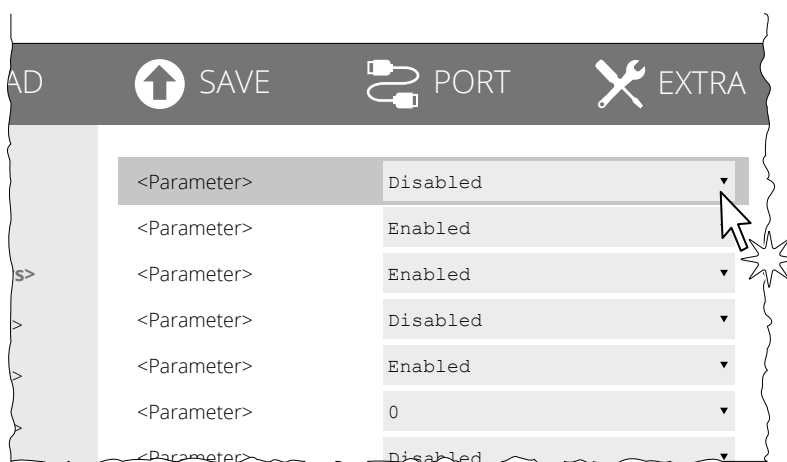

Make the desired changes to the device operating parameters.

6

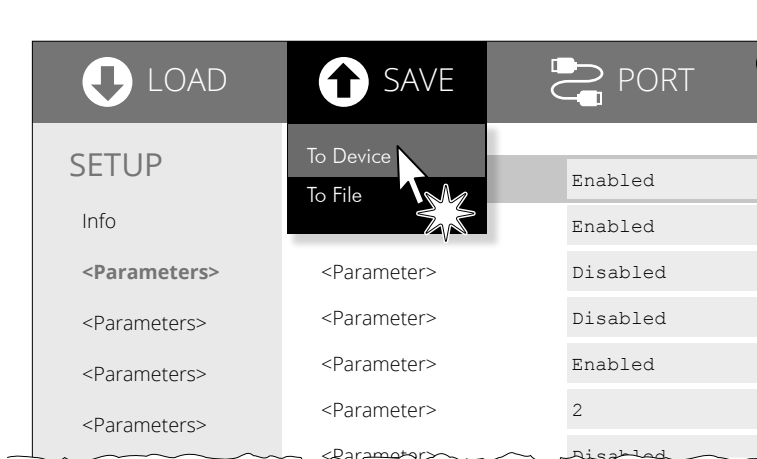

Click on SAVE > TO DEVICE to make the changes made effective.

ATTENTION: During saving, it is strongly advised against disconnecting the communication cable or to remove the power supply of PC or device.

6.3 Configuration by file

The configuration parameters can be set by editing the "Setup.ini" file stored on the Flash Drive of the device. Proceed as follows:

1

↓

Enter setup

Enter the configuration procedure by keys (see [paragraph 6.1](#)) or by software (see [paragraph 6.2](#)).

2


<parameter> : <value>
<parameter> : <value>
<parameter> : <value>
<parameter> : <value>
USB Class : Mass storage
<parameter> : <value>
<parameter> : <value>
<parameter> : <value>
<parameter> : <value>

Check that the "USB Class" parameter is set to "Mass Storage". Otherwise, this configuration mode is not available.

3


USB

↓

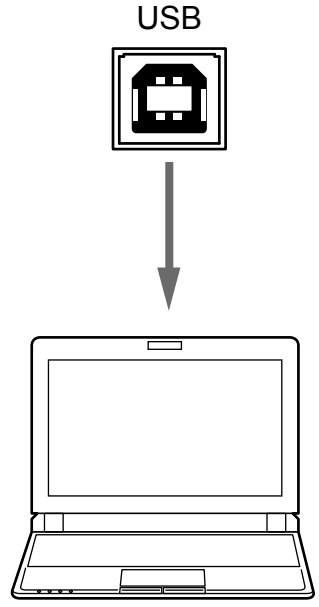

Plug the device to a Personal Computer via USB.


4

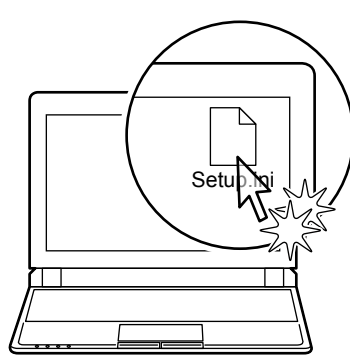

Enter the Flash drive of the device and edit the Setup.ini file.



The "Setup.ini" file is a configuration file that contains all the configurable parameters listed in text format and divided into some sections (indicated between square brackets). For each parameter, you find the parameter name followed by the value currently set and then the available values listed with a reference number. The reference number marked with the symbol ' * ' is the default one (see figure).

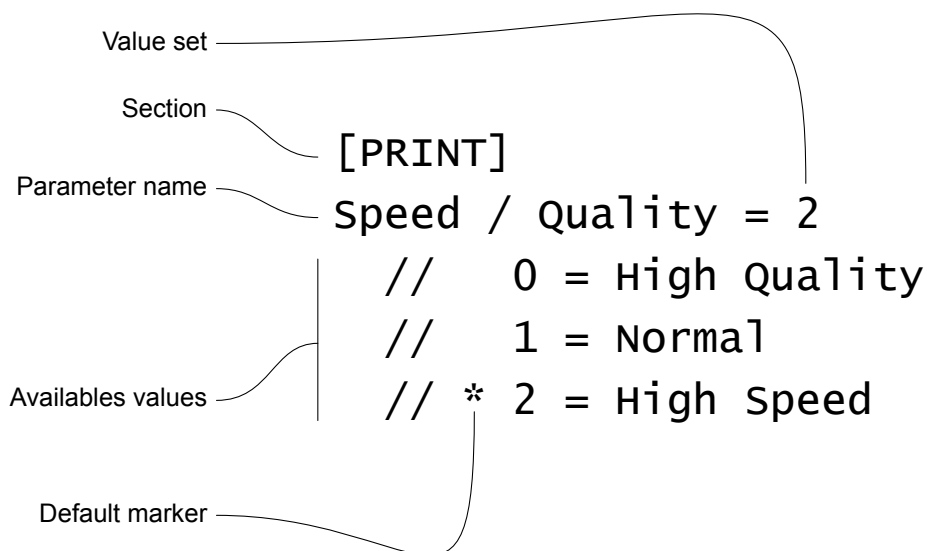

To modify the parameter, change the numeric value after the parameter name or use the default value by typing "D". After editing device's parameter, simply save the "Setup.ini" file to make the modifies activated. For the list and the description of setup parameters see [chapter 6](#).

ATTENTION:

The change of value for the "USB Mass Storage" parameter may compromise the access to the Setup.ini file. Be careful to keep the "Enabled" value to allow a new access to the Flash Drive.



6.4 Device status

The device operating status is indicated in the configuration print-out in which, next to the name of the components displayed, the following information is given:

PRINTER TYPE	device model
RFID Module	presence of the RFID reader/writer
PRINT HEAD TYPE	print head model
INTERFACE	interface present
PROGRAM MEMORY TEST	OK appears if functioning and NOT OK if faulty
DYNAMIC RAM TEST	OK appears if functioning and NOT OK if faulty
EXTERNAL MEMORY TEST	OK appears if functioning and NOT OK if faulty
CUTTER TEST ⁽¹⁾	OK appears if functioning and NOT OK if faulty
HEAD VOLTAGE	voltage of the head
HEAD TEMPERATURE	temperature of the head
POWER ON COUNTER	number of power-ups made
PAPER PRINTED	centimetres of paper printed
CUT COUNTER ⁽¹⁾	number of cuts made
DATE - TIME	date and time

NOTE:

(1) : Only for KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5, KPM180H 6, TK180 CUT 1, TK180 CUT 2, TK180 CUT 3, TK180 CUT 4.



6.5 Communication parameters

The parameters marked with the symbol [Ⓓ] are the default values.

Settings remain active even after the device has been turned off and they are stored in non-volatile memory.

RS232 BAUD RATE	Communication speed of the serial interface.
	115200 [Ⓓ] 9600
	57600 4800
	38400 2400
	19200 1200
	This parameter is valid only with serial interface.

RS232 DATA LENGTH	Number of bit used for characters encoding.
	7 bits/car
	8 bits/car [Ⓓ]
	This parameter is valid only with serial interface.

RS232 PARITY	Bit for the parity control of the serial interface.
	None [Ⓓ] = parity bit omitted
	Even = even value for parity bit
	Odd = odd value for parity bit
	This parameter is valid only with serial interface.

USB ADDRESS NUMBER	Numerical address code for the univocal identification of the USB device (in case of more than a USB device connected with the same PC).
	0 [Ⓓ] 2 4 6 8 10
	1 3 5 7 9

USB CLASS	USB communication class definition.
	Printer [Ⓓ] = setting the printer function
	Mass Storage = setting the sharing mode from Mass Storage
	Virtual COM = setting the USB port as a virtual serial port
	To use the value "Virtual COM", it is necessary to install an additional driver (see paragraph 4.5)

BUSY PAPER END	Activation mode for busy signal on serial interface:
	Disabled [Ⓓ] = busy signal is not activated in case of paper end
	Enabled = busy signal is activated in case of paper end



DHCP CLIENT	Setting of the DHCP protocol: Disabled ^D = protocol disabled Enabled = protocol enabled This parameter can be modified by software (see paragraph 6.2) and by file (see paragraph 6.3).
IP ADDRESS	This is the IP address of device, assigned by the network administrator. This parameter can be modified by software (see paragraph 6.2) and by file (see paragraph 6.3).
SUBNET MASK	This parameter identifies the local network address. It can be modified by software (see paragraph 6.2) and by file (see paragraph 6.3).
DEFAULT GATEWAY	This parameter identifies the Gateway IP address used to send applications to the external network. It can be modified by software (see paragraph 6.2) and by file (see paragraph 6.3).
MAC ADDRESS	This is the number, provided by the constructor, that identifies the device; this number is univocal. It can be modified by software (see paragraph 6.2) and by file (see paragraph 6.3).
DOMAIN NAME SYSTEM	This parameter identifies the Domain Name System (DNS). It can be modified only by file (see paragraph 6.3).
TCP PRINTER PORT	This parameter sets the TCP port number. It can be modified only by file (see paragraph 6.3).

ATTENTION:

Any changes to network parameters will interrupt browser connection. If the server not responding you must reconnect to the new IP address set.



6.6 Operation parameters

The parameters marked with the symbol [Ⓓ] are the default values.

Settings remain active even after the device has been turned off and they are stored in non-volatile memory.

PRINTER EMULATION	Available emulations for the device. SERVICE [Ⓓ] = used only for upgrade BTP = used for management of baggages ticket ATB = used for management of boarding ticket
PRINT MODE	Printing mode. Normal [Ⓓ] = enables printing in normal writing way Reverse = enables printing rotated 180 degrees
SPEED / QUALITY	Setting of speed and printing quality. Normal [Ⓓ] High Quality High Speed
PAPER THRESHOLD	Threshold value (in percent) for the recognition of the presence of paper by the paper presence sensor. 30% 70% 40% [Ⓓ] 80% 50% 90% 60%
BARCODE ID 4	Setting of the barcode format associated with ID 4 (see AEA specifications): Code128 = sets the Code128 format DataMatrix [Ⓓ] = sets the DataMatrix format If parameter "Printer emulation" is set on "Service", this parameter has no effect on device configuration and it is not printed on setup report.
VERTICAL SCALE [%]	Adjust of the printing positions by adding the percentage value to the coordinates of elements (in the direction of the length of the ticket). If parameter "Printer emulation" is set on "Service", this parameter has no effect on device configuration and it is not printed on setup report.
PRESENTER OFFSET [mm]	Setting of the presentation distance of ticket in case of presentation mode enabled (paper cut disabled). If parameter "Printer emulation" is set on "Service", this parameter has no effect on device configuration and it is not printed on setup report.



ATB TICKET LENGTH

This parameter defines the detection mode of the ticket length:

- Auto ^D = at the paper autoloading, the device automatically calculates the ticket length by detecting two consecutive black marks and then recovers the first ticket used for detection
- Auto No Recovery = at the paper autoloading, the device automatically calculates the ticket length by detecting two consecutive black marks. The ticket used for detection is not recovered.
- 8" Fixed = the ticket length is set to 8"
- 7" 3/8 Fixed = the ticket length is set to 7" 3/8

If parameter "Printer emulation" is set on "Service" or "BTP", this parameter has no effect on device configuration and it is not printed on setup report.

RECOVERY MODE

Setting of recovery mode for paper portion on output mouth after a ticket presentation and withdrawal:

- Auto Check ^D = device automatically detects paper presence on output sensor and then recovers a fixed portion of paper
- Fixed = device recovers a fixed portion of paper (set by command)

If parameter "Printer emulation" is set on "Service" or "ATB", this parameter has no effect on device configuration and it is not printed on setup report.

LOW PAPER

Setting of the low paper detection:

- Disabled ^D = detection disabled
 - Enabled = detection enabled
-

CASING TYPE

Type of device casing:

- Plastic ^D = plastic casing
- Metal = metallic casing

The parameter is printed on setup report and has effect on device configuration only for TK180 MET 1, TK180 CUT 1, TK180 CUT 2, TK180 CUT 3, TK180 MET 2, TK180 MET 3, TK180 PLAS 1, TK180 PLAS 2, TK180 PLAS 3, TK180 CUT 4.

**AFTER CUT
EJECTER TYPE**

Management of the ejector device.

- Presenter ^D = after the printing end, the device cuts the ticket and holds it between the ejector rollers in a "cut & hold" mode waiting for the user withdrawal. ATTENTION: The "cut & hold" mode needs to be enabled by protocol. Otherwise, the device performs an eject even if presenter value is set.

- Ejecter = after the printing end, the device cuts the ticket and ejects it

This parameter is valid only for KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5, KPM180H 6, TK180 CUT 1, TK180 CUT 2, TK180 CUT 3, TK180 CUT 4.



ATB REPRINT AFTER ERRS This parameter enables/disables the automatic reprint of a ticket stopped due to a paper jam or a paper end

Disabled ^D = reprint disabled
Enabled = reprint enabled

If parameter "Printer emulation" is set on "Service" or "BTP", this parameter has no effect on device configuration and it is not printed on setup report.

ERRS STOCKTYPE UNKNOWN This parameter enables/disables the management of the ERRS:

Disabled = ERRS management disabled
Enabled ^D = ERRS management enabled

CHECK LAST TICKET This parameter allows to check that the ticket is printed for the entire length (203 millimeters):

Disabled ^D = check disabled.
Enabled = check enabled. In case of error, the message "paper jam" will be reported.

PRINTHEAD TEST POWERON Setting of the performing of the print head test:

Disabled ^D = the test is performed only during the printing of the setup report
Enabled = the test is performed at each power on

AEA PROTOCOL STX Value of the start byte of protocol (up to three bytes, expressed in hexadecimal). If '00' value is set, this parameter is disabled.

This parameter is not printed on setup report and not listed by the tool "PrinterSet". You can set this parameter only by file (see [paragraph 6.3](#)). Moreover, it may not be available for some models.

AEA PROTOCOL ETX Value of the end byte of protocol (up to three bytes, expressed in hexadecimal). This parameter can not be disabled, unlike the "AEA PROTOCOL STX".

This parameter is not printed on setup report and not listed by the tool "PrinterSet". You can set this parameter only by file (see [paragraph 6.3](#)). Moreover, it may not be available for some models.



6.7 Alignment parameters

The parameters marked with the symbol ^D are the default values.

Settings remain active even after the device has been turned off and they are stored in non-volatile me.

BLACK MARK POSITION	<p>Position of the alignment black mark and choice of appropriate black mark sensor (see chapter 7):</p> <p>Disabled = the black mark alignment is not performed Top = the black mark position is detected by the top sensor (reflection) Bottom = the black mark position is detected by the bottom sensor (reflection) Transparent ^D = the black mark is detected by the bottom sensor and the top sensor placed in front of (transparence)</p>
----------------------------	---

BLACK MARK THRESHOLD	<p>Threshold value (in percent) for the recognition of the presence of black mark by the black mark sensor:</p> <p>30% 70% 40% ^D 80% 50% 90% 60%</p> <p>If parameter "Black mark position" is set on "Disabled", this parameter has no effect on device configuration and it is not printed on setup report.</p>
-----------------------------	---

SERVICE ALIGNMENT TYPE	<p>This parameter defines the point for the black mark alignment:</p> <p>Edge ^D = the point for the black mark alignment is the frontal edge of black mark Center = the point for the black mark alignment is the center of black mark</p> <p>If parameter "Printer emulation" is set on "ATB" or "BTP", this parameter has no effect on device configuration and it is not printed on setup report. In ATB or BTP emulation, the point for the black mark alignment is always set to the center of black mark.</p>
-------------------------------	--

ATB BLACK MARK SET	<p>Setting of choice mode of black mark sensor used for alignment:</p> <p>Printer Setup ^D = black mark sensor is set by "Black mark position" parameter DETLTYPE = black mark sensor is set by command</p> <p>If parameter "Printer emulation" is set on "Service" or "BTP", this parameter has no effect on device configuration and it is not printed on setup report.</p>
---------------------------	--



6.8 Hexadecimal dump

This function is used for the diagnosis of the characters received from the communications port. Characters are printed as hexadecimal code and the corresponding ASCII code (see below). Each line is preceded by a counter in hexadecimal that indicates the number of bytes received.

During the startup, if you hold down the LF key, the device enters the self-test routine and print the setup report. The device remains in standby until a key is pressed or characters are received through the communication port (Hexadecimal dump mode). For each character sent, the ticket shows the hexadecimal value and the ASCII codes (if the characters are underlined, the receive buffer is full). Shown below is an example of a Hexadecimal dump:

```

HEXADECIMAL DUMP

31 32 33 34 35 ... 12345 ...
39 30 31 32 33 ... 90123 ...
37 38 39 75 69 ... 789ui ...
68 6B 6A 73 64 ... hkjsd ...
73 64 66 6B 6A ... sdfkj ...
66 73 64 66 6B ... fsdfk ...
65 69 6F 79 75 ... eioyu ...
6F 72 69 75 77 ... oriuw ...
6F 75 77 65 72 ... ouwer ...
77 65 72 69 6F ... werio ...
72 69 6F 75 77 ... riouw ...
6B 6C 73 64 66 ... klsdf ...
64 66 6B 73 64 ... dfksd ...
73 64 66 6B 6A ... sdfkj ...
66 6B F2 6A 73 ... fk≥j ...
6A 6B 6C 68      jklh
```



7 ALIGNMENT

The device is provided with sensors for the use of alignment black mark in order to handle:

- roll of tickets with pre-printed fields and a fixed length;
- Fan-fold of tickets with pre-printed fields and a fixed length.

The alignment black mark may be formed by:

- a black mark printed on paper
- a hole between two tickets.

All alignment sensors are “reflection” sensors: this kind of sensor emits a band of light and detects the quantity of light reflected to it. The presence of the black mark is therefore detected by the amount of light that returns to the sensor, considering that the light is reflected by the white paper and absorbed by the black mark.


To use tickets with holes, it is possible to use the same sensors as “transparence” sensors, coupled two by two: a beam of light is emitted by the transmitter sensor and the quantity of light which reaches the opposite receiver sensor is detected. The presence of the hole is detected evaluating the amount of light that arrives to the opposite sensor, considering that the paper doesn't allow the beam of light to reach the receiver, whereas a hole lets the light to reach the receiver.

The following paragraphs show how to correctly set the configuration parameters of device in order to assure the alignment.

7.1 Enable alignment

The device is provided with the two following sensors for alignment (see figure):

- SENSOR 1, a mobile sensor placed on the lower flat,
- SENSOR 2, a mobile sensor placed on the upper flat.

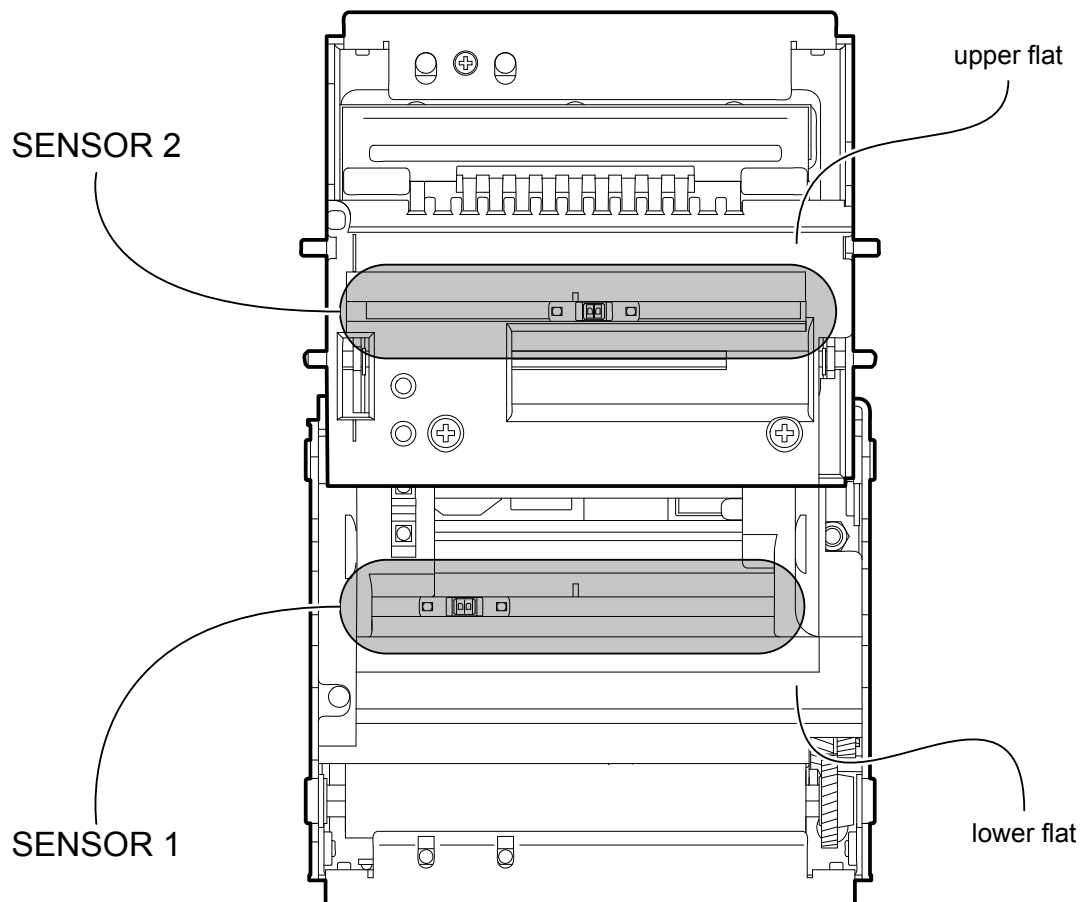

To guarantee the alignment, it is necessary to correctly choose the sensor to use for the black mark detection depending on the type of black mark and its location on the ticket.

To do this, you must enable the parameter “Black mark position” during the setup procedure (see [chapter 6](#)) and set the correct value of this parameter as described in the following table.

SENSOR USED	VALUE OF THE “BLACK MARK POSITION” PARAMETER	USING MODE OF SENSORS	BLACK MARK TYPE
-	Disabled	-	Alignment disabled
1	Bottom	Reflection	Black mark printed on the non-thermal side of paper
2	Top	Reflection	Black mark printed on the thermal side of paper
1 + 2	Transparent	Transparence	Hole between tickets

7.2 Calibration

The sensor calibration occurs automatically and consists in adjusting the quantity of light emitted to match the degree of whiteness of the paper used and the degree of black of the mark printed on paper.

The device automatically performs the self-calibration during the setup procedure only if the “Black mark position” parameter is set to a value other than “Disabled” (see [chapter 6](#)).


When self-calibration starts, the device performs some paper feeds and then it prints the calibration result and the value of the PWM duty-cycle of the alignment sensor driver so that it can be perform an optimal black mark detection:

```
Autosetting black mark : OK
PWM Duty Cycle : 85.3%
```

The “Autosetting black mark” parameter indicates the result of the self-calibration procedure; OK will appear if it has been successful, NOT OK will appear if the procedure has failed.


After the printing of the procedure result, the device offers the execution of the function of paper characterization “Characterize Paper” and the change of the “Black mark threshold” parameter which represents the detection threshold of the black mark. Choosing the “Yes” value for the “Characterize Paper” parameter, the device prints a graphic representation (see following figures) of the outgoing voltage of the alignment sensor (expressed as a percentage) and the “Black mark threshold” value. This graphic representation is useful to set the most suitable value to assign to the “Black mark threshold” parameter and then to better identify the optimal threshold value which takes into account the variations of the signal and the small oscillations around zero.

The following figure shows an example of paper with the non-thermal paper printed with black marks: the outgoing voltage is constant while passing the white paper between two black marks and presents a peak at each black mark. In this case, the optimal value for the “Black mark threshold” parameter is placed about half of the peak.

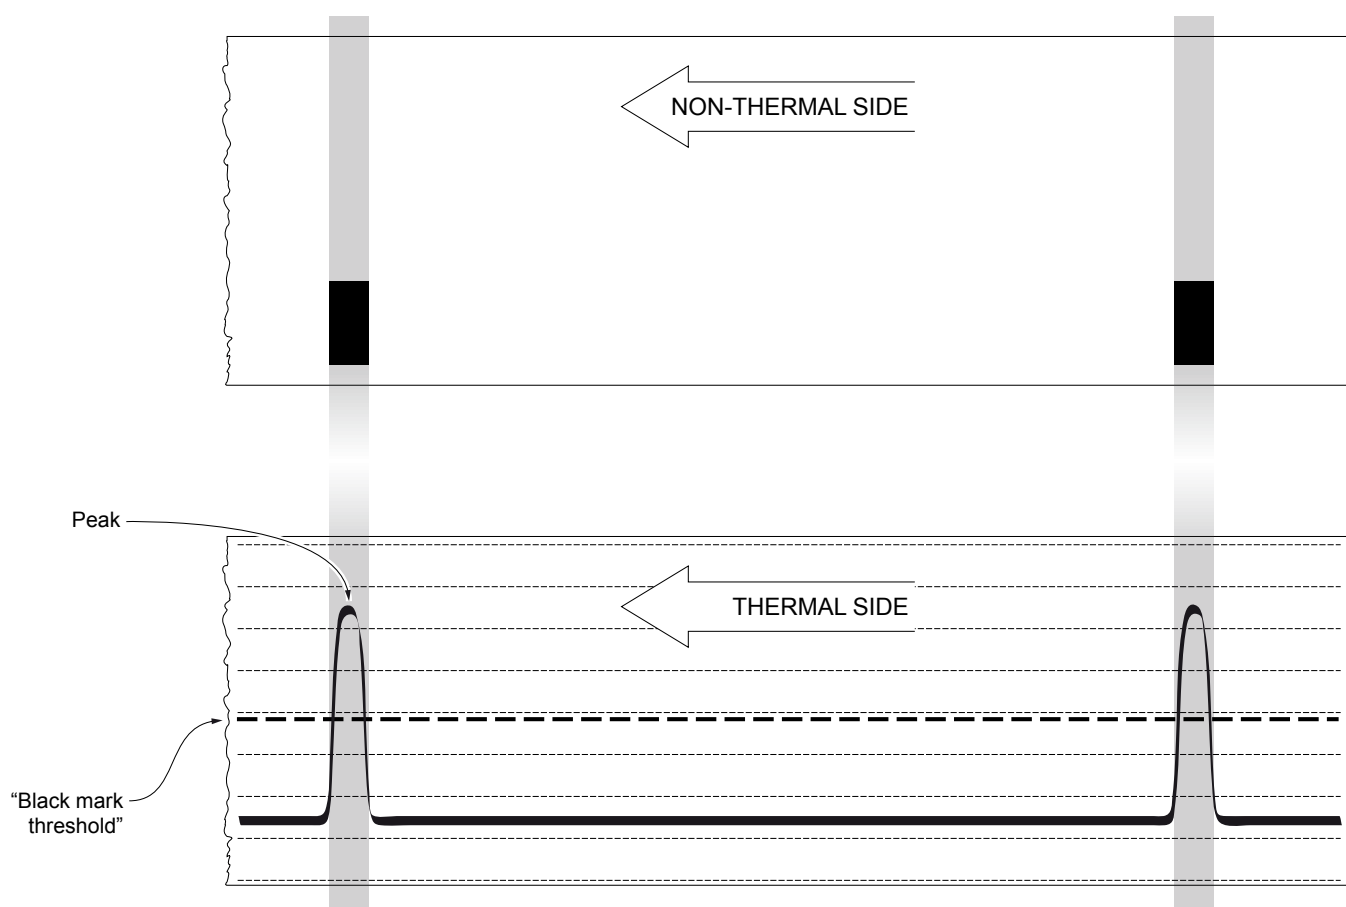


The following figure shows an example of paper with the non-thermal paper printed with black marks and other graphics (for example, a barcode): the outgoing voltage is constant while passing the white paper between two black marks, presents a peak at each black mark and presents some “noise” at each barcode.

In this case, the optimal value for the “Black mark threshold” parameter is located about halfway between the peak value and the maximum value of the “noise”.

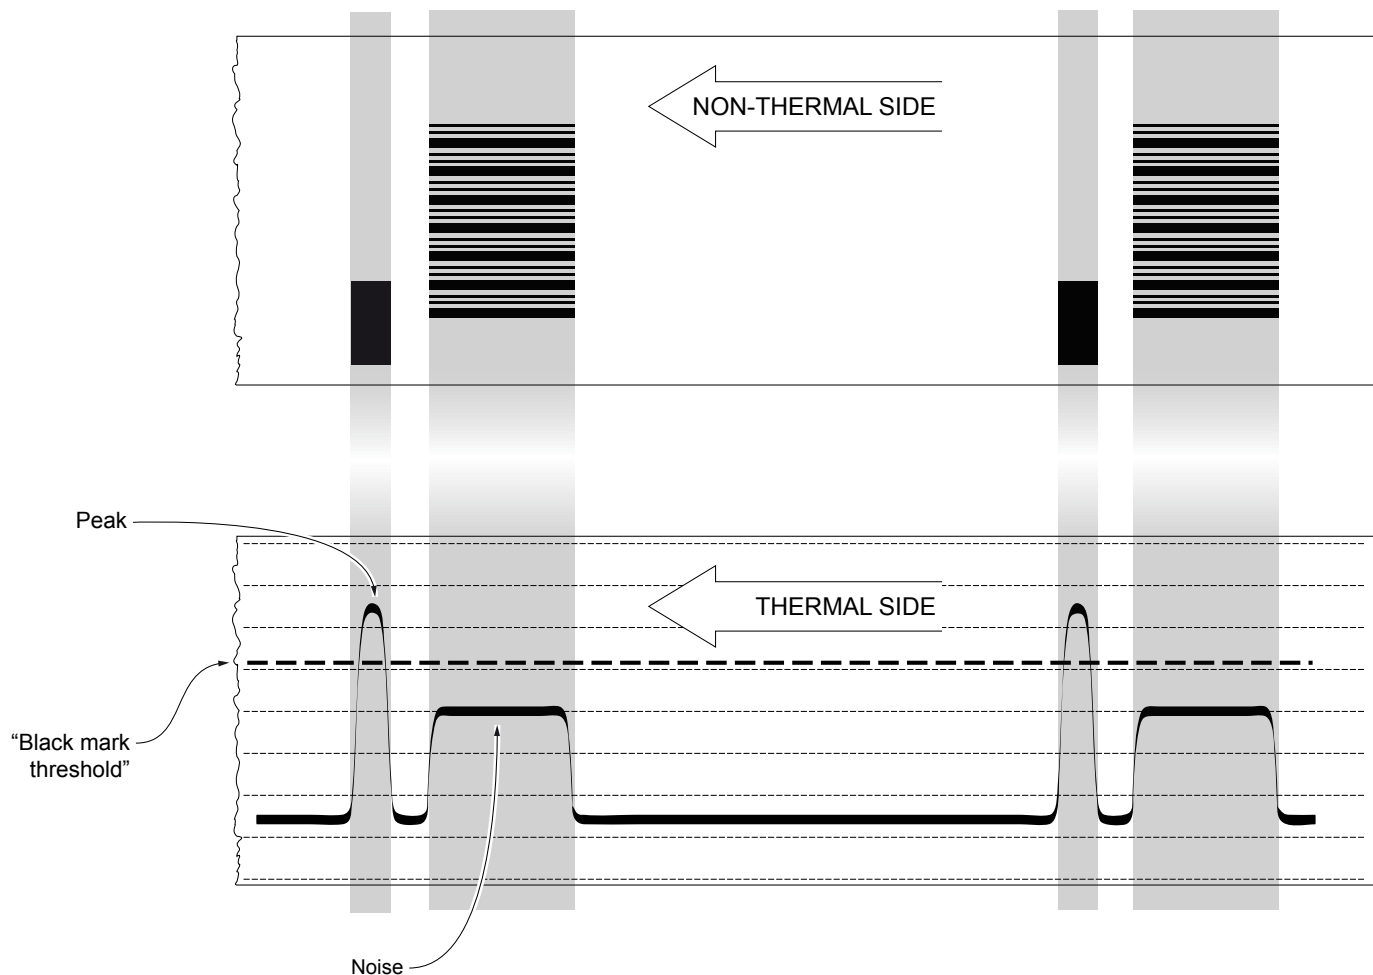

If the maximum value of “noise” read by the sensor is very close to the peak value, it might be difficult to place the value of the “Black mark threshold” at an intermediate point. In these cases, it is mandatory that the portion of paper between the point of printing end and the front of black mark is completely white (no graphics). In this way, the only next graphic detected by the sensor for alignment after the printing end will be the black mark.

The following figure shows an example of paper with holes: the outgoing voltage is constant while passing the paper between two holes and presents a variation at each hole. In this case, the optimal value for the “Black mark threshold” parameter is placed about half of the variation.

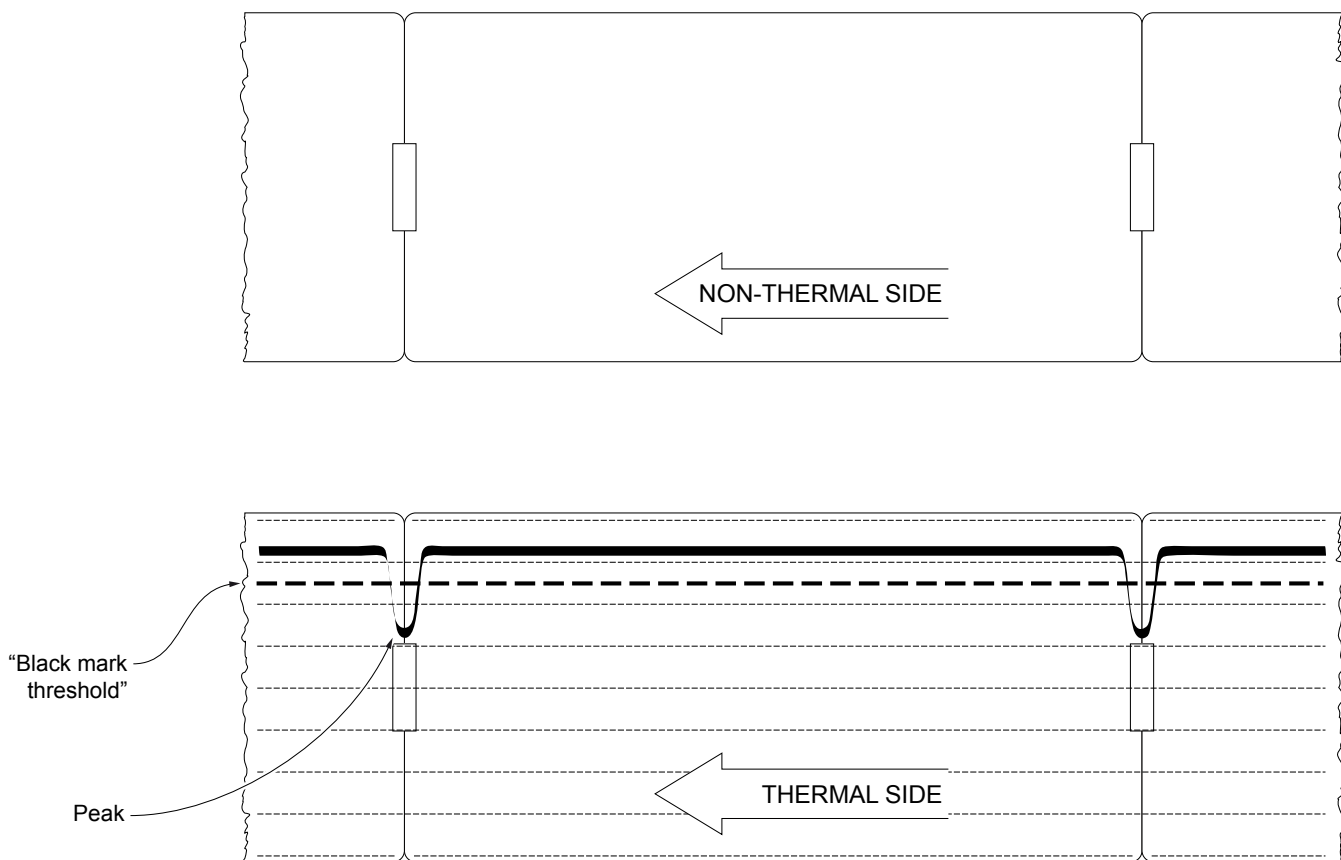






8 MAINTENANCE

8.1 Printer paper jam


In the following sequence of images, the procedure for solving the paper jam inside the printer is described. For some models, only the internal printer group is represented.

1

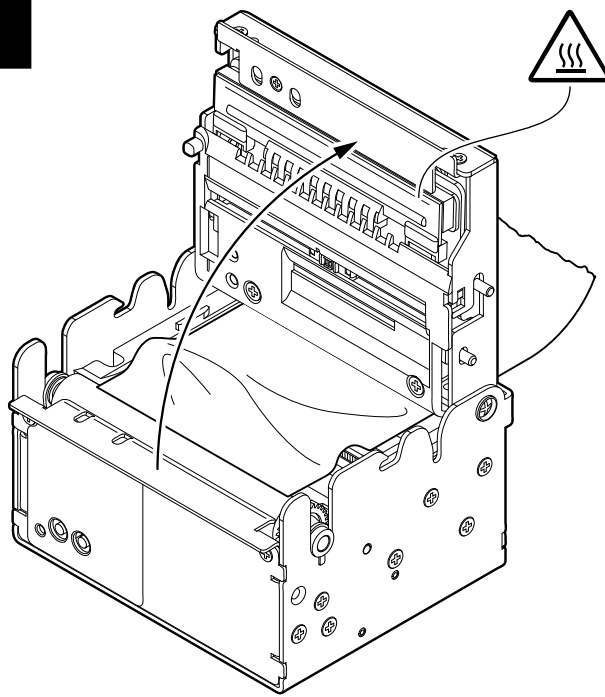


Open the device cover
(see [paragraph 5.1](#))

2

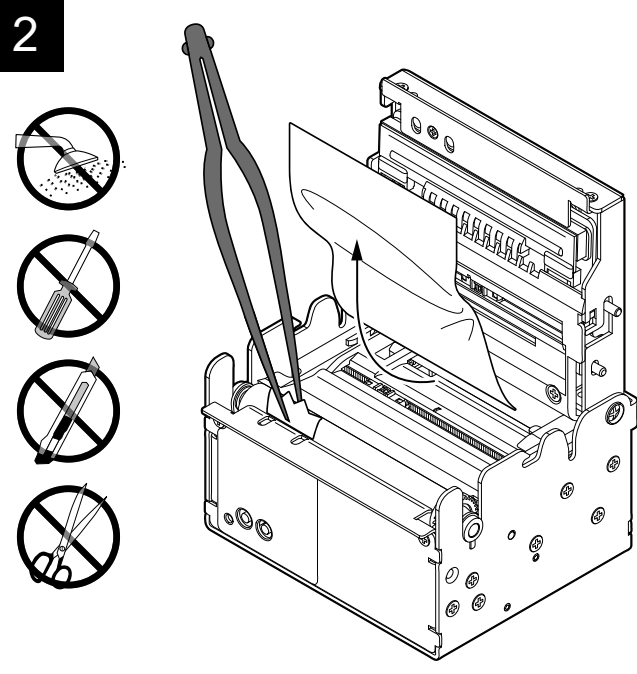


Remove the damaged paper and check the presence for paper scraps inside the device. Carefully remove all paper scraps. If necessary use tweezers.

3

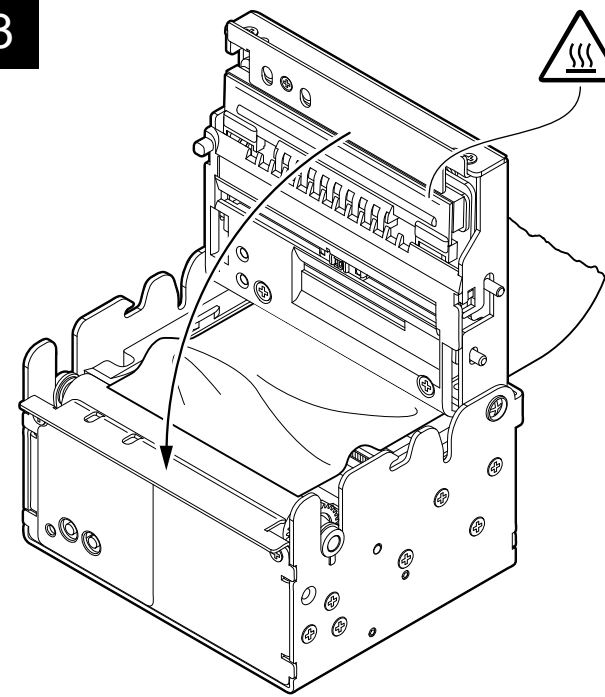

Close the device cover.

4

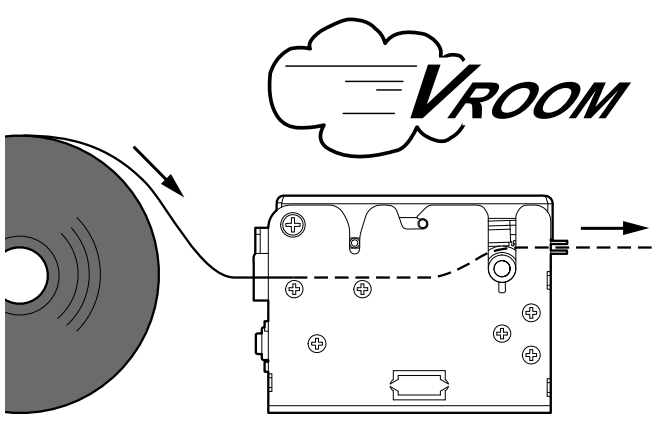


Insert the paper
(see [paragraph 5.7](#))




8.2 Autocutter paper jam

KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5, KPM180H 6
TK180 CUT 1, TK180 CUT 2, TK180 CUT 3, TK180 CUT 4


In the following sequence of images, the procedure for solving the paper jam inside the autocutter is described. For some models, only the internal printer group is represented.

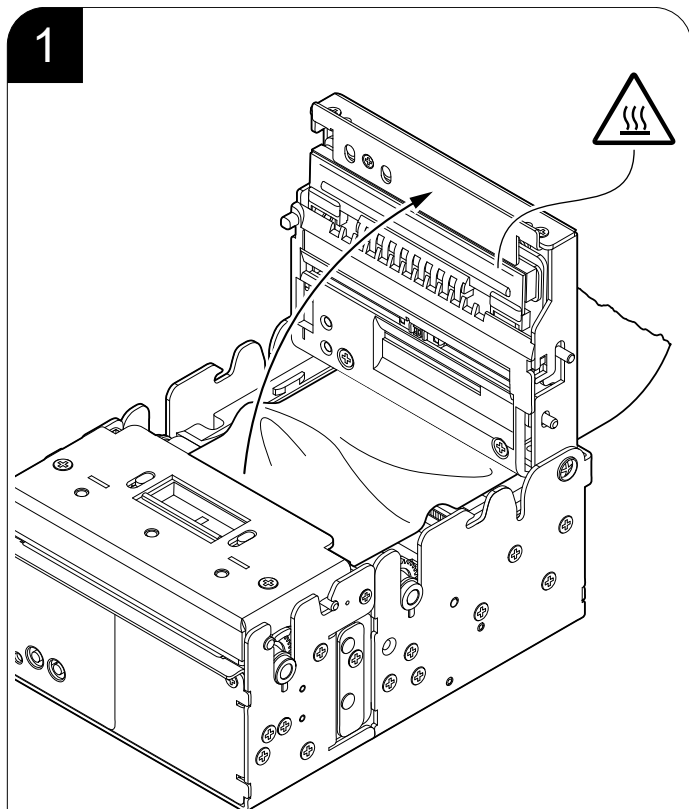


Open the device cover
(see [paragraph 5.1](#))

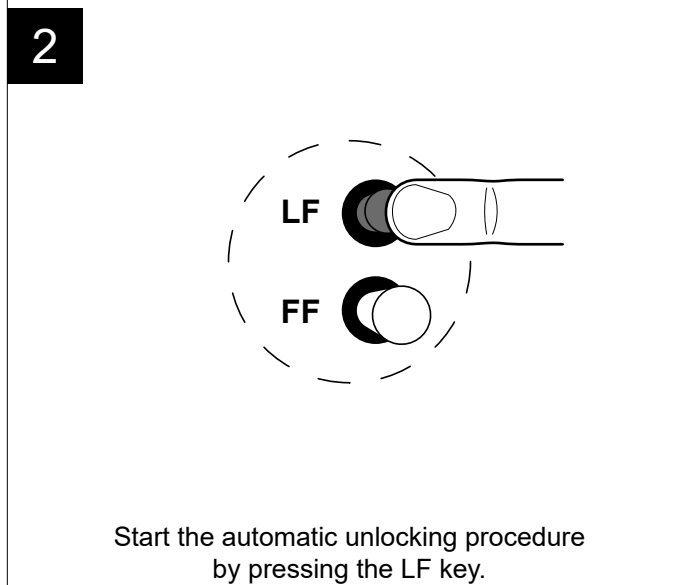

Start the automatic unlocking procedure
by pressing the LF key.


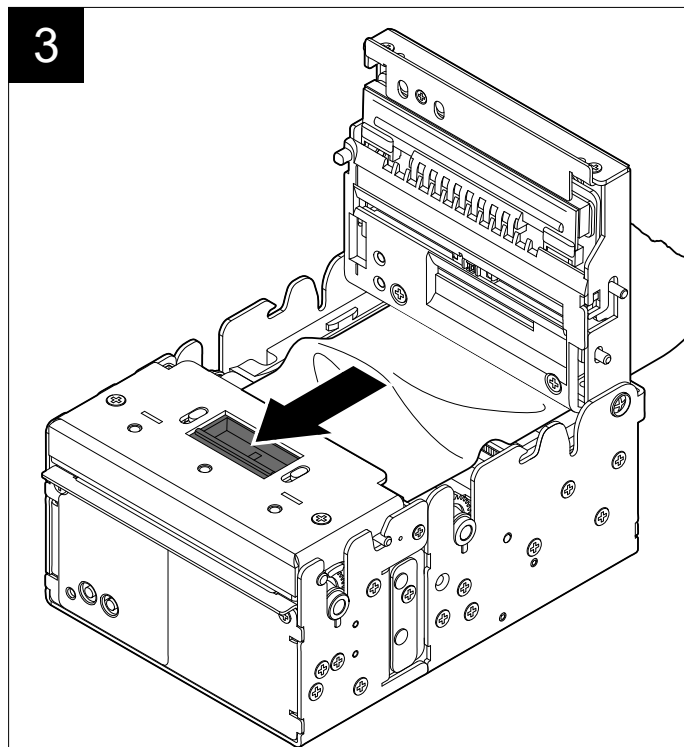


Push the release lever for the
cover of the presenter group.

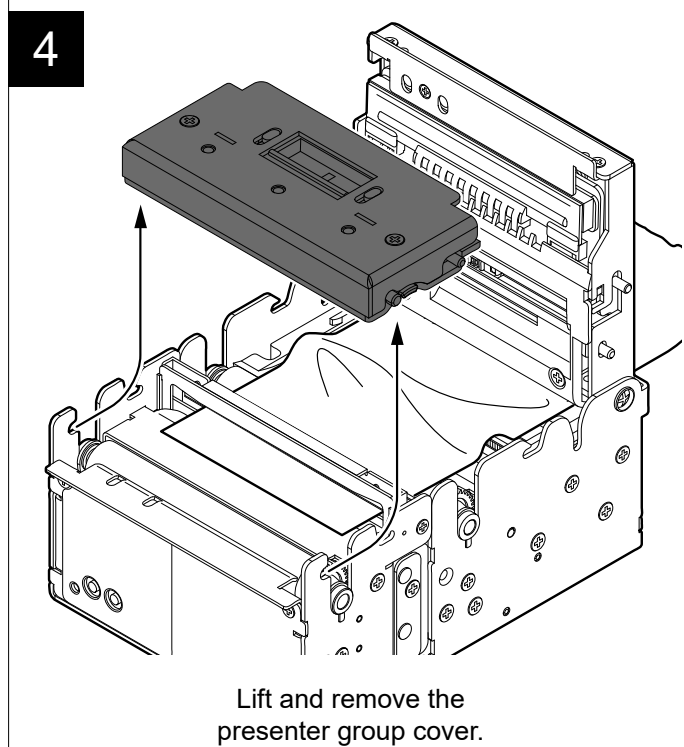


Lift and remove the
presenter group cover.

5

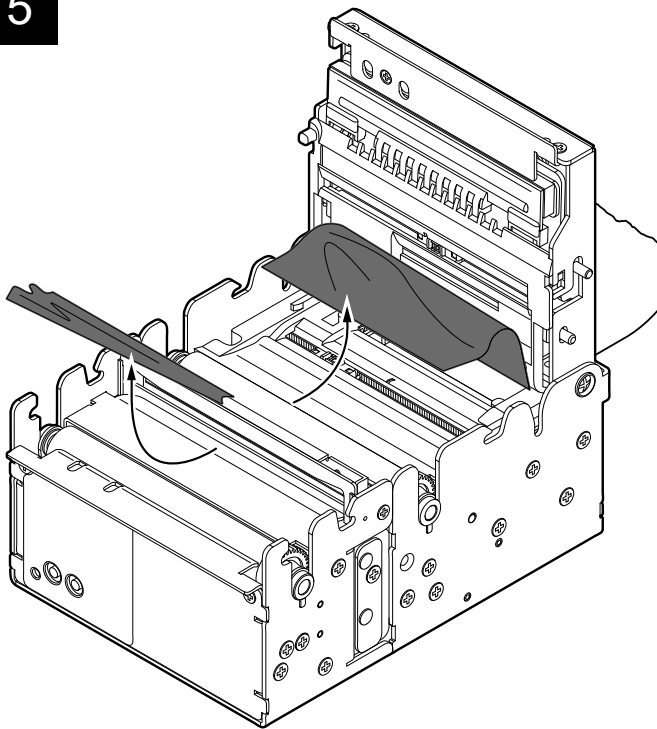

Try to remove the paper.
If the operation fails, see the next point.


6

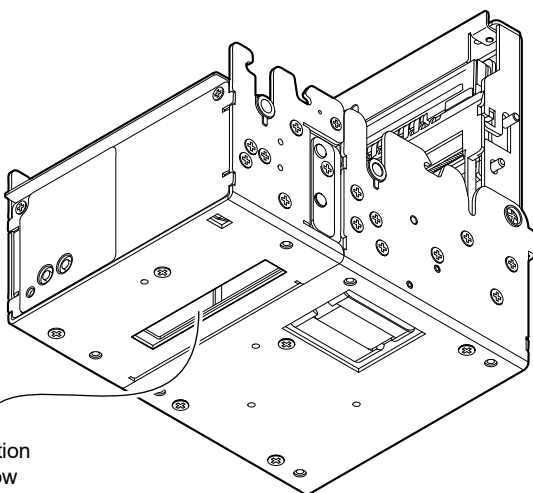

Inspection window



Locate the inspection window for the autocutter placed in the bottom of the presenter.

7

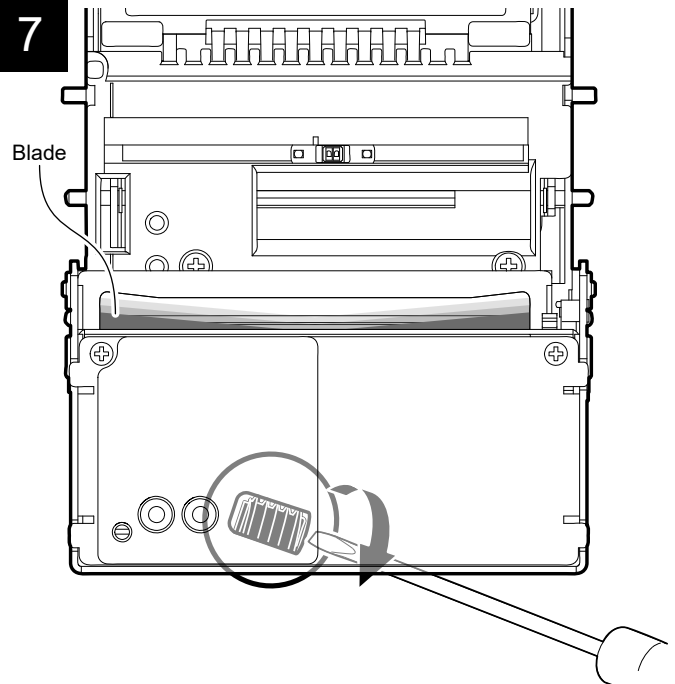

Insert a screwdriver in the inspector window and turn the worm screw to lower the autocutter blade.

8

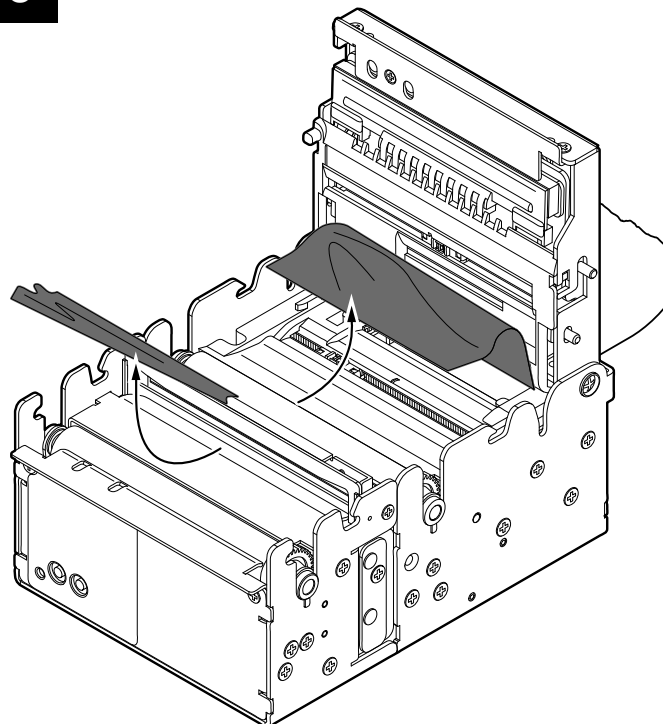

Remove the damaged paper and check the presence for paper scraps inside the printer; carefully remove all scraps of paper. If necessary, use tweezers.



8.3 Planning of cleaning operations

The regular cleaning of the device keeps the print quality and extends its life.

The following tables show the recommended planning for the cleaning operations. If you use the device in dusty environments, you must reduce the intervals between the cleaning operations.

For specific procedures, see [paragraph 8.4](#).

KPM180H 1, KPM180H 2, KPM180H 3

TK180 MET 1, TK180 MET 2

TK180 CUT 1, TK180 CUT 2

TK180 PLAS 1, TK180 PLAS 2

EVERY PAPER CHANGE

Printhead	Use isopropyl alcohol
-----------	-----------------------

Rollers	Use isopropyl alcohol
---------	-----------------------

EVERY 5 PAPER CHANGES

Autocutter (only if present)	Use compressed air
---------------------------------	--------------------

Paper path	Use compressed air or tweezers
------------	--------------------------------

Sensors	Use compressed air
---------	--------------------

EVERY 6 MONTHS OR AS NEEDED

Display (only if present)	Use compressed air or a soft cloth Don't use any ammonia-based product.
------------------------------	--

Case	Use compressed air or a soft cloth
------	------------------------------------



KPM180H 4, KPM180H 5, KPM180H 6
TK180 MET 3
TK180 CUT 3
TK180 CUT 4
TK180 PLAS 3

EVERY PAPER CHANGE

Printhead Use isopropyl alcohol

Rollers Use isopropyl alcohol

EVERY 5 PAPER CHANGE

Paper path Use compressed air or tweezers

Sensors Use compressed air

Lower flat Use isopropyl alcohol

AS NEEDED

Autocutter (only if present) Use silicone oil
Don't use alcohol or any aggressive solvent

Display (only if present) Use compressed air or a soft cloth
Don't use any ammonia-based product.

Case Use compressed air or a soft cloth




8.4 Cleaning

For periodic cleaning of the device, see the instructions below (for some models, only the internal printer group is represented).


Case

1

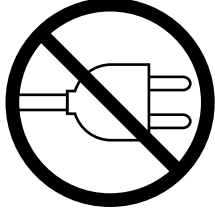


Disconnect the power supply cable.

2

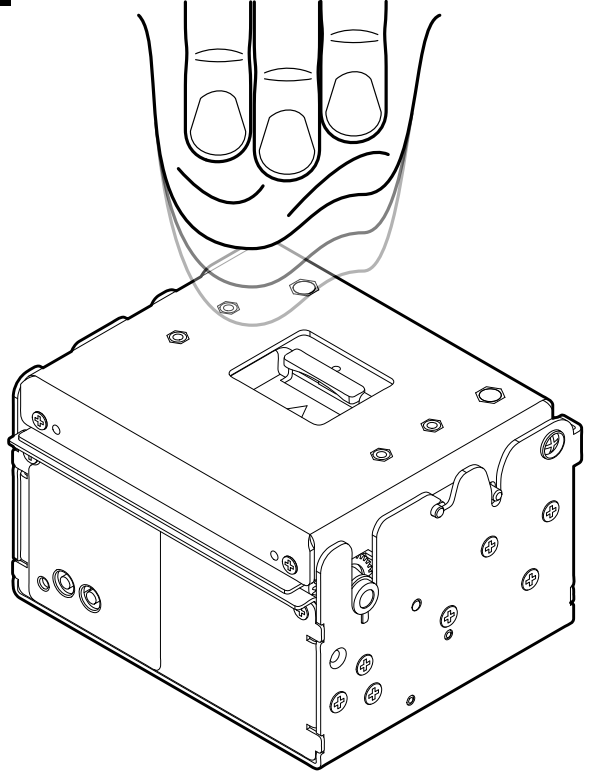


ATTENTION:
Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the device.



To clean the device,
use compressed air or a soft cloth.


Display

1

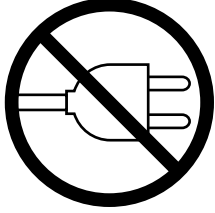


Disconnect the power supply cable.

2

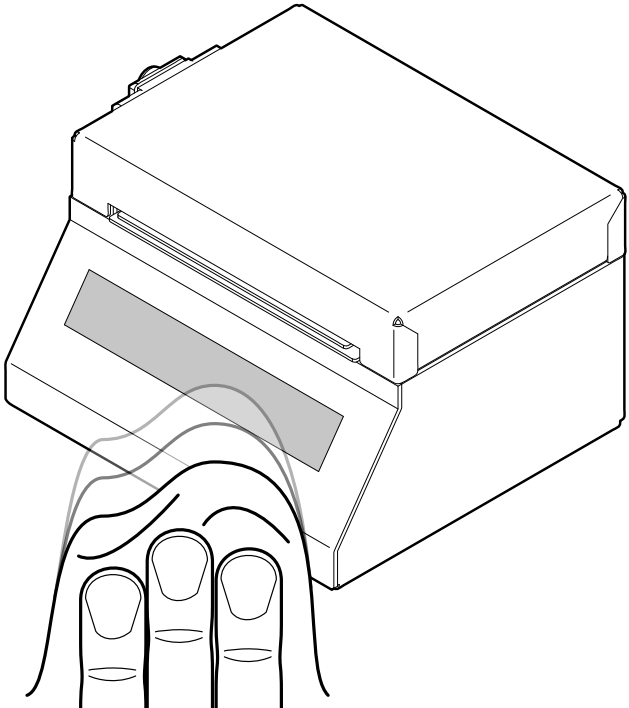


ATTENTION:
Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the machine.
Do not use ammonia-based products .



To clean the display,
use compressed air or a soft cloth.


Printhead

1

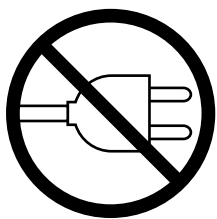

Disconnect the power supply cable and open the device cover (see [paragraph 5.1](#))

2

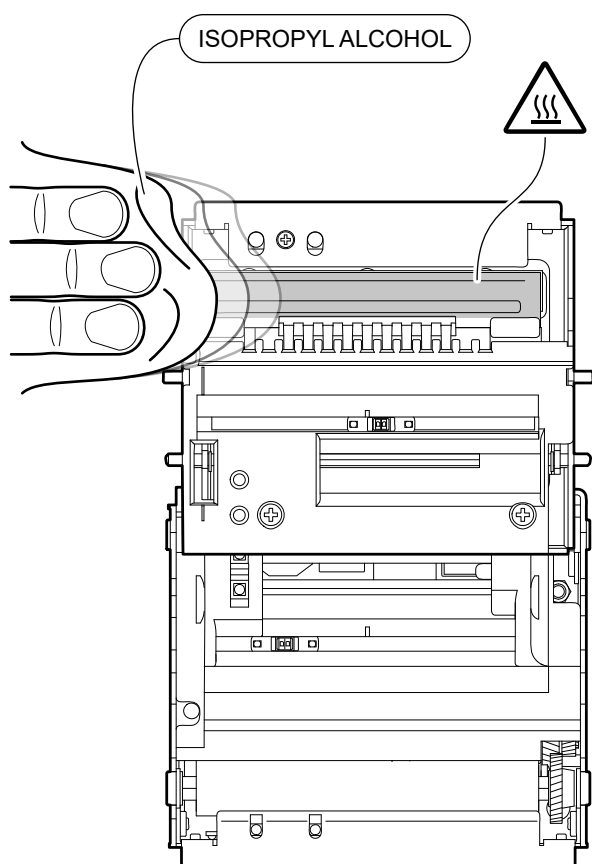

ATTENTION:


Do not use solvents, or hard brushes.
Do not let water or other liquids get inside the machine.



Clean the printhead by using a non-abrasive cloth moistened with isopropyl alcohol.


Platen roller

1

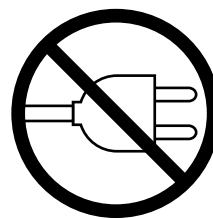

Disconnect the power supply cable and open the device cover (see [paragraph 5.1](#))

2

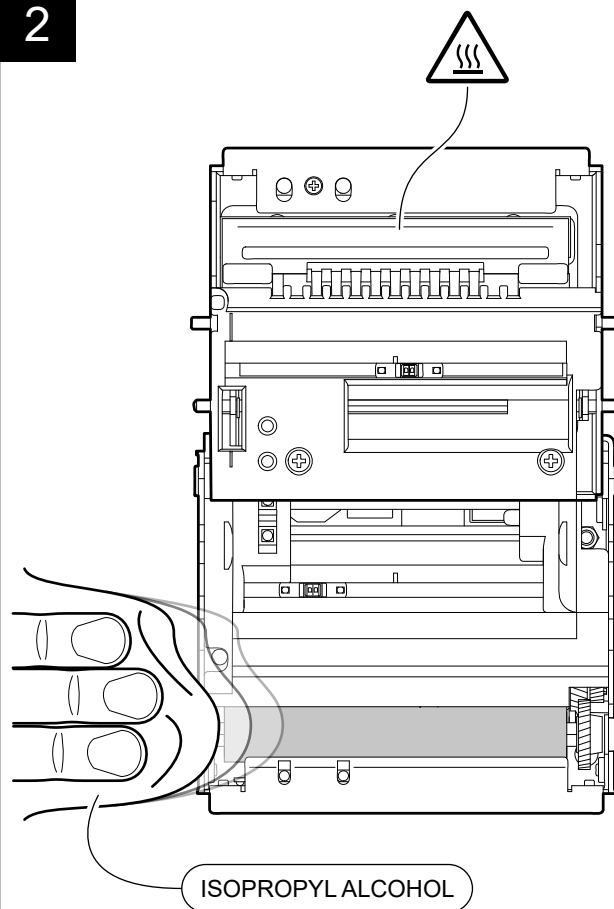

ATTENTION:


Do not use solvents, or hard brushes.
Do not let water or other liquids get inside the machine.



Clean the platen roller by using a non-abrasive cloth moistened with isopropyl alcohol.


Sensors

1

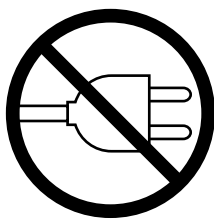


Disconnect the power supply cable and open the device cover (see [paragraph 5.1](#))

2

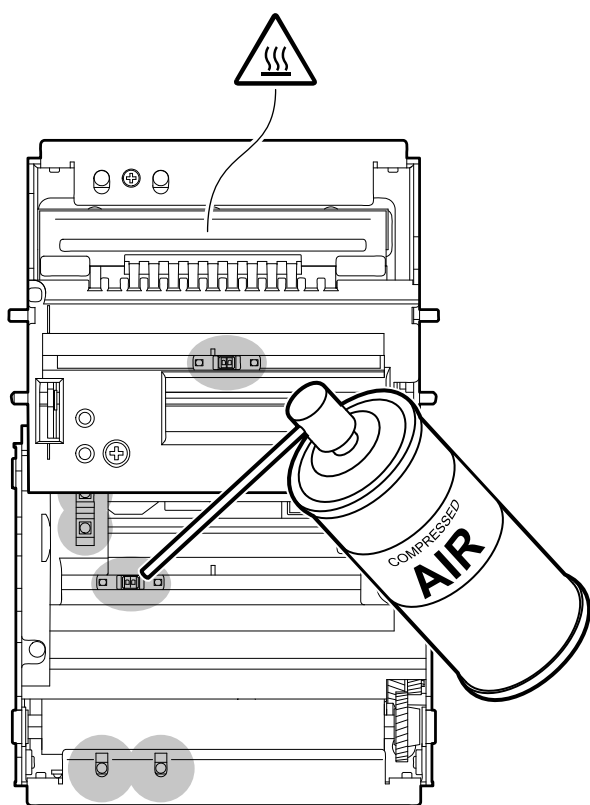

ATTENTION:


Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the device.



Clean the device sensors by using compressed air.


Paper path

1

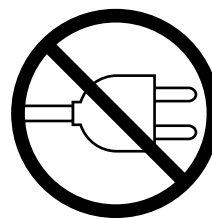


Disconnect the power supply cable and open the device cover (see [paragraph 5.1](#))

2

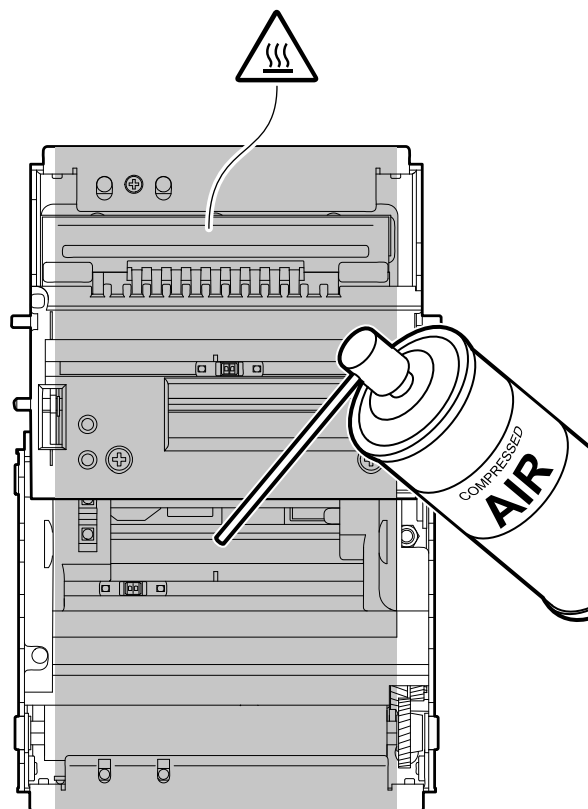

ATTENTION:


Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the device.



Clean the area involved in the passage of paper by using compressed air.



Lower flat

1

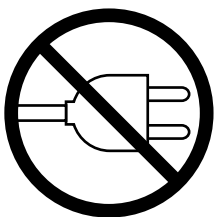


Disconnect the power supply cable and open the device cover (see [paragraph 5.1](#))

2

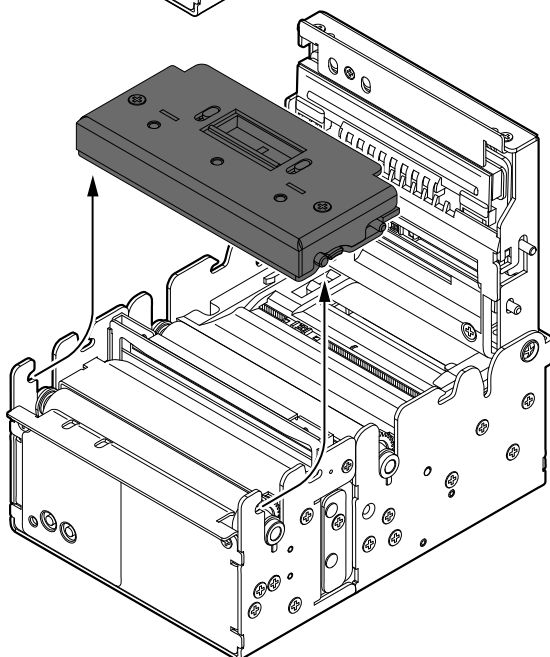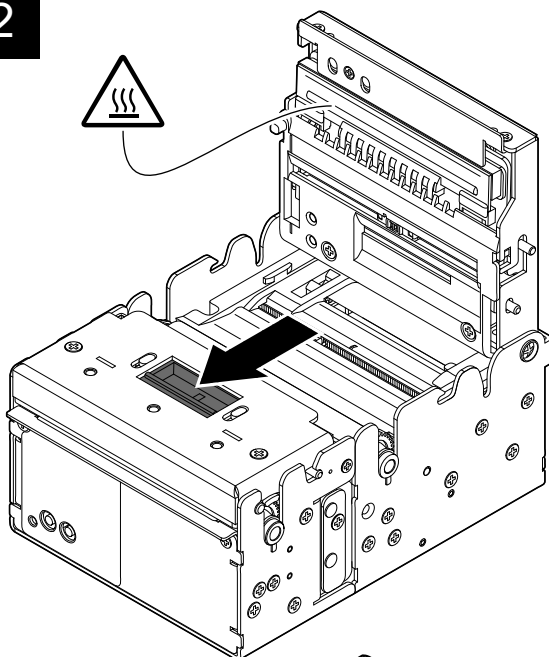

Push the release lever then lift and remove the presenter cover.


3

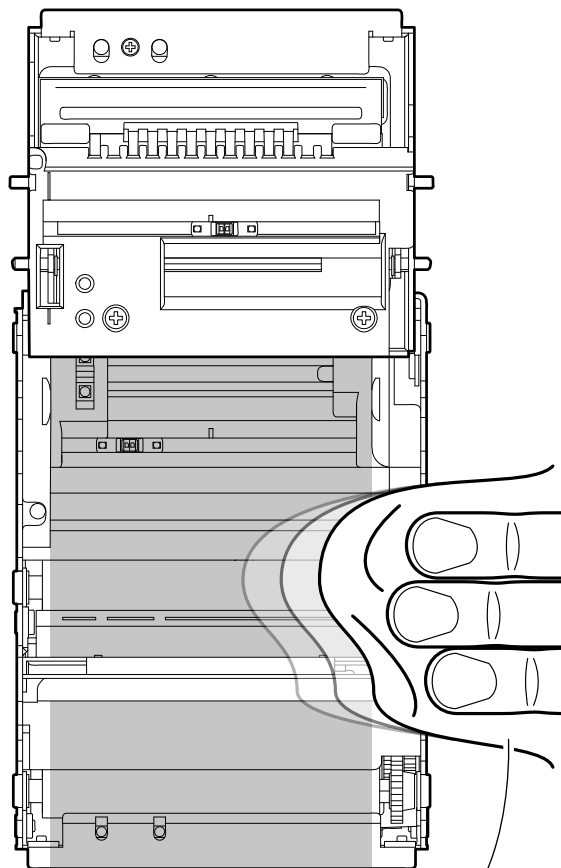

ISOPROPYL ALCOHOL

ATTENTION:


Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the device.



Clean the lower flat by using a non-abrasive cloth moistened with isopropyl alcohol.



Autocutter (KPM180H 2, KPM180H 3, TK180 CUT 1, TK180 CUT 2)

1

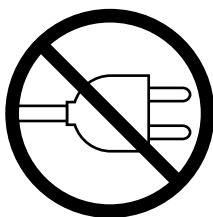


Disconnect the power supply cable and open the device cover (see paragraph 5.1)

2

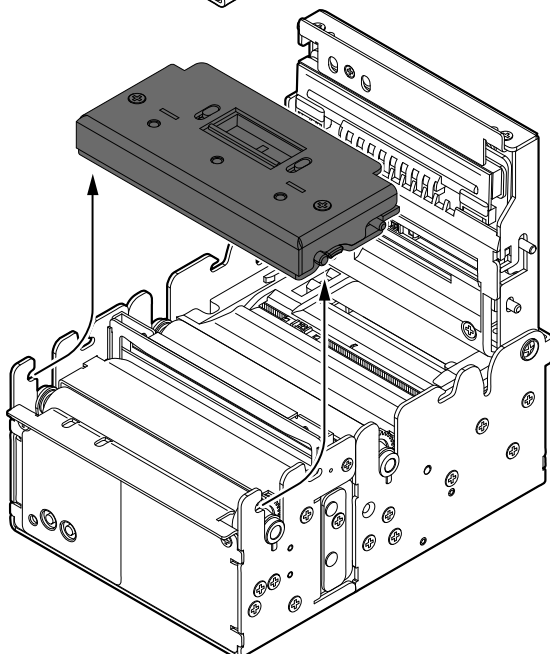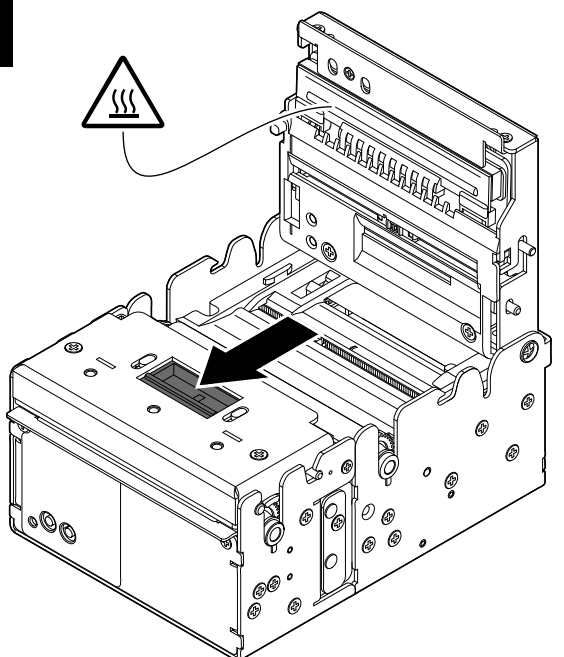


Push the release lever then lift and remove the presenter cover.

3

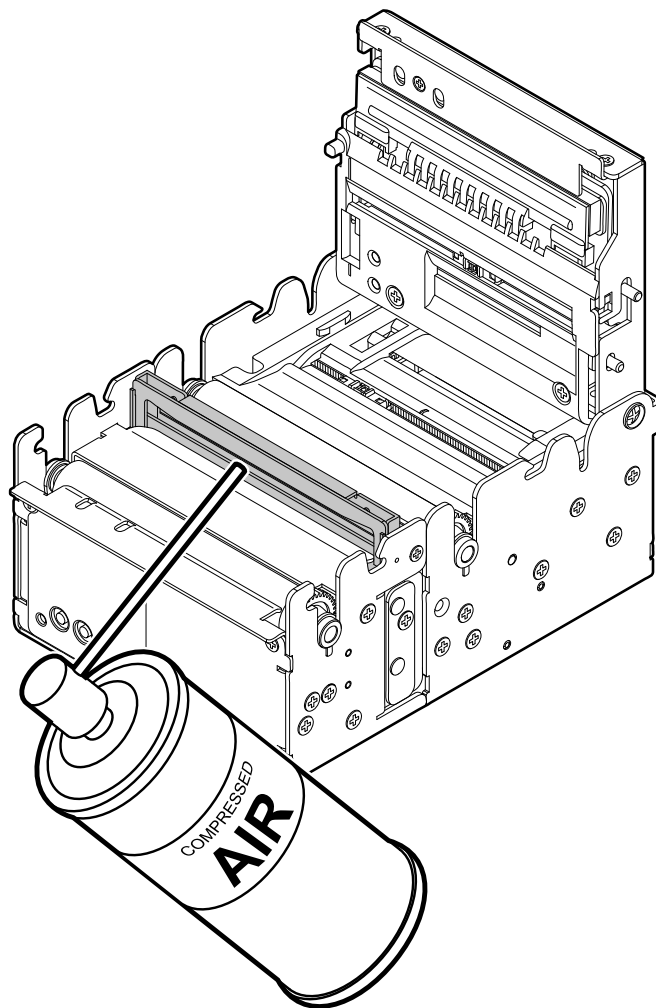


ATTENTION:
Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the device.



Clean the autocutter by using compressed air.


Autocutter (KPM180H 4, KPM180H 5, KPM180H 6, TK180 MET 3, TK180 CUT 3, TK180 CUT 4)

1

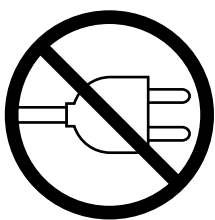


Disconnect the power supply cable and open the device cover (see paragraph 5.1)

2

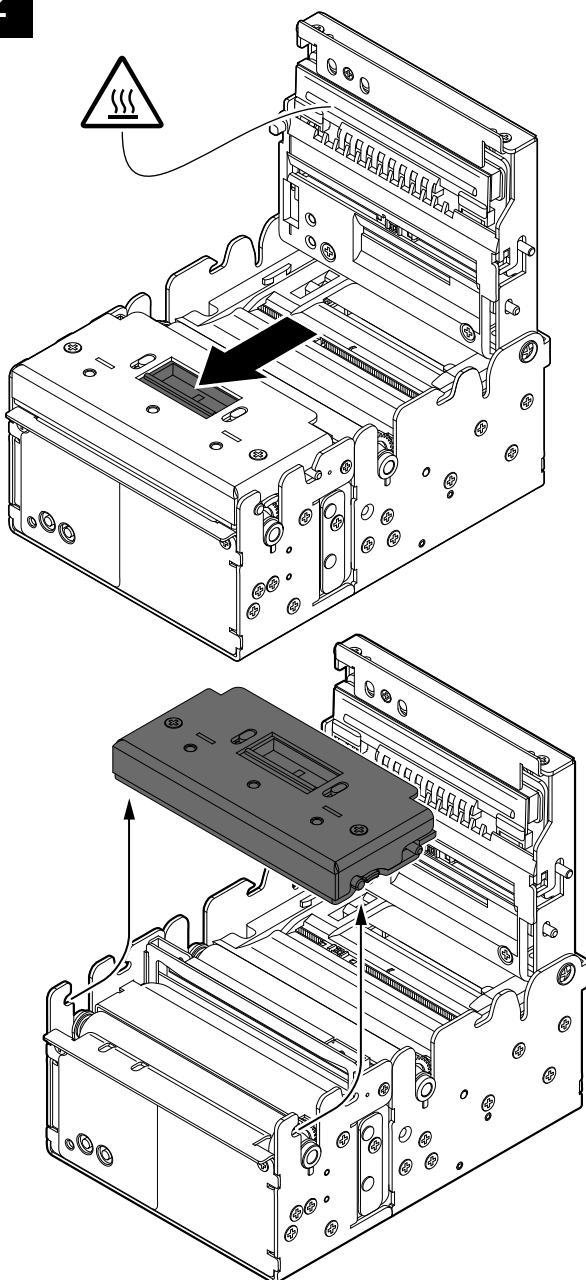


Push the release lever then lift and remove the presenter cover.

3

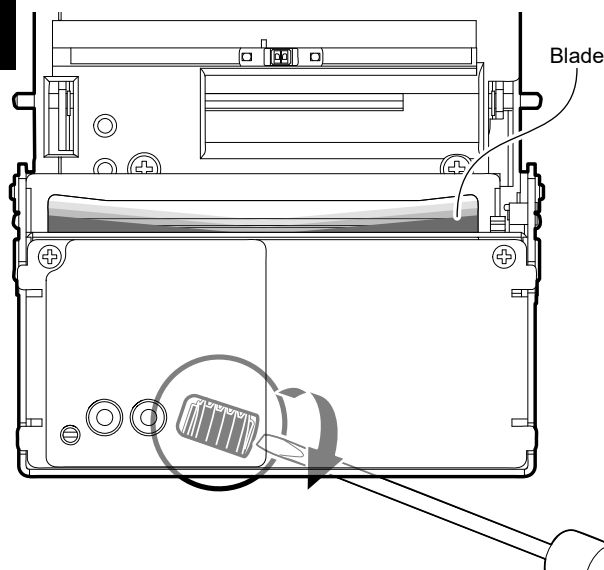


Insert a screwdriver in the inspector window and turn the worm screw to expose the autocutter blade.

4

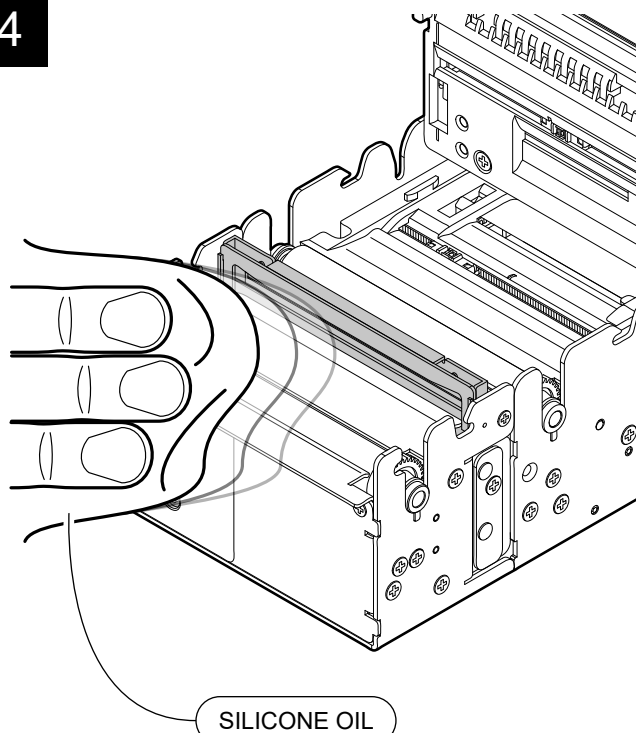

ATTENTION:
Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the device.



Clean the autocutter by using a non-abrasive cloth moistened with silicone oil.

8.5 Upgrade firmware


Firmware upgrade can be performed by using the “PrinterSet” software tool available on www.custom4u.it. To upgrade firmware, proceed as follows.

1




Login to the website www.custom4u.it, type in the product code of the device and download the latest firmware release available.

2

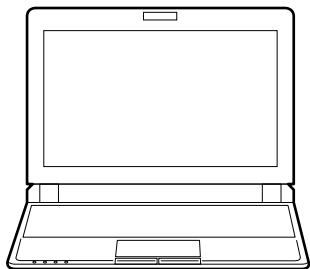


Connect the device to a PC directly (see [paragraph 4.3](#)), without using HUB devices.

3

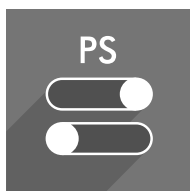


Start the “PrinterSet” software tool.

4

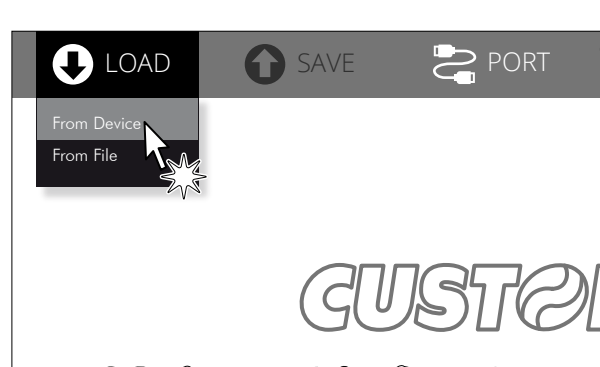

Click on LOAD > FROM DEVICE and select the device connected to the PC.

5

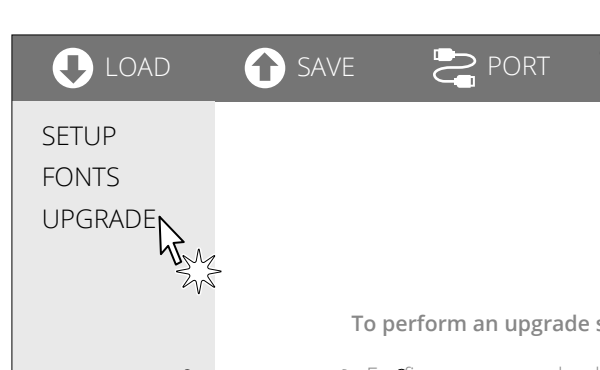

Click on UPGRADE and follow the instructions shown on the screen.

ATTENTION: During saving, it is strongly advised against disconnecting the communication cable or to remove the power supply of PC or device.



9 SPECIFICATION

9.1 Hardware specifications

Operating temperature	
Sensors	Head temperature, paper presence, cover open, external low paper, mobile detectors of black mark or translucent gap/hole,
Display	
TK180 MET 1 TK180 MET 2 TK180 MET 3 TK180 CUT 1 TK180 CUT 2 TK180 CUT 3 TK180 CUT 4	Dot matrix 120x17 LCD module size 124.1 (W) x 26 (H) x 5.8 (T) mm
TK180 PLAS 1 TK180 PLAS 2 TK180 PLAS 3	Dot matrix 122x32 LCD module size 83.4 (W) x 28.2 (H) x 5.1 (T) mm
Emulations	SERVICE, ATB, BTP
Printing driver	Windows XP VISTA (32/64 bit) Windows 7 (32/64 bit) Windows 8 (32/64 bit) Windows 8.1 (32/64 bit) Windows 10 (32/64 bit) Virtual COM (32/64 bit) with or without silent installation OPOS Linux (32/64 bit) Android iOS
INTERFACES	
USB port	12 Mbit/s (USB 2.0 full speed)
RS232 serial port	from 1200 bps to 115200 bps
Ethernet port	10 Mbit/s, 100 Mbit/s
MEMORIES	
Receive buffer	16 kB



Flash memory	1 MB internal + 8 MB external (of which 4 MB available for user)
--------------	---

RAM memory	128 kB internal + 8 MB external
------------	---------------------------------

PRINTER

Resolution	203 dpi (8 dot/mm)
------------	--------------------

Printing method	Thermal, fixed head
-----------------	---------------------

Head life ⁽¹⁾

Abrasion resistance ⁽²⁾	100 km (with recommended paper, 12.5% duty cycle)
------------------------------------	---

Pulse durability	100 M (referred to each dot)
------------------	------------------------------

Printable barcode	UPCA, UPCE, EAN13, EAN8, CODE39, ITF, CODABAR, CODE93, CODE128, CODE32, PDF417, DATAMATRIX, AZTEC, QRCODE
-------------------	---

Printing speed ⁽¹⁾⁽³⁾	High Speed = 200 mm/s Normal = 150 mm/s High Quality = 100 mm/s
----------------------------------	---

PAPER

Type of paper	Thermal rolls, heat-sensitive side on outside of roll Thermal rolls, heat-sensitive side on inside of roll Thermal Fan-fold module with alignment black mark
---------------	--

Paper width	54 mm (according to IATA BTP specifications - resolution 740) 82.5 mm (according to IATA ATB specifications - resolution 722e)
-------------	---

Paper weight	according to IATA specifications
--------------	----------------------------------

Paper thickness	according to IATA specifications
-----------------	----------------------------------

Mandatory paper

KPM180H 4 KPM180H 5 KPM180H 6 TK180 MET 3 TK180 CUT 3 TK180 CUT 4 TK180 PLAS 3	EEZEETAGS 2.0
--	---------------

External roll diameter ⁽⁴⁾	max. 200 mm
---------------------------------------	-------------



External roll core diameter
(thermal side on outside)

KPM180H 1	
TK180 MET 1	
TK180 MET 2	
TK180 MET 3	25 mm (+ 1 mm)
TK180 PLAS 1	
TK180 PLAS 2	
TK180 PLAS 3	

KPM180H 2	
KPM180H 3	
KPM180H 4	
KPM180H 5	25 mm (+ 1 mm) with paper thermal side on outside
KPM180H 6	50 mm (+ 1 mm) with paper non-thermal side on outside
TK180 CUT 1	
TK180 CUT 2	
TK180 CUT 3	
TK180 CUT 4	

Paper end	Not attached to roll core
-----------	---------------------------

Core type	Cardboard or plastic
-----------	----------------------

AUTOCUTTER
(KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5, KPM180H 6
TK180 CUT 1, TK180 CUT 2, TK180 CUT 3)

Paper cut	Total cut
-----------	-----------

Estimated life ⁽¹⁾

KPM180H 2	
KPM180H 3	
TK180 CUT 1	1000000 cuts (with paper thickness 200 µm, ambient temperature)
TK180 CUT 2	

KPM180H 4	
KPM180H 5	
KPM180H 6	500000 cuts (with paper thickness 100 µm, ambient temperature)
TK180 CUT 3	
TK180 CUT 4	

TRANSPONDER SPECIFICATIONS
(KPM180H 3, KPM180H 5, KPM180H 6
TK180 MET 2, TK180 MET 3
TK180 CUT 2, TK180 CUT 3, TK180 CUT 4
TK180 PLAS 2, TK180 PLAS 3)

Supported transponders (UHF Ultra High Frequency RFID 900 MHz)	UHF Gen 2
--	-----------



DEVICE ELECTRICAL SPECIFICATIONS

Power supply 24 Vdc \pm 10% (optional external power supply)

Medium consumption ⁽⁵⁾ 1.6 A

Typical consumption ⁽³⁾ 1.5 A

Standby consumption

KPM180H 1
TK180 MET 1
TK180 MET 2
TK180 MET 3
TK180 PLAS 1
TK180 PLAS 2
TK180 PLAS 3 0.04 A

KPM180H 2
KPM180H 3
KPM180H 4
KPM180H 5
KPM180H 6
TK180 CUT 1
TK180 CUT 2
TK180 CUT 3
TK180 CUT 4 0.07 A

ELECTRICAL SPECIFICATIONS POWER SUPPLY code 963GE020000071
(optional for KPM180H 1, KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5, KPM180H 6
included with TK180 MET 1, TK180 MET 2, TK180 MET 3, TK180 CUT 1, TK180 CUT 2, TK180 CUT 3, TK180 PLAS 1,
TK180 PLAS 2, TK180 PLAS 3)

Power supply voltage from 100 Vac to 240 Vac

Frequency from 50 Hz to 60 Hz

Output 24 V, 2.5 A

Power 60 W



ENVIRONMENTAL CONDITIONS

Operating temperature

KPM180H 1	
KPM180H 2	
KPM180H 3	
KPM180H 4	from -10°C to +60°C ⁽⁶⁾
KPM180H 5	
KPM180H 6	

TK180 MET 1	
TK180 MET 2	
TK180 MET 3	
TK180 CUT 1	
TK180 CUT 2	
TK180 CUT 3	from 0°C to +40°C
TK180 CUT 4	
TK180 PLAS 1	
TK180 PLAS 2	
TK180 PLAS 3	

Relative humidity (RH)	from 10% to 85% (w/o condensation)
------------------------	------------------------------------

Storage temperature	from -20 °C to +70 °C
---------------------	-----------------------

Storage relative humidity (RH)	from 10% to 90% (w/o condensation)
--------------------------------	------------------------------------

NOTES:

- (1) : Respecting the regular schedule of cleaning for the device components.
- (2) : Damages caused by scratches, ESD and electromigration are excluded.
- (3) : Referred to a standard CUSTOM receipt (L=10 cm, Density = 12.5% dots on).
- (4) : For external rolls diameter larger than Ø100mm it's recommended to use a paper pretensioning device.
- (5) : Referred to the UL measurements (Speed/Quality = High Speed, Print density = +50%, Ticket = 12.5% dots on, 1 ticket every 30 s).
- (6) : If you use the device with the power supply code 963GE020000071, supplied as an accessory, the operating temperature range is from 0 °C to +40 °C.




9.2 Device dimensions

All the dimensions shown in following figures are in millimetres and referred to devices with closed covers.

KPM180H 1


Length	97.5 mm
Height	67 mm (with cover closed) 142 mm (with cover open)
Width	108 mm
Weight	800 g

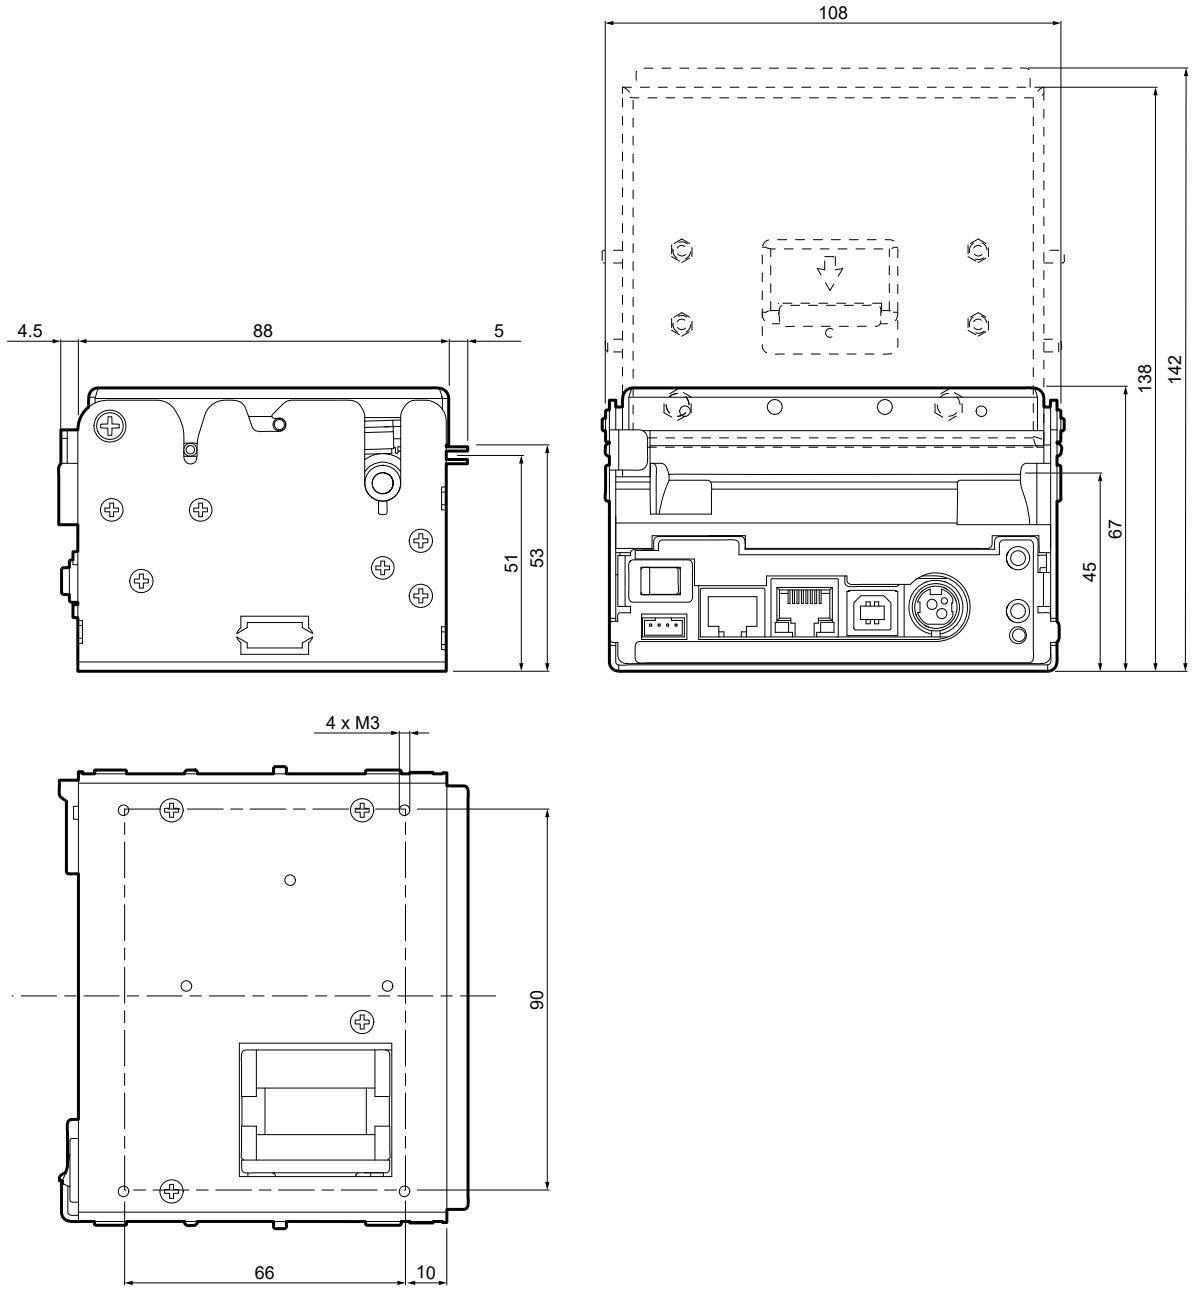



KPM180H 2, KPM180H 4, KPM180H 6


Length	149.5 mm
Height	67.5 mm (with cover closed) 140 mm (with cover open)
Width	108 mm
Weight	1500 g

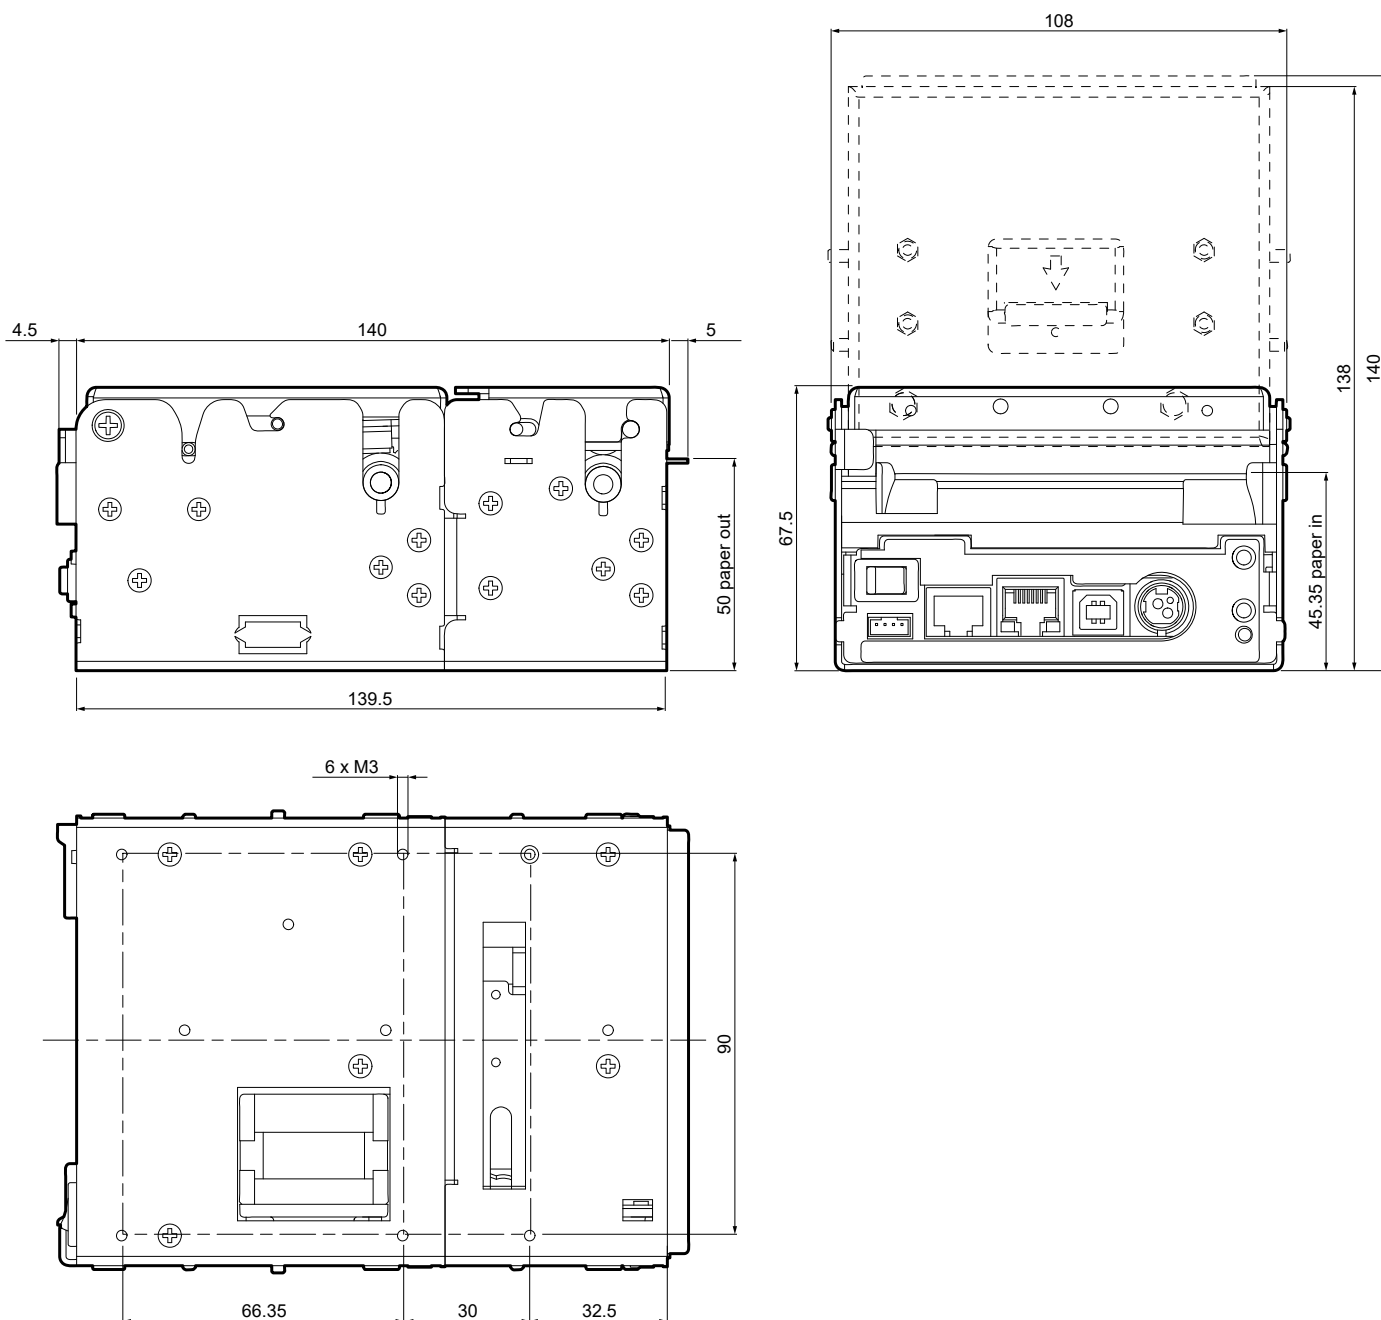



KPM180H 2 with optional RFID module, KPM180H 3
KPM180H 4 with optional RFID module, KPM180H 5




Length	227.5 mm
Height	67.5 mm (with cover closed) 140 mm (with cover open) 91 mm (with RFID reader open)
Width	114 mm
Weight	1780 g

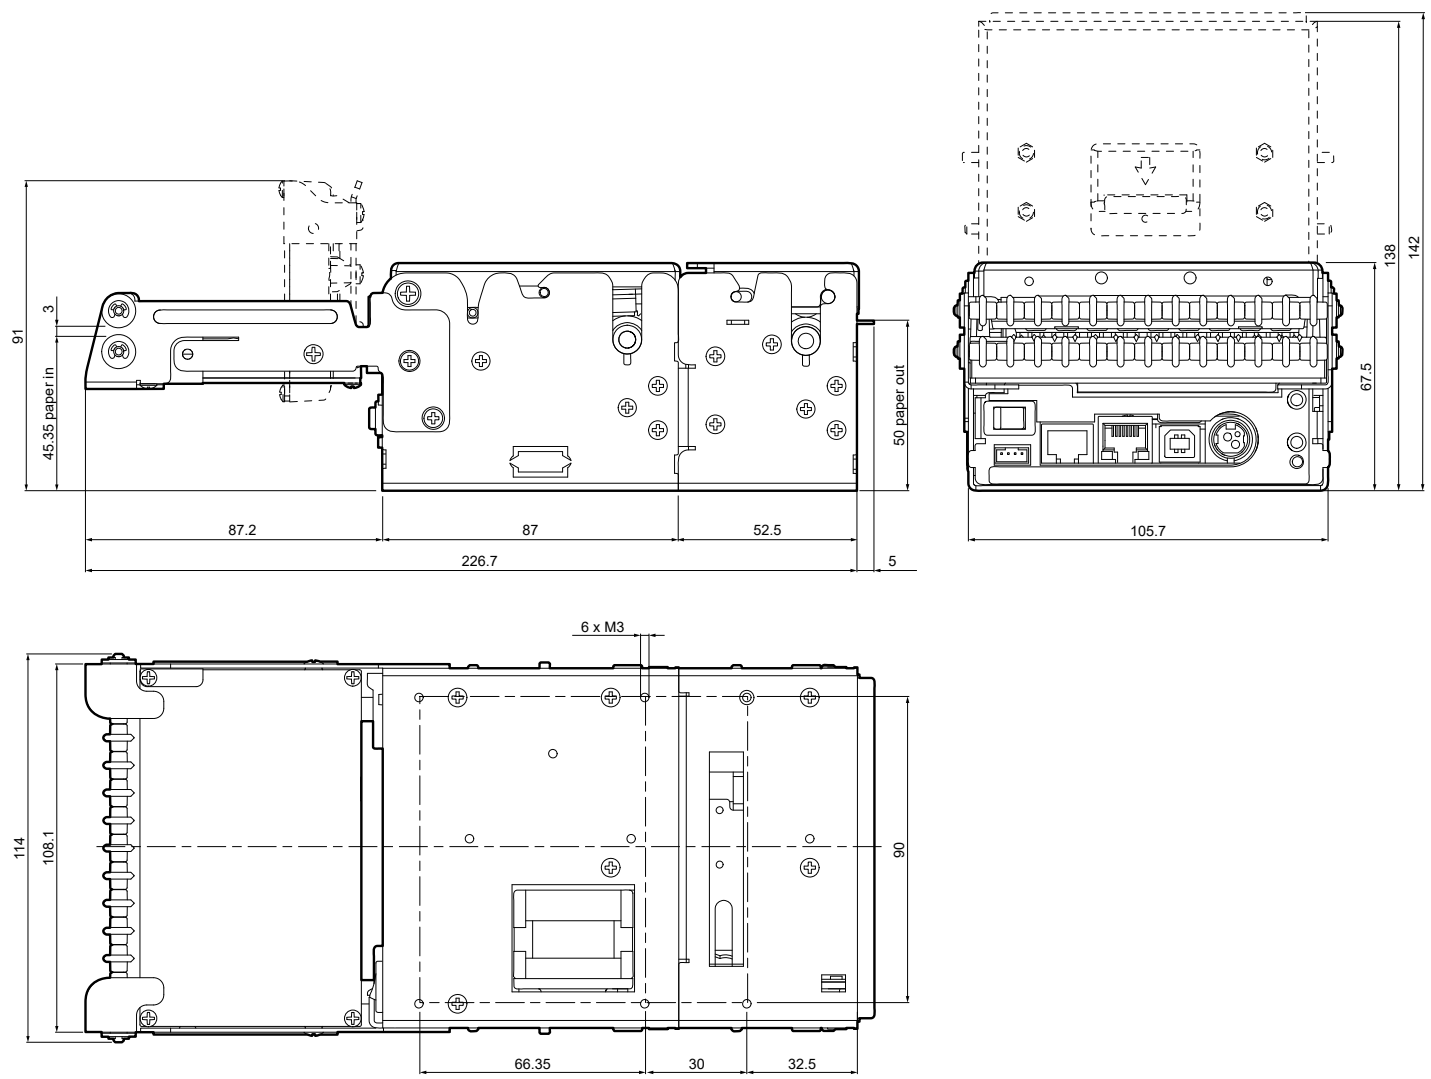



TK180 MET 1, TK180 MET 3




Length	119 mm
Height	85 mm
Width	145.6 mm
Weight	2240 g

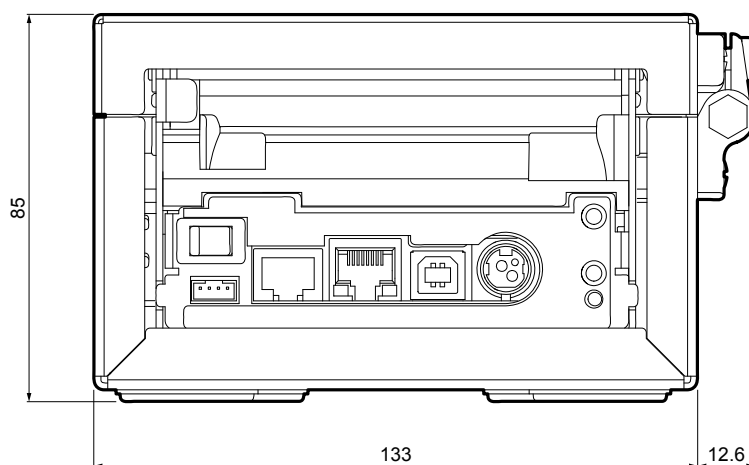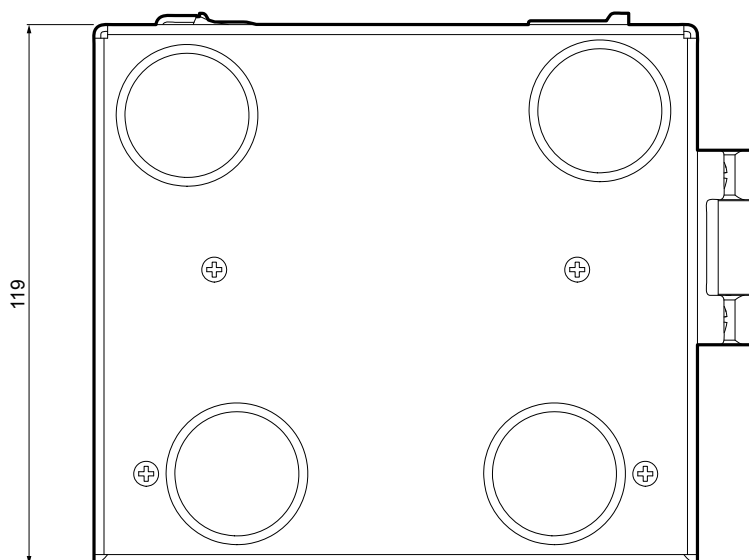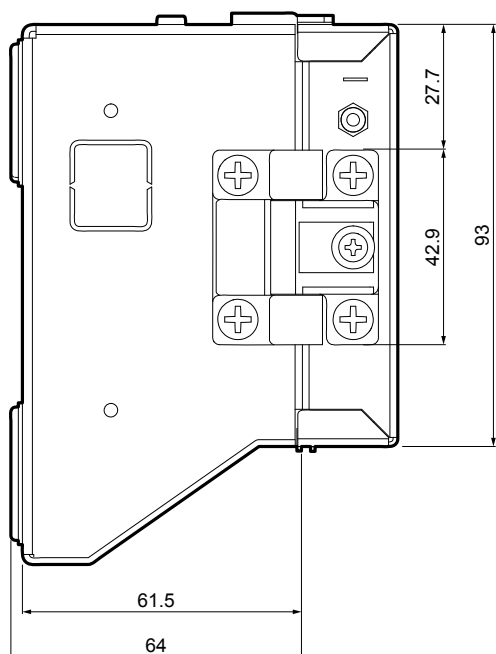



TK180 CUT 1, TK180 CUT 3


Length	171.5 mm
Height	85 mm
Width	145.6 mm
Weight	3000 g

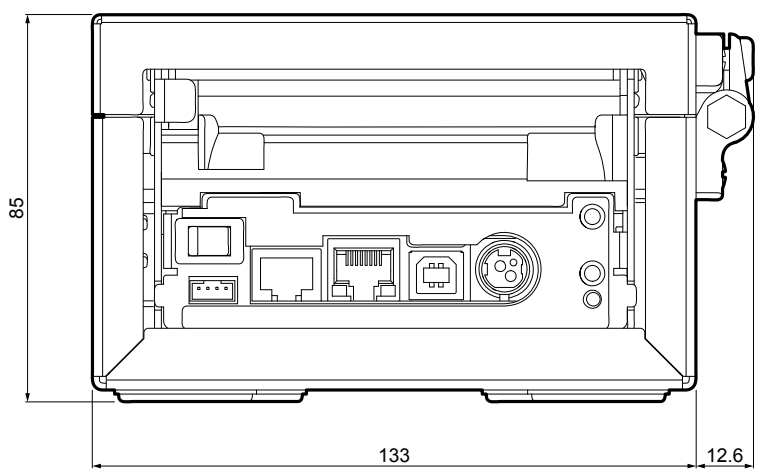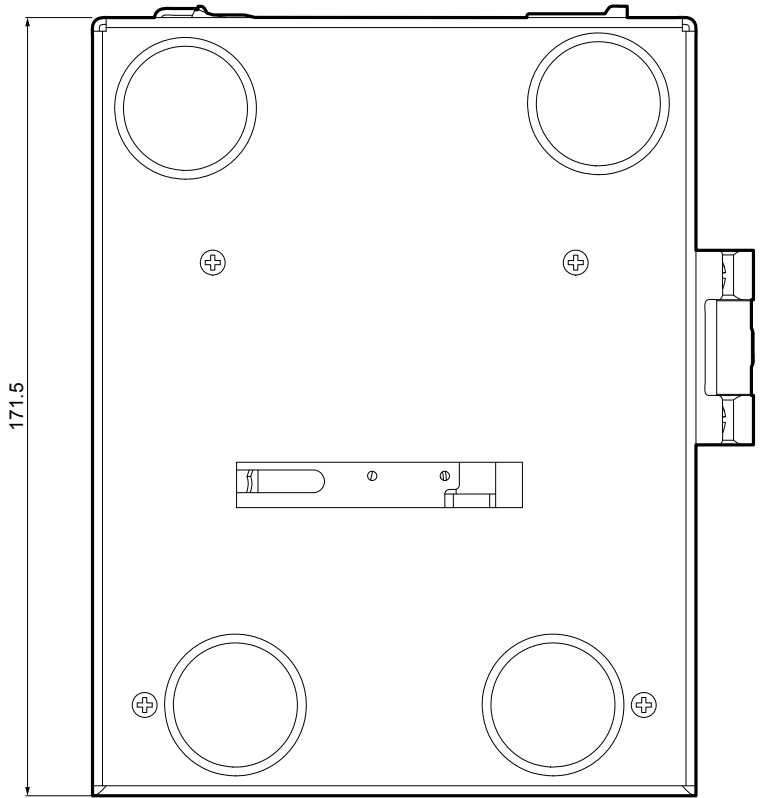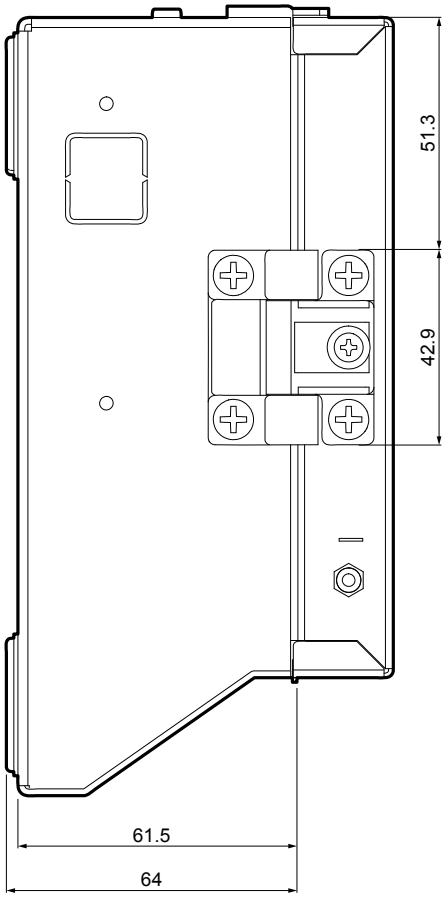



TK180 CUT 1 with optional RFID module, TK180 CUT 2, TK180 CUT 4


Length	251.7 mm
Height	85 mm
Width	145.6 mm
Weight	3280 g

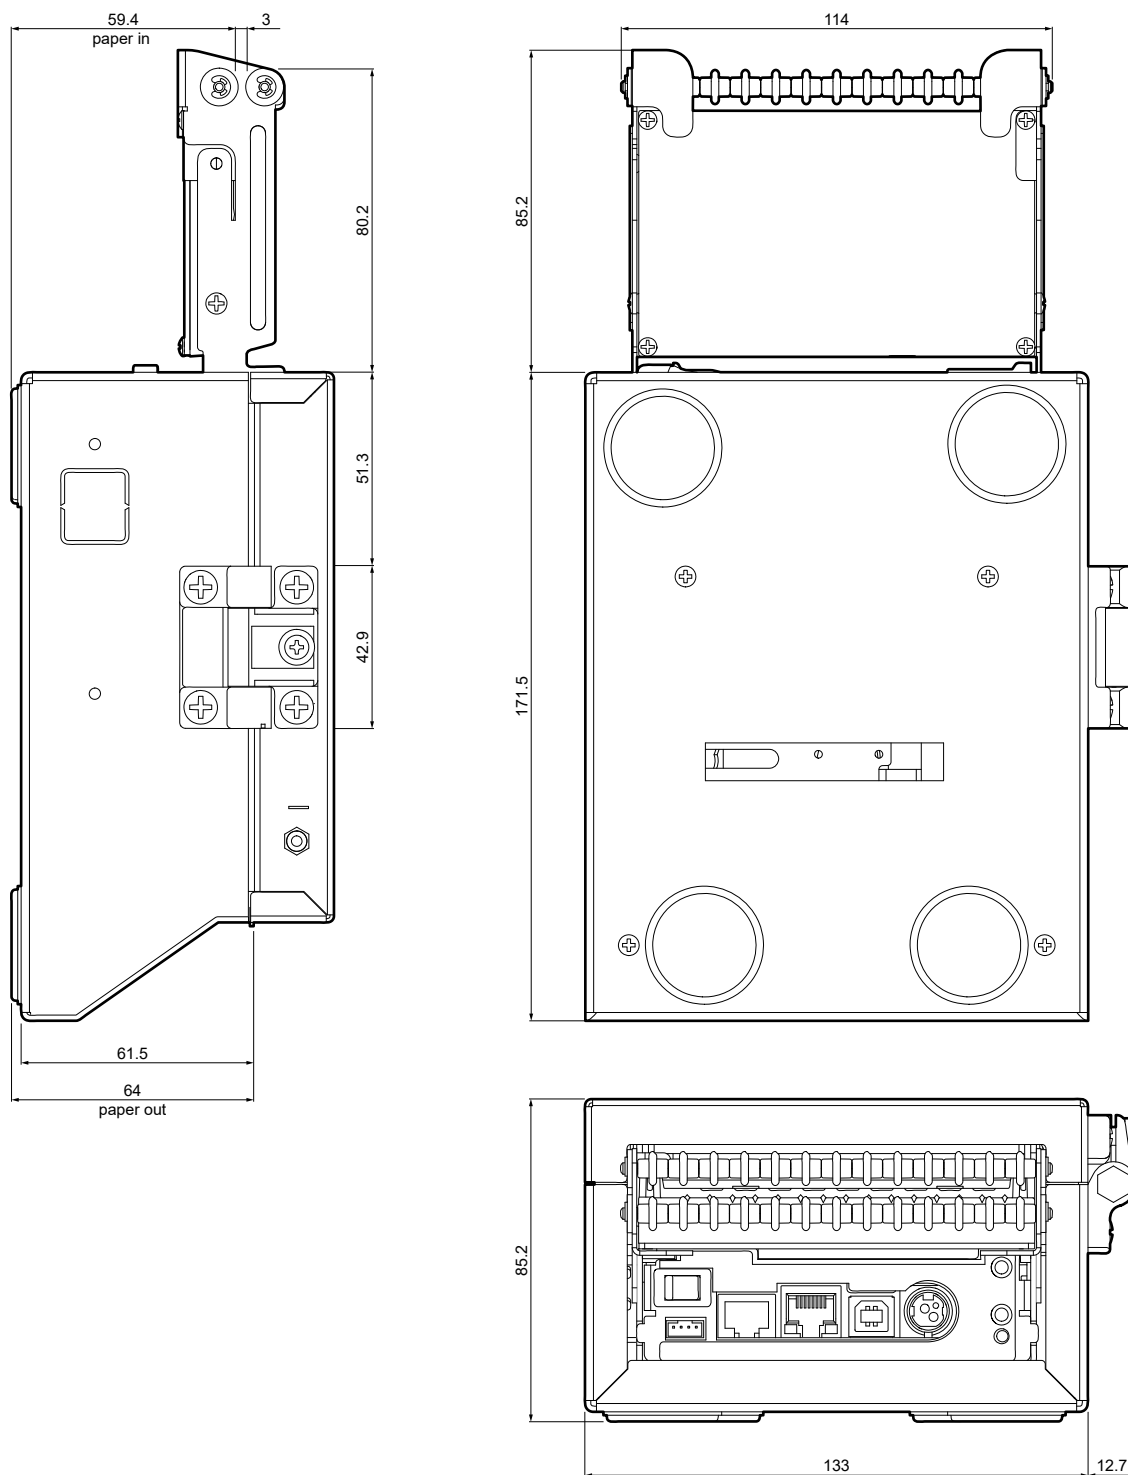



TK180 MET 1 with optional RFID module. TK180 MET 2




Length	199.45 mm
Height	85 mm
Width	145.6 mm
Weight	2520 g

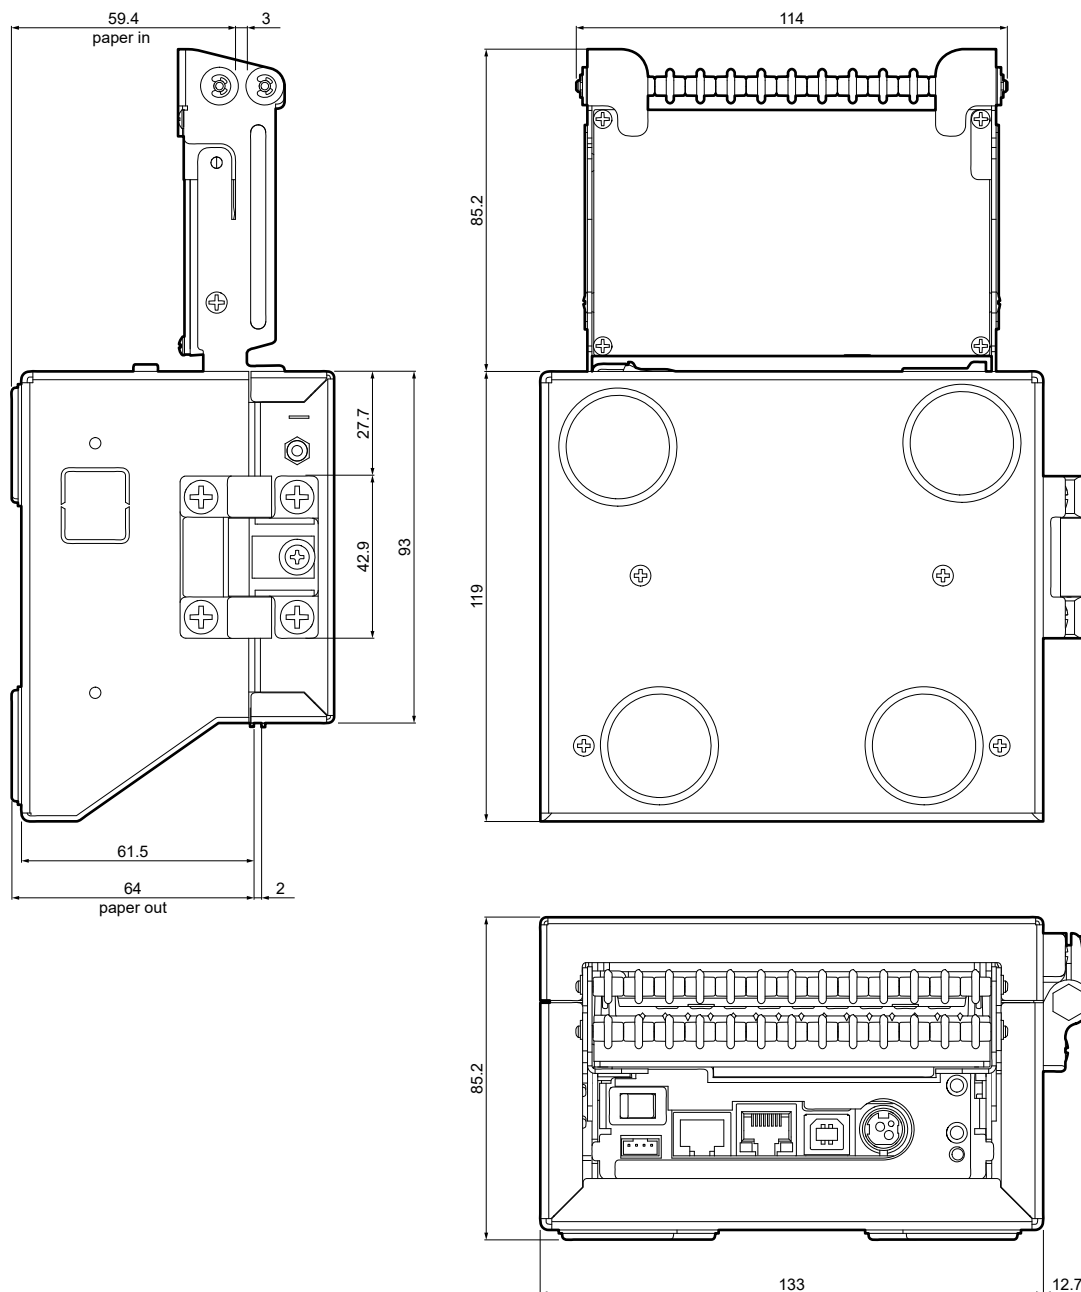



TK180 PLAS 1, TK180 PLAS 3


Length	185.9 mm
Height	118.9 mm
Width	130 mm
Weight	1940 g

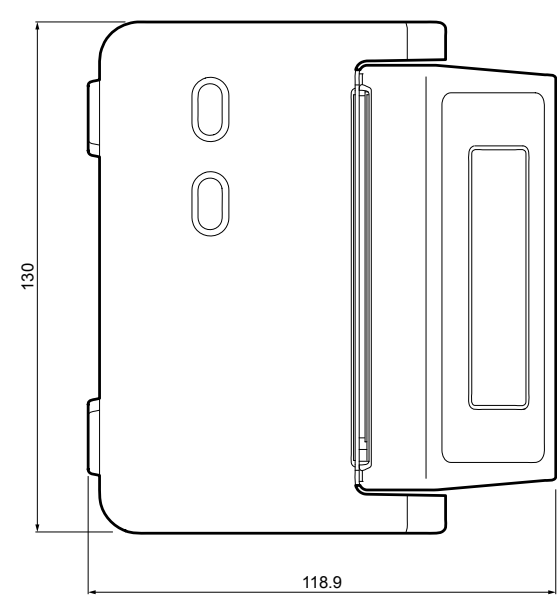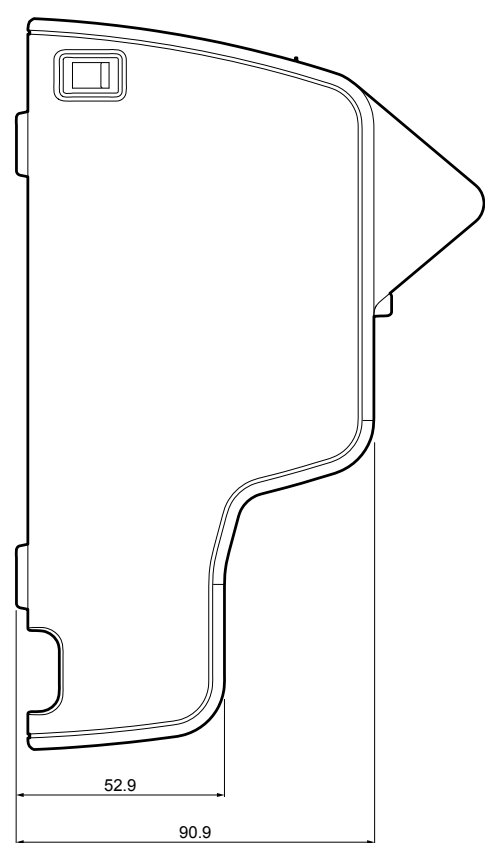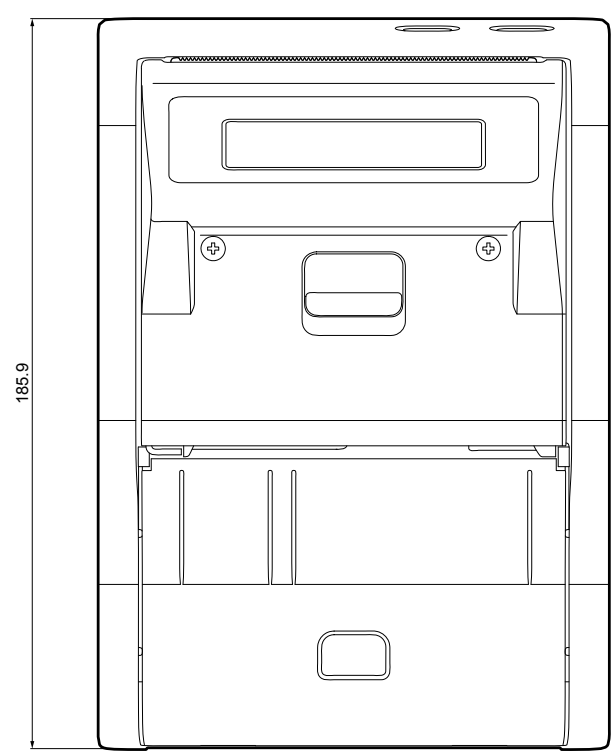



TK180 PLAS 1 with optional RFID module. TK180 PLAS 2

Length	194.1 mm
Height	118.9 mm
Width	130 mm
Weight	2220 g

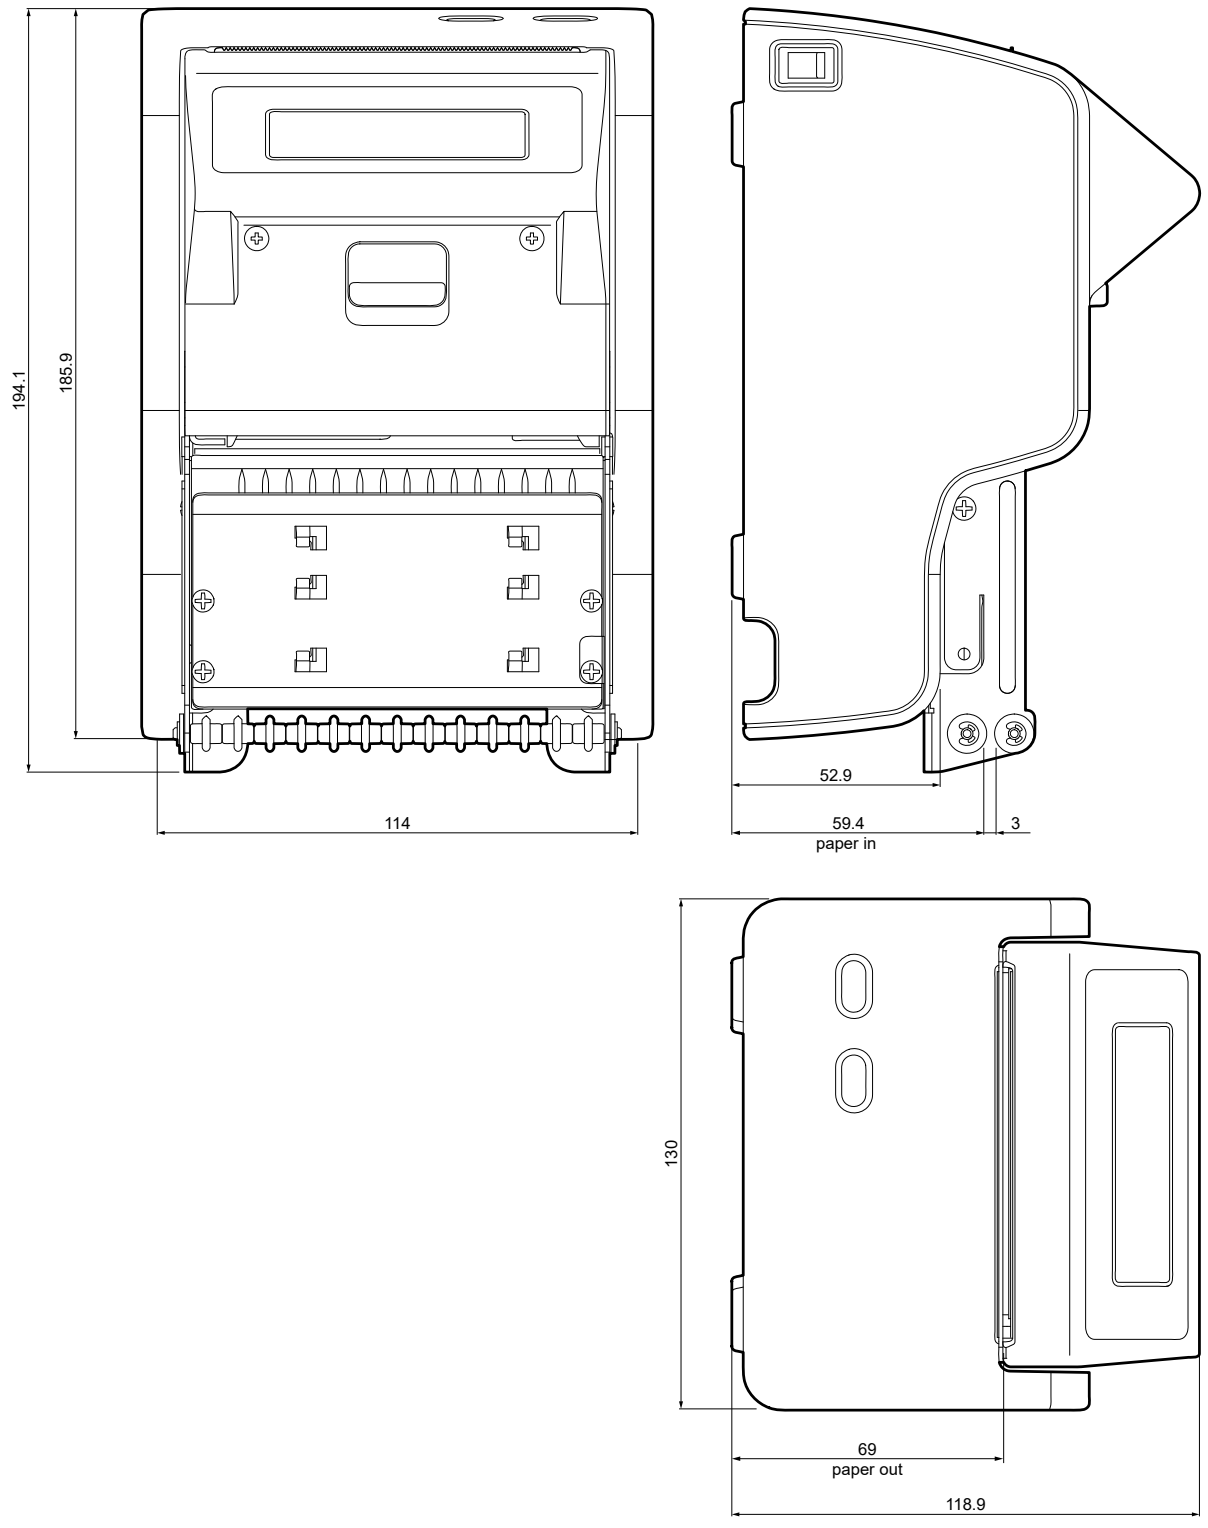





9.3 Device dimensions with pretensioner modules code 976AH030000001 (optional)

All the dimensions shown in following figures are in millimetres and referred to devices with closed covers.

KPM180H 1



Length	169.6 mm
Height	90 mm
Width	115 mm
Weight	1230 g

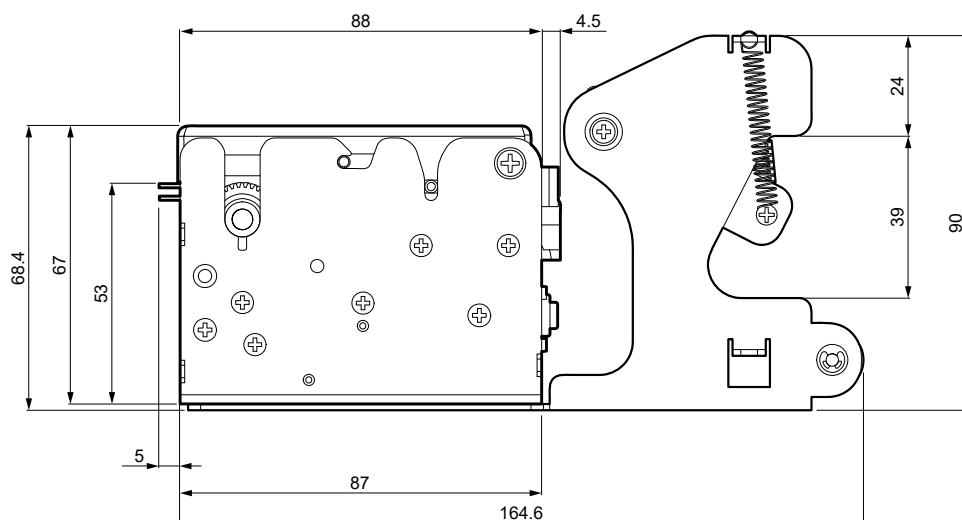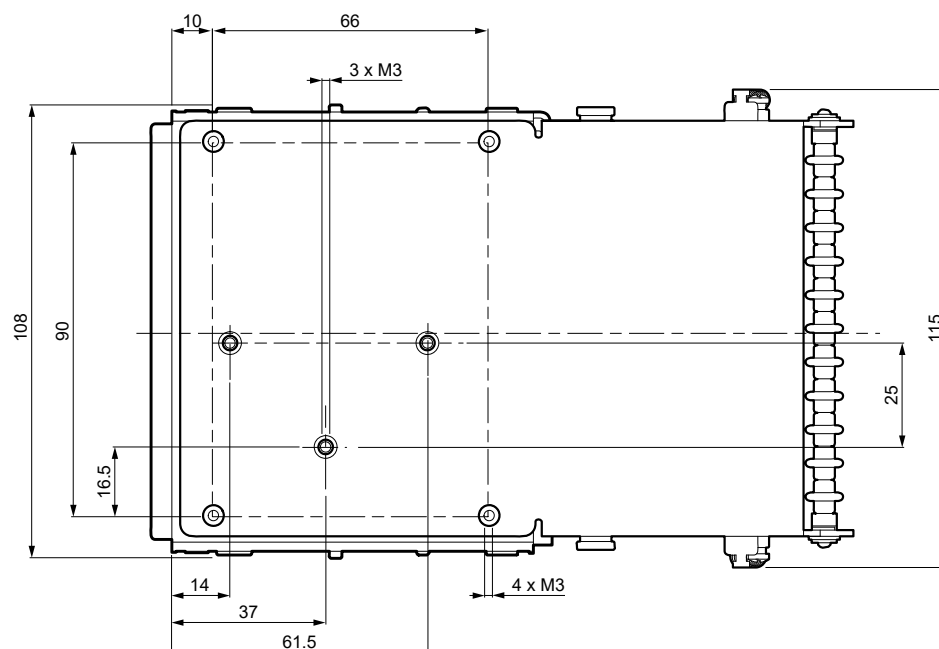



KPM180H 2

Length	222 mm
Height	90 mm
Width	115 mm
Weight	1930 g

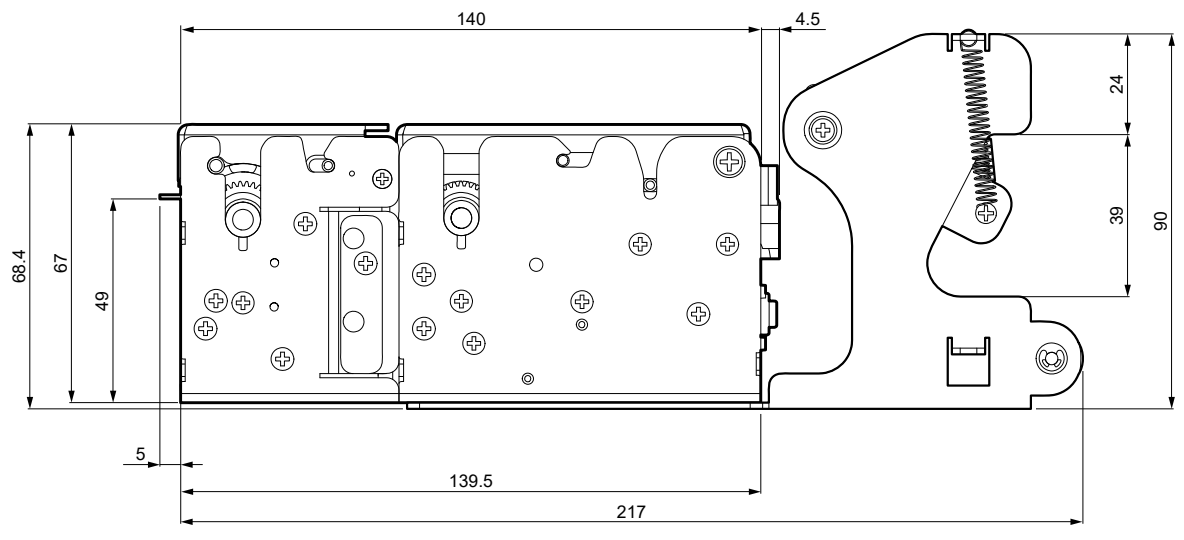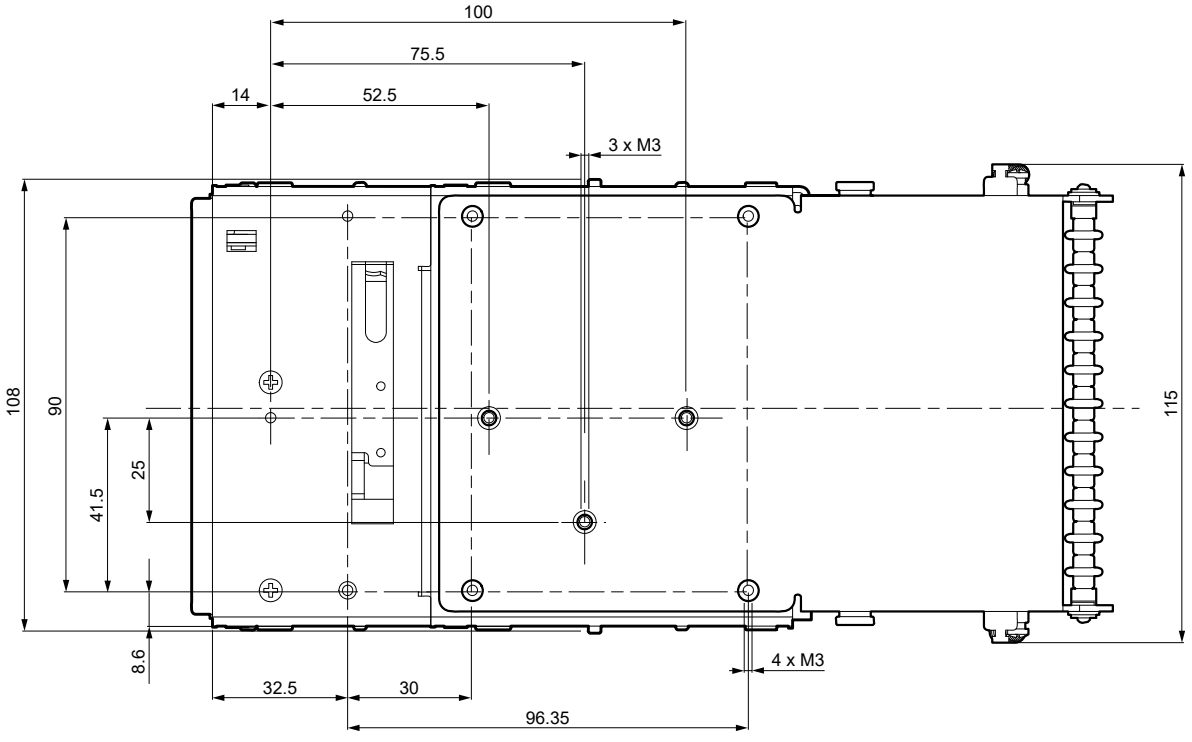





9.4 Device dimensions with paper roll holder code 974HL01000003, 974HL01000009 (optional)

All the dimensions shown in following figures are in millimetres and referred to devices with closed covers.

TK180 MET 1, TK180 MET 3

Length	339 mm
Height	160 mm
Width	145.6 mm

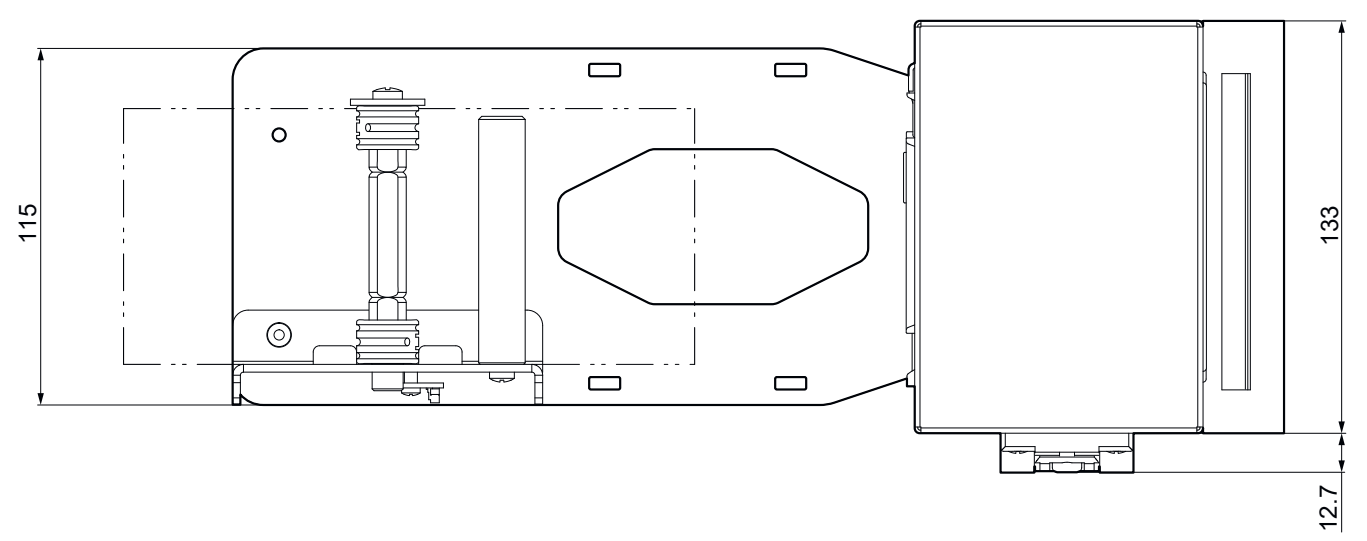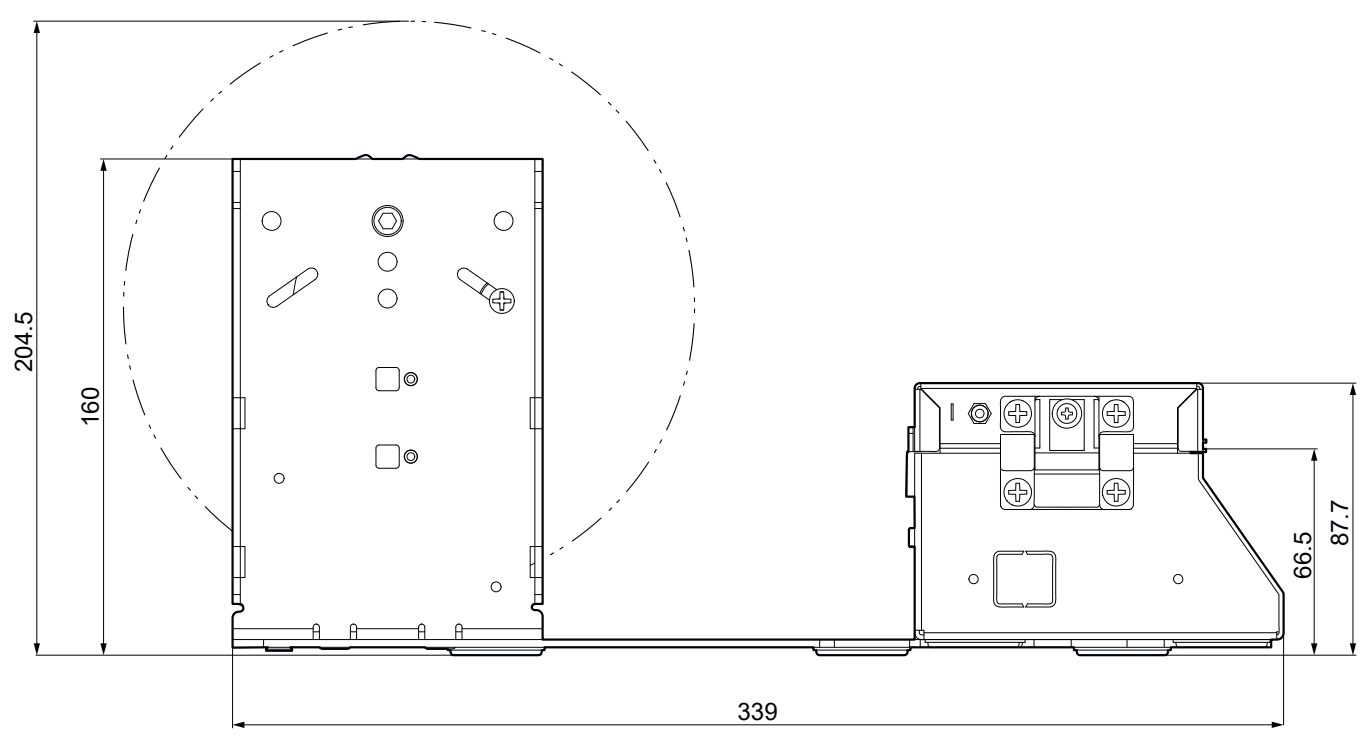




TK180 CUT 1, TK180 CUT 3

Length 391.5 mm

Height 160 mm



Width 145.6 mm

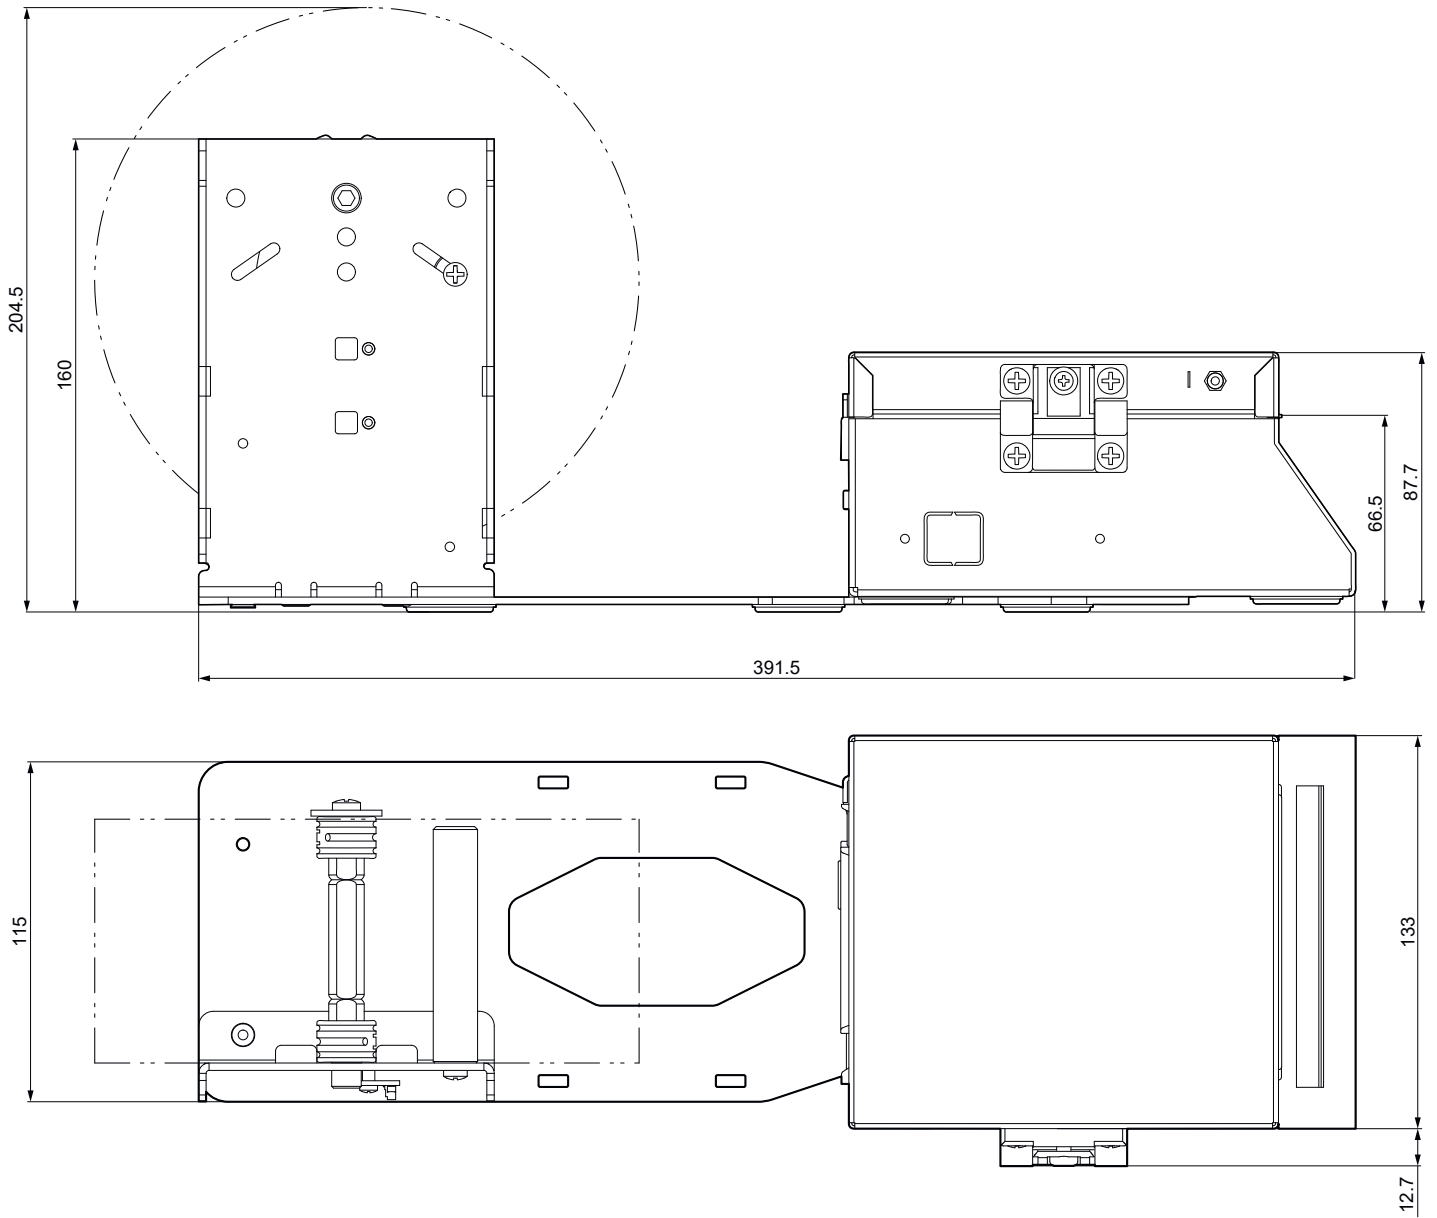



TK180 MET 2



Length	339 mm
Height	160 mm
Width	145.6 mm

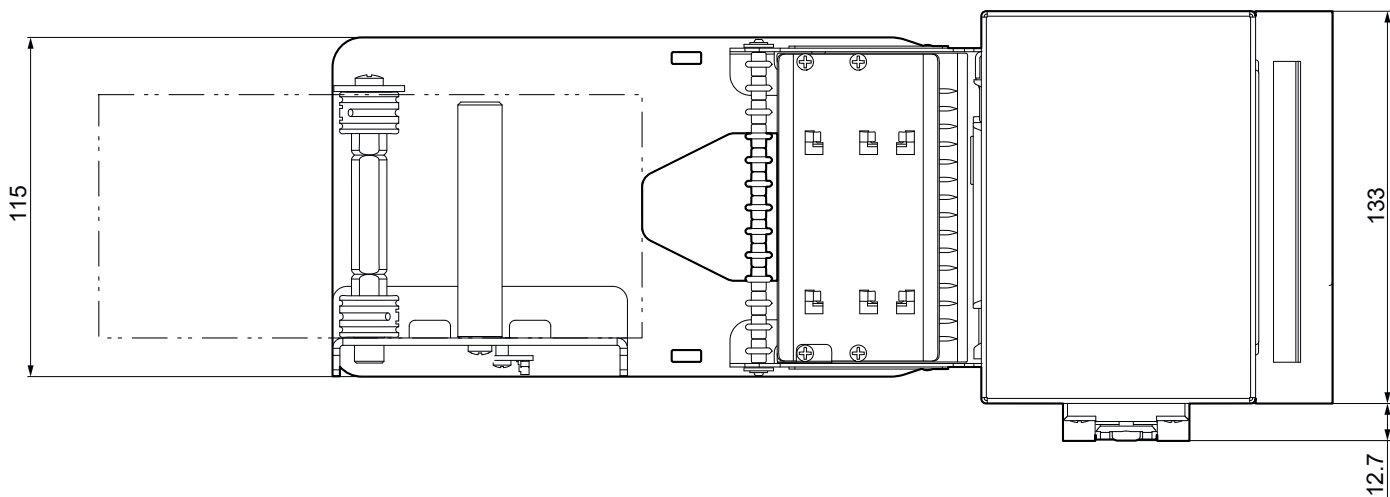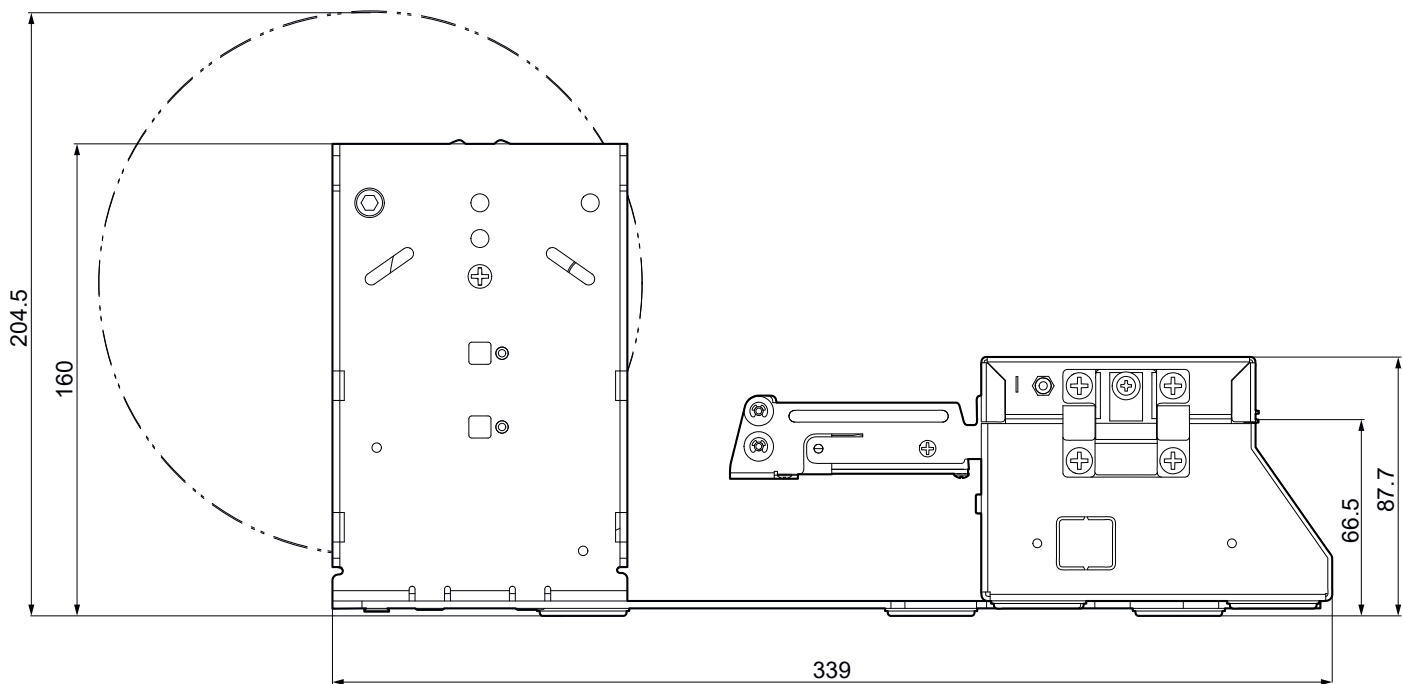



TK180 CUT 2, TK180 CUT 4

Length	391.5 mm
Height	160 mm
Width	145.6 mm

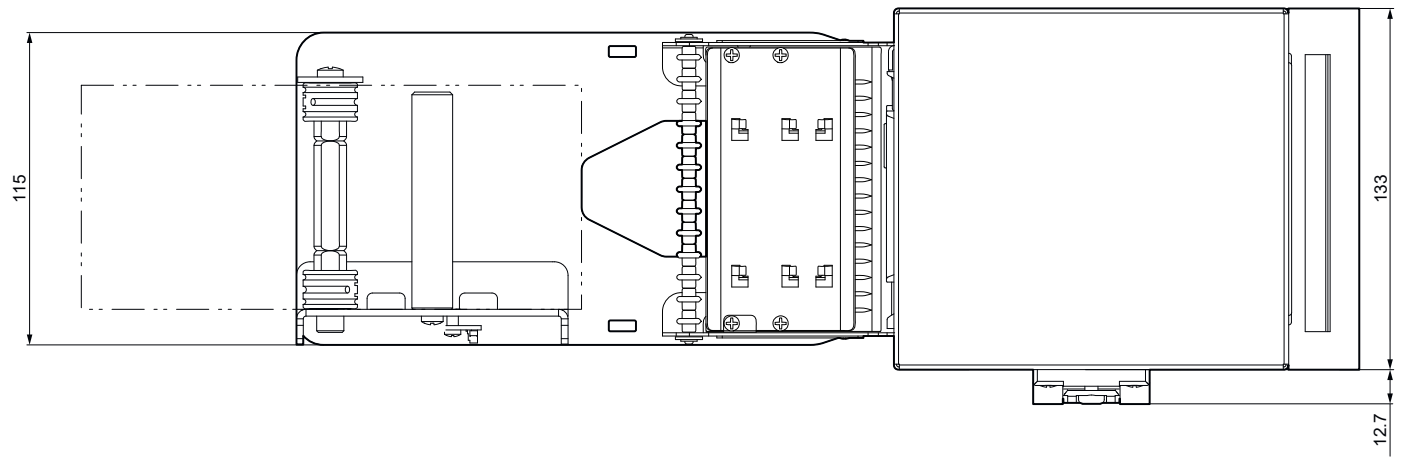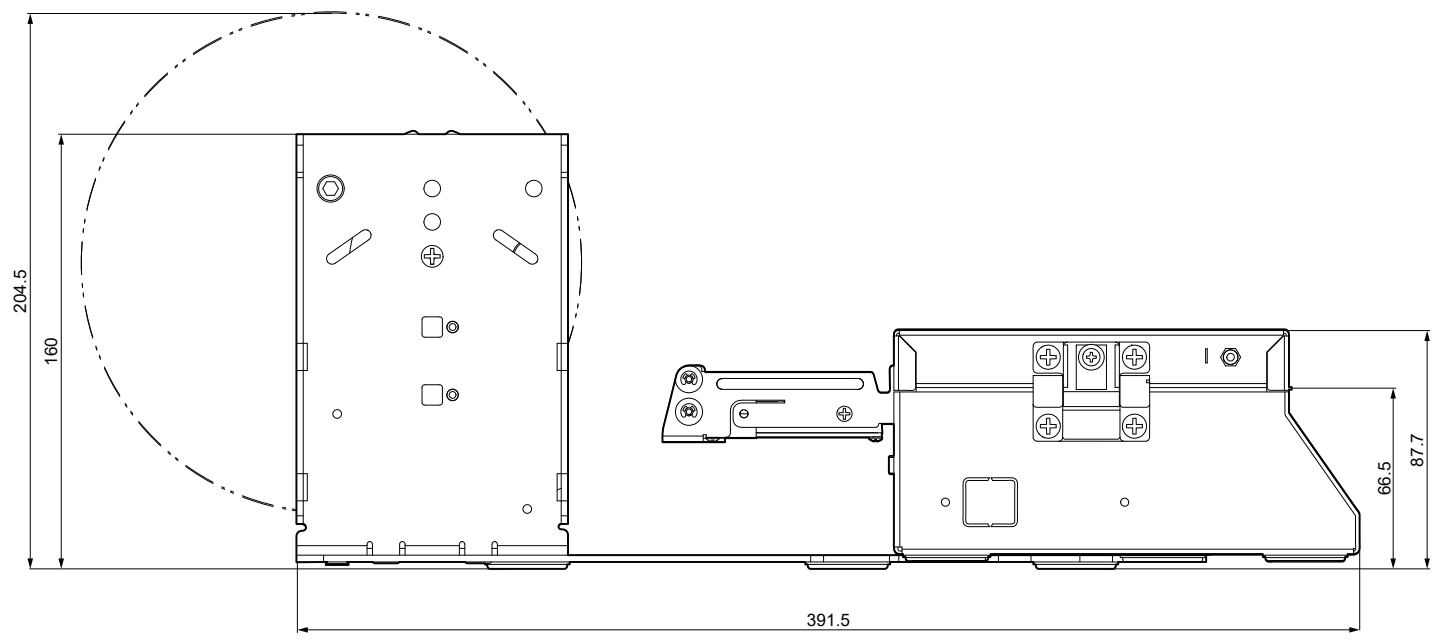





9.5 Device dimensions with paper roll holder code 974HL02000006 (optional)

All the dimensions shown in following figures are in millimetres and referred to devices with closed covers.

TK180 PLAS 1, TK180 PLAS 3

Length	341.5 mm
Height	161 mm
Width	130 mm

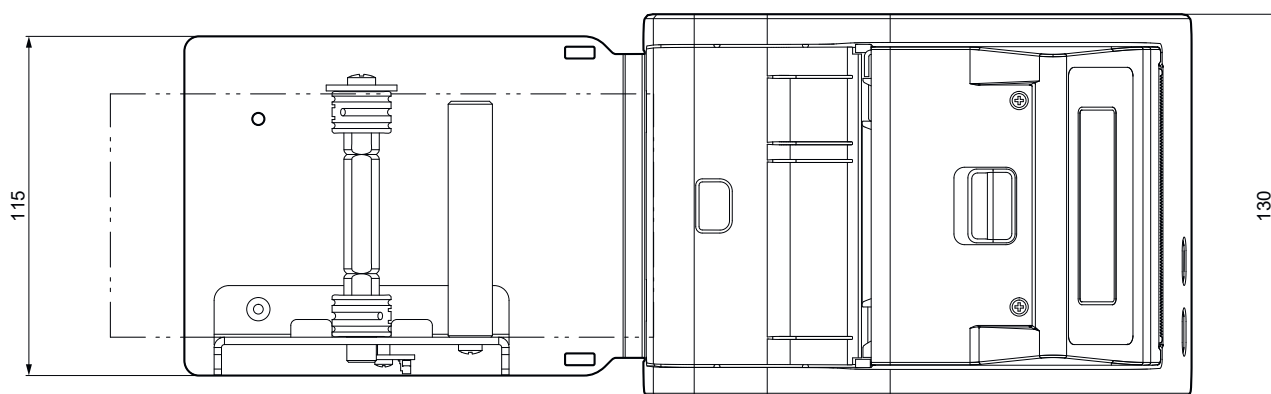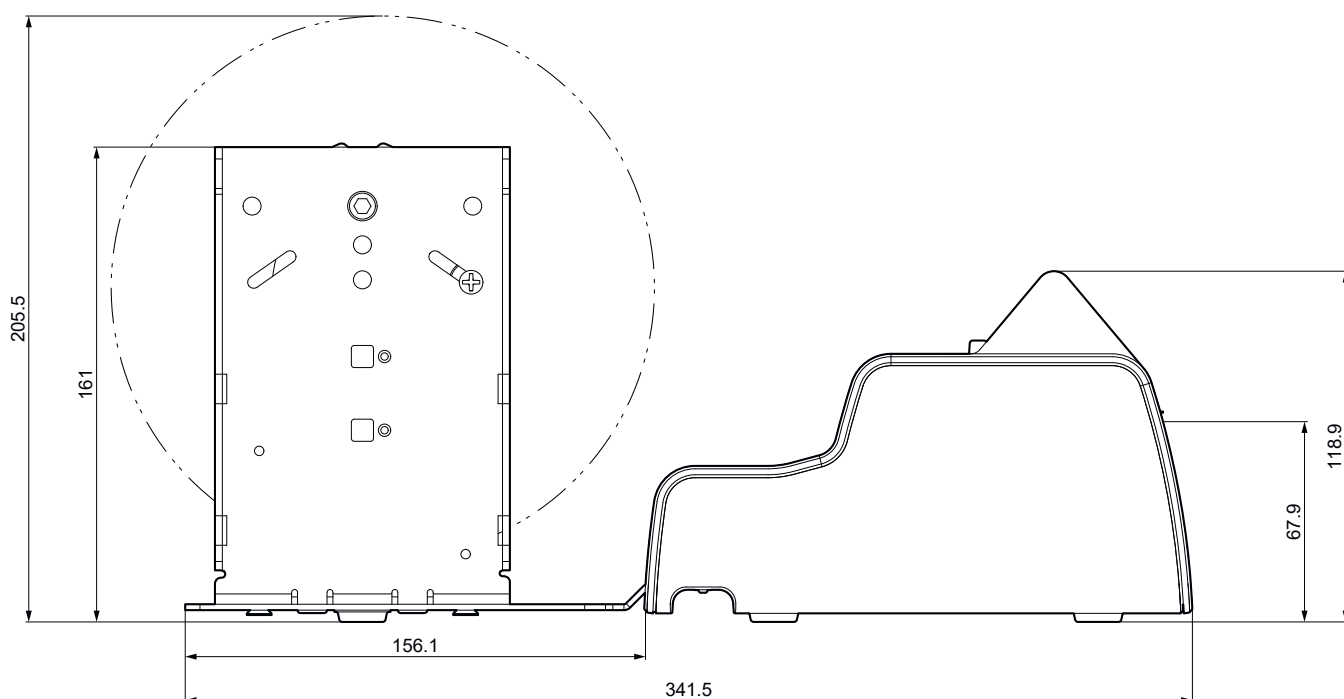





TK180 PLAS 2

Length 341.5 mm

Height 161 mm

Width 130 mm

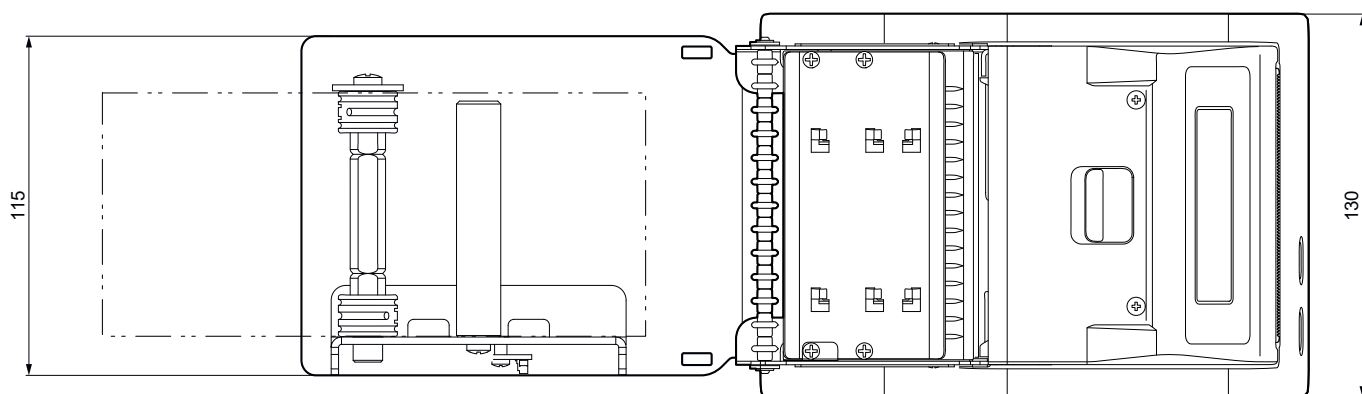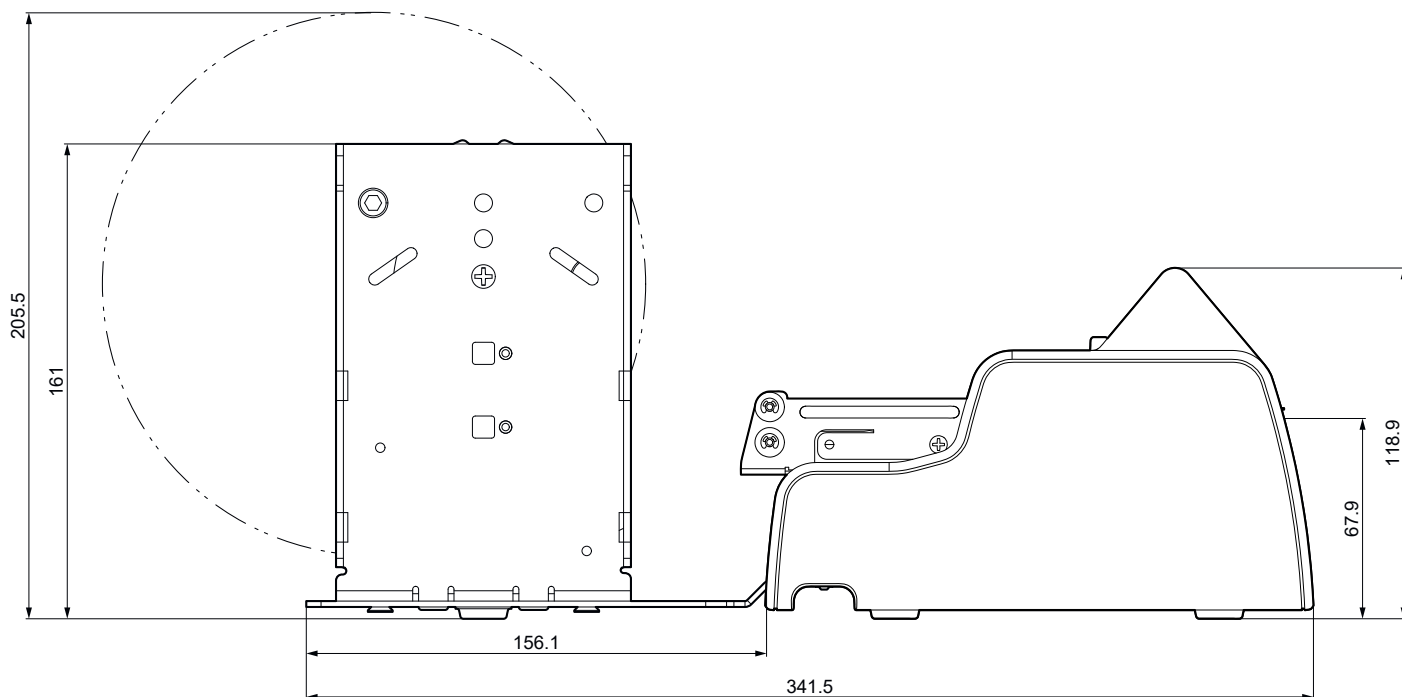




9.6 Device dimensions with ATB ticket tray code 974HL010000010 (optional)

All the dimensions shown in following figures are in millimetres and referred to devices with closed covers.

TK180 MET 1, TK180 MET 3


Length	419 mm
Height	115.8 mm
Width	145.6 mm

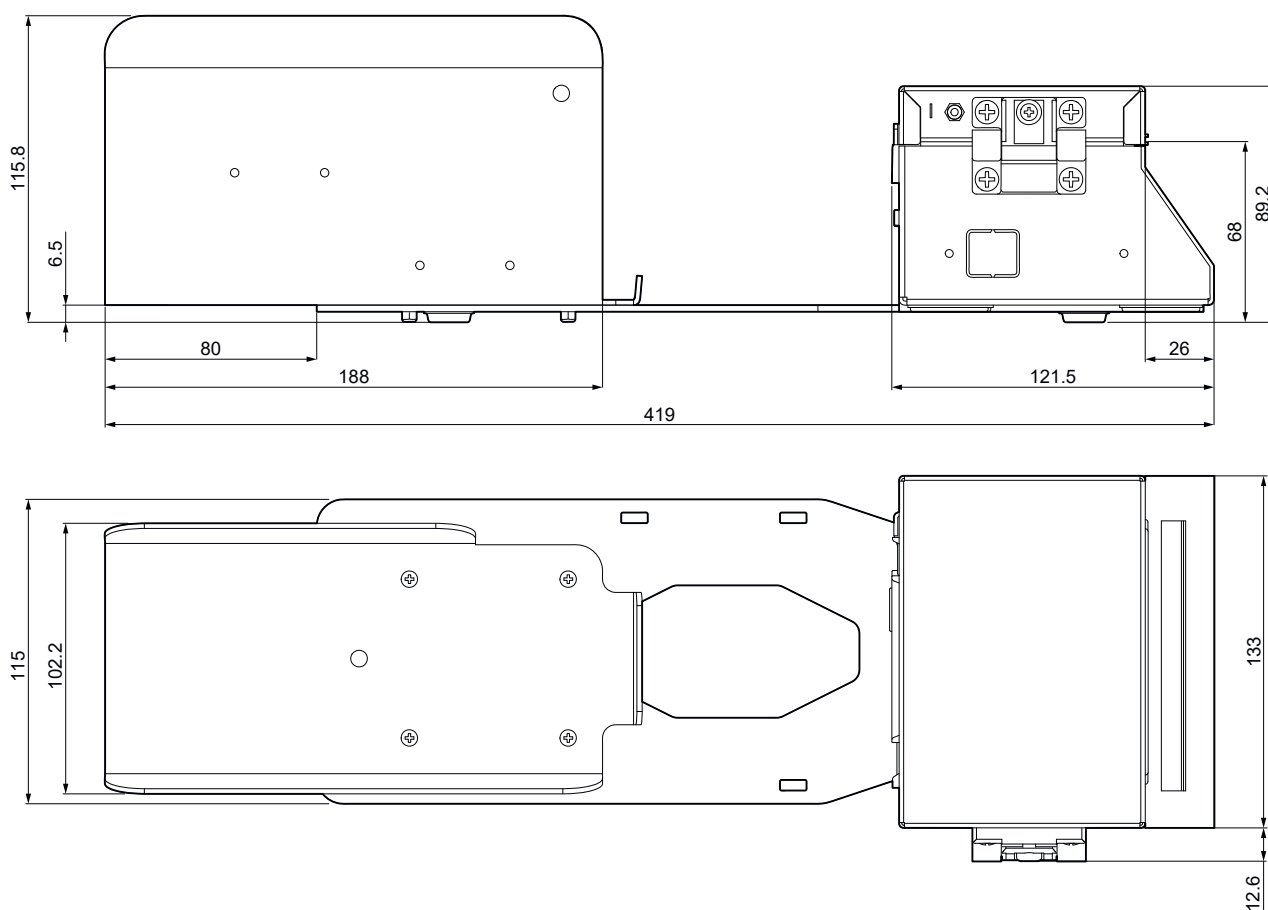



TK180 CUT 1, TK180 CUT 3

Length	471.5 mm
Height	115.8 mm
Width	145.6 mm

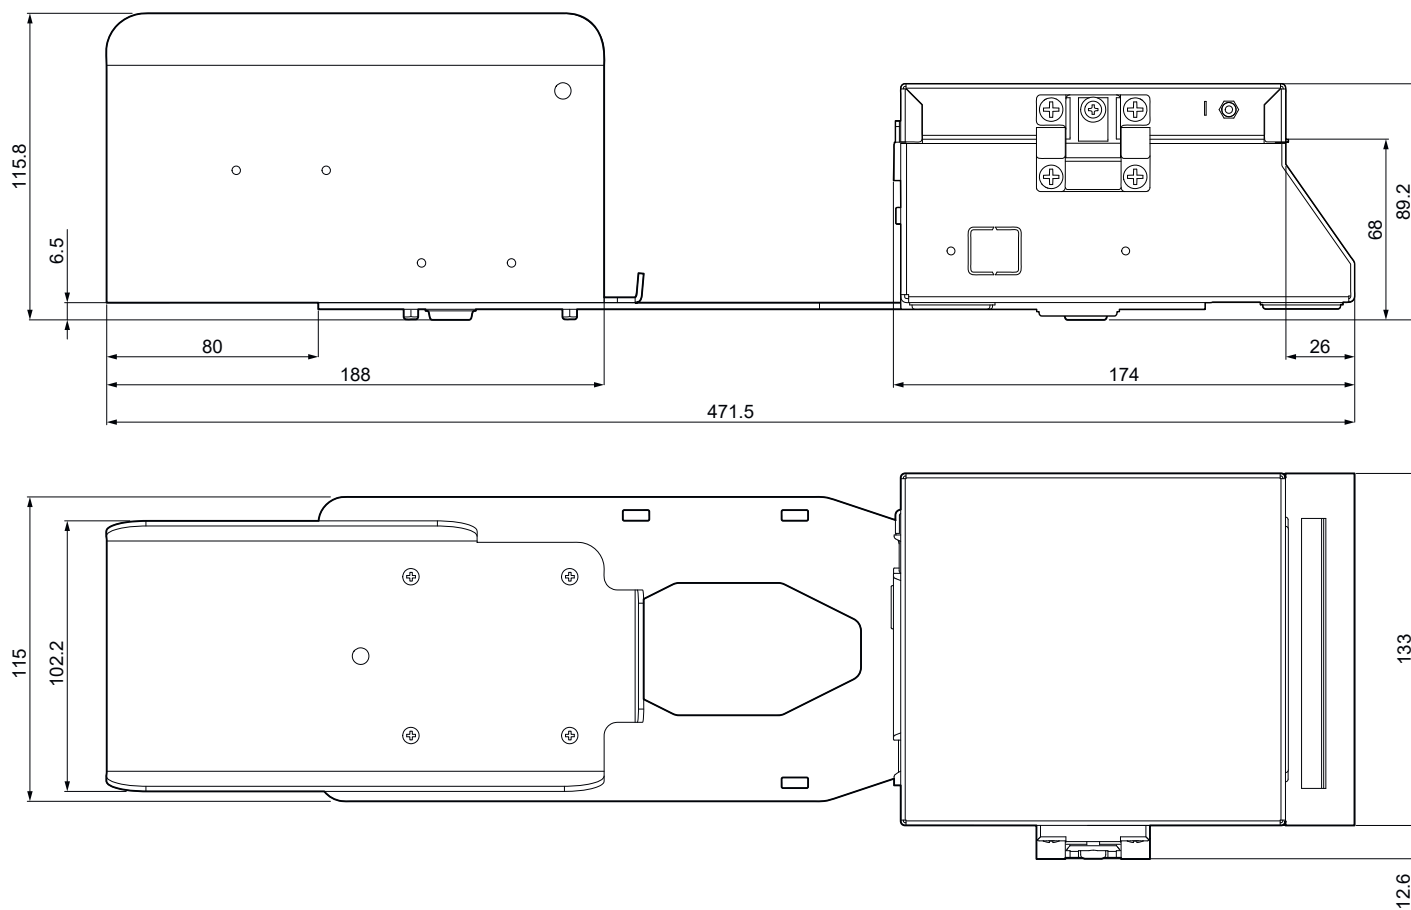




9.7 Device dimensions with ATB ticket tray code 976HL01000007 (optional)

All the dimensions shown in following figures are in millimetres and referred to devices with closed covers.

TK180 CUT 1, TK180 CUT 3

Length	377 mm
Height	197 mm
Width	148 mm

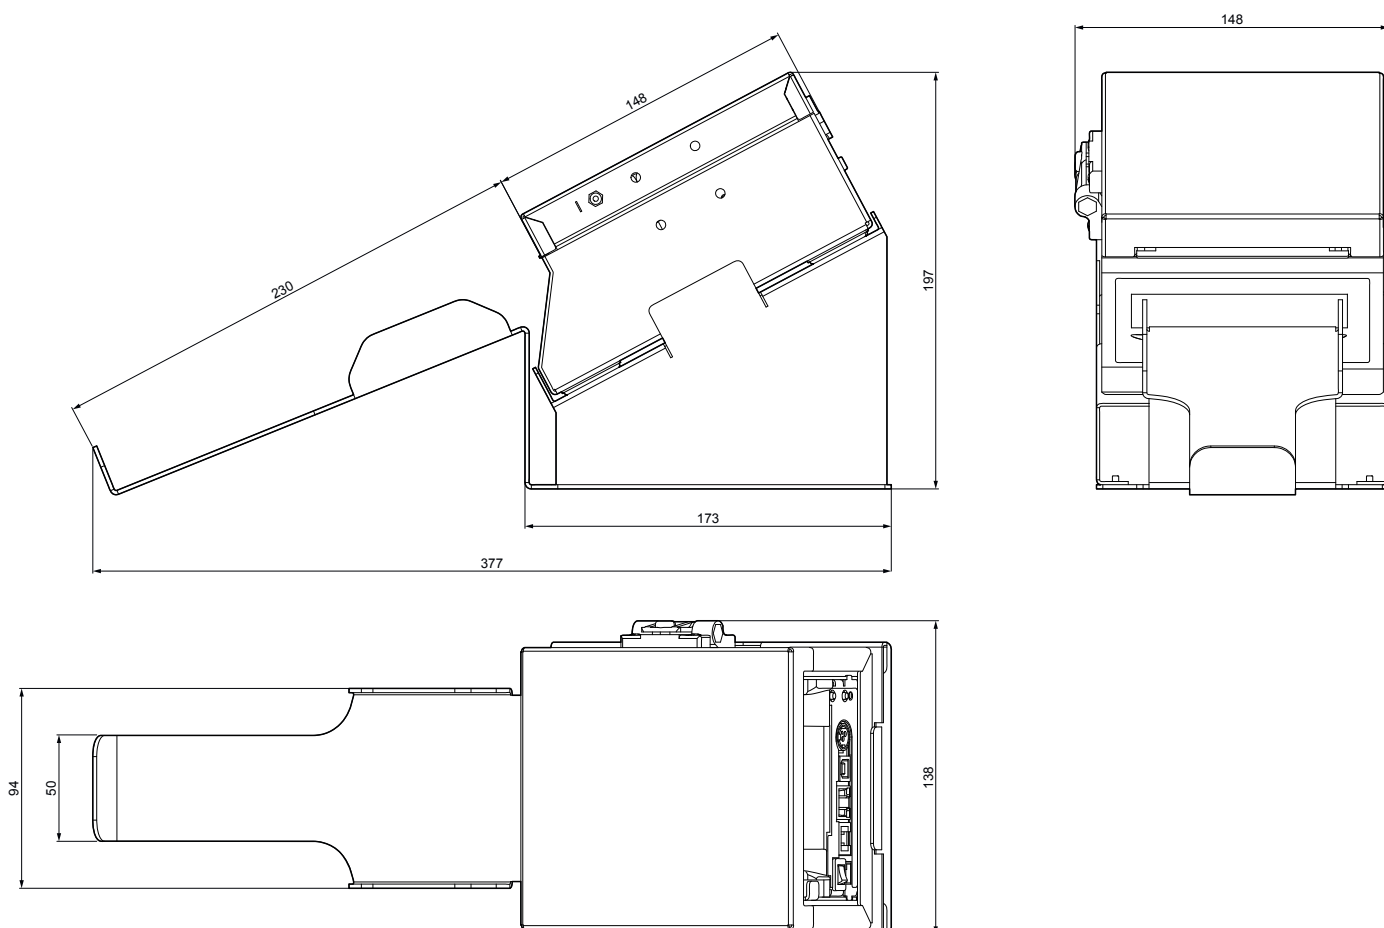



9.8 Device dimensions with paper roll holder code 974HL02000005 (optional)



All the dimensions shown in following figures are in millimetres and referred to devices with closed covers.

TK180 PLAS 1, TK180 PLAS 2, TK180 PLAS 3

Length	437.4 mm
--------	----------

Height	118.9 mm
--------	----------

Width	130 mm
-------	--------

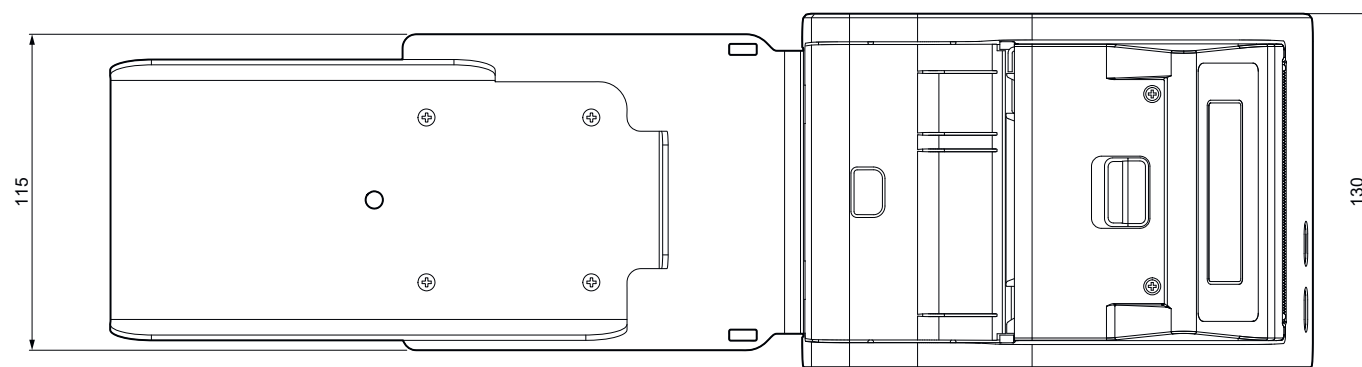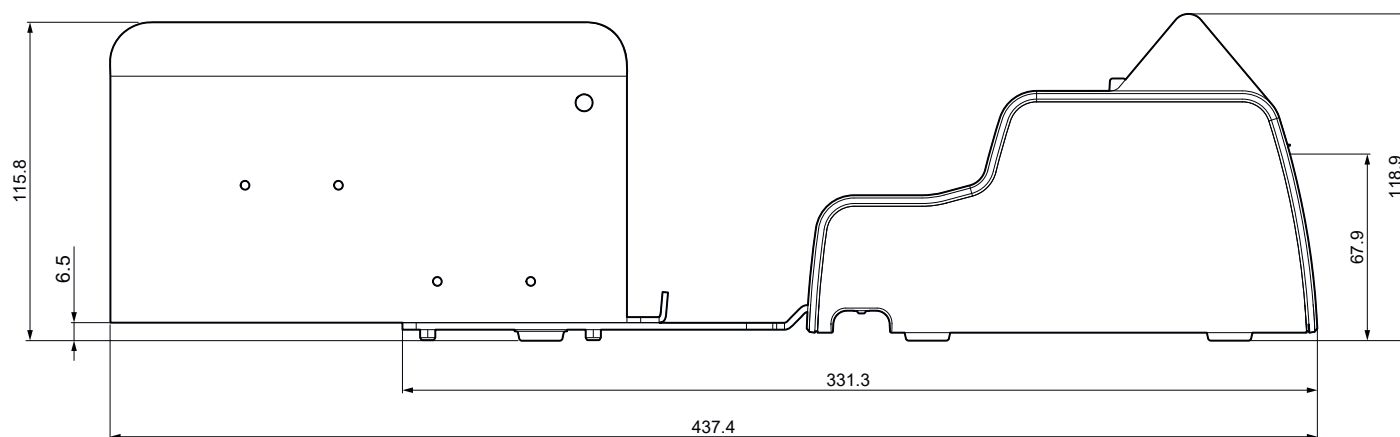




9.9 Device dimensions with rear connectors protection code 976HL010000008 (optional)

All the dimensions shown in following figures are in millimetres and referred to devices with closed covers.

TK180 MET 1, TK180 MET 3

Length	161 mm
Height	85 mm
Width	145.6 mm

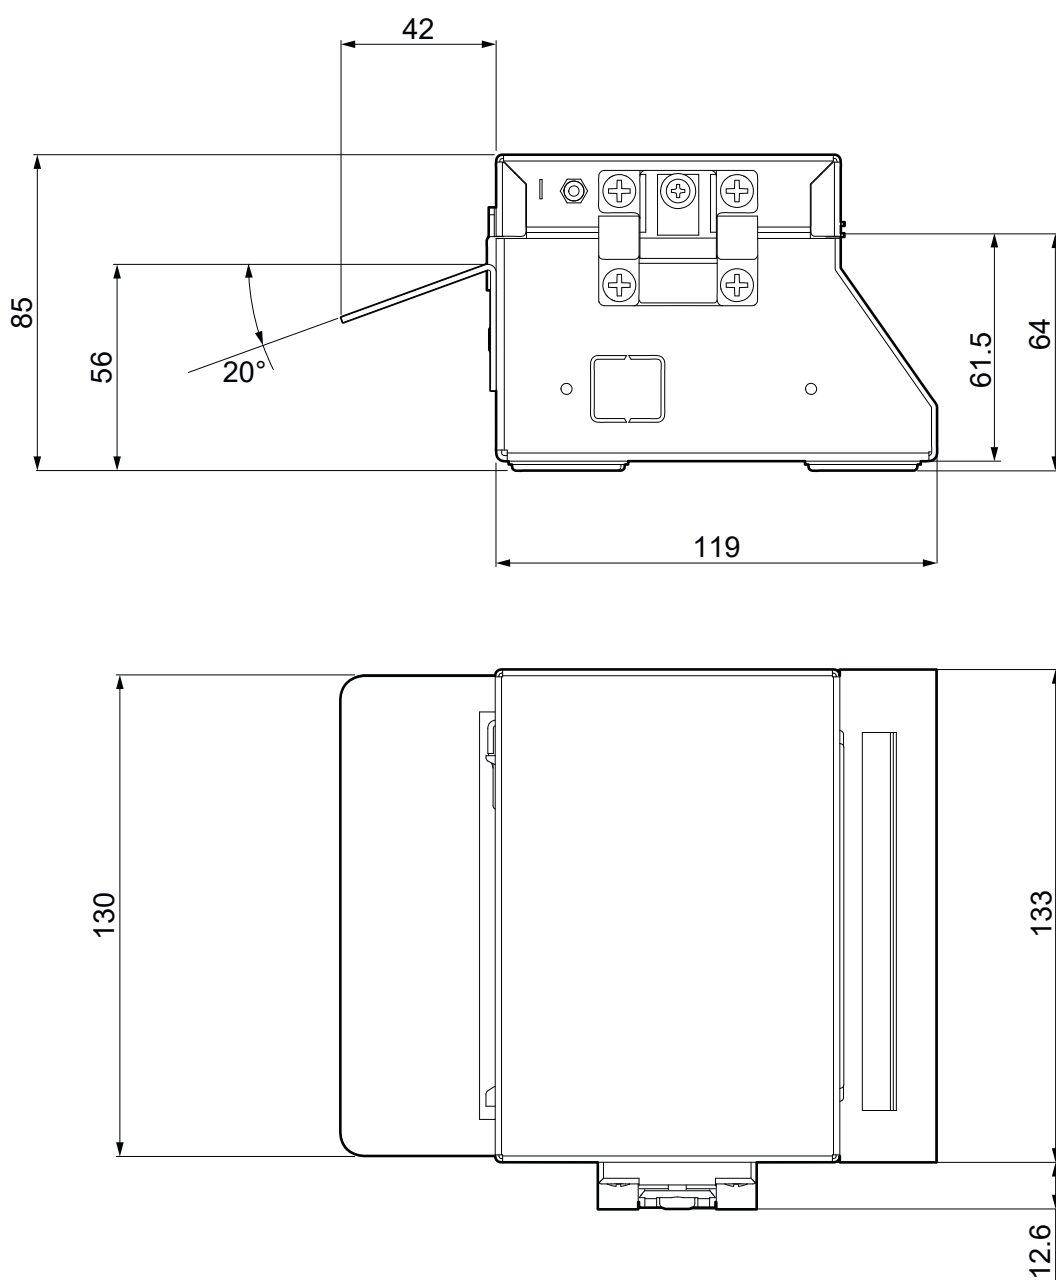





TK180 CUT 1, TK180 CUT 3

Length 213.5 mm

Height 85 mm

Width 145.6 mm

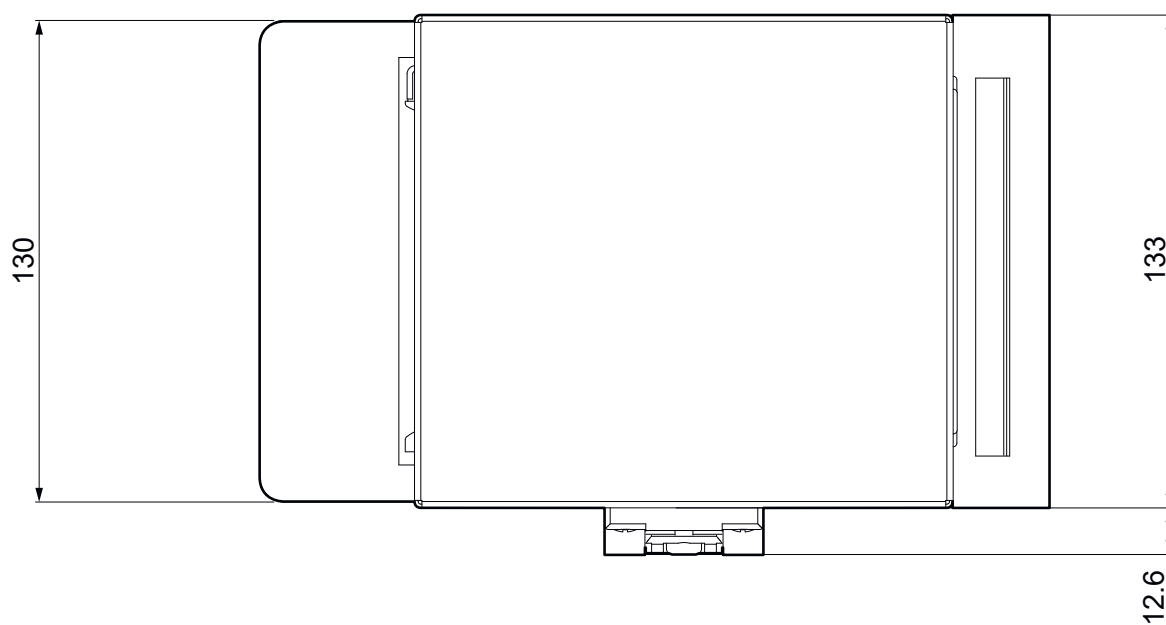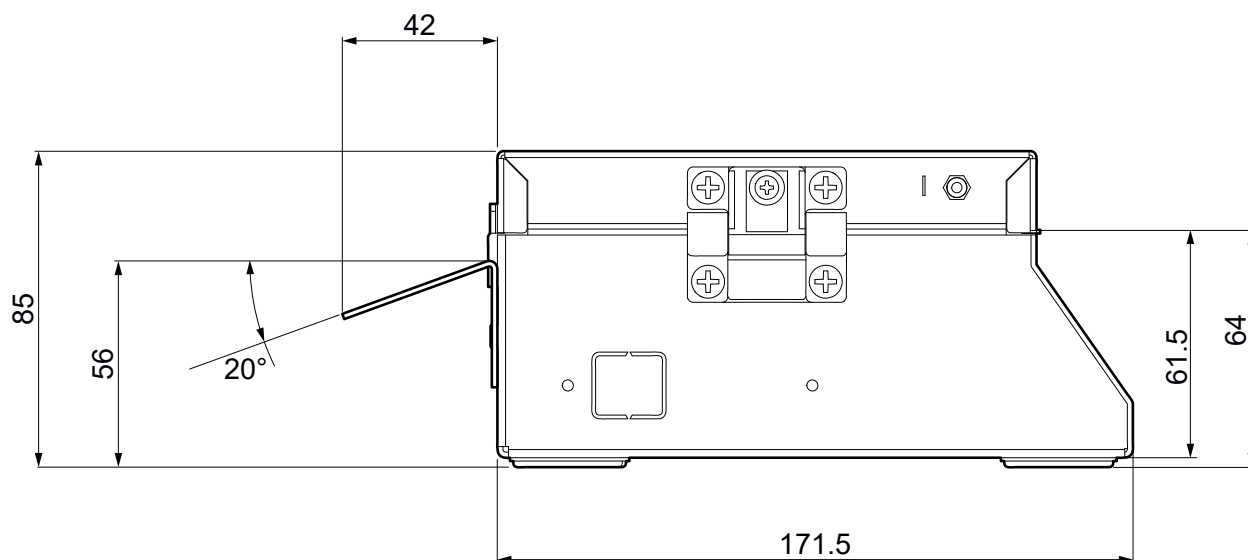




9.10 Paper roll holder dimensions with power supply container code 974HL01000006 (optional)

All the dimensions shown in following figures are in millimetres and referred to devices with closed covers.

Paper roll holder code 974HL01000009


Length	383 mm
Height	162 mm
Width	167 mm

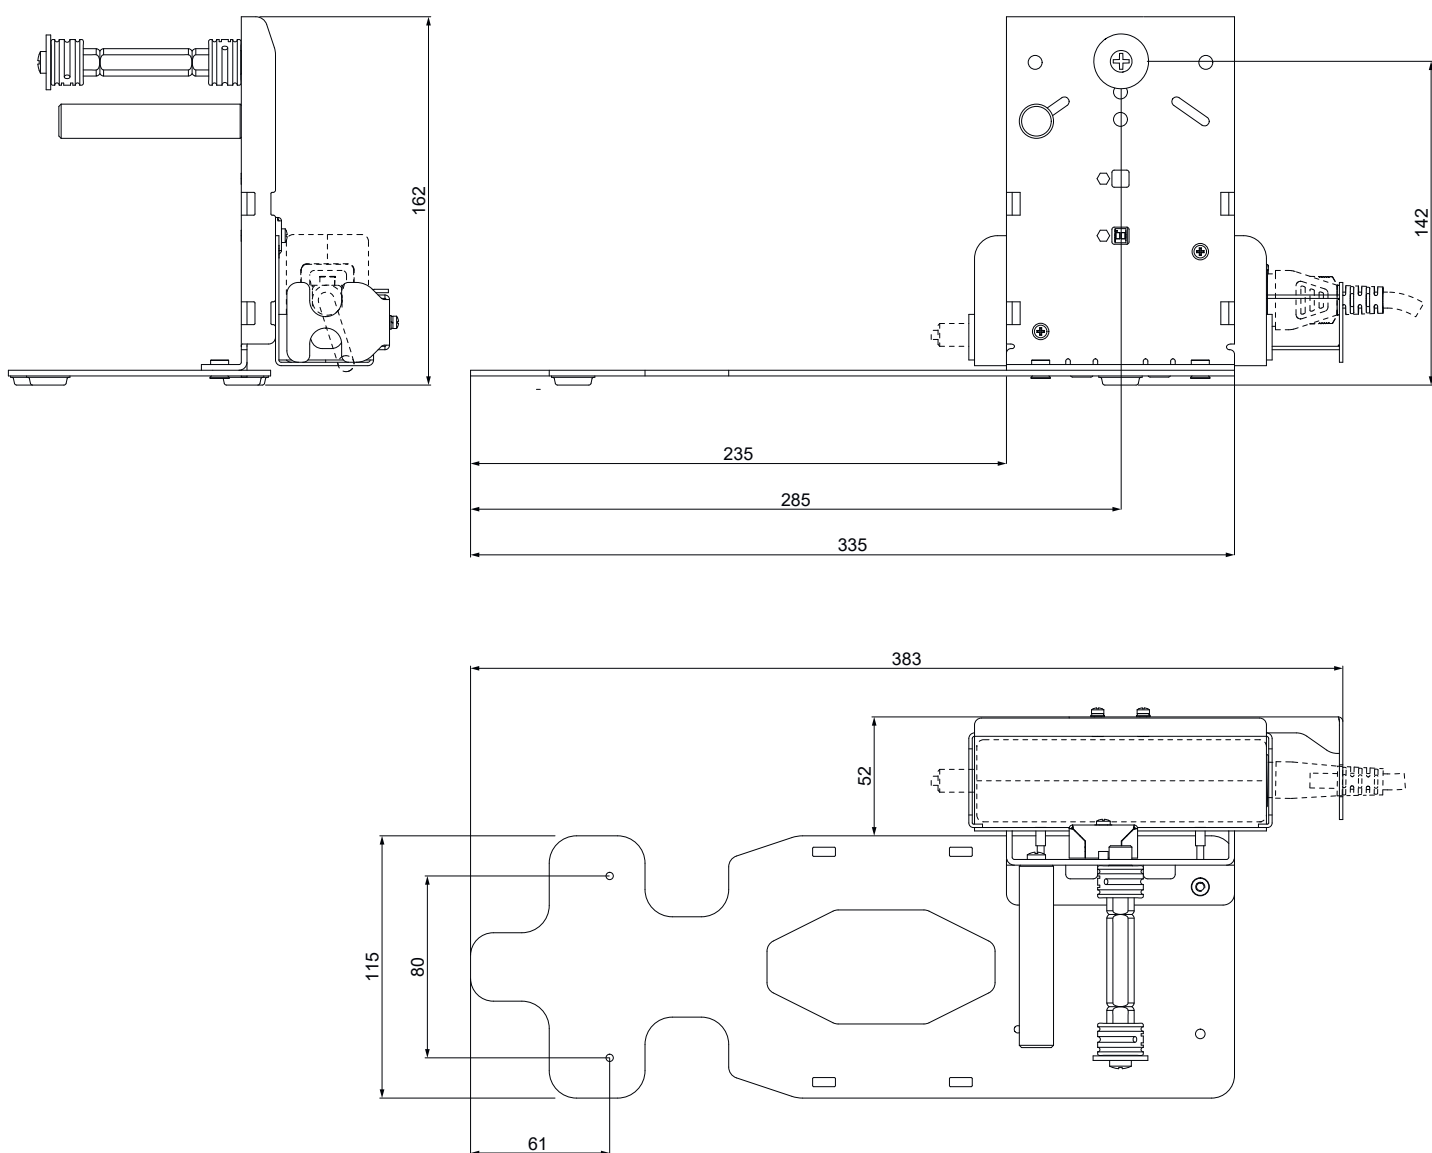



Paper roll holder code 974HL02000006

Length	268 mm
Height	162 mm
Width	167 mm

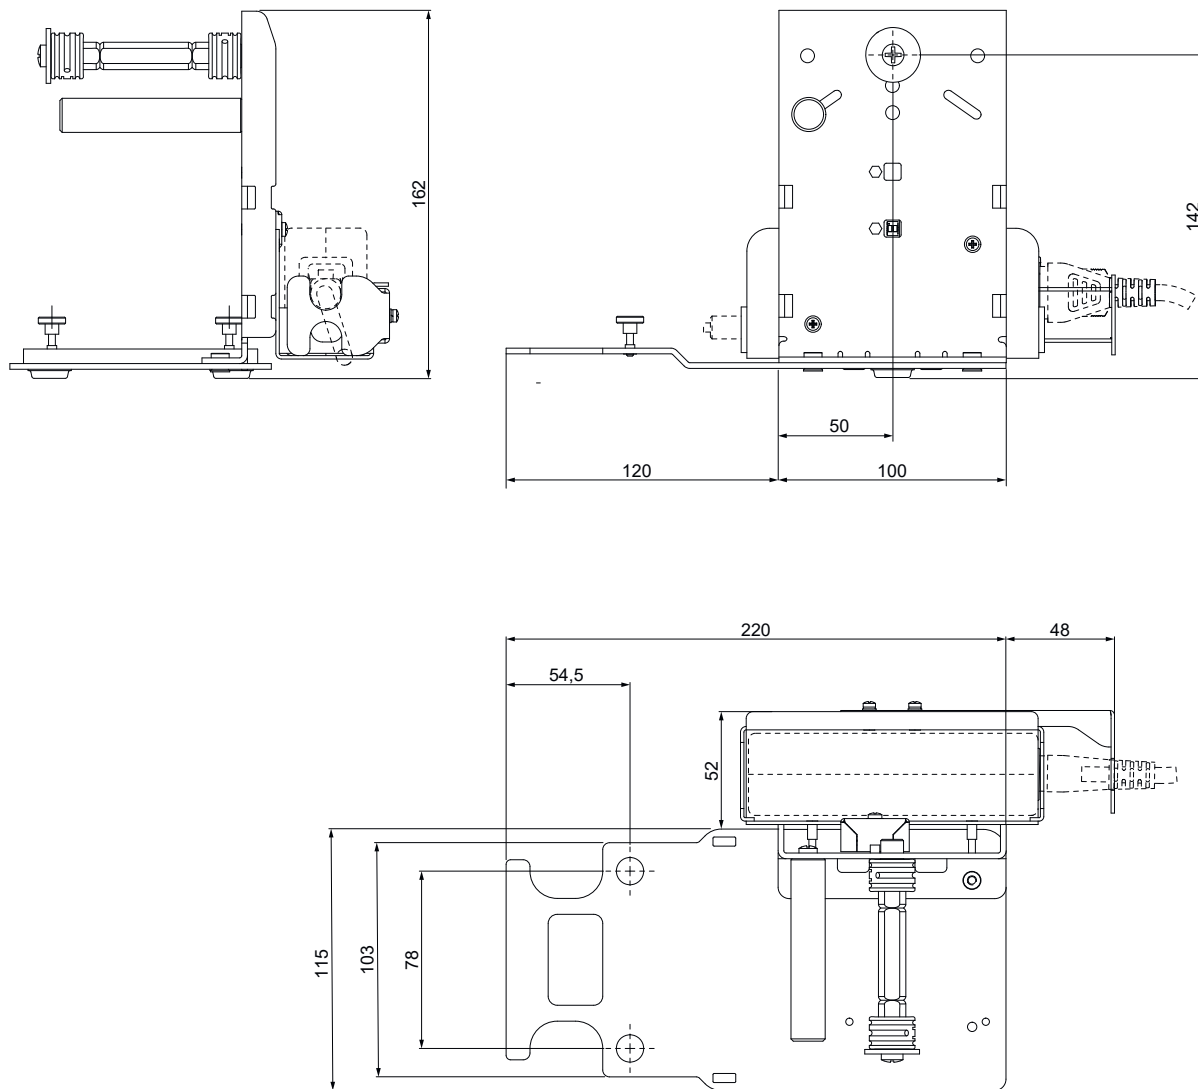




9.11 Dimensions of power supply and power cord

The following table shows the dimensions of power supply unit and power cords available for the device.


POWER SUPPLY code 963GE020000071 (optional for KPM180H 1, KPM180H 2, KPM180H 3, KPM180H 4, KPM180H 5, KPM180H 6)	
Length	130 mm
Height	36 mm
Width	57 mm
POWER CORD WITH SHUKO PLUG code 26100000000311 (optional for every model)	
Length	2000 mm
POWER CORD WITH UK PLUG code 26100000000313 (optional for every model)	
Length	2000 mm

All the dimensions shown in following figures are in millimetres.


POWER SUPPLY code 963GE020000071

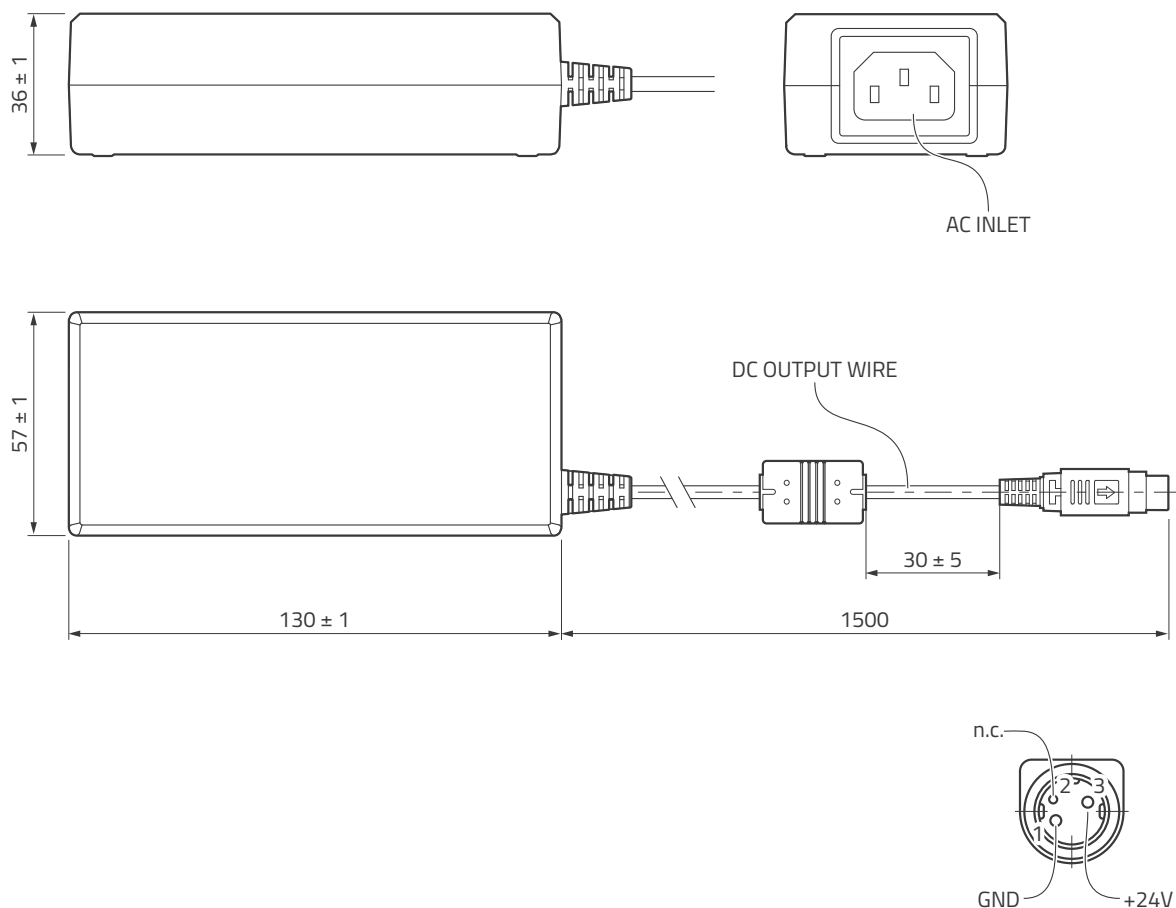

POWER CORD code 26100000000311

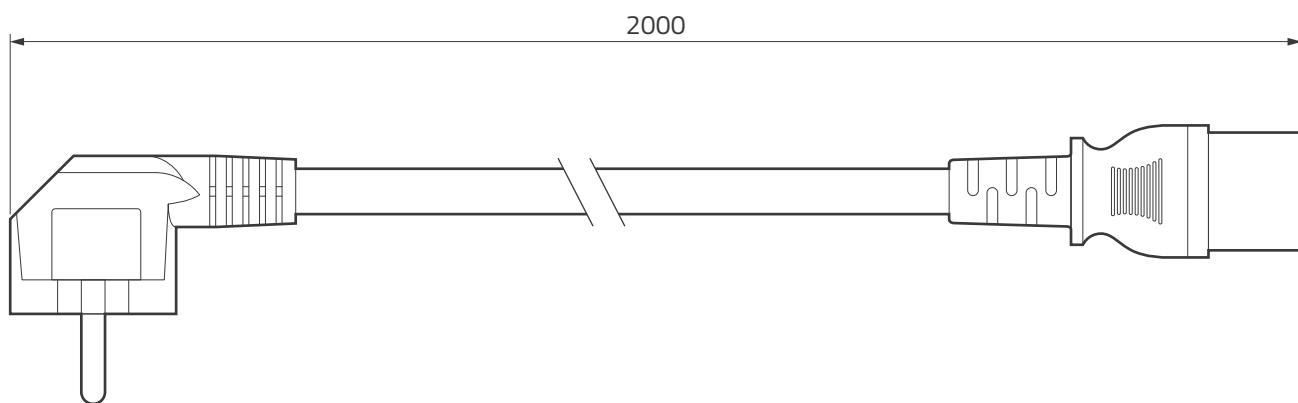

POWER CORD code 26100000000313

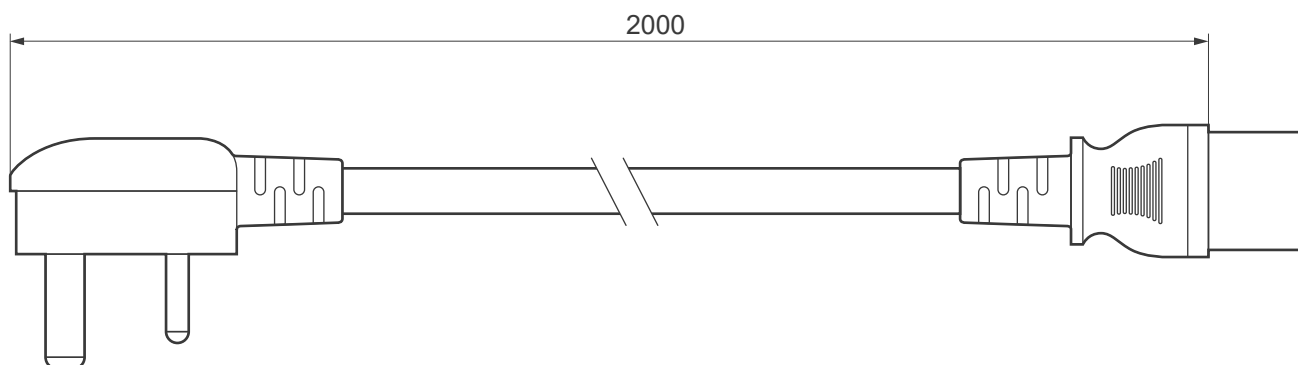

10 ACCESSORIES

The following table shows the list of the available accessories for the devices.


KPM180H 2, KPM180H 4

TK180 MET 1

TK180 PLAS 1

918HL020200000

RFID MODULE

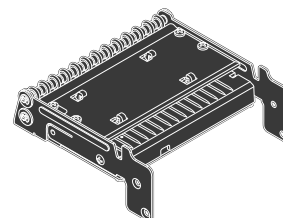


KPM180H 3, KPM180H 4, KPM180H 5, KPM180H 6

963GE020000071

POWER SUPPLY

(for technical specifications, see [paragraph 9.1](#))

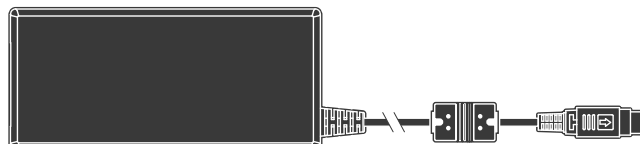

26100000000311

MAINS CABLE SHUKO PLUG

length = 2 m



26100000000313

MAINS CABLE UK PLUG

length = 2 m






KPM180H 1, KPM180H 2

963GE020000071

POWER SUPPLY
(for technical specifications, see [paragraph 9.1](#))

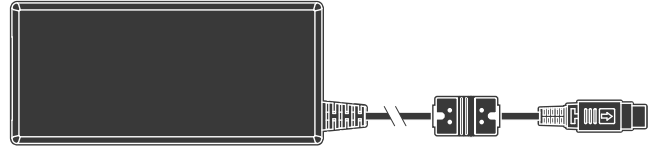

26100000000311

MAINS CABLE SHUKO PLUG
length = 2 m




26100000000313

MAINS CABLE UK PLUG
length = 2 m



976AH030000001

PRETENSIONER MODULE LINERLESS

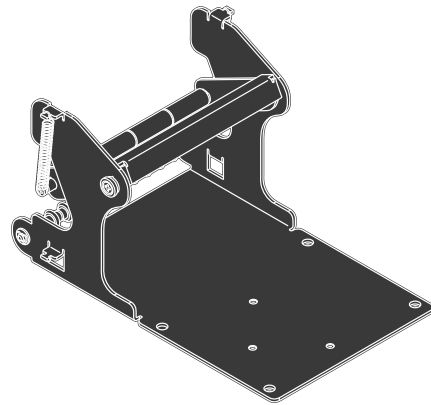




TK180 MET 1, TK180 MET 3

963GE020000071

POWER SUPPLY
(for technical specifications, see [paragraph 9.1](#))

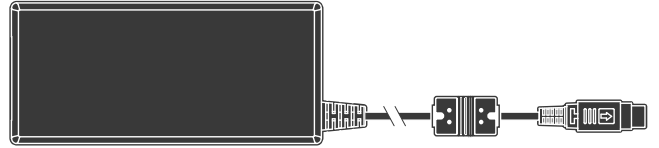

26900000000026

ADAPTER CABLE RJ45M-DB9F
length = 0.1 m



265000000000352

SERIAL CABLE DB9M-DB9F
length = 1.8 m



265000000000356

USB CABLE TYPE A-B
length = 1.8 m



261000000000311

MAINS CABLE SHUKO PLUG
length = 2 m




261000000000313

MAINS CABLE UK PLUG
length = 2 m



974HL010000009


PAPER ROLL HOLDER

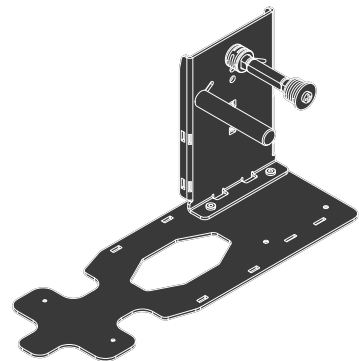




974HL010000010

ATB TICKET TRAY

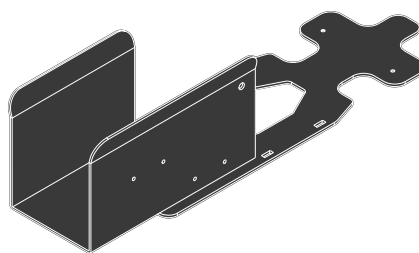


974HL010000011

SHAFT FOR ATB TICKET TRAY
(only for models with ATB ticket tray
code. 974HL010000010)

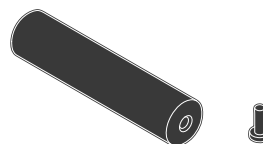


976HL010000008

REAR CONNECTORS PROTECTION

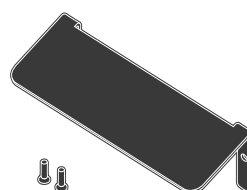

974HL010000006

KIT FOR POWER SUPPLY CONTAINER
(only for models with paper roll holder
code 974HL010000002, 974HL010000003, 974HL010000009)

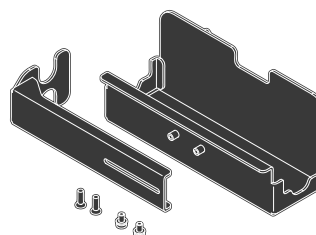




TK180 CUT 1, TK180 CUT 3

963GE020000071

POWER SUPPLY
(for technical specifications, see [paragraph 9.1](#))

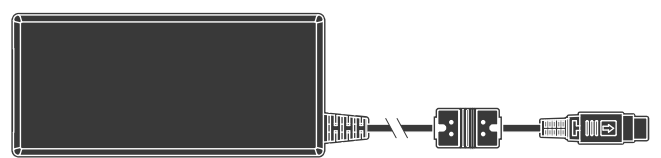

26900000000026

ADAPTER CABLE RJ45M-DB9F
length = 0.1 m



265000000000352

SERIAL CABLE DB9M-DB9F
length = 1.8 m




265000000000356

USB CABLE TYPE A-B
length = 1.8 m



261000000000311

MAINS CABLE SHUKO PLUG
length = 2 m

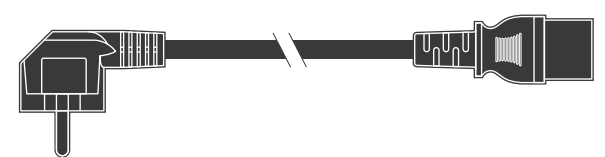


261000000000313

MAINS CABLE UK PLUG
length = 2 m



974HL010000009

PAPER ROLL HOLDER

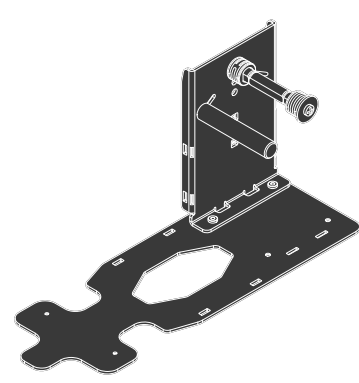




974HL010000010

ATB TICKET TRAY


rear mounting

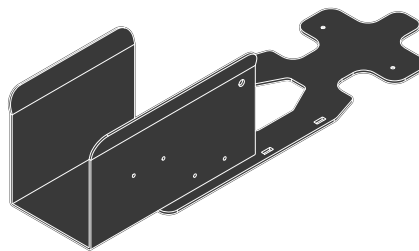

976HL010000007


ATB TICKET TRAY

front mounting

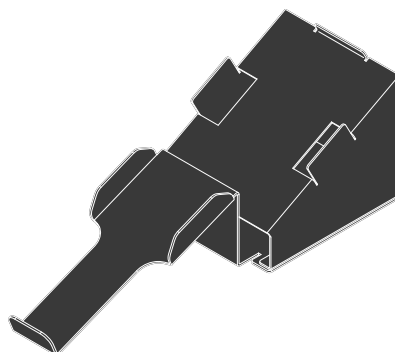

974HL010000011

SHAFT FOR ATB TICKET TRAY
(only for models with ATB ticket tray
cod. 974HL010000010)

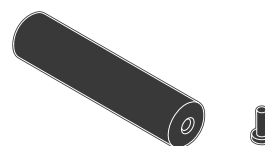


976HL010000008

REAR CONNECTORS PROTECTION



974HL010000006

KIT FOR POWER SUPPLY CONTAINER
(only for models with paper roll holder
code 974HL010000002, 974HL010000003, 974HL010000009)

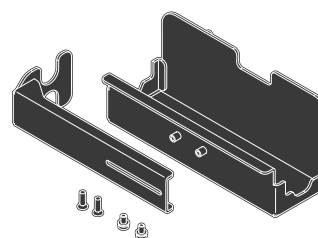




TK180 MET 2, TK180 CUT 2, TK180 CUT 4

963GE020000071

POWER SUPPLY
(for technical specifications, see [paragraph 9.1](#))

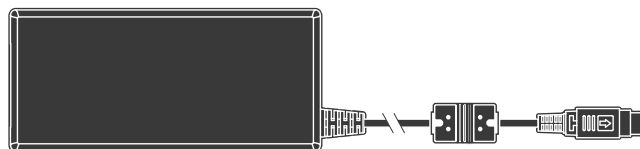

26900000000026

ADAPTER CABLE RJ45M-DB9F
length = 0.1 m



265000000000352

SERIAL CABLE DB9M-DB9F
length = 1.8 m



265000000000356

USB CABLE TYPE A-B
length = 1.8 m



261000000000311

MAINS CABLE SHUKO PLUG
length = 2 m




261000000000313

MAINS CABLE UK PLUG
length = 2 m



974HL010000009

PAPER ROLL HOLDER

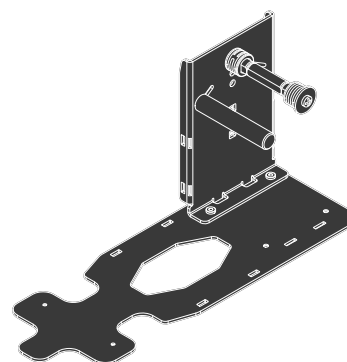




974HL01000006

KIT FOR POWER SUPPLY CONTAINER

(only for models with paper roll holder

code 974HL01000002, 974HL01000003, 974HL01000009)

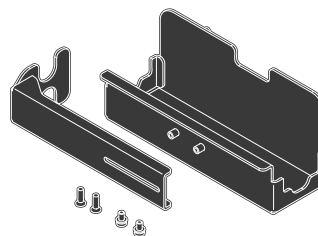




TK180 PLAS 1, TK180 PLAS 2, TK180 PLAS 3

963GE020000071

POWER SUPPLY
(for technical specifications, see [paragraph 9.1](#))

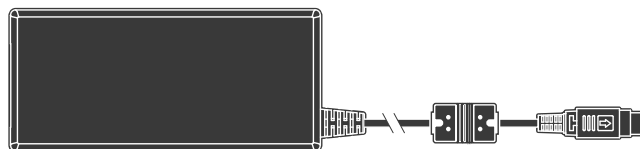

26900000000026

ADAPTER CABLE RJ45M-DB9F
length = 0.1 m



265000000000352

SERIAL CABLE DB9M-DB9F
length = 1.8 m



265000000000356

USB CABLE TYPE A-B
length = 1.8 m



261000000000311

MAINS CABLE SHUKO PLUG
length = 2 m




261000000000313

MAINS CABLE UK PLUG
length = 2 m



974HL020000006

PAPER ROLL HOLDER

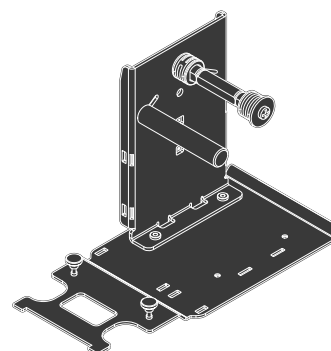




974HL020000005


TICKET TRAY

rear mounting

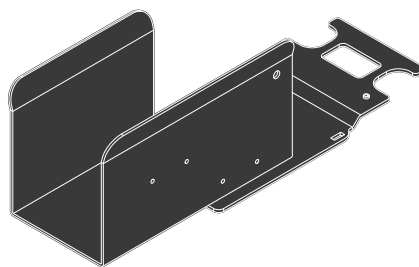

974HL010000006

KIT FOR POWER SUPPLY CONTAINER
(only for models with paper roll holder
code 974HL020000003, 974HL020000004)

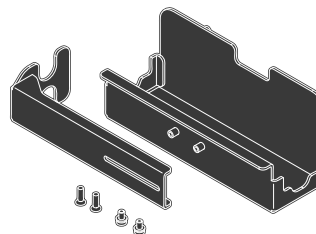



11 TECHNICAL SERVICE

In case of failure, contact the technical service accessing the website www.custom4u.it and using the support tools on the homepage. It is advisable to keep the identification data of the product at hand.

The product code, the serial number and the hardware release number can be found on the two product labels (see [paragraph 3.5](#)).

The firmware release number (SCODE) can be found:

- on the setup report (see [paragraph 6.1](#)),
- connecting the device to a PC and starting the "PrinterSet" tool (see [paragraph 6.2](#)),
- by consulting the "setup.ini" (see [paragraph 6.3](#)).





CUSTOM S.p.A.

World Headquarters

Via Isaac Newton 4

43010 Fontevivo (PR)

Italy

Tel. +39 0521 680111 - Fax +39 0521 610701

info@custom.biz - www.custom.biz

All rights reserved